

# NEOVIA

## 40" LCD TV OWNER'S INSTRUCTION



## **FCC NOTE**

:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.**

**OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:**

**(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND**

**(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,**

**INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION**

**THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

40" LCD TV OWNER'S INSTRUCTION **NEOVIA**

ENGLISH

**TABLE OF CONTENTS**

<b>WARNING</b>	4
<b>IMPORTANT SAFETY INSTRUCTIONS</b>	5
<b>SAFETY PRECAUTIONS</b>	6
<b>SUPPLIED ACCESSORIES</b>	7
<b>PRECAUTION ON BATTERY USE</b>	7
<b>OVER-VIEW</b>	
Remote Control	8
Front Panel	8
Rear Connection	9
<b>CONNECTING TO DEVICE</b>	
Connecting to TV	10
Connecting to CABLE TV / VCR	10
Connecting to SCART	11
Connecting to HDMI	12
Connecting to another output source	13
Connecting to external speaker	13
Connecting to PC	14
<b>SETTING</b>	
TV Setting	15
Source Setting	17
Source Selection	19
<b>OSD CONTROL</b>	
Picture	21
Image Adjustment	22
Set Up	23
Audio Setting	24
<b>FAQ / TROUBLESHOOTING</b>	25
<b>SPECIFICATIONS</b>	27

# NEOVIA 40" LCD TV OWNER'S INSTRUCTION

 
## WARNING

ENGLISH

Shock Hazard Marking and Associated Graphical Symbol



Explanation of Safety Related Symbol

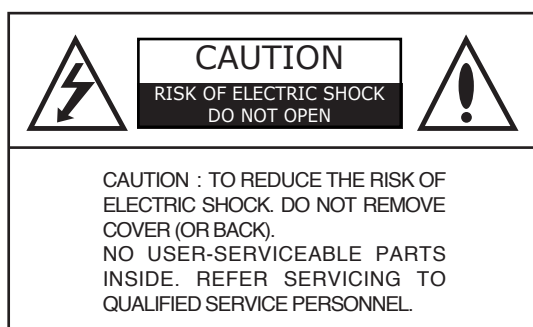

This symbol is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING** - To reduce the risk of fire or electric shock. Do not expose this apparatus to rain or moisture.



**To preserve the environment, do not rubbish.**

40" LCD TV OWNER'S INSTRUCTION **NEOVIA****IMPORTANT SAFETY INSTRUCTIONS**

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 7) Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 8) Only use the attachments/accessories specified by the manufacturer.
- 9) Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 10) Unplug this apparatus during lightening storms or when unused for long periods of time.
- 11) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

# NEOVIA 40" LCD TV OWNER'S INSTRUCTION

## SAFETY PRECAUTIONS

### Warranty

To guard against injury, the following basic safety precautions should be observed in the installation, use and servicing of the set.

### Power Sources

This set should be operated only from the type of power source indicated on the serial label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company.

### Wall Outlet

Do not use a poor fitting outlet.

Insert the plug fully into the outlet. If it is loose, it may cause arcing which result fire.

### Moisture

Do not handle the TV set with wet hands as it could damage the TV set and it may cause electric shock as well as fire.

### Cleaning

- Be sure to unplug the TV unit before cleaning.
- To minimize contact with the front of the screen surface, use dry soft cloth when cleaning front of the screen.
- Do not use alcohol, benzine, thinner etc., as it damages the coating.
- Should use commercially available chemical fibre cleaning cloths in accordance with their supplied instructions.

### Ventilation Holes

 
The slots and opening holes in the TV set are provided for necessary ventilation. To insure the reliable operation of the set, and to protect from overheating, the holes and openings must never be blocked or covered.

Unless proper ventilation is provided, the unit may gather dust and get dirty. For proper ventilation, observe the followings:


- Do not store the unit turned backward or sideways.
- Do not store the unit turned face down or upside down.
- Never cover the slots and opening with a cloth or other materials as this prevents ventilation holes.
- Never store the unit on soft surface.
- Never place the unit in a confined space, such as bookcase or built in cabinet, unless proper ventilation is provided.
- Do not place the unit near or over the radiator or exposed to direct sunlight.

40" LCD TV OWNER'S INSTRUCTION **NEOVIA****SUPPLIED ACCESSORIES**


Check the accessories before installation.

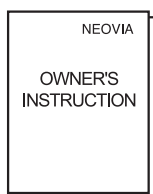

Operation Instruction  
Manual

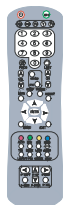 

Remote Control

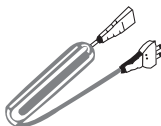 

Power Cable



SCART Cable




Batteries for the Remote  
Controller (2 x AAA Size)


ENGLISH

**PRECAUTION ON BATTERY USE**

 
Requires two AAA batteries.

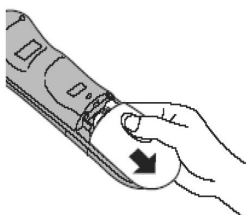

 1. Open the battery cover

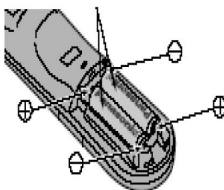

 2. Install the batteries to the  
correct polarity (+and-)

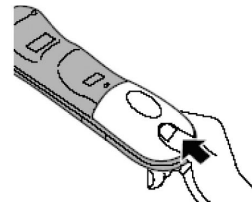

3. Replace the cover

Incorrect installation can cause battery leakage and corrosion that will damage the remote controller

1. Always use new batteries when replacing the old set.
2. Do not attempt to charge, short-circuit, disassemble, heat or burn used batteries
3. Battery replacement is necessary when the remote control acts sporadically or fails to operate this unit.

**NOTES:**

 
- Do not drop, apply shock to step on the remote controller.
- Do not spill water on the remote controller.
- Do not place objects between the remote control sensor and remote controller.
- Do not use remote controller for other equipment at the same time.
- If the TV does not operate even when using the remote controller from a close range, it is time to replace the batteries.

# NEOVIA 40" LCD TV OWNER'S INSTRUCTION


## OVER-VIEW

### Remote Control

ENGLISH

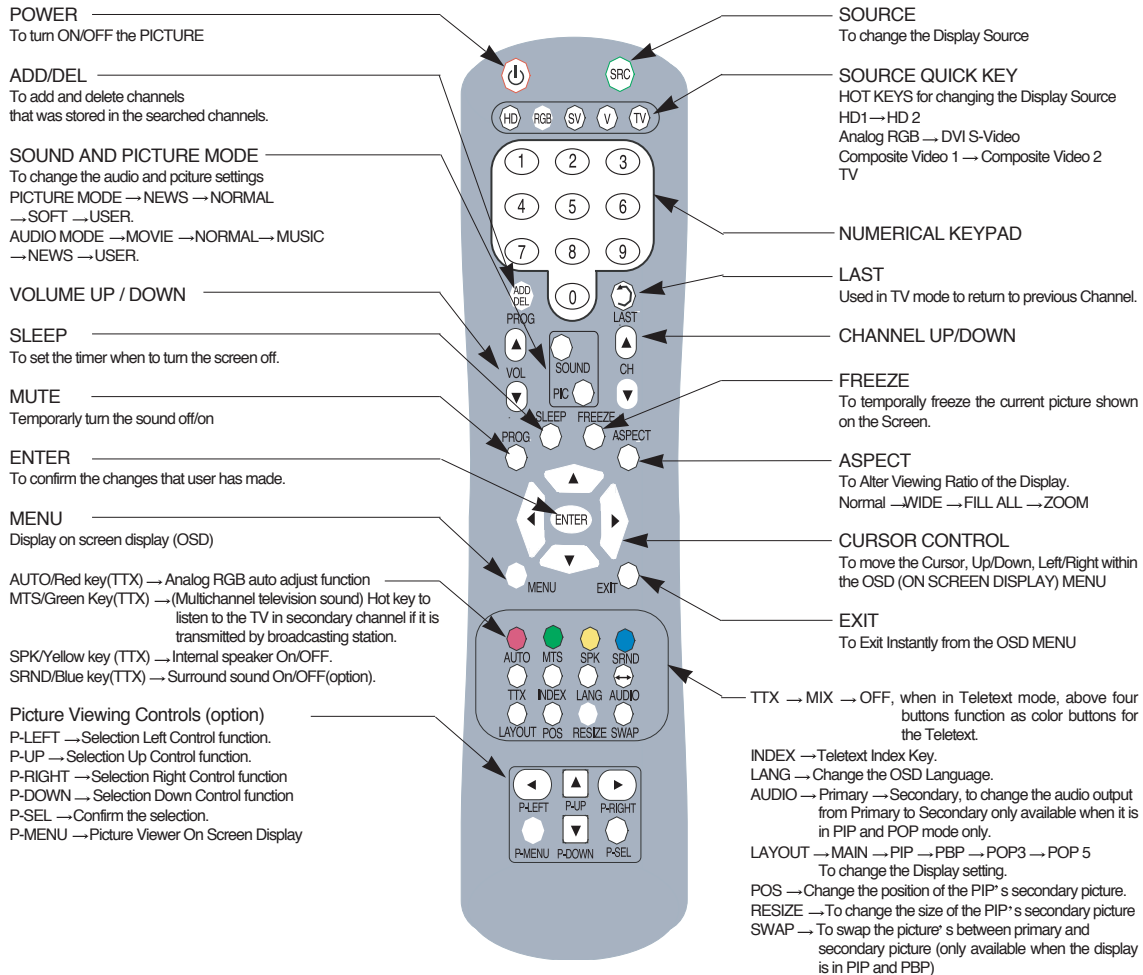

### Front Panel

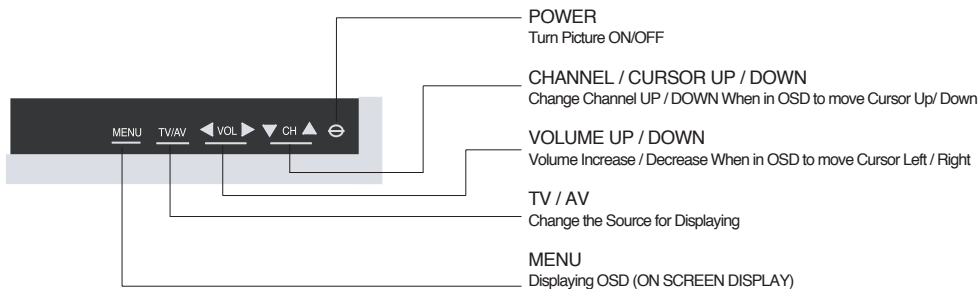 


40" LCD TV OWNER'S INSTRUCTION **NEOVIA**


ENGLISH

**Rear Connection**

 View of the Rear Connection Ports

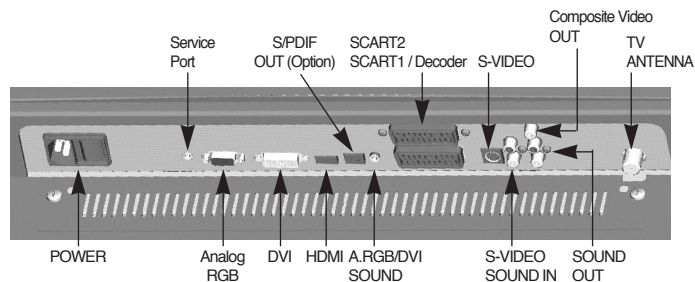

The Rear View

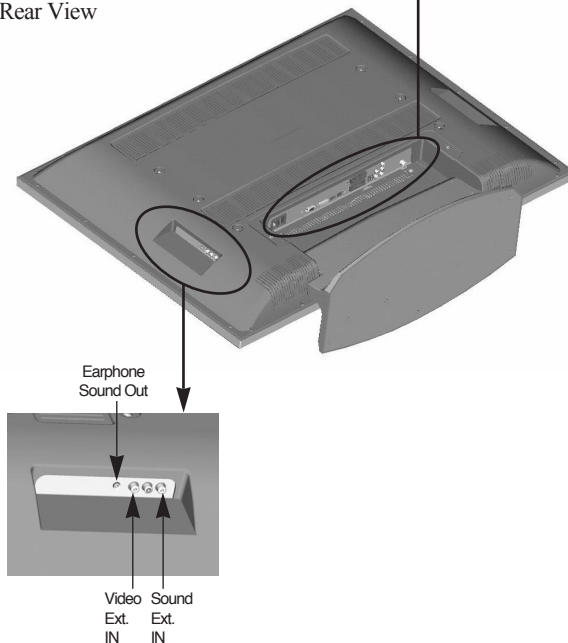 

As shown above rear connection ports are classified into two ports(SCART 1 and SCART 2). Each port is capable of receiving from Composite Video/Video and HD/Component (upto 1080i).

SCART 1 is for the connection with TV decoder like CANAL+ and SCART 2 is for the connection with other video decoders like DVD Player.


Next pages will explain the various connections that are possible. There are only one input for analog RGB, DVI, HDMI and S-Video has separate sound input port.

On the left hand side of rear view there is external video input port for easy connection to other input devices such as camcorder etc.

# NEOVIA 40" LCD TV OWNER'S INSTRUCTION

 
## CONNECTING TO DEVICE

### Connecting to TV

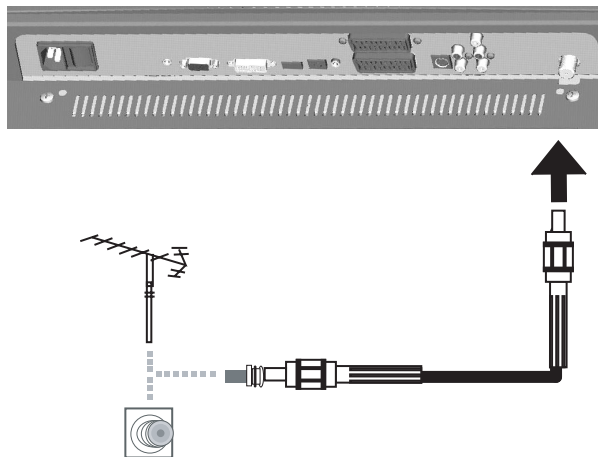


To watch the terrestrial TV connect the antenna cable to the far right port at the back of the LCD TV.

### Connecting to CABLE TV / VCR

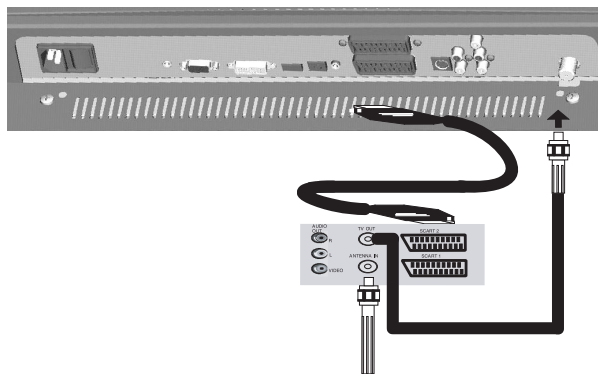 


N.B because this TV is capable of inputting two SCART connectors i.e. Composite Video, HD / Component. the diagram is shown for one cases only, however user has option to connect to all the Input if they require.

 The following connections shows the possible of connecting DVD, VCR, satellite set top boxes and other various input.

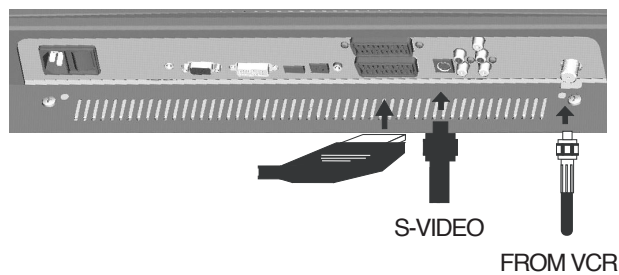40" LCD TV OWNER'S INSTRUCTION **NEOVIA****Connecting to SCART**

 Connect cable by its defined names  
 For S-VIDEO input the TV has separate sound in hance please check  
 if your SET TOP BOX or DVD etc has sound out for S-VIDEO.

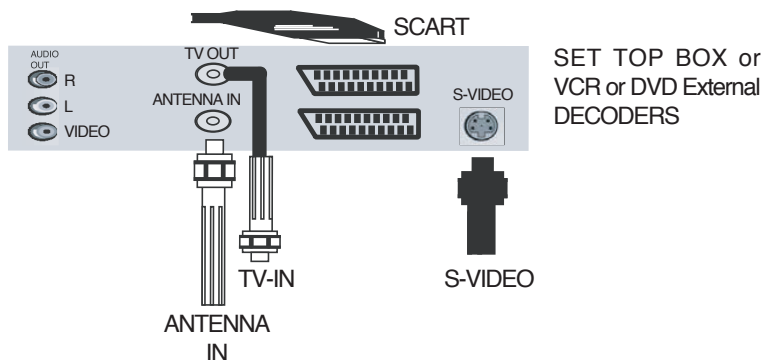

By connecting SCART connection, this TV is capable of accepting HD / Component, S-Video, Composite Video and sound from the one SCART connector.

If your external is capable of all these input with one scart cable then only one connector is needed for various inputs.


# NEOVIA 40" LCD TV OWNER'S INSTRUCTION

 ENGLISH

## Connecting to HDMI

HDMI (High Definition Multimedia Interface) is the first all digital consumer electronics A/V interface that supports high quality picture and sound without compressing high resolution video. The HDMI terminal supports both video and audio information.

This is achieved by connecting EIA/CEA-861/861B compliant consumer electronics device, such as set top box or DVD player with HDMI or DVI output (adapter required) to the HDMI input terminal. Connect a HDCP (high bandwidth digital content protection) source to TV's HDMI terminal, to display high-definition pictures without compression of video in digital form.

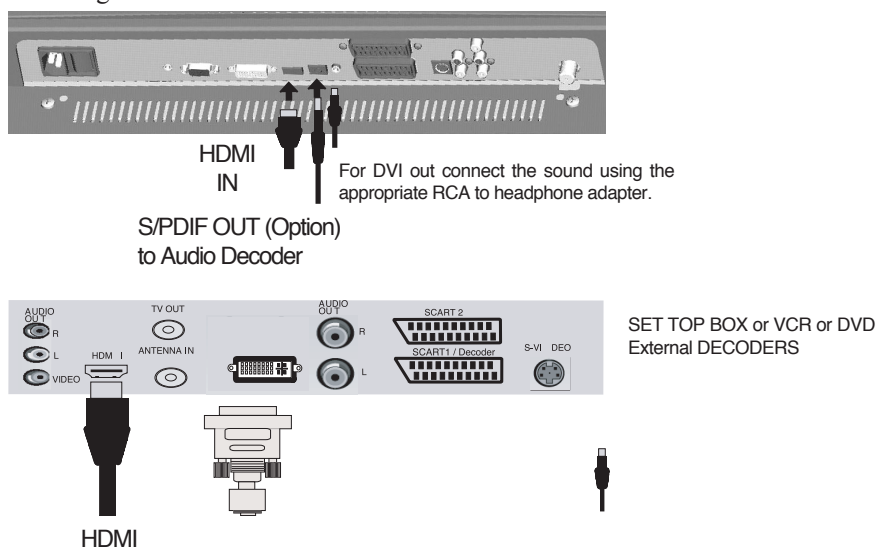

### Notes;

Make sure that the power of the LCD TV is turned off before connection to RGB, DVI and HDMI.  
If the external device has DVI output only, use a DVI to HDMI adapter cable to connect to the HDMI Terminal.  
In this case two channel audio needs to be connected to PC RGB/DVI audio using an adapter.

This TV is Compatible with the following

	No. of Dots (H X V)	Vertical Scanning Freq (Hz)
1080i	1920 x 1080i	50
720P	1280 x 720P	50
576P	720 x 576P	50
480P	640 x 480P	50
576i	720 x 576i	50

Compatible audio sampling frequency  
(LPCM): 48kHz / 44.1 kHz / 32 kHz.h

 
Notes:  
This HDMI connector is type A.

This input terminal is not intended for use with computers.

\* **HDMI**™ and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.


EIA/CEA-861/861B profiles compliance covers profiles for transmission of uncompressed digital video including HDCP (high bandwidth digital content protection).

For HDMI-DVI conversion cable or an adapter consult your customer electronics dealer for availability details.

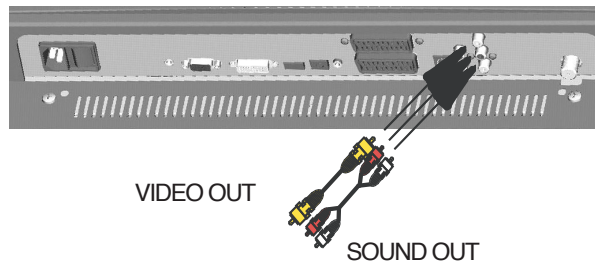40" LCD TV OWNER'S INSTRUCTION **NEOVIA****Connecting to another output source**

Video Out is used to display the input sources of this LCD TV to another display screen. Only TV and Composite Video sources can be displayed.

 If the LCD TV in Multi window mode (PIP, POP 3, POP 5), Video Out outputs to another display what is shown in the main screen.

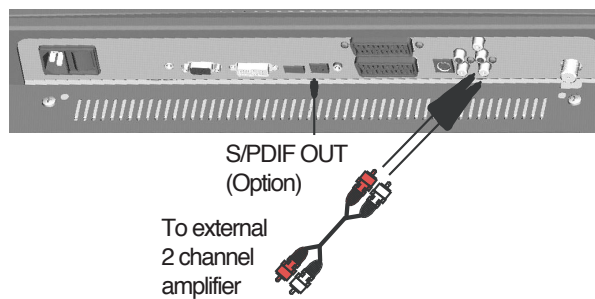**Connecting to external speaker**

Connect to external amplifier for louder and preferred speakers.  
S/PDIF out is only valid for HDMI only (option)