



8. Video

- Press the home page, touch the menu arrow at the camera.
- Touch the screen on your subject.
- Tap the shutter button or the video icon.
- After the shooting, videos automatically saving as file name, save to the gallery by default camera photo folder.
- On the bottom right corner photo viewing screen, a video preview before display. Touch the preview line, full-screen view. Touch play button can broadcast video.
- You can touch the button "of" in the interface of camera to do the settings under camera viewfinder mode, press Menu, you can switch to video or photos

On the top right of camera viewfinder mode, display the preview of the previous video. You can touch the video, the video will display on full screen and you can touch the video to view it.

Video size: back camera HD 1080p/30fps, 720p/30fps, 640p/30fps, 480p/30fps
Composition line Cross Grid/Solid color center
White balance White balance, auto, fluorescent
Antishake AIWB/OIS/Auxiliary
Free direct ON
Microphone switch ON OFF

8. Clock

- Open the menu of application, click , the alarm clock Settings into the interface

Alarm

When the alarm time arrives in the setting time to allow you ring with vibrating to achieve effect . phone will send an alarm to you, you can also set up the alarm time according to your needs.

Edit

You can edit the current alarm, you could add more time, ringing tones, vibration, speaker form and bbs.

9. Contacts

Open the menu of applications-contacts

The default display contact number and SIM card contacts.

6

Share photos

In order corresponding to the selected folder or photos in information-sharing interface, choose the share method. Methods include Bluetooth, mail, and information sharing.

Choose a long press image file, pop up corresponding operation.

A Use the Bluetooth to send images; under the file of Bluetooth, choose paired Bluetooth device to share.

B Use email to send pictures: choose Gmail or file of email, pictures will be sent to the email address. You can also choose to send pictures via email.

C Click information sharing under the selected information, and click send to share information under the pop-up information interface.

Send photos

Click the share icon at interface, sliding around on the screen, can be forwarded or shared with the photos.

Edi pictures

A Edit pictures: Original, auto, warm, palm, mine, effect, black, modes, real, voices, collage, beauty, adjust and vibrate.

B editor brightness adjust light color and color.

C crop: crop/magnifying, pointing, rotate, mirror.

D Crop pictures

If you want to adjust the size of the photo, please hold the edge of the cutting tool. The arrow appears (as the finger the finger inside or outside the picture).

E If you want to adjust the size of the photo, please hold the edge of the cutting tool.

F If you want to adjust the size of the photo, please hold the edge of the cutting tool.

16

2

FM Radio
Through this program, you may listen to FM radio on the device. FM radio use the wired headphones as an antenna to receive signals, before opening this program, you can install the original equipment headphones, when listening, you can switch it manually to speakers or to the mode with wired headphones.

Touch this label  to open the application of FM radio.

- 1) Click on the  , automatic scanning search FM channel, and channel in list interface. List all channels
- 2) Click "Start recording", listening to the radio to the current can be recorded. The tape recording to default file name can be arbitrary well-preserved input filename. Save to FM recording the default name

7

3

There is time for new mails. Press Menu > "refresh", refresh and update the number of the unread mails in a proper way.

5) Delete mails

When loading a mail Account, if you want to delete it, you need to restore factory settings. When loading a second one, you could press the menu button to delete Notices: many functions depend on mail Account, for example: Electronic Market, Google Talk, Sync Contact and Calendar.

15