

LA CROSSE®
TECHNOLOGY

Qi WIRELESS CHARGING
ALARM CLOCK



SET UP GUIDE

MODEL NUMBER: 617-148v2

Table of Contents

BASICS		ALARM		GLOW LIGHT	
Initial Setup	02	Setting the Alarm	07	Glow Light Selection	09
Buttons	03	Activate/Deactivate	07	Glow Light Brightness	09
LCD Display	04	Snooze Duration	08		
Ports	04				
LCD Display Brightness	05				
Auto-Dim Settings	05				
Display Modes	06				
Display Mode Options	06				

CHARGING		SUPPORT		APPENDIX	
5W Wireless Charger	10	Support Information	12	Specifications	13
Phone Compatibility	10	Trademarks & Info	13	Warranty	14
Wireless Charging FAQs	11	Stay in Touch	13	Recycling & Disposal	14
Phone USB Charging Port	12			Cautions	14
				Statement	15

BASICS

Initial Setup

 
Power Up

Insert the 5V Power Adapter into an outlet, and then plug it into the Power Jack on the bottom of the alarm clock.


A greeting will appear on the LCD display and then your clock will move into the Settings Menu.

Settings Menu Order

- Language • 12/24 Format • Hour • Minutes • Year • Month • Date
- Month/Date or Date/Month • Fahrenheit/Celsius

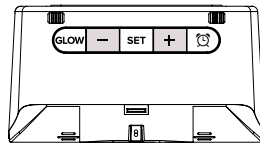

 Use the +/- buttons on the back of the clock to adjust the values.

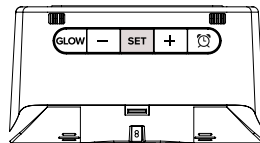

Tap the **SET** button to confirm selection and move to next step.

 


You may exit the Settings Menu at any time by tapping the **SNOOZE/LIGHT** button.

Language: Whichever language is selected, the following instructions and weekday will be presented in that language.

Weekday: Weekday will set automatically after year, month, & date settings are adjusted.

Buttons

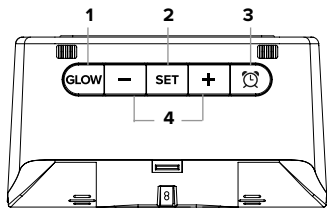

Back View

1. GLOW

Press to change the Glow Light color. Hold to turn Glow Light off.

2. SET

Press to change Display Modes. Hold to enter Settings Menu.

4. PLUS/MINUS (+/-)

Press to increase/decrease Glow Light Brightness. Press to increase/decrease values in Settings Menu, hold to change values quickly.

5. SNOOZE/BACKLIGHT

 
Tap to snooze sounding alarm, adjust backlight, or hold for Auto-Dim settings.

3. ALARM

Press to activate/deactivate or hold to enter alarm settings.

6. RESET

Press to factory reset your clock.

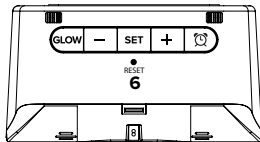


Top View

LCD Display



 Ports

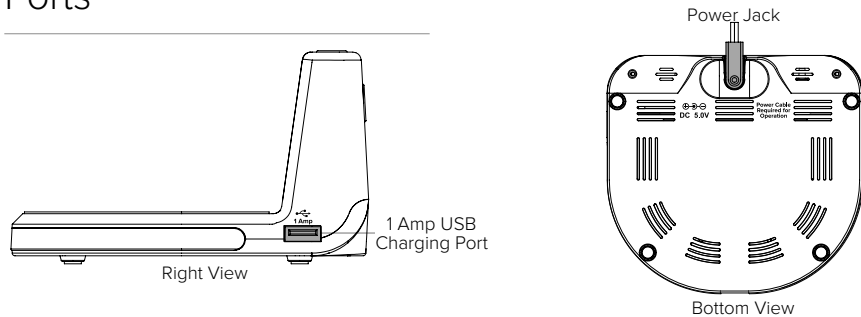

Note: To enter the Settings Menu after the initial setup, hold the SET button on the back of the clock.

LCD Display Brightness



 
Adjusting the LCD Display Brightness


Press the **SNOOZE/BACKLIGHT** button on the top of the clock to adjust the backlight intensity. There are 4 brightness levels, plus an off option.

Auto-Dim Settings


Program your LCD display to automatically dim during preselected times.

1. Hold the **SNOOZE/BACKLIGHT** button to enter the Auto-Dim Settings Menu.
2. Press the +/- buttons to turn the Auto-Dim feature on or off. Press **SNOOZE/BACKLIGHT** to confirm.
3. Press the +/- buttons to adjust the starting hour. Press **SNOOZE/BACKLIGHT** to confirm.
4. Press the +/- buttons to adjust the stopping hour. Press **SNOOZE/BACKLIGHT** to confirm and exit.

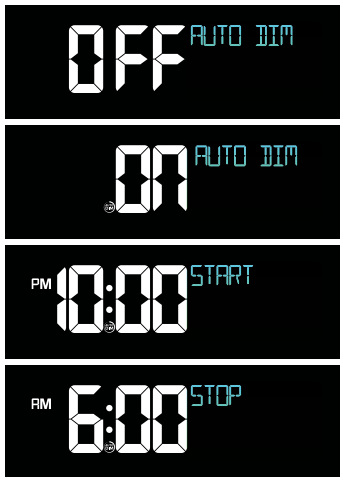

The  icon will appear on the LCD when activated.

 Display Modes

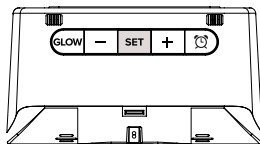

Selecting the Display Mode

Press the SET button on the back of the clock to select a display mode. Clock will stay on selection.

Display Mode Options



 
 
Full Weekday
& Calendar

Weekday, Month, Date
& Indoor Temperature


Full Weekday &
Indoor Temperature



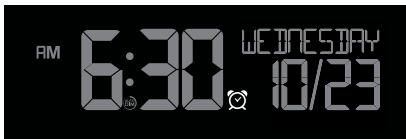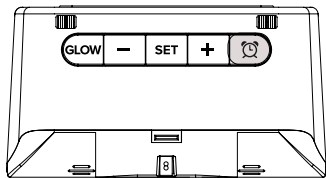

Time Alarm

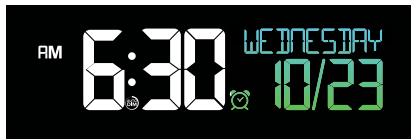 

Setting the Alarm



Activating & Deactivating the Alarm



1. Hold the  button on the back of the clock to enter the Alarm Settings Menu.
2. Use the +/- buttons to set your desired time. Press  to confirm.
3. Next, use the +/- buttons to set your desired snooze duration (5 to 120 minutes). Press  to confirm and exit the Alarm Settings Menu.
4. Your sound alarm is now activated, indicated by the  icon on the LCD.

1. Press the  button to activate/deactivate the alarm and to view your alarm time.
2. The  icon will appear on the LCD when the alarm is active.

Time Alarm

 
Ascending Alarm

The alarm will increase in beep frequency over a 2-minute period. After the 2-minute time frame, the alarm will stop if not snoozed or turned off.

Snooze Duration Countdown



When your alarm sounds, Press the **SNOOZE/LIGHT** button to snooze your alarm for your preselected snooze duration.

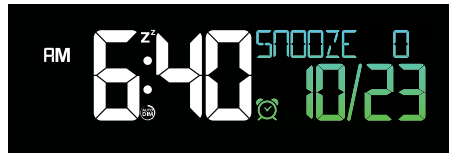

A countdown will appear on screen. When the snooze time reaches "0," the alarm will sound again.

Note: The snooze feature can be repeated as many times as desired.


Glow Light Selection

Select Glow Light Color:


1. Press the GLOW button to turn on the Glow Light and toggle through the different light options.

Glow Light Color Selection Order:

Cycle | Red | Yellow | Green | Cyan | Dark Blue | Purple | White

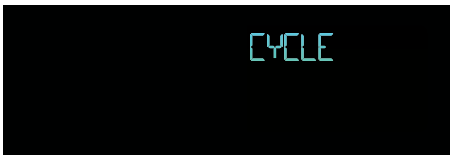 


 Press the SNOOZE/LIGHT to select an individual solid color. When a single color is selected, it will remain on that color. Select CYCLE to smoothly transition between all of the colors.

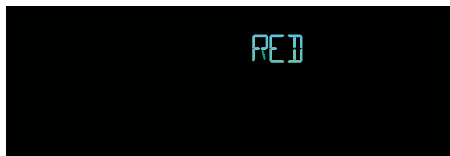

2. Glow Light Brightness

 Use the +/- buttons to adjust the Glow Light brightness. It has 4 intensity levels plus an OFF option. Holding the GLOW button will also turn off the Glow Light.

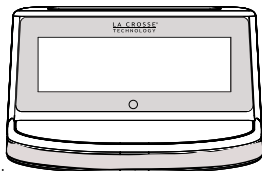

Glow Light



5W Wireless Charger

Charging your Phone

- Place your phone on the platform. Your phone should sit flush and centered on the charging pad.
- The blue Charging Indicator Light below the LCD will be solid when your phone is successfully charging.
- The light will flash slowly if your device is not positioned properly or if your device is not compatible with the wireless charging technology. If this problem persists, try removing any large/bulky cases.



Phone Compatibility

Compatible with all Qi Enabled devices:

- iPhone 8 or newer
- Galaxy S8 or newer
- Galaxy Note 8 or newer

 
Compatibility may vary based on phone model and/or case selection. This list is not comprehensive. Please check your phone's manual for details regarding wireless charging capabilities.

CHARGING

Wireless Charging FAQs

Q. Why is the blue light blinking?

- A. Phone is not centered on the charging pad.
- A. Your phone must be Qi Enabled to charge.
- A. If the phone has a large/thick case, it may interfere with charging.
- A. Foreign objects on the charging pad may make the light blink.

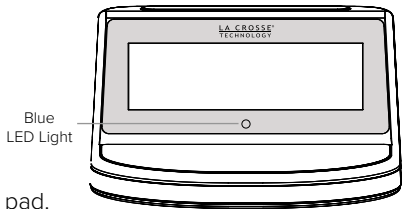

Q. Why is the table surface getting warm?

- A. Ensure the clock is on a hard, clean surface.
- A. Do not place on cloth, paper, or other items that may obstruct airflow.
- A. Clear dust or other obstructions from the vents on the bottom of the clock.

Important:

 
Wireless charging uses magnetic induction to charge your compatible smartphone. Do not place anything between your phone and the charging pad. Keep the charging pad clear of all foreign objects. Magnetic mounts, magnetic cases, or other objects between your phone and the wireless charger may reduce performance or damage magnetic strips or RFID chips found in some credit cards, security badges, passports, and key fobs. If your phone case holds any of these sensitive items, be sure to remove them before charging or make sure they are not between the back of your phone and the charging pad.

CHARGING

USB Charging Port

There is a 1 Amp USB Charging Port located on the right side of your alarm clock.

- Connect your external device's USB charging cable (not included) into the USB Charging Port.
- Charging times may vary.
- USB Power Output: 1 Amp maximum current

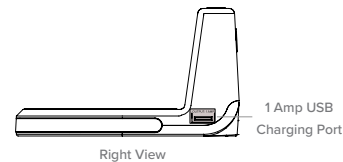

SUPPORT

Having Trouble? We're here to help.

For detailed product videos, manuals, and more, visit our support website: www.lacrossetechnology.com/support

Make sure to have your model number handy (617-148).

If you need additional support, get in touch with our friendly customer support team:

Online: bit.ly/contact_techsupport

Phone Number: 1.608.782.1610

Representatives are available Monday-Friday 8:00am to 6:00 pm CST.

Trademarks & Warning

La Crosse Technology is not responsible for any damage or loss of performance with iPhone, iPod, or iPad while being used in associated with this accessory.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone, iPod, or iPad may affect wireless performance.

Apple, the Apple logo, iPad, iPhone, iPod, iPod touch, iTunes, Retina, Mac, Mac OS and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

Other company names and product names including Samsung, Galaxy, and Note are registered trademarks or trademarks of the respective companies.

Phone charging accessories not included.

 **WARNING: CHOKING HAZARD—Small Parts**
Not for children under 3 yrs.

Stay in Touch

Ask questions, watch set up videos, and provide feedback on our social media outlets.



Follow La Crosse Technology on Facebook, Instagram, YouTube, and Twitter.

Specifications

Power Requirements: 5.0V Power Cord (Included)
HX13-0502500-AU-001

The plug on the power adapter is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

LCD Brightness: 4 Intensity Levels + OFF
(Programmable Auto-Dim Backlight Option)

Glow Light Brightness: 4 Intensity Levels + OFF
Programmable Snooze Duration: 5 to 120 Minutes

Indoor Temperature Range: 32°F to 99°F (0°C to 37°C)

Wireless Charger Power Output: 5 Watts

USB Charging Port: 1 Amp Maximum Current
(Charging Cord Not Included)

Settings Backup: The time and alarm settings will be saved for 3 minutes in the event it loses power. Full battery backup for extended times is not available.

Dimensions: 4.97" L x 5.34" W x 2.85" H
(12.62 cm L x 13.56 cm W x 7.24 cm H)

Factory Reset: If you're experiencing issues with your clock, use a pen or paper clip to press the factory RESET button on the back of your clock.

California Residents

 **WARNING:**
This product can expose you to chemicals including styrene, which is known in the State of California to cause cancer. For more information, go to:
www.P65Warnings.ca.gov

Warranty

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product, relating to manufacturing defects in materials and workmanship.

For full warranty details, you can visit: www.lacrossetechnology.com/support

La Crosse Technology, Ltd • 2830 S. 26th Street • La Crosse, WI 54601

Recycling & Disposal

Please consider the environment when deciding to dispose of this product.

Although household electronics are generally safe to use on a daily basis, incorrect disposal can cause negative and potentially irreversible impacts on our environment.

Check with local donation centers to see if your product can be donated for future use. If disposal is the only option, federal agencies, local governments, and certified retailers may have electronic recycling programs in place. Programs may vary based on location.



Please Recycle

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

FCC Statement

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.