LED indicate

Product Description: gclo Automotive Diagnosi Model Number: G1002 Brand Name: Gclo, LAUNCH Temperature Extreme Range: -10°C ~ +50°C LAUNCH TECH. CO., LTD Launch Industrial Park North of Wuhe Avenue Banxuegang, Longgang, shenzhen, P.R.China,518129 http://www.x431.com http://www.cnlaunch.com

golo¹ Quick Start Guide

golo¹ is a hot-swappable smart terminal with mobile internet features, which can acquire the full system running data of the vehicle, including DTC, Data Stream, and so on. Through installing the golo App in mobile intelligent device, it can achieve such functions as the Professional Inspection, Remote

2. Functions

Remote Diagnosis

Comprehensive inspection/Rapid inspection Car club: Friends share, Instant message

During the initial setup, please follow the flowchart as below to complete the configuration of the new golo connector.

Download and Install the golo App

make sure that your device has already installed the QR barcode reading application.

Or go into the App store, search for golo then download and install the golo App

1) Download and Install the golo App

download and install it in your intelligent device.

scan the QR barcode on the product body.

Before scanning, please

enter the login screen.

First, select the golo App for Android or for iOS to

You can download the golo App free in Google play

(for Android device) or App Store (for iOS device), or

Scan the QR barcode on the product body.

After installed, you will see the the icon "00" on your device home screen. 2) Sign up. Activate and Configure

Click the icon "60" to open the golo App, and then Then click Activate, input your car information, product screen instructions.



Click Sign Up, then fill in the required information and follow the on-screen instructions to complete the sign-up process till the screen as below appears


> You have successfully signed up! If you have purchased golo connector, activate it here. Skip (Activate

Serial Number and Verification Code by following the on-

 Once the golo¹ connector is activated, the car
4. Start to expect t information can not be modified and only allow to download the configuration file corresponding with

. Serial Number and Verification Code can be found in the envelope in the package

After activation is done, a screen as below appears.

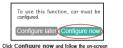

instructions till the configuration file is downloaded When the connector is linked to the vehicle for the Car Configure info first time, system start-up time may take longer than usual, please be patient to wait for a while.

Now, let's begin to experience.

Connect the golo to your vehicle's DLC (Diagnostic FCC Rules. Operation is subject to the Link Connector), which is usually located under the dashboard, towards the drive's left knee area (for the (1)This device may not ca (1)This device may not cause harmful interference, and specific location, please refer to the manual published

After installed, LED indicator will keeps red and blue.



this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and • Connect the equipment into an outlet on a

found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This radio/TV technician for help. equipment generates, uses and can radiate radio frequency energy and,

(2)This device must accept any interference

Warning: Changes or modifications to

cause undesired operation.

received, including interference that may

if not installed and used in accordance with the "This equipment complies with FCC RF instructions, may cause harmful interference to radiation exposure limits set forth for an radio communications. However there is no uncontrolled environment. This guarantee that interference will not occur in a equipment should be installed and particular installation. If this equipment does operated with a minimum distance of 20 cause harmful interference to radio or television centimeters between the radiator and reception, which can be determined by turning your body." the equipment off and on, the user is encouraged to try to correct the interference by

one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the

equipment and receiver

circuit different from that to which the receiver is connected

. Consult the dealer or an experienced

7