



QUICK START GUIDE



Model uMax85
4K Ultra HD

- / Customer Support: +1 (855) 343.6688
- / For complete manual visit www.lemall.com



CAUTION

ELECTRIC SHOCK DO NOT OPEN



Caution: to reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

CAUTION - RISK OF ELECTRIC SHOCK-DO NOT OPEN

AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

To prevent electric shock do not use this polarized plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING:

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Make sure that children do not climb on or hang on the TV.

Disconnect the power before moving or installing the TV.

Remove the stand before installing the TV on a wall mount.

If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized LeEco wall mount and contact the local dealer or qualified personnel. When using a third-party wall mount, it is not covered by the warranty.

Do not overtighten the screws as this may cause damage to the TV and void your warranty.

Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.

Never place a television set in an unstable location. A television set may fall, causing serious

personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

Using cabinets or stands recommended by the manufacturer of the television set.

Only using furniture that can safely support the television set.

Ensuring the television set is not overhanging the edge of the supporting furniture.

Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.

Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.

Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.



RISQUE

NE PAS OUVRIR

RISQUE DE CHOC ÉLECTRIQUE



PRECAUTION

Les marquages sont inscrits en arrière de l'appareil.

Les précautions d'emploi sont inscrites en arrière de l'appareil.

AVERTISSEMENT:

Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

La prise du secteur est utilisée pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation.

Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Des pressions acoustiques excessives provenant d'écouteurs ou de casques peuvent provoquer des pertes de l'audition.

Distance minimale 10cm autour de l'appareil pour une aération suffisante

Il convient que l'aération ne soit pas gênée par l'obstruction des ouvertures d'aération par des objets tels que journaux, nappes, rideaux, etc.

Il convient de ne pas placer sur l'appareil de sources de flammes nues, telles que des bougies allumées.

Il convient d'attirer l'attention sur les problèmes d'environnement dus à la mise au déchet des piles.

Si l'appareil est destiné à être utilisé sous un climat tempéré et.

L'appareil ne doit pas être exposé à des égouttements d'eau ou des éclaboussures et de plus qu'aucun objet rempli de liquide tel que des vases ne doit être placé sur l'appareil.

Les batteries (bloc de batteries ou batteries installées) ne doivent pas être exposées à une chaleur excessive telle que

celle du soleil, d'un feu ou d'origine similaire.

Ne jamais placer un téléviseur à un emplacement instable. Un téléviseur peut tomber, en.

Causing des blessures ou la mort d'une personne. De nombreuses blessures, en particulier.

Dans le cas d'enfants, peuvent être évitées en prenant des précautions simples comme.

L'utilisation de meubles ou de socles recommandés par le fabricant du téléviseur.

L'utilisation exclusive de mobilier pouvant supporter le poids du téléviseur en toute sécurité.

S'assurer que le téléviseur ne dépasse pas du rebord du mobilier sur lequel elle est placée.

Ne jamais placer le téléviseur sur un meuble haut (par exemple, les armoires ou les bibliothèques) sans fixer à la fois le meuble et le téléviseur sur un support approprié.

Ne pas placer le téléviseur sur du tissu ou d'autres matériaux pouvant être placés entre le téléviseur et le meuble sur lequel il est placé.

Expliquer aux enfants les dangers auxquels ils s'exposent en grimper sur le meuble pour atteindre le téléviseur ou ses commandes.

Si votre téléviseur est conservé et changé d'emplacement, il convient d'appliquer les mêmes considérations.

Des pressions acoustiques excessives provenant d'écouteurs ou de casques peuvent provoquer des pertes de l'audition.

Un appareil avec la borne de terre de protection doit être connecté au secteur avec la connexion de terre de protection.

Si vous utilisez le support mural dédié de LeEco 85-pouce TV, s'il vous plaît utiliser des trous de montage mural externes en taille 500*400*300mm, et le caractéristique de la vis de montage mural est M8*19mm (6 au total).

Si vous n'utilisez pas le support mural dédié de LeEco 85-pouce TV, s'il vous plaît utiliser des trous de montage mural internes en taille 400*400mm, et le caractéristique de la vis de montage mural est M8*19mm (4 ou 6 au total).

USE & SAFETY

Please read the Online TV Manual before using your TV at www.lemall.com.

Customer Support:

+1 (855) 343.6688

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings with items, such as newspapers, table-cloths, curtains, etc. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution

when moving the cart/apparatus combination to avoid injury from tip-over. 

- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14) The battery (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- 15) Excessive sound pressure from earphones and headphones can cause hearing loss.
- 16) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 17) The apparatus shall not be exposed to dripping or splashing liquid and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 18) The MAINS plug or appliance coupler is used

as the disconnect device, the disconnect device shall remain readily operable.

19) Caution Marking and rating plate are located at rear enclosure of the apparatus.

20) The MAINS plug of apparatus should not be obstructed and should be easily accessed during intended use. To be completely disconnected from the power input, the apparatus shall be disconnected from the MAINS.

21) Minimum distances 10cm around the apparatus for sufficient ventilation.

22) No naked flame sources, such as lighted candles, should be placed on the apparatus;

23) Attention should be drawn to the environmental aspects of battery disposal;

24) The use of apparatus in moderate climates.

25) An appliance with a protective earth terminal should be connected to a mains outlet with a protective earth connection.

 
Additional Safety and Care Information:

You can find additional, important information about the Safety and Care of your new TV at www.lemall.com.

Recycling:

Because your device includes electronic parts, you must dispose of it separately from household waste when it has reached its end of life. Please consult your local laws and regulations for disposing of your device properly. Also, you can contact customer support for instructions on how to recycle your device. Please work with us to recycle in a way that helps the environment and protects all of us.

WHAT'S INSIDE

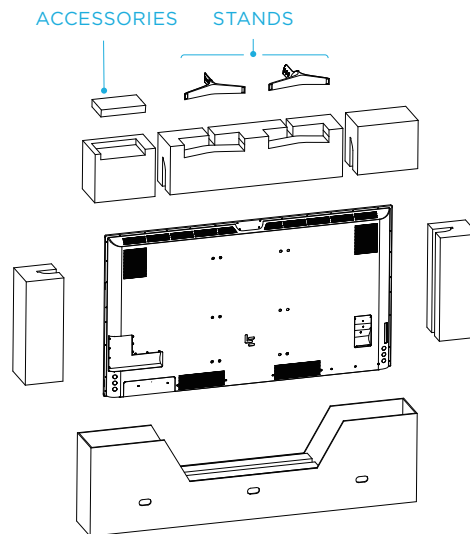


NOTE: Picture are for reference only.

A 3D GLASSES (2) W/ BATTERIES




* remove battery protection to activate batteries

 
B 2 STANDS

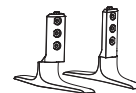


C 6 BOLTS

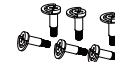 

D REMOTE & AA BATTERIES

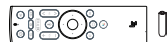 

E POWER CORD

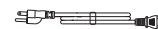 


F CABLE




INSTALLING THE STAND



 TIP: TWO PEOPLE RECOMMENDED TO REMOVE TV FROM BOX

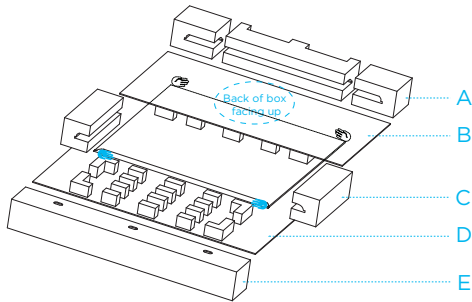


 - 1) Place the back of the box on an even surface. Remove the straps and protective cover.
- 2) When installing the TV base, remove B, C, & E. Once base is installed, remove others.
- 3) Place both hands on the box as shown in the diagram and carefully remove the TV.

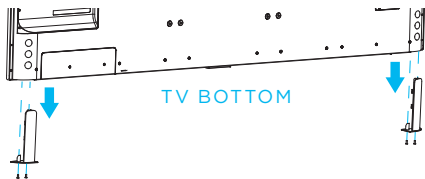


Locate holes corresponding to stands on each side of TV base. Take off the two side covers by removing the screws.

 Take the two stands out of the top foam and secure them to the TV tightly with the 6 screws that are provided in the accessory bag.

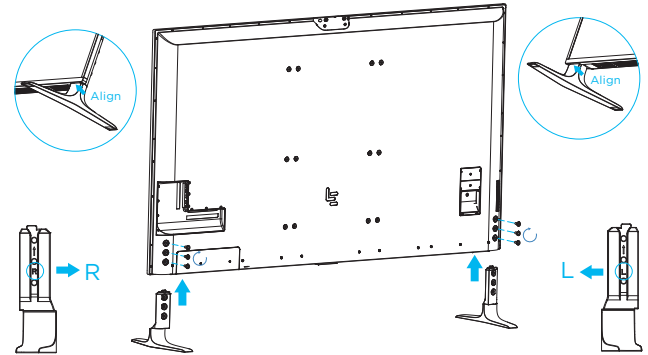

 Make sure there is enough surrounding space as indicated below.

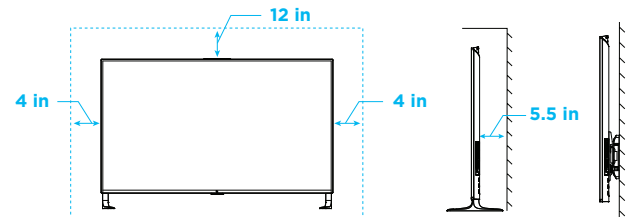


WALL MOUNTING

Please ensure that there is enough space as illustrated on previous page.

Installation will require four to six screws, depending on the wall mount used. See illustration for details.


To ensure installation, please make sure that the wall can sustain the combined weight of the TV and the wall mount.

 NOTE: Before wall mounting, please secure both side covers as illustrated below.

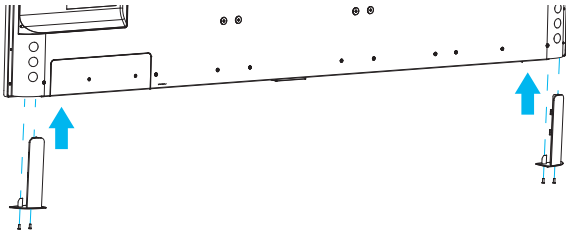


VESA® standard wall mounts supported:

 15.7" x 15.7" (400mm x 400mm)

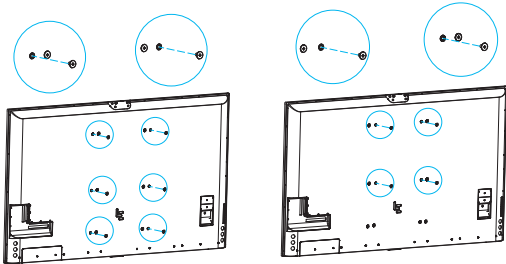

If you are using the dedicated LeEco 85-inch TV wall mounting bracket, please use the 500x400x300mm external wall mounting holes and wall mounting screws with the specifications M8x19mm (6 in total).

 If you are not using the dedicated LeEco 85-inch TV wall mounting bracket, please use the 400x400mm internal wall mounting holes and wall mounting screws with the specifications M8x19mm (4 or 6 in total).

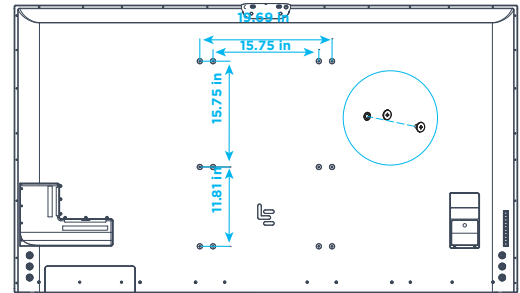


WALL MOUNT SCREW LOCATIONS

⚠ Contact a professional for assistance when wall mounting your TV. We are not responsible for any damage to the product or injuries. Do not power on the TV when performing wall mount installation. It may cause personal injury due to electric shock.

For detailed wall mounting instructions see the online TV manual at www.lmall.com.

 CONNECTING YOUR TV

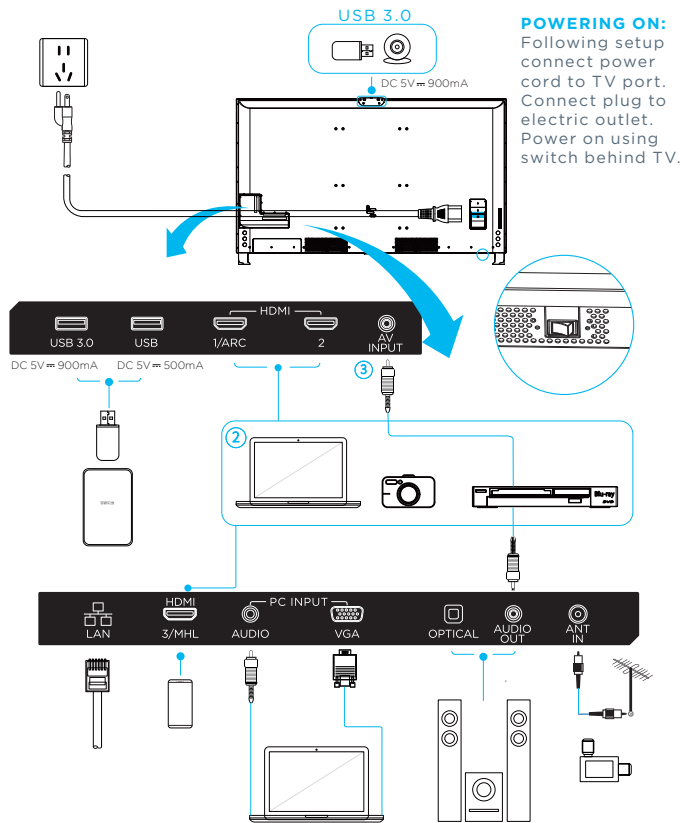

HDMI: Connect external components (such as Blu-ray and game consoles) to your TV using HDMI.

ARC (Audio Return Channel): Send a digital signal to a compatible device without the need for an additional optical audio connection.

MHL: Use the MHL option for mobile phones and cameras.

A/V (Composite): Connect to an older-generation device, such as VCR, game consoles or DVD player, using the composite cable*.

Digital Optical Audio: Connect to external sound devices using optical audio cable.

Video Graphics Array (VGA): Use your TV as a monitor by connecting your computer with a VGA cable**.

 
Antenna: Connect to antenna by plugging coaxial cable into the ANT IN connector.

Connecting to Internet: Connect TV to the internet using a wired (LAN) or wireless (built in 802.11 b/g/n/ac wifi) connections.

*Male RCA cable not included.

**VGA cable not included.

REMOTE PAIRING & SET UP

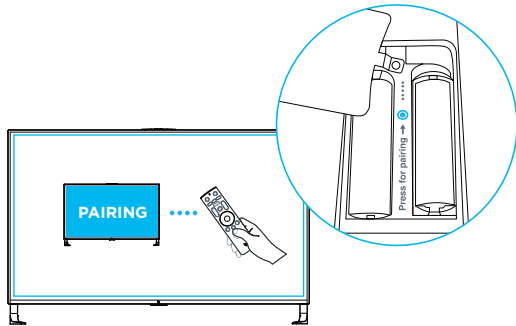


Slide battery cover off of remote and locate pairing button. Insert 2 AA batteries, press and hold button until connection is confirmed on screen.

  
NOTE: In order to connect, remote must be less than eight inches from lower section of TV.





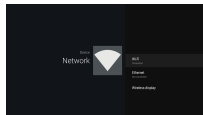



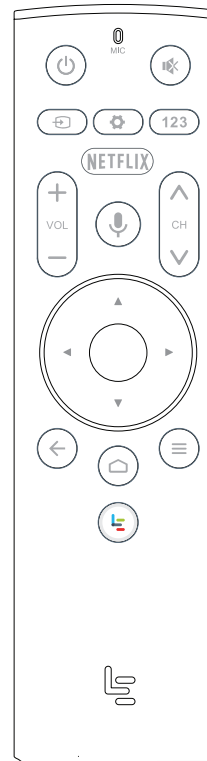






Wi-Fi / ETHERNET

Wi-Fi as a default will be on and will display a list of networks available. Please select the network that you will use. If encrypted, you will need to enter password. To turn off/on the Wi-Fi please go to the Network Wi-Fi app on the home page. If Ethernet cable is inserted in the TV, it will automatically connect.




REMOTE SET UP



-  Power television on or off
-  Mute sound
-  Display and select input sources
-  Display and select settings
-  Input desired channel number
-  Access Netflix
-  Increase or decrease volume
-  Activate voice commands
-  Channel up or down
-  Navigate up, down, left or right
-  Select/Enter
-  Return to previous screen
-  Display TV home page
-  Display application menu
-  Access Le

SPECS

	Product Model	uMax85
	Model Code	D85XUCNN
	Display Resolution	3840x2160
Power	Supply Voltage	120V- 60Hz
	Consumption	400W
	Sound Output Power	10 W x 2
Dimensions	with Stand (WxHxD)	75.0" x 46.0" x 15.7"
	without Stand (WxHxD)	75.0" x 42.8" x 2.4"
Weight	with Stand	150.0lbs
	without Stand	141.5lbs
Ambient	Temperature	32°F - +113°F
	Humidity	20% - 80%
Storage	Temperature	5°F - +113°F
	Humidity	≤80%

 Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Dolby Vision and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright © 2013-2015 Dolby Laboratories. All rights reserved.

 Mobile High-Definition Link. MHL and the MHL logo are a trademark, registered trademark or service mark of MHL, LLC in the United States and/or other countries.

 For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS and the Symbol together are registered trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

 The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

 harman/kardon
HARMAN

NOTE

Use a platform or cabinet that is strong and large enough to support the TV securely.

Brackets are optional. You can obtain additional accessories from www.lemall.com.

An optional wall mount can be used with your TV. Consult with your local dealer for a wall mount that supports the VESA standard used by your TV model. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. We recommend that you use an LeEco wall mount. When you do not use LeEco wall mount bracket, use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. If you are using a non-adjustable mount, attach the mount to the wall. Attach the cables to the TV first, then attach the TV to the mount.

Make sure to use screws and wall mounts that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

/ FCC CERTIFICATION



FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

For 5150-5250MHz and 5725-5825MHz frequency bands, add below statement for indoor use warning statement on manual,

Operations in the 5150-5250MHz and 5725-5825MHz bands are restricted to indoor usage only.

/ WARRANTY

One-Year Limited Warranty Summary

LeEco warrants the included hardware product and accessories against defects in materials and workmanship for one year from the original retail purchase. LeEco does not warrant against normal wear and tear, or damage caused by accident or abuse. For service, contact us at **+1 (855) 343.6688**. Shipping charges may apply. You may be required to provide proof of purchase in submission of your warranty claim. If you submit a valid claim under this warranty, LeEco will at its option repair your device or replace it with a new or refurbished device subject to the full warranty terms and conditions located at **www.lemall.com/us/warranty** and any applicable service policies at www.lemall.com. This warranty is in addition to rights provided under local consumer laws.

