 
 


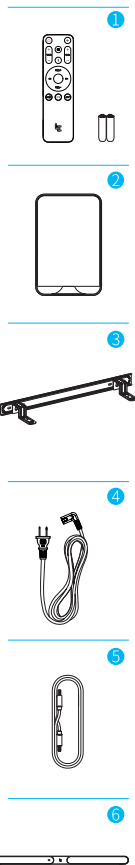


Product Layout

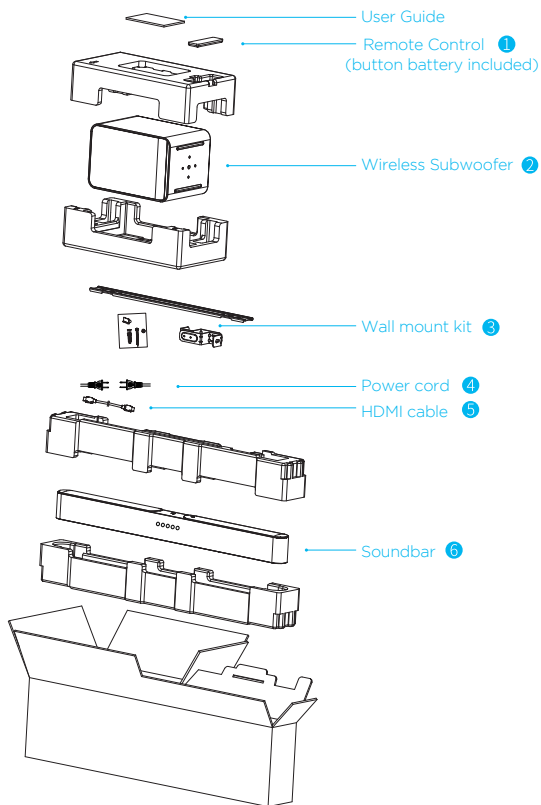


Reminder: The pictures are for reference only.

 Wall Mount Installation

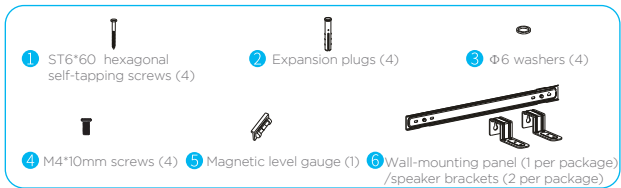

 Step 1. Drill holes in the wall, insert the expansion plugs and tighten the screws.

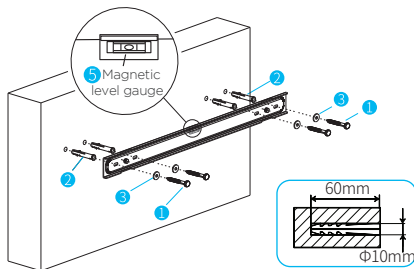

Step 2. Use screws to install the brackets into the speaker.

Step 3. Mount the brackets into the panel on the wall.

 


- Please make sure that you have fully read the user guide and understood the steps. If you don't understand any steps, please contact a professional installer.
- The wall must be able to support the weight of the brackets and speaker. If not, please take steps to enhance the wall structure to increase its bearing capacity.
- Please be sure to wear protective clothing and use the correct tools during the installation.
- The installation must be conducted by at least two persons.


*It's recommended to keep a 10-15 cm gap between the wall-mounted speaker and the wall-mounted screen.

Product Overview


Front view

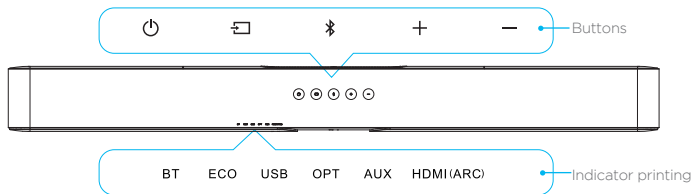

Rear view

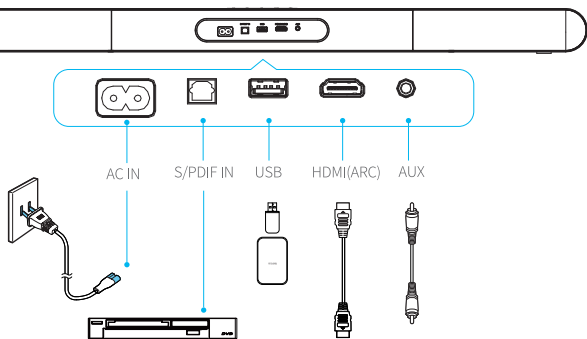 

Subwoofer

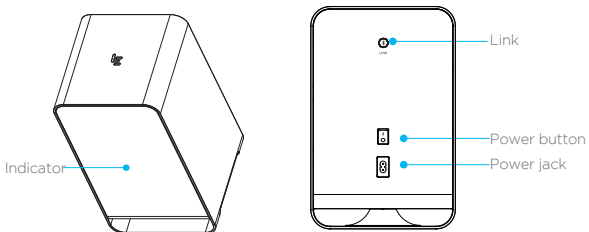 

Reminder: The pictures are for reference only.

Common Operations

Initial settings

- The system will be turned on after the power be connected.
- The speaker and the subwoofer have already been paired with each other before shipment, so they will work once turned on.

- Connect the speaker to the TV via HDMI (ARC)

If HDMI (ARC) is available on your TV, you can use an HDMI cable to connect the speaker to the TV for a better audio experience.

System operations

1. Surround sound mode

Press the Le button on the remote control during playback to turn on/off surround sound effects.

2. Adjust volume

Press the Volume +/- buttons on the remote control to turn up/down the volume.

- Press and hold the Le button for 2 seconds to mute.
- To unmute, press either Volume + or Volume -, or press the Le button for 2 seconds again.
- When adjusting the volume, the indicator corresponding to the signal source will blink accordingly. When the maximum or minimum volume is reached, the indicator will stop blinking.

3. Play audio via Bluetooth

Connect the speaker to an external Bluetooth device (such as iPad/iPhone/Android phone) via Bluetooth and enjoy music on the connected device using the speaker.

- Press the Bluetooth button on the speaker or remote control. During Bluetooth pairing, the Bluetooth indicator on the speaker will blink white.
- Turn on Bluetooth on the external device, and search for and select "LHT-V16S".
- When the BT indicator on the speaker glows white, the connection is established.

4. Auto standby mode

 
If the system stays idle for and receives no signal in 30 minutes, it will automatically enter the standby mode.

5. Pair the subwoofer

When you turn on the system, the speaker and the subwoofer will pair with each other for a wireless connection. If the subwoofer makes no sound, you can manually pair the system.

- Press the Link button on the back of the subwoofer for at least 3 seconds until the indicator on its front blinks white.
- Press and hold both the Bluetooth button and the Source button on the speaker for at least 2 seconds until all the 6 indicators on the speaker blink one by one. When the speaker is successfully connected to the subwoofer, the 6 indicators will glow for 3 seconds. If the pairing fails, the 6 indicators will blink for 3 times, and you need to repeat the aforementioned steps.

Remote Control Operations

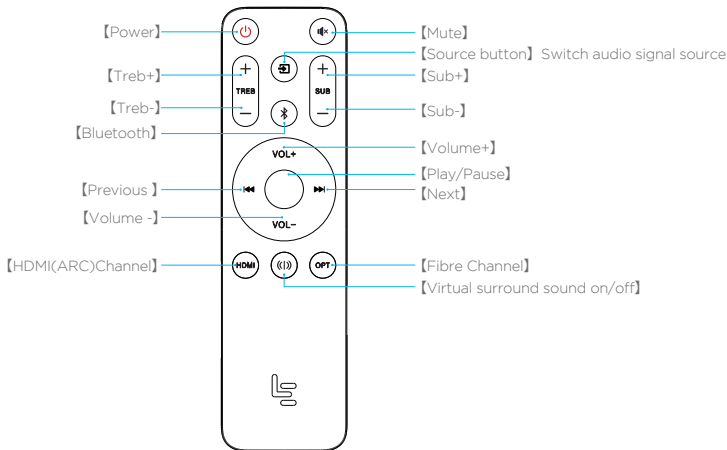

Specifications

LHT-V16S

Product	Main Unit	W x H x D: 35.4 x 2.4 x 3.5 (in inches) Weight: 5.5 lbs
	Subwoofer	W x H x D: 8.1 x 12.4 x 8.1 (in inches) Weight: 10.8 lbs
	Matching TV	40"TV and above
	Remote Control	Yes
Sound	Feature	Virtual Surround
	Enhancement	DTS 2.0 Channel Dolby Digital
	Bass	Wireless Subwoofer
	Power Output	Soundbar: 20W x2 Subwoofer : 80W
	Frequency Response (System):	30Hz-20,000Hz
Connection	HDMI(ARC) output	1
	USB 2.0	1
	Digital Optical in	1
	AUX in(3.5mm Stereo Audio)	1

Certification Information



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, and DTS 2.0 Channel are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.




Manufactured under license from Dolby Laboratories.

Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.



HDMI, High-Definition Multimedia Interface and the HDMI logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and/or other countries.

USE & SAFETY

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the

apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15.WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

WARNING: The mains plug/appliance coupler/direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.



CAUTION

ELECTRIC SHOCK DO NOT OPEN



Caution: to reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION - RISK OF ELECTRIC SHOCK-DO NOT OPEN
AVIS: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR

CAUTION

To prevent electric shock do not use this polarized plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

CAUTION

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

FCC CERTIFICATION



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



ENERGY STAR



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

This product meets ENERGY STAR® guidelines for energy efficiency. ENERGY STAR and the ENERGY STAR mark are registered U.S. marks. ENERGY STAR is a registered mark owned by the U.S. government.

WARRANTY

One-Year Limited Warranty Summary

LeEco warrants the included hardware product and accessories against defects in materials and workmanship for one year from the original retail purchase. LeEco does not warrant against normal wear and tear, or damage caused by accident or abuse. For service, contact us at **+1 (855) 343.6688**. Shipping charges may apply. You may be required to provide proof of purchase in submission of your warranty claim. If you submit a valid claim under this warranty, LeEco will at its option repair your device or replace it with a new or refurbished device subject to the full warranty terms and conditions located at **www.lemall.com/us/warranty** and any applicable service policies at www.lemall.com. This warranty is in addition to rights provided under local consumer laws.

