



Instruction Manual

LeEco TV 2.1 Sound Bar with Wireless Subwoofer

LT301s (Black)

LT301s (Silver)



— |

| —

— |

| —

Contents

Avertissement	4
Warnings	5
Safety Warnings	6
Unpackaging	8
Product Overview	9
Main Unit.....	9
Rear View of Subwoofer.....	10
Remote Control.....	11
Preparation	12
Remote Control Operation Range.....	12
Speakers Placement.....	12
Connections	13
Method 1: Optical / Coaxial Connection.....	13
Method 2: HDMI Hub Connection.....	14
Method 3: AUX Connection.....	16
Connecting an MP3 Player.....	16
Connecting to the Mains Supply.....	17
Pairing the Wireless Subwoofer with the Soundbar.....	18
General Operation	19
Standby / ON.....	19
Automatic Power Off Function.....	19
Selecting Modes.....	19
Adjusting the Speaker Level Settings and Effects.....	20
Bluetooth® Operation	21
Maintenance	22
Hints and Tips	22
Product Fiche and Specifications	23
Other information and Licenses	24
After Sales Information	25
FCC Statement BT	26
Statement for IC	27

Avertissement

1. Lisez ces consignes.
 2. Conservez ces consignes.
 3. Respectez tous les avertissements.
 4. Respectez toutes les consignes d'utilisation.
 5. N'utilisez jamais l'appareil à proximité d'un liquide.
 6. Nettoyez l'appareil avec un chiffon sec.
 7. Veillez à ne pas empêcher la bonne ventilation de l'appareil via ses ouvertures de ventilation. Respectez les consignes du fabricant concernant l'installation de l'appareil.
 8. Ne placez pas l'appareil à proximité d'une source de chaleur telle qu'un chauffage, une cuisinière ou tout appareil dégageant de la chaleur (y compris un appareil à haute puissance).
 9. Ne supprimez jamais la sécurité des prises bipolaires ou des prises terre. Les prises bipolaires possèdent deux contacts de largeur différente. Le plus large est le contact de sécurité. Les prises terre possèdent deux contacts plus une mise à la terre servant de sécurité. Si la prise du bloc d'alimentation ou du cordon d'alimentation fourni ne correspond pas à celles de votre installation électrique, faites appel à un électricien pour effectuer le changement de prise.
 10. Installez le cordon d'alimentation de telle façon que personne ne puisse marcher dessus et qu'il soit protégé d'arêtes coupantes. Assurez-vous que le cordon d'alimentation est suffisamment protégé, notamment au niveau de sa prise électrique et de l'endroit où il est relié à l'appareil; cela est également valable pour une éventuelle rallonge électrique.
 11. Utilisez exclusivement des accessoires et des appareils supplémentaires recommandés par le fabricant.
 12. Utilisez exclusivement des chariots, des diables, des présentoirs, des pieds et des surfaces de travail recommandés par le fabricant ou livrés avec le produit.
- Déplacez précautionneusement tout chariot ou diable chargé pour éviter d'éventuelles blessures en cas de chute.
13. Débranchez l'appareil de la tension secteur en cas d'orage ou si l'appareil reste inutilisé pendant une longue période de temps.
 14. Les travaux d'entretien de l'appareil doivent être effectués uniquement par du personnel qualifié. Aucun entretien n'est nécessaire sauf si l'appareil est endommagé de quelque façon que ce soit (dommages sur le cordon d'alimentation ou la prise par exemple), si un liquide ou un objet a pénétré à l'intérieur du châssis, si l'appareil a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas correctement ou à la suite d'une chute.
 15. L'appareil doit être connecté à une prise secteur dotée d'une protection par mise à la terre.
 16. La prise électrique ou la prise IEC de tout appareil dénué de bouton marche/arrêt doit rester accessible en permanence.

- distance minimale autour de l'appareil pour une aération suffisante; (Ventilation plus à 5cm)
 - il convient que l'aération ne soit pas gênée par l'obstruction des ouvertures d'aération par des objets tels que journaux, nappes, rideaux, etc.;
 - il convient de ne pas placer sur l'appareil de sources de flammes nues, telles que des bougies allumées;
 - il convient d'attirer l'attention sur les problèmes d'environnement dus à la mise au rebut des piles;
 - si l'appareil est destiné à être utilisé sous un climat tempéré et/ou tropical. (Dans les régions tropicales et tempérées)
17. Un avertissement selon lequel les batteries (bloc de batteries ou batteries installées) ne doivent pas être exposées à une chaleur excessive telle que celle du soleil, d'un feu ou d'origine similaire.

AVERTISSEMENT

Ne pas ingérer la pile, Danger de brûlure chimique

(La télécommande fournie avec) Ce produit contient une pile bouton. Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en 2 heures seulement et peut entraîner la mort.

Conserver les piles neuves et usées hors de portée des enfants.

Si le compartiment pile ne se ferme pas correctement, cesser d'utiliser le produit et tenir hors de portée des enfants.

En cas de doute concernant le fait que les piles pourraient avoir été avalées ou introduites dans une partie quelconque du corps, consulter immédiatement un médecin.



Ce symbole avertit de la présence d'une tension dangereuse et non isolée à l'intérieur de l'appareil - elle peut provoquer des chocs électriques.



Attention
Ce symbole signale les consignes d'utilisation et d'entretien ! Tenez importantes dans la documentation fournie. Lisez les consignes de sécurité du manuel d'utilisation de l'appareil.



Warnings

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - minimum distances around the apparatus for sufficient ventilation; (The minimum distance between ventilation is 5 cm)
 - the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
 - no naked flame sources, such as lighted candles, should be placed on the apparatus;
 - attention should be drawn to the environmental aspects of battery disposal;
 - the use of apparatus in tropical and/or moderate climates. (Use in tropical and temperate regions)
17. A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING

Do not ingest the battery, Chemical Burn Hazard
(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
Keep new and used batteries away from children.
If the battery compartment does not close securely, stop using the product and keep it away from children.
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure - voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor, domestic use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.

- A minimum distance of 5 cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and cause a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Mains Adapter Cable

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and cause a safety hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

- Do not expose the battery to direct sunlight or sources of excessive heat.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Thank you for purchasing your new Letv Soundbar.

We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main Unit



Remote Control



Subwoofer



 
Mains Cable x 2



Mains Adapter for Main Unit



3.5mm to RCA Stereo Audio Cable



Instruction Manual

 


- To get the most from this product, you may need to buy an HDMI / coaxial / optical cable.
- If items are missing, or damaged please contact Tel: 10-10-9000 for assistance.

Product Overview


Main Unit


Front View

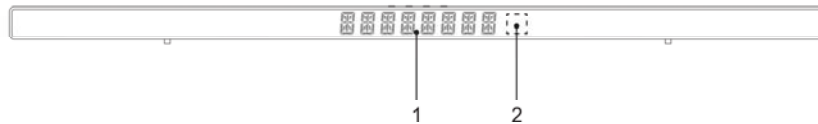


1. LED Display
Show the current status.
2. Remote Control Sensor
Receive signal from the remote control.

 Top View

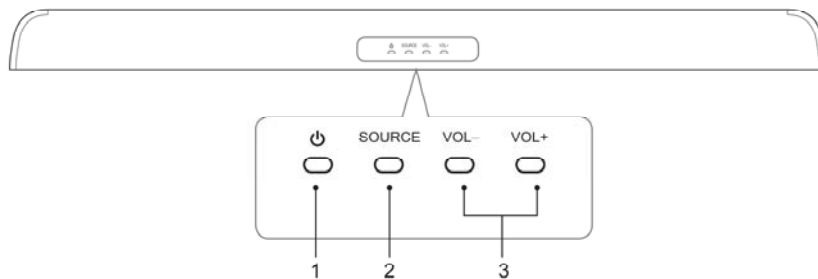


1.  Button
Switch the unit between On and Standby mode.
2. SOURCE Button
Select the input source.
ARC → HDMI 1 → HDMI 2 → BT → OPTICAL → COAXIAL → AUX 1(RCA) → AUX 2(3.5) → ARC
3. VOL - / + Button
Adjust the volume.

  Rear View

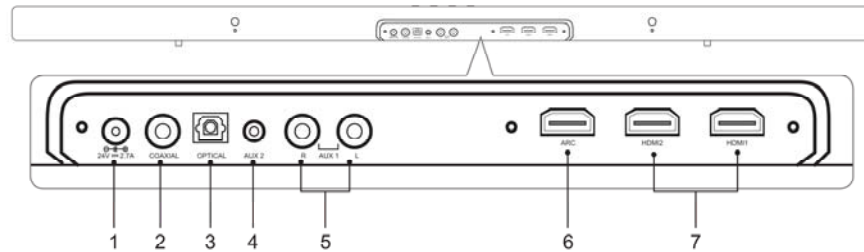


 

- | | |
|------------------------|------------------------|
| 1. 24V 2.7A Socket | 5. AUX 1 (L/R) Sockets |
| 2. COAXIAL Socket | 6. HDMI ARC |
| 3. OPTICAL Socket | 7. HDMI 1 / 2 Sockets |
| 4. 3.5mm Analog Socket | |


Rear View of Subwoofer

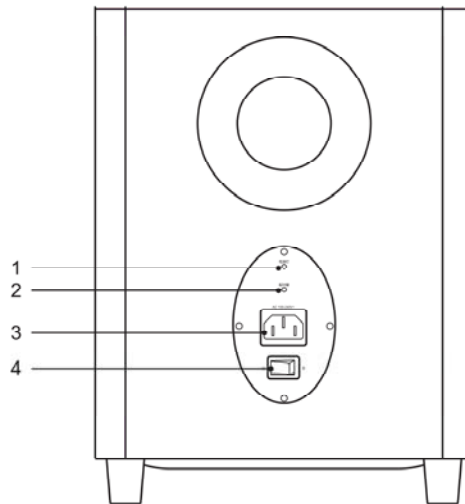

- | | |
|---|---|
| 1. POWER Indicator
Light up orange when the pairing succeed. | 3. AC 100~240V Power Socket |
| 2. PAIR Button
Pair with the main unit. | 4. ON/OFF Switch
Switch the subwoofer ON or OFF. |

Remote Control

 
1.  Button
Switch the unit between On and Standby mode.
2. VOL - Button
Decrease the master volume.
3. VOL + Button
Increase the master volume.
4.  PAIR Button
5. HDMI Button
Switch between HDMI 1 / HDMI 2 / ARC mode.
6. SUB - Button
Decrease the subwoofer sound level.
7. SUB + Button
Increase the subwoofer sound level.
8. EQ Mode button
Switch between music , movie and TV mode
9. Source input button
Switch between AUX1 /AUX2 /OPTICAL/COAXIAL
10.  Button
Mute the unit or resume the sound.
11. DTS TSHD Button
Active or turn off DTS TruSurround.
12. DTS TVOL Button
Active or turn off DTS TruVolume.

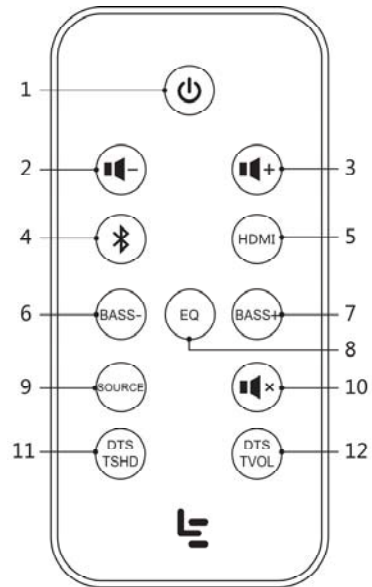


Preparation

Remote Control Operation Range

 - The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away and within a maximum of a 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.
- Remember to remove the insulation sheet from the remote control.

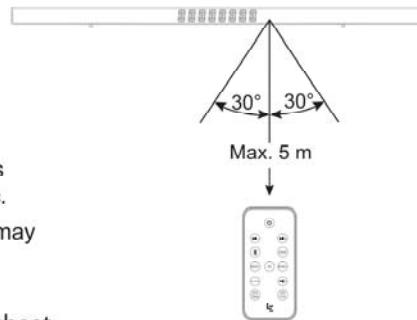

Speakers Placement

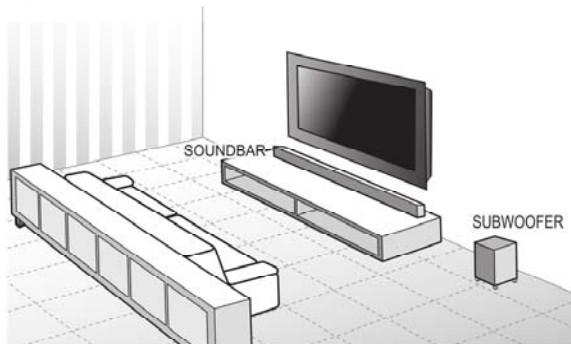 

- The subwoofer should be within 5 metres of the soundbar in an open area (the closer the better).
- Do not put anything on the top of the subwoofer.

Soundbar

Soundbar carries most of the dialog as well as music and effects.

- If your TV is placed on a table, you can place the soundbar on the table directly in front of the TV stand, centered with the TV screen.
- If your TV is attached to a wall, you can mount the soundbar on the wall directly below the TV screen.

Subwoofer

A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.).

- The performance of a subwoofer is directly related to its placement in the listening room. Experiment with placement before choosing a final location for your subwoofer. Find the location where the bass performance is best.

Connections




This section involves various methods of connecting the product to other external components. Ensure all audio connections of the unit are connected before connecting to the mains power socket.

Method 1: Optical / Coaxial Connection

Use an optical cable (not included) / coaxial cable (not included) to connect the soundbar's OPTICAL/ COAXIAL socket to the OPTICAL OUT/ COAXIAL OUT socket of the external device. The simplest option is to connect your soundbar directly to your TV. If you connect the soundbar to another external device (e.g. Blu-Ray player), you will hear the sound from that device through the soundbar.

 After connection, press SOURCE on the unit or on the remote control repeatedly to select OPTICAL or COAXIAL to play audio from your input device.

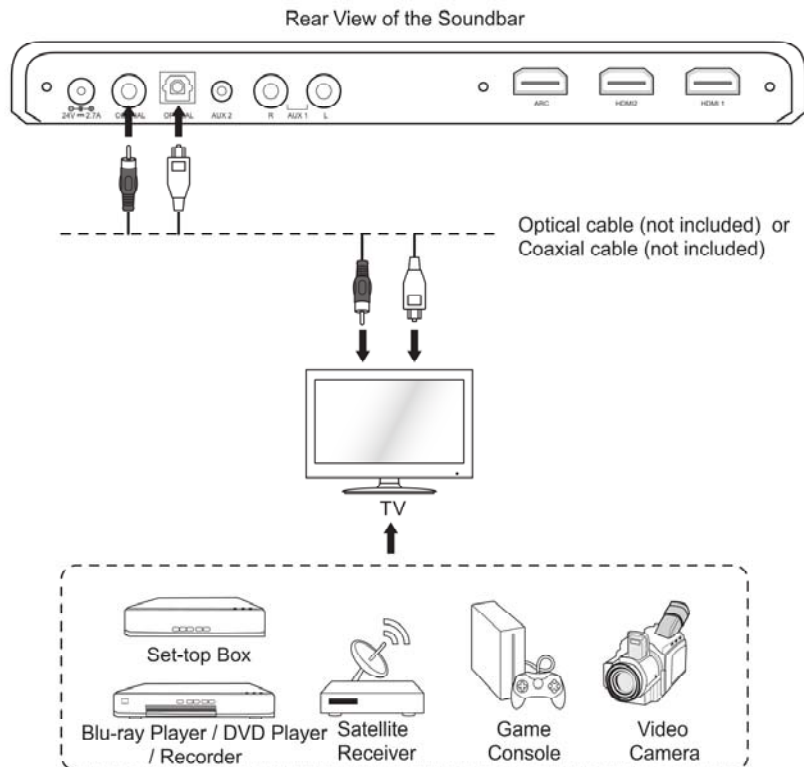

The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital (Refer to the user manual of the input source device for its audio setting details) with optical / coaxial input.


Method 2: HDMI Hub Connection

Using your Soundbar as a hub

Use this method to connect all your devices into your soundbar.

Connect the player(Like DVD) HDMI out and the Soundbar HDMI1/HDMI2 with one HDMI cable (not included), and then connect the Soundbar ARC with your TV HDMI in.

 After connection, press SOURCE on the unit or HDMI on the remote control repeatedly to select HDMI 1 / HDMI 2 to play audio from your input device.

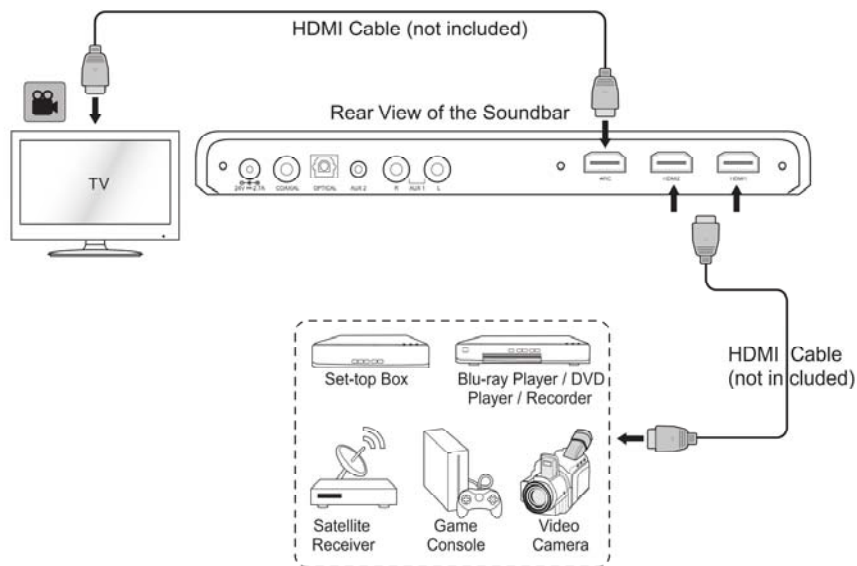

The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure the audio setting of the input source (TV, game console, DVD player, etc.) is set to PCM or Dolby Digital (Refer to the user manual of the input source device for its audio setting details) with HDMI input.

Using Your TV as a hub

The ARC (Audio Return Channel) function allows sound to travel to and from your ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure that your TV is ARC compliant and set up accordingly.

 


Ensure to use an HDMI cables that can support the ARC function.

Use this method to connect all your devices into your TV.

Connect an HDMI cable (not included) from your soundbar's HDMI OUT (ARC) socket to the HDMI (ARC) socket on your ARC-compliant TV.


After connection, press SOURCE on the unit or HDMI on the remote control repeatedly to select ARC to play audio from your input device.

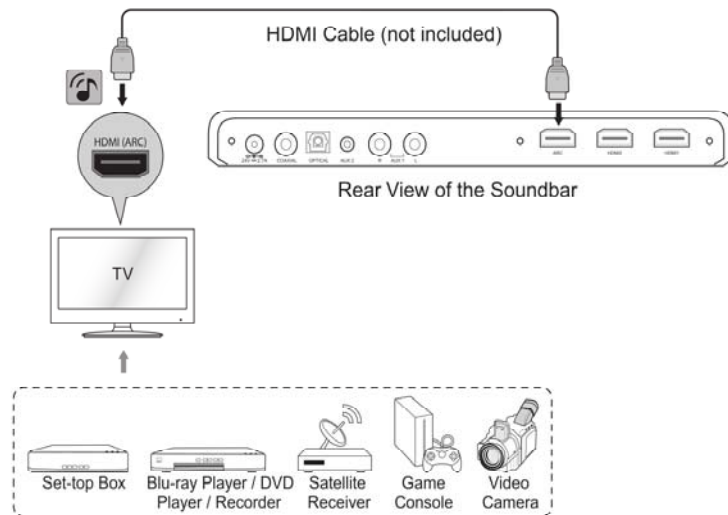

Method 3: AUX Connection

Use an RCA stereo audio cable to connect the soundbar's AUX 1 (L/R) socket to the AUDIO OUT sockets of the external device.

 After connection, press SOURCE on the unit or AUX on the remote control repeatedly to select AUX 1 to play audio from your input device.

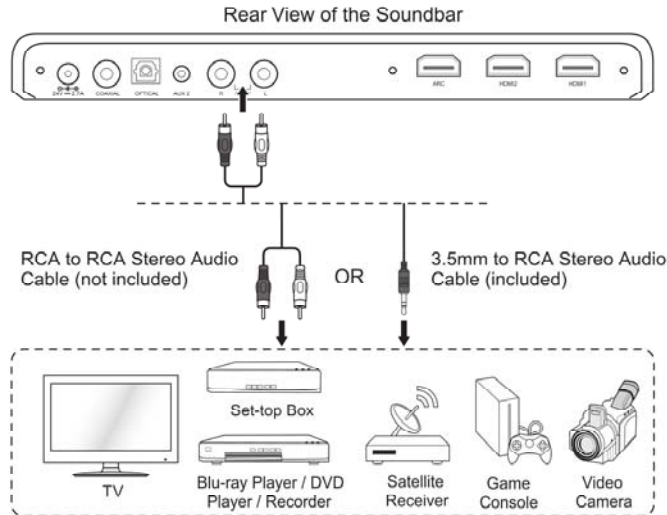


Ensure to match the colours on the cable plugs to the colours on the input and output sockets.

Connecting an MP3 Player

Use a 3.5mm to 3.5mm stereo audio cable (not included) to connect the soundbar's AUX 2 to the headphone socket of the external device.

 After connection, press SOURCE on the unit or AUX on the remote control repeatedly to select AUX 2 to play audio from your input device.

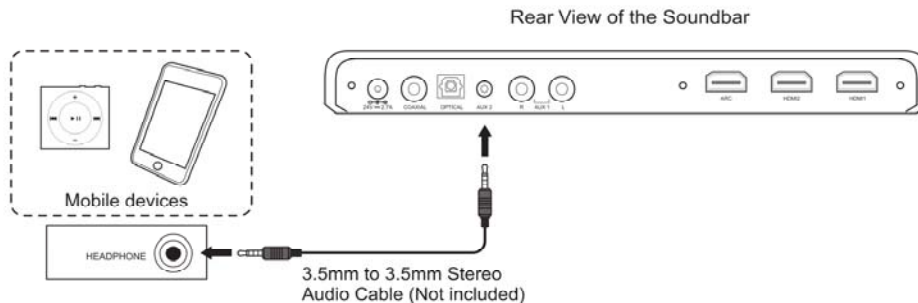

Connecting to the Mains Supply

 
The soundbar and subwoofer are designed to operate with the supplied mains adapter and mains cables.



- Connecting the unit to any other power source may damage the unit.
- Ensure all audio connections of the unit are connected before connecting to the mains power socket.
- Make sure the mains plug is firmly inserted into the mains socket.
- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.
- The mains adapter and mains cable are designed for this Letv soundbar only. DO NOT use the mains adapter and mains cable for other purposes.


Soundbar

Unwind the mains adapter cable to its full length. Connect mains cable to the mains adapter and then connect to the $\ominus \oplus 24V \text{---} 2.7A$ socket on the rear of the unit and a mains socket at the other end.

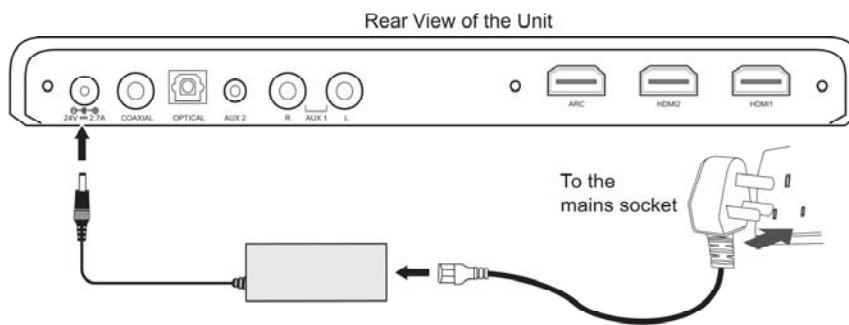

Subwoofer

 Connect the other end of the mains cable to the AC 100-240V socket at the rear of the subwoofer then connect the mains plug to the mains socket.

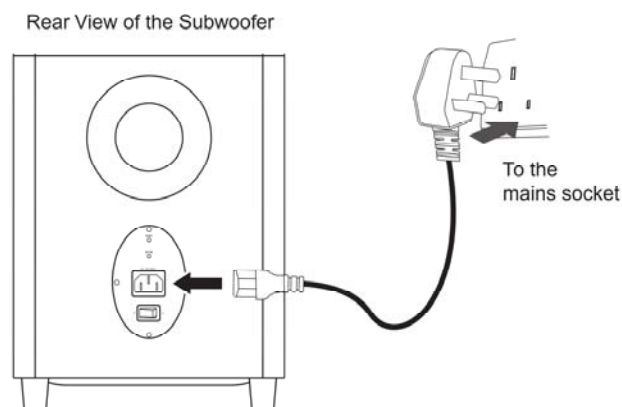

Pairing the Wireless Subwoofer with the Soundbar

Automatic Pairing

Plug the soundbar and the subwoofer into the mains sockets and switch on the subwoofer. Press **On** on the unit or on the remote control to switch the unit to On mode. The display will show "WELCOME". Then the subwoofer and soundbar will automatically paired within 30 seconds.



Do not press **PAIR** on the rear of the subwoofer, except for manual pairing.

Manual Pairing



It is very abnormal that the connection would fail, you should not attempt manual pairing in normal usage.

If the automatic pairing fails or the subwoofer is switched **OFF**, the display will flash "CHK SUB" for 20 seconds. Ensure that all the cables are well connected, the main unit and the subwoofer is switched to **On** mode. If it still doesn't work, pair the subwoofer with the soundbar manually.

1. Unplug both units from the mains sockets, then plug them in again after 3 minutes.
2. Press and hold the **PAIR** button on the rear of the subwoofer, and then press and hold **SOURCE** and **VOL+** on the unit for a few seconds to start pairing. The pair indicator on the subwoofer will rapidly blink when pairing and will become solid when successful.
3. While the unit is pairing with the subwoofer, "CNCT SUB" will flash on the display.
4. After the subwoofer is paired with the unit, "CNCT SUB" will disappear, and the display will show the current channel.



- The subwoofer should be within 5 m of the soundbar in an open area.
- If the wireless connection fails again, check if there is conflict or strong interference (for example, interference from an electronic device) around your location. Remove these conflicts or strong interferences and repeat the above procedures.

General Operation

Standby / ON

When you first connect the unit to the mains socket, the unit will be in Standby mode.

- During Standby mode, the POWER indicator of the subwoofer will be off. Press ϕ on the unit or on the remote control to switch the unit on. The display will show " WELCOME ", and then the last used mode. The sound level will fix on level 15 after every time the unit is switched on.
- After the unit is idle for about 10 seconds, the display will show " _ ". Press any button (except ϕ) to exit the idle mode.
- Press ϕ on the unit or on the remote control again to switch the unit back to Standby mode. The display will show "GOODBYE", and then turn off.

Automatic Power Off Function

The unit automatically turns to Standby mode after about 10 minutes if the TV or the external unit is disconnected, switched off or the volume is too close to mute.



 

- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

Selecting Modes

1. Press SOURCE on the Unit repeatedly to select between :
ARC→HDMI 1→HDMI 2→BT→OPTICAL→COAXIAL→AUX 1(RCA)→
AUX 2(3.5) →ARC→
2. Press SOURCE on Remote Control repeatedly to select between :
OPTICAL→COAXIAL→AUX 1(RCA)→AUX 2(3.5)→
3. Press HDMI on the Remote Control repeatedly to select between :
ARC→HDMI1→HDMI2→ARC→
4. Press the $\$$ on Remote Control to go to BT channel.

Adjusting the Speaker Level Settings and Effects

Adjusting the Volume

- Press VOL + / – to adjust the volume.
- If you wish to turn the sound off, press  on the remote control. The display will show "MUTE". Press  again, or press VOL + / – on the unit or on the remote control to resume normal listening.

Adjusting the Subwoofer Volume Level

Press SUB + / – repeatedly to adjust the bass volume level from SUB MIN(–10) to SUB MAX(10).

DTS TruSurround

Press DTS TSHD to activate or turn off DTS TruSurround.

DTS TruVolume

Press DTS TVOL to activate or turn off the TruVolume, it controls the level of audio output to prevent commercials from being louder than the volume of the program being viewed.



The acoustic setting has been set to fit most occasions. However, you may adjust the acoustic effect by pressing DTS TSHD or DTS TVOL button for optima sound performance for different video programmes

Bluetooth® Operation

Operations :

1. current not in **BT** channel:

Press the **↵** button on Remote Control or hold the **SOURCE** button on the unit for 3S, the unit will go to **BT** channel and go to **PAIRING** mode directly(Bluetooth is not connected), and the LED will be flashing **PAIRING** for 5 minutes. Then you can connect your BT device with this unit(Bluetooth ID is **Letv LT301s**).

2. Current in **BT** channel:

- a. If no connection, the unit will stay in **PAIRING** mode, LED will be flashing **PAIRING**;
- b. If **BT** already connected, hold the **SOURCE** button on the unit or on the remote control, will disconnect the unit and go to **PAIRING** mode, LED will be flashing **PAIRING**, other bluetooth devices can find and connect the unit.

LED display and BT function instructions:

PAIRING mode: When in **BT** channel, if **BT** is not connected, the unit will always in **PAIRING** mode, the unit will reconnect the devices in memory automatically, and also, new devices can find and connect the unit.

1. **PAIRING** mode:

- a. When go to **BT** channel, the unit will go to **PAIRING** mode;
- b. When in **BT** channel, if the connection is lost in unexpected condition, like out of the communication range, the unit will go to **PAIRING** mode automatically;
- c. When in **BT** channel, if the connection is disabled by purpose, like disconnect from **BT** device, the unit will go to **PAIRING** mode automatically;
- d. In the 3 points above, if the unit is not **PAIRED** successfully, the unit will stay in **PAIRING** mode, the unit will standby automatically in 10 minutes;

2. **PAIRED**:

LED will show solid **PAIRED**



- The operational range between the unit and the device is approximately 6 metres.
- Before connecting a Bluetooth device to the unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the device and the unit can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range

Maintenance




 
Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the units, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance

Please call our servers Centre on 10-10-9000

Problem	Solution
No power.	<ul style="list-style-type: none"> • Ensure the mains plug is connected. • Make sure that you select the On mode.
The remote control does not function.	<ul style="list-style-type: none"> • Use the remote control near the unit. • Point the remote control at the remote sensor on the unit. • Replace the battery in the remote control with a new one. • Remove any obstacles between the remote control and the unit.
Loud hum or noise is heard.	<ul style="list-style-type: none"> • The plugs and sockets are dirty. Wipe them with a cloth slightly moistened with alcohol.
No sound from the soundbar and subwoofer.	<p>Please try either one of the solutions below:</p> <ul style="list-style-type: none"> • Make sure that the unit is not muted. Press  or VOL +/- button to resume normal listening. • Press  on the unit or on the remote control to switch the soundbar to standby mode. Then press the button again to switch the soundbar on. • Unplug both the soundbar and the subwoofer from the mains socket, then plug them again. Switch on the soundbar. • Ensure the audio setting of the input source (TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (HDMI, OPTICAL , COAXIAL) connection. • The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 5 m of the soundbar (the closer the better). • The soundbar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section "Pairing the Wireless Subwoofer with the Soundbar". • The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect.

Problem	Solution
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none"> The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.
Intermittent sound output from subwoofer.	<ul style="list-style-type: none"> You are at the operating limit of the subwoofer. Move the subwoofer closer to the Soundbar (the closer the better) or remove obstacles from between the soundbar and Subwoofer.
I cannot find "Letv LT301s" on my Bluetooth device.	<ul style="list-style-type: none"> Ensure the Bluetooth function is activated on your Bluetooth device. Ensure you have paired your unit with the Bluetooth device.



If any anomaly is encountered, unplug the mains adapter from the mains socket and reconnect it again

Product Fiche and Specifications

Brand	Le
Model	LT301s
Soundbar	
Power Supply Input	AC100-240V~ 50/60Hz
Power Supply Output	24V 2.7A
Main Unit Input	
Power Consumption	50W
Bluetooth®	Bluetooth 4.0
Signal to Noise Ratio	> 65dB
Net Weight	2.12 kg
Dimension	985mm(W) x 54mm(H) x 74mm(D)
Subwoofer	
Power Supply	AC100-240V~ 50/60Hz
Power Consumption	60W
Net Weight	6kg
Dimension	250mm(W) x 327mm(H) x 265mm(D)

Features and specifications are subject to change without prior notice.

Others Information and Licences



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround and DTS TruVolume are trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

After Sales Information

Customer Service Hotline: 10-10-9000

Customer Service Website: www.lemall.com

1. If there are any quality problems in the product within 7 days after the purchase date, you may:
 - a) Go to the distributor from which you purchased the product for a full refund;
 - b) Go to the distributor from which you purchased the product for an exchange for another product of the same model and new package;
 - c) Go to the service center authorized by Letv for repairs or replacement.
2. You may return the product for any reason within 7 days after the purchase date:
 - a) Ensure that the main product, its parts and accessories are complete;
 - b) Ensure that the external package is intact, without affecting the secondary sale;
 - c) Please go to the distributor from which you purchased the product for a full refund by presenting the invoice, shopping receipt, and other valid certificates;
 - d) For a return for non-quality reasons, you need to assume the logistic costs of delivering and returning the product; and the actual refund amount shall be the amount after deduction of the logistic costs.
3. If there are any quality problems in the product within 15 days after the purchase date, you may:
 - a) Go to the distributor from which you purchased the product for an exchange for another product of the same model and new package;
 - b) Go to the service center authorized by Letv for repairs or replacement.
4. Within the warranty period, if there are any quality problems in the product 15 days after the purchase date, you may:
 - a) Go to the service center authorized by Letv for repairs. The repair process is as follows: fill in a user information form under the guidance of the staff, wait for the engineer to check your product, and the service center will return it to you after the problems are fixed;
 - b) If there is no local service center authorized by Letv or the service center is far away from you, you may hand the damaged product over to the original distributor, and fill in a user information form at the distributor. The distributor will transfer your damaged product to the service center, and the service center will return it to you after checking and repairs. You may either pick up the product by yourself, or ask Letv to arrange an express delivery, with the express delivery cost to be borne by Letv. For discontinued models, Letv will replace them with other products in the same series with the same or better performance based on its replacement plan for discontinued products.
5. Product Warranty Policy:

The warranty period of the accessories sold at the accessories area of the official website is one year, which shall be subject to the invoice. If the invoice has been lost or there is no invoice, we will provide out-of-warranty repair services.

6. The free warranty does not cover:

- a) Products or parts whose warranty period has expired;
 - b) Failure or damage resulting from incorrect or improper use, maintenance, or safekeeping, such as breakage, rusting, and damage of the products or parts (e.g., shell, mainboard, interfaces, etc.) resulting from improper handling, failure to use the products as per their reasonable intended use, improper plugging in of external devices, dropping or extrusion by improper external force, contact with or exposure to improper temperatures, solvents, acid-base, water-soaking, or humid environment, etc.;
 - c) Failure or damage resulting from reasons other than the installation, repairs, change, adding, or disassembly by the agency or personnel authorized by Letv.
 - d) Products or parts whose original identification information is modified, altered or removed;
 - e) Products without a valid sales invoice or warranty card, unless otherwise specified herein;
 - f) Failure or damage resulting from use of unauthorized, nonstandard, or non-publicly released software;
 - g) Failure or damage resulting from viruses, hacking, or other malicious invasions;
 - h) Failure or damage resulting from force majeure or accidents;
 - i) Failure or damage resulting from other non-quality problems of the products.
- In case of any of the above circumstances, you should seek a solution from the relevant responsible party, or choose the paid services, and LETV will not assume any responsibility arising therefrom.

7. The normal fading, wear, and loss of the product during use falls beyond the warranty coverage.

FCC Statement BT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part

15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Statement for IC

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



扫描下载乐视商城APP

欢迎登陆www.lemall.com, 注册成为乐视会员,
更多精彩在等你。