



Owner's Manual Version 1.0

PMD-B100



PRECAUTIONS

Important Information

Please Read Carefully Before Using This Product.

This product is intended to safely provide turn by turn instructions to get you to a desired destination. Please make certain that all persons using this navigation system carefully read these precautions and the following instructions fully.

- This product is not a substitute for your personal judgment. Any route suggestions made by this navigation system may never supersede any local traffic regulations or your personal judgment and/or knowledge of safe driving practices. Do not follow route suggestions if the navigation system instructs you to perform an unsafe or illegal maneuver, places you in an unsafe situation, or routes you into an area which you consider unsafe.
- 2) Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, pull over in a safe and legal manner and location.
- 3) Do not input destinations, change settings, or access any functions requiring a prolonged view of the monitor and/or remote control while you are driving. Pull over in a safe and legal manner and location before attempting to access the system.
- 4) Do not use the navigation system to route you to emergency services. Not all locations of emergency services such as police and fire stations, hospitals and clinics are contained in the database. Please use your own judgment and ask for directions in these situations.
- 5) The map database used in the navigation system is the most recent map data available at the time of production. Because of changes in streets and neighborhoods, there may be situations where the navigation system is not able to route you to your desired destination. In these cases, use your own judgment.
- 6) The map database is designed to provide you with route suggestions and does not take into account the relative safety of a suggested route or of factors which may affect the time required to reach your destination. The system does not reflect road closures or construction, road characteristics (i.e. type of road surface, slope or grade, weight or height restrictions, etc.), traffic congestion, weather conditions, or any other factors which may affect the safety or timing of your driving experience. Use your own personal judgment if the navigation system is unable to provide you with an alternate route.
- 7) There may be situations where the navigation system displays the vehicle's location erroneously. Use your own driving judgment in this situation, taking into account current driving conditions. Please be aware that in this situation the navigation system should correct the vehicle's position automatically. However, there may be times where you may have to correct the position yourself. If this is the case, pull over in a safe and legal manner and location before attempting operation.
- 8) Make certain that the volume level of the navigation system is set to a level which still allows you to hear outside traffic and emergency vehicles.

If there is anything in the manual about the operation of the navigation system which you are uncertain about, please contact your local Alpine authorized navigation dealer or Alpine at 1-888-NAV-HELP (1-888-628-4357) before using the navigation system.

WARNINGS

Points to Observe for Safe Usage

Read this manual carefully before using this system. It contains instructions on how to use this product in a safe and effective manner. Alpine cannot be responsible for problems resulting from failure to observe the instructions in this manual.

This manual uses various pictorial displays to show you how to use this product safely and to alert you to potential dangers resulting from improper connections and operation. Following are explanations of these pictorial displays. It is important to fully understand the meanings of these pictorial displays in order to use this manual and the system property.

⚠ WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE. Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING. Failure to do so may result in an accident.

MINIMIZE DISPLAY VIEWING WHILE DRIVING.

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE THIS PRODUCT AS SPECIFIED.

Use for other than its designed application may result in fire, electric shock or other injury.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

▲ CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized ALPINE dealer or the nearest ALPINE Service Center for repairing.

DO NOT MIX NEW BATTERIES WITH OLD BATTERIES. INSERT WITH THE CORRECT BATTERY POLARITY.

When inserting the batteries, be sure to observe proper polarity (+ and -) as instructed. Rupture or chemical leakage from the battery may cause fire or personal injury.

⚠ PRECAUTIONS

Temperature

Be sure the temperature inside the vehicle is between $+60^{\circ}C$ ($+140^{\circ}F$) and $-0^{\circ}C$ ($+32^{\circ}F$) before turning your unit on.

Fuse Replacement

When replacing the fuse(s), the replacement must be of the same amperage as shown on the fuse holder. If the fuse(s) blows more than once, carefully check all electrical connections for shorted circuitry. Also have your vehicle's voltage regulator checked.

Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your ALPINE dealer or the nearest ALPINE Service Station for servicing.

Installation Location

- Make sure the PMD-B100 will not be exposed to:
- Direct sun and heat
 Excessive dust
- High humidity
 Excessive vibrations

Characteristics of LCD Panel

- After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.
- Under cold temperature conditions, the screen may lose contrast temporarily. After a short warm-up period, it will return to normal.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that 0.01% of the pixels could be either always ON or OFF.

Using Headphones

If ACC or the monitor's power source is turned off, a loud noise is produced through the headphone jack. Be sure to remove the headphones from your ears before you turn the monitor off.

USER AGREEMENT

In using this Blackbird Portable Navigation System (hereinafter referred to as "System"), which includes Alpine Electronics, Inc. ("Alpine") Software and NAVTEQ North America, LLC. ("NAVTEQ") Database, you are bound by the terms and conditions set forth below. By breaking the seal on the System and using your copy of the System, you have demonstrated your agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions.

The System may not be copied, duplicated or otherwise modified, in whole or in part, without the express written permission of Alpine and NAVTEQ.

The System may not be transferred or sublicensed to any third party for profit, rent or loan or licensed for reuse in any manner.

The System may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.

The System may not be used in a network or by any other manner of simultaneous use in multiple systems.

The System is intended solely for personal use (or internal use where the end-user is a business) by the consumer.

The System is not to be used for commercial purposes.

Neither Alpine nor NAVTEQ guarantees to the customer that the System meet the specific objectives of the user.

Neither Alpine nor NAVTEQ shall be responsible for any damages caused by the use of the System to the actual user and to any third party.

The warranty on the System shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in layout found in the System.

The right to use the System shall expire either when the user destroys this software, or when any of the terms for use is violated and Alpine and/or NAVTEQ exercise the option to revoke the license to use this software.

The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.

The NAVTEQ Database may include or reflect data of licensors, including Her Majesty The Queen in right of CANADA. Such data is licensed on an "AS IS" basis. The licensors, including Her Majesty The Queen, make no guarantees, representations or warranties respecting such data, either express or implied, arising by law or otherwise, accuracy or fitness for a particular purpose.

The licensors, including Her Majesty The Queen, shall not be liable in respect of any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action alleging any loss, injury or damages, direct or indirect, which may result from the use or possession of the data or the NAVTEQ database. The licensors, including Her Majesty The Queen, shall not be liable in any way for loss of revenues or contracts, or any other consequential loss of any kind resulting from any defect in the data or the NAVTEQ database.

End User shall indemnify and save harmless the licensors, including Her Majesty The Queen and the minister, and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the data or the NAVTEQ database.

TABLE OF CONTENTS

Precautions	. 2
Warnings	
User Agreement	
Table of Contents	. 5
Installation	
How to Mount Blackbird	•
How to Listen to Guidance and	U
Music from Your Car Stereo	. 7
System Features	
Basic Operations	
To Turn On Power	
To Turn Off Power	
Set a Destination and Go!	
Map Function	
Set Estimate Time Display	
Set the Map Orientation	
Repeating the Announcement	
Zoom In/Out Map	
GPS Status	
Battery Status	12
Setting Destination Directly	10
from Map Display	
Switching Map Display	13
Setting a Destination by Address	
Confirm Destination Screen	
Setting a Destination by Places	16
Setting a Destination from the	10
Address Book	16
Setting a Destination by Recently	10
Entered Destination	
Setting a Destination by Coordinates	18
Setting a Destination by Intersection	
Find Local Places	20
Saving a Destination into	
the Address Book	
Set Waypoint	
Home	
Finding a Way Home	
Finding Alternative Way to Go Home	
Route	23
Recalling the Maneuver List	
during Guidance	23

Editing Address Book 25 Delete Previously Saved Displaying and Editing Icons on the Map 26 Brightness 26 Turning Voice On and Off 27 Changing Navi Mix Volume 27 Setting Estimate Time Display 27 Setting up the Clock 27 Switching the Measuring Unit 27 Setting up System 27 FM Transmitter Setup 27 Frequency 27 Loading Music into your Blackbird · · 30 How to Upload the New Software

INSTALLATION

How to Mount Blackbird

MARNING

attaching it.

position.

Improper installation may make the navigation system fall out from the cradle while driving. Please make sure all locks and knobs are turned tight.

Ensure that both the suction cup and windshield

area are clean and free of dirt and grease before

Turn the knob to activate the vacuum to lock the

position. Then turn clockwise to set the position.


Then turn counter clockwise to set the position. DEVICE SHOULD NOT BE INSTALLED SO THAT IT


OBSTRUCTS THE DRIVER'S VIEW.

Stick the suction cup mount against the windshield.

Do not install the navigation while driving. Find a spot suitable for the navigation system.



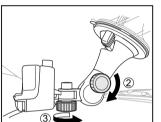

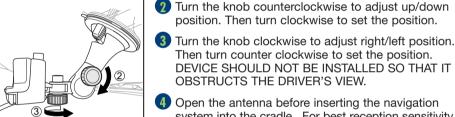

position the antenna 90 degrees to the main unit. 5 Slide the navigation system into the cradle until you hear a click sound.


system into the cradle. For best reception sensitivity,

6 Plug the cigarette lighter charger into the cigarette lighter socket.

▲ CAUTION

Remove the navigation system when you are away from the vehicle to prevent theft.

To Remove the Navigation System from the Cradle

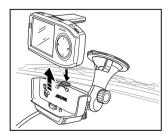

- Press and hold the eject button on the cradle.
- 9 Grasp the navigation system behind the antenna and remove by sliding up and out of the cradle.

Note to California consumers: California Vehicle Code 26708 prohibits the placement of any object on windows. Refer to your authorized Alpine dealer for other installation options.

How to Listen to Guidance and Music from Your Car Stereo

Turning on the Transmitter and Plaving Music from Your Radio

You can setup Blackbird to broadcast music and navigation voice guidance directly to your FM radio.

- Plug the cradle into your vehicle's cigarette lighter/power outlet.
- Insert Blackbird into the cradle (See page 6 for details).
- Turn on your radio. Find an FM frequency from the following that is broadcasting. nothing but static: 88.3 MHz. 88.5 MHz. 88.7 MHz, 88.9 MHz, 106.7MHz, 106.9 MHz, 107.1 MHz, 107.3 MHz, 107.5 MHz, (do this with Blackbird off at first). 107.7 MHz.

Turn on Blackbird.


- On Blackbird, go to Main Menu → Setup → System The default broadcast frequency is 88.3 MHz.
- Turn the transmitter button ON in System Setup screen.
- Set Blackbird to that frequency and play music files on Blackbird. (Touch Main Menu -> Entertainment, or simply press Music button) Blackbird provides 10 frequencies to choose from. You may have to try a few frequencies before you find one that works best in your vehicle.

Turning Off the Transmitter

- Turn off your radio first to avoid the static noise.
- On Blackbird, go to Main Menu \rightarrow Setup \rightarrow System.
- Turn the transmitter button OFF in System Setup screen.

SYSTEM FEATURES



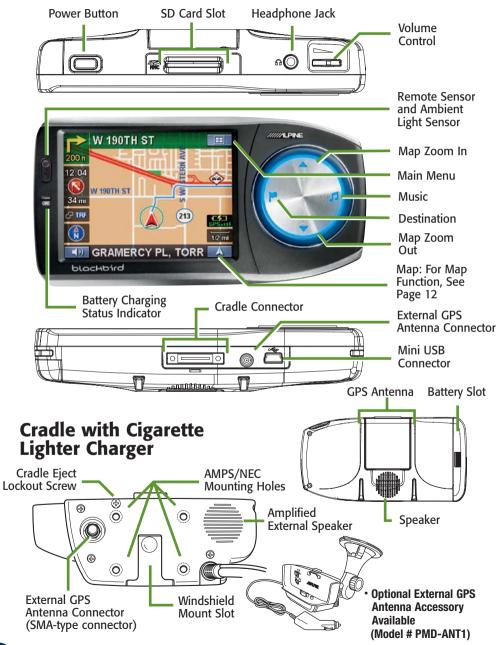

Congratulations and thank you for purchasing the Alpine Blackbird Portable Navigation System. We hope you enjoy using this exciting product and trust that it will make your driving experience more comfortable, stress-free, and entertaining. The Blackbird Portable Navigation System provides an easy-to-use user interface, clear, easy-to-understand spoken driving instructions, and award winning design all in a portable product. Blackbird is built upon Alpine's history of navigation success in North America. Please read this manual carefully. If you have any further questions about Blackbird's operation, feel free to call Alpine at 1-888-NAV-HELP (628-4357) for technical assistance.

Main Menu 💷



Battery Charging Status Indicator

This illuminates when the system is being charged or requires charging.

GREEN	Battery is fully charged.
AMBER	Battery is charging.
RED	Battery needs charging.

BASIC OPERATION





Touch Main Menu Select **Destination** from Main Menu, or press Destination button.

	Select POI Category	
	AIRPORTS	*
	AMUSEMENT PARKS	-
	ATMS	
~5	AUTO CLUBS	
	AUTO DEALERS	~
5	Ð	A

Select desired place list. (In this example, ATMS is



Select Sort By Distance or Within a City.

For Map Function, see page 12.

The following example briefly describes how to use the navigation feature.



Select desired method. 2 (In this example, Places is selected.)



Select the search method. 5 (In this example, Sort By Name is selected.)



To Go Home, see page 22.



Select a search method. 3 (In this example, **By Place Type** is selected.)




6 Type name of a place. If more than one place with the same name exist, sort method screen appears.



Map is displayed. 9 Follow the navigation.

To Find other routes, see page 23.

MAP FUNCTION

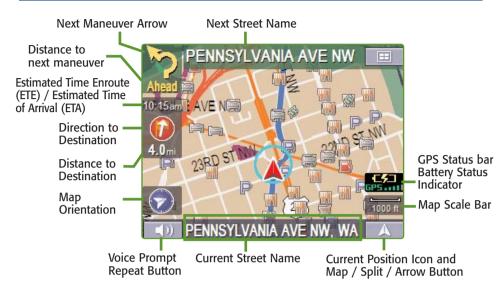

Set Estimate Time Display



Click Icon to Switch between Estimate Time and Arrival Time. Note: The time estimates are based

on the average speed. The estimate time will vary depending on vehicle speed. The arrow always points toward the destination.

Set the Map Orientation

Click icon to Switch between North up and Heading Up views.




In north up view, north is always at the top of the display. This makes it easy to determine your current heading with respect to the map.



Up

In heading-up view, the current direction is always pointing to the top of the display. Easy to see the direction of the next turn on the map.

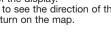


1000 ft

Repeating the Announcement

Click icon to repeat the quide announcement.

Zoom In/Out Map

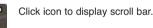

Touch ▲▼ or blue bar to zoom the map in or out. The scroll bar disappears automati-

cally after 2 seconds. Minimum scale is 1/16th mile and Maximum is 350 miles.

GPS Status

116 m

-

C53

Click icon to view GPS receiving GPSmil condition information from satellite.

Battery Status

Shows status of the battery. (Lightning bolt) indicates that the bat-GPSIII tery is currently being charged. (3 bars) indicates that the battery has more than 60% charge. GPS (2 bars) indicates that the battery has more than 40% charge. (1 bar) indicates that the battery has about 10% charge remaining.

Setting Destination Directly from Map Display

Touch anywhere on map screen. The current location arrow changes to Crosshair Cursor on the screen.

Move the cursor to the new desired street.

Note: Use Map Scale Bar to zoom out the map if the destination is far from the current location.

- Touch Select
- Select Set as Destination.
- Touch OK to Proceed on the confirmation screen.

Note: To use other functions on the confirmation screen, see page 14 for details.





Switching Map Display

Click icon to switch to Map Mode. Split Arrow/Map Mode and Full Arrow Mode.



Split Arrow/Map Mode

Displays a large arrow and larger next-street-name font along side a map screen while providing turn-by-turn guidance prompts.



Map Mode

Shows a full-screen map of the area while providing turn-by-turn quidance prompts.



Full Arrow Mode

Displays three-successive arrow maneuvers all the way to your destination while providing turn-byturn quidance prompts.

DESTINATION

Setting a Destination by Address

- Go to Main Menu
 - → Destination → Address

Finding a Destination from Street Name

- 2 Select Input Street Name.
- 3 Type the street name. Touch OK.

The list of applicable street names appears.

Note: For the details of selecting letters, see page 15.

- Select the desired street name from the list.
- Type the street number and touch **OK**.
- Select the desired city. 6

If there are multiple matches, the system will list cities containing the street name and address number that you keyed in.

Confirmation screen appears. See below for details.

Find Address n CALIFORNIA Input Street Name Input City Name








Change State Selecting Letters If you want to choose a different Selected state from the one shown on the characters screen, touch Change to switch JKLMNOF are displayed. RSTUVW to other state. Select State Deleting one letter AL ASKA Adding one space * [123] Going to number screen

Finding a Destination by City Name

2 Select Input City Name.

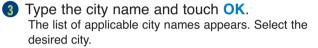

Type the first characters of the street name. Touch OK.

The list of applicable street names appears. Select the desired street.

Enter the street number.

If you don't know the street number, select **OK**. "Input 2nd Street Name" appears. Type 2nd street name.

Input Address No. Range 1 to

Destination

1271

66

Confirmation screen appears. 6 See below for details.



Input City Name

Input Street Name

HARE

A

Confirm Destination Screen

OK to Proceed

Set the destination and display a map.

Confirm Destination	
DISNEYLAND 1313 S HARBOR BLVD ANAHEIM, CA 714-999-4000	
OK to Proceed	MAP
Change Method	Option
MAXIMIZE FREEWAY	



Find an alternative way. (Refer to page 22.)

Select Method	
Quickest Route	
Shortest Route	
Maximize Freeway	TOLL
Minimize Freeway	

Option

Find Local Places → P20 Set as Waypoint → P20 Add to Address Book → P21

- Option	
Set as Waypo	int
Add to Address	Book
Set as Current Po	osition
Find Local Pla	ces
Set as Home Loc	ation
2	A

Map

Check the destination on the map. Touch 🔁 to go back to the confirmation screen.





DESTINATION

Setting a Destination by Places

You can select from approximately 2 Million Point-of-Interest locations stored inside your Blackbird Portable Navigation System. These destinations are sorted by Place Name or by Place Type and are listed in order of distance to your current location.

Go to Main Menu → Destination

→ Places



Finding a Destination by Place Name

- 2 Select By Place Name.
- Type the desired place name. Touch OK.

A place list with place names appears.

Note: Touch a place name to view address and telephone number (information may or may not be available).

Select the place with correct address. For emergency locations such as Police Stations, Hospitals, etc., please verify availability before proceeding to such locations.

S Confirmation screen appears. Touch OK to Proceed to set a destination and display map.

Setting a Destination from the Address Book

Go to Main Menu

- → Destination
- → Address Book
- Select the desired destination.

Confirmation screen appears. Touch OK to Proceed to set your destination and start receiving turn-by-turn navigation instructions.

To save an address in the address book, see page 21.

	nput	FOI	Harri		1		19700
<u></u>	-	-	-	-	10	110	[b.m]
Α	B	C	D	E	F	G	н
1	J	к	L	Μ	N	0	P
9	R	S	T	U	V	W	Х
Y	Z		-	Me	ore .	12	
(110)	1	100	ΟK			-	



*

Select Address Book Entry

O TOMM

P BEN

ALPINE

O BANK

COFFEE



4 Select Search Method.



Destination



Sort by Distance

5 The list of place names appears in order of distance from the current vehicle position.


6 Select the place. \rightarrow **OK to Proceed**




Sort by Name

5 Follow 3 to 5 in "Finding a Destination by Place Name" on Page 16.

Within a City

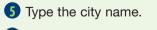

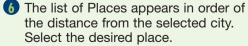

Touch OK to Proceed on the confirmation screen.



DESTINATION

Setting a Destination by Recently Entered Destination

- 1 Go to Main Menu 🔲 .
 - → Destination
 - → Recent



- The list of recent destinations appears. Select the destination.
- 3 Confirmation screen appears. Touch OK to Proceed to set a destination and display map.

Note: To use other functions on the confirmation screen, see page 14 for details.

Setting a Destination by Coordinates

- Go to Main Menu
 - → Destination

→ Coordinate Coordinate

- Enter the Latitude of your destination. Touch OK.
- 3 Enter the Longitude of your destination. Touch OK.
- Confirmation screen appears. Touch OK to Proceed to set a destination and display map.

	Latitude		
Latitude: N	1 <mark>3</mark> 3° [51'22'	-
1	2	3	
4	5	6	
7	8	9	
Second .	0	More	ABC
-	01	<	A

	Longitu		
Longitude:	w15	9°48'	3 0 " 🔶
1	2	3	
4	5	6	
7	8	9	
1	0	More	ABC
0	0	<	A

Setting a Destination by Intersection

- 1 Go to Main Menu
 - → Destination
 - → Intersection

Finding a Destination by Street Name

- Select Input Street Name.
- Type in the street name. Touch OK. The list of applicable street names appears. Select the desired street.

Input the second street name. If there is only one street crossing with the first street, the name of the street automatically appears.

5 Confirmation screen appears. Touch **OK to Proceed**.

Note: To use other functions on the confirmation screen, see pages 14 to 15 for details.

Finding a Destination by City Name

If you know the city name of the intersection you are searching, select Input City Name. The choice of the street is narrowed down automatically. This saves time to enter the street information.

Select Input City Name.

- 3 Type the city name.
- Input the first street name.
- Input the second street name.
- 6 Touch OK to Proceed on the confirmation screen.



Destinatio





- Select 2nd Street	at an
GASKELL RD	4
GEORGE AVE	
GOODMAN AVE	
GRAMERCY PL	
GREEN LN	~
7	-

OPTIONS

Find Local Places

The navigation system can display Points of Interest (POI) around the cursor position. when you scroll the map. Local places have 50 categories including ATMS, Banks, Gas Stations, Grocery Stores, Hotels, Parking Lots, Restaurants and more.

Select POI Name

18620 S WESTERN AVE GARDENA, CA

DENNY'S

DEL TACO

SURSRUS

*

~

0.6 mi

0.6 mi

0.6 mi

How to Find Local Places Directly from Map.

- Touch anywhere on map screen. The current location arrow changes to Crosshair Cursor on the screen
- Select Touch
- Select Find Local Places. Select the desired category.
- 4 Select the desired place.
- Touch OK to Proceed on the confirmation screen.

Note: To use other functions on the confirmation screen, see page 14 for details.

How to Find Local Places from Destination Menu.

You can also find local places from Destination Menu.

- Set a destination first from **Destination**
- On the confirmation screen, touch Option.
- 3 Follow steps 3 to 5 above.

Saving a Destination into the Address Book

Any destination can be saved into the Address Book.

- Select a destination using any method.
- From the confirmation screen, select **Option**.
- Select → Save in Address Book. Touch

	Set as Destination
S	ave in Address Book
	Find Local Places
	View Icon List
	Set as Waypoint

Set Wavpoint

You can set up to 10 waypoints between your current location and your current destination. The final destination must be set before entering wavpoints.

How to Set Waypoint Directly from Map

- Touch anywhere on map screen. The current location arrow changes to Cross hair Cursor on the screen.
- 2 Move the cursor to the desired waypoint.
- 3 Touch Select
- Select Set as waypoint. 4
- 5 When the route search is complete, the current location is displayed. The map navigates vou to the first waypoint.





How to Set Waypoint from Destination Menu

You can also find local places from Destination Menu.

- Enter a destination by using the method on pages 14 through 19 from Destination Menu.
- 2 On the confirmation screen, select **Option**.
- 3 Select Set as Waypoint.


How to Set Waypoint from Address Book

- Enter a Destination by using methods on page 14 to 19.
- 2 On the confirmation screen, touch Option. \rightarrow Set as Waypoint
- Touch Re-Calculate to recalculate a route which includes your waypoint.

"Input Name" screen appears. Type the desired name and touch OK.

5 System returns to the Main Menu screen.

Note: For the details of selecting letters, see page 15.

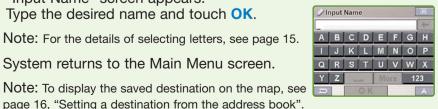

HOME

Home

MAP

Option

Finding a Way Home

You can get home from anywhere once the home address is set from Edit Menu.



- Touch OK to Proceed on the confirmation screen.
- 3 Follow the map and go home.



Finding Alternate Way to Go Home

Go to Main Menu \blacksquare . \rightarrow Home \blacksquare \rightarrow Change Method

- Quickest Way
- · Shortest Route
- Maximize Freeway
- Minimize Freeway
- With/Without Ferry
- With/Without Toll Boad

Home - Chang	je metriot
Select Method	
Quickest Route	
Shortest Route	
Maximize Freeway	TOLL
Minimize Freeway	

- Confirm Destination

000 TOWN WALK DR HAMDEN (TOWN OF). CT

OK to Proceed

Change Method

E BROKAW RD

QUICKEST ROUTE

ROUTE

Recalling the Maneuver List during Guidance

You can view a list of street names and upcoming turns and streets.

- Go to Main Menu → Route Touch Maneuver List. 2
- 3 List of upcoming streets and turns appears on the screen.

To preview a specific point, select a street name/maneuver on the list.

To go back to Route List, Go to Main Menu → Route



S Maneuver List	=
ZANKER RD	2.7 mi
AGNEW RD	655 ft
🟲 HARRIGAN WAY (HARRI	265 ft
STEWART LN	80 ft
rransill Cir	350 ft
	A

→ Route

→ Detour


Finding Alternate Route Finding Detour Touch Main Menu Touch Main Menu → Route → Change Method You can choose Quickest Route, Shortest The system automatically Route, Maximize Freeway, Minimize Freeway calculates and displays detour. with/without Ferry and/or Toll Road.

Delete Route

Go to Main Menu

- → Route
- \rightarrow Delete Route \rightarrow Yes

Note: After deleting Route, you can not select Route Menu until the next destination is set. To set up the destination, see Destination Menu on Page 14.

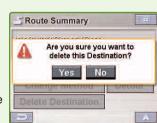

Route

EDIT

Locations and Home address saved in Address Book can be edited for quick recall. Also information including phone numbers and icons can be modified.

Main Menu	Editing Home			
Information Edit	● Go to Main Menu ■. → Edit			
Edit Home Edit Address Book Delete Previous Destination	 ? Touch Edit Home. 3 "Edit Home Point" screen appears. See below for details. 			



Name Touch Name to change the display name of the stored location.

Note: For the details of selecting letters, see page 15.

<u>/</u> I	nput	Nam	e				
_							-April
A	В	С	D	E	F	G	Η
1	J	к	L	M	N	0	P
Q	R	S	Т	U	V	W	Х
Y	Z			M	are	12	23
-	1	1	OK		1		A

Input Name Screen

■ Editing Address Book ① Go to Main Menu □ → Edit ■

2 Touch Edit Address Book

The list of addresses appears. Select destination you need to modify.

4 "Edit Address Item" screen appears. See below for details.

Note: Select **DELETE ALL** to delete all addresses saved in the address book.

Deleting Previously Saved Destination

- Go to Main Menu → Edit
- Touch Delete Previous Destination.
- Select destination you need to delete.
- Touch YES to delete the destination on the confirmation screen.

Note: Select **DELETE ALL** to delete all recently entered destinations.

- TelTouch Tel to change the telephone
number of the stored location.
- MapTouch Map to preview the change
you made on the map.To go back to Edit Menu,

Main Menu 💷 → Edit 🔣

- **Delete** Touch **Delete** to delete the stored location.
- **Icon** Touch **Icon** to change the icon of the stored location on the map.





Delete Screen

Selec	t Icon			
-				
4	2	4	9	
۲		- 11	9	
0	<u> </u>	8	2	
1	۲	0	4	
n	OK		A	
Change Icon Screen				



SETUP

You can customize Display, Guidance, Clock, Measuring Unit and FM frequency from Setup Menu.

Display Setup

Address Book Sho


Home Icon Sho

Color

POI Icon

1 Go to Main Menu 💷

- 2 Select Setup
- Setup screen appears.

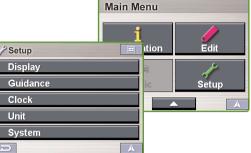

H-up

Adjust

Customizing Display

Go to Main Menu	E
-> Setup	
→ Display	

Setting the Map Color

Day - a bright tone screen Night - a dark tone screen Auto - switches automatically between Day and Night modes

Displaying and Editing Icons on the Map

POI Icons, the Home Icon and Icons used in the Address book can be turned on and off from the Display Setup Menu. You can also change these icons.

Map Orientation

North Up or Heading Up map views can be set here. You can also change between North Up and Heading Up views directly in the map screen. See page 12.

Background Color

You can choose between gray or blue backgrounds for all menu screens.

Background Display Adjustment

Trail

Day Night Auto

Trail

Hida Edit

Brightness

/ Display Setup

Map Orient N-up

ON

/ Display Setup

The Trail feature allows you to turn on and off trail dots that appear wherever the vehicle icon traverses. This is especially helpful for off-road enthusiasts.

Brightness

The brightness of the screen can be adjusted.

Adjusting Display

This feature is used when the system is connected to an Alpine Multimedia Station or stand-alone monitor and allows you to adjust the position of the picture on the display.



Customizing Guidance

Turning Voice On and Off

This allows you to turn ON or OFF guidance voice prompts.

Changing Navi Mix Volume

This allows you to vary the volume of the voice prompts with respect to the music.



Setting Estimate Time Display

Estimated Time of Arrival (ETA) or Estimated Time Remaining (ETR) can be set here. You can also change between ETA and ETR directly in the map screen. See page 12.


Setting up the Clock

You can set the Time Zone and Daylight saving to fit your region.



Switching the Measuring Unit

You can choose the unit of measure between Miles and Kilometers.

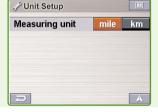

Setting up System

FM Transmitter Setup

When set to ON, the FM Transmitter broadcasts music and voice prompts (if set to ON) to an available frequency on your FM car radio.

Frequency

Allows you to change the frequency to find the best available station for broadcasting audio to your FM radio.

Remote Control

This feature allows you to turn ON the ability for the system to receive remote control signals (optional RUE-4140 remote control available separately). Turning OFF the remote control extends battery life.



INFORMATION

Simulating Navigation

You can watch a demonstration of the navigation system's voice and screen guidance.

To Start a Demonstration

- Go to Main Menu
- Select Information
- Select Start Demo.
- Demonstration starts.



Stop Demo

GPS Status

System Information

Trip Information

Information

Demo

To Stop a Demonstration

Go to Main Menu

Select Information

- Select Stop Demo. 3
- The demonstration will end.

Viewing Trip Information

The odometer displays the route distance and time traveled.



2 Select Trip Information.

Here, you can see different types of information pertaining to your current trip. Driving Average: Average speed since Trip Info was reset. **Overall Average:** Average speed since start of trip. Maximum Speed: Maximum speed reached on this trip. Driving Time: Time vehicle has been moving since the trip was reset. Idle Time: Time vehicle has been stopped (not moving) since the trip was reset.

Total Time: Total elapsed time on the trip which is always the driving time plus idle time.

Trip Information 0 mph 000:00:00 0 mph 000:00:00 0 mpt 000:00:00



You can view the dynamic location information received from satellite such as signal strength. compass (direction information), latitude/longitude, approximate altitude, and speed. This feature allows you to view GPS satellite signal information. An explanation of the messages is shown below.



Select GPS Status.

The following messages are displayed while the GPS receiver is tracking satellites: "Locating GPS Satellites": Blackbird

searches the sky looking for GPS satellites. "Acquiring GPS Signal": Blackbird acquires positioning information transmitted from 1 to 3 tracked satellites while search-

ing for more satellites (minimum 4 needed).

"Fixing GPS Position": Blackbird requires continuous signals from 4 or more tracked satellites (for 30 seconds) in order to accurately fix your position.


"Updating GPS Position in Real Time": Precise GPS position (latitude and longitude) with date and time is now updated every second through 4 or more active satellites.

Viewing System Information

You can check the application version and database version from the function. Make a note of this information and refer to it whenever you communicate with Alpine Tech Support or vour Alpine authorized dealer.

- Go to Main Menu → Information
- Select System Information.



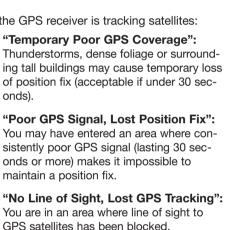


System Information	===
Anniis stien Mansien, P3 50 1025	
Application Version: R3.50.1025	EVAL
Database Version : NA.25.04	
L	_
	A



onds).

ENTERTAINMENT

Listening to Audio

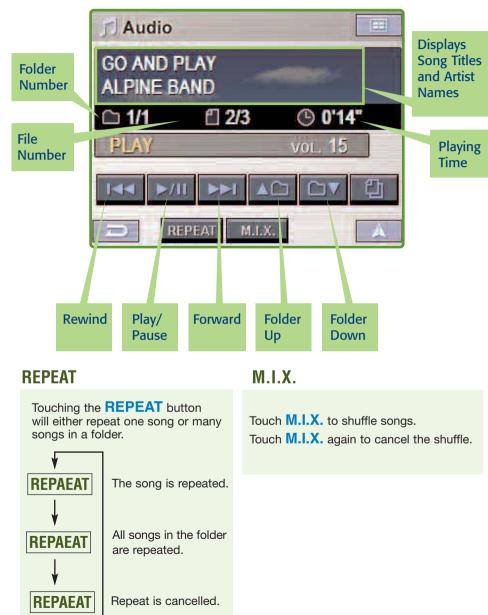



Loading Music into Your Blackbird

You can store up to 1GB of MP3 or WMA files giving you over 16 hours of music*. Your music can be arranged in sub-folders for easy retrieval when using your Blackbird device.

- *MP3 files recorded at 128kbps. Blackbird only currently supports MP3 and WMA files without DRM.
- Plug Blackbird's AC Adapter into a power outlet. Connect the AC Adapter to Blackbird's cradle connector.
- Onnect the USB cable to your PC and then to Blackbird.
- 3 Your PC will detect Blackbird as a removable storage device. Find the appropriate drive letter, open it, and copy songs over to the Blackbird. When you remove the USB cable and access the music player, the music will be available for you to select.

How to Update the New Software and Map Database

Using your home PC, Blackbird can be updated with the latest mapping and Point of Interest information. Please refer to instructions included with the update software on how to upgrade your Blackbird system.

IN CASE OF DIFFICULTY

If you encounter a problem, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise make sure the rest of your system is properly connected, batteries are completely charged and contact your authorized Alpine dealer or Alpine directly at 1-888-NAV-HELP (1-888-628-4357).

The vehicle's position is erroneous.

Drive the vehicle in an area of good GPS reception to allow the unit to recalibrate itself.

Move to a location where strong GPS reception is possible.

No operation

- Moisture condensation → Allow enough time for the condensation to evaporate (about 1 hour).
- Ambient temperature over 122°F (50°C)

Blown fuse

- → Lower the temperature in the vehicle to below 122°F (50°C) by driving with the windows open or air conditioner on.
- → Replace with a fuse of the prescribed rating (2A glass-type fuse located in the head of the cigarette lighter adapter).

The monitor display is off-center.


Go to Main Menu → Setup → Display Adjustment


Battery Installation

A WARNING

Always turn off power to the system before installing or removing the battery. Failure to do so will result in damage to your system.

- Place Blackbird face down on a flat surface.
- Press the battery door and pull away from the main unit body.
- 3 Attach the battery to the battery door will be a click sound-heard.
- Insert and slide the battery assembly back into the main unit until a click sound is heard.

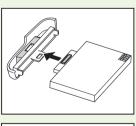


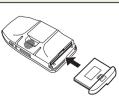

IN THE BOX

Accessories



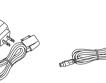




Cradle with Cigarette Lighter Charger

AC Adapter USB Cable

Carrying Case

Wiping Cloth 1200m/



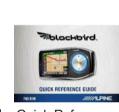

- Dummy SD Card (Inside Main Unit)
- Registration Card

Owner's Manual

Quick Reference Guide

Optional Accessories

The following accessories are available from your authorized Alpine dealer.

- PMD-DOK1 A Docking Station that allows you to connect and experience Blackbird navigation and music player from your Alpine Multimedia Station or stand-alone display.
- 2. PMD-KIT1 A second car kit comprised of windshield mount, cradle, and home AC charger.
- PMD-ANT1 An external GPS antenna hard-wired to Blackbird used in instances where you cannot normally receive GPS signals inside the car, due to metallic window tint, etc.
- 4. PMD-BAT1 A 1200 mAh Li-Polymer battery for extra battery power on the go.
- **5. RUE-4140** A combination navigation and audio remote control that allows you to control most of Blackbird's navigation features wirelessly.

SPECIFICATIONS

BLACKBIRD SPECIFICATIONS

Main Unit Size	6.1" x 2.9" x 1.2" (145mm x 74mm x 29mm)
Main Unit Weight	8 oz (227 g)
CPU	Centrality Atlas II ARM9 CPU
GPS	Embedded 16 channel GPS, Built-In Main Unit Antenna with Optional External Antenna Connection
Storage Media	Built-In 1" HDD with Pre-Loaded Maps of US* and CA Approximately 1GB allocated for MP3/WMA file storage (*Including Alaska and Hawaii)
Card Slot	Secure Digital (SD) or Multimedia Card (MMC)
Audio	Integrated speaker in main unit, amplified speaker in cradle, stereo headphone jack, optional docking station audio output
FM Transmitter	Built-in cradle, up to $10\ {\rm selectable}\ {\rm frequencies}$
RDS-TMC Tuner	Built-in main unit w/antenna in cradle power cable
USB Interface	2.0
Power Requirement Handheld Mode	s 5V @ 1A (via 1200 mAh Li-Polymer Battery, approximately 2 hours of continuous use)
Cradle Mode Fuse	12 VDC @ 2A (via Cigarette Lighter Adapter) AGC/3AG -2Amp
Operating Temp	32° to 140° F (0° to +60°C)
Storage Temp	-13° to 176° F (-25° to +80° C)
Display Screen Size Resolution Display Type Brightness	3.6" diagonal QVGA 320 x 240 pixels, 16.7M possible colors Digital TFT display with anti-glare touch screen 200 nits (typical)
Noto: Duo to continu	ous product improvement, specifications are subject to change

Note: Due to continuous product improvement, specifications are subject to change without notice.

INDEX

A Accessories	33	G GPS Status		9
Adjusting Display	26	Viewing GPS Status	29	
В		н		
Background Color	26	Home		g
Basic Operations	10	Finding a Way Home	22	ę
Battery Installation	32	Finding Alternate Route	22	g
Brightness	26	Optional Home Menu	22	9
-		How to mount Blackbird	6	
C		How to Turn Power On/Off	10	9
Changing Sound Volume	27			9
Confirmation Destination Screen	14	1		9
Customizing Display	26	lcon	24	
Customizing Guidance	27	In Case of Difficulty	32	5
		Index	35	
D		Information	28	
Delete Previously Saved Destination		Simulating Navigation	28	9
Delete Route	23	Viewing GPS Status	29	ę
Destination	14	Viewing System Information	29	9
Setting a Destination by Address		Viewing Trip Information	28	9
Setting a Destination by Places	16	Installation	6	ç
Setting a Destination by				
Address Book	16	M		
Setting a Destination by		Map	4.0	
Recently Entered Destination	18	GPS Status	12	
Setting a Destination by	10	Repeating the Announcemen		
Coordinates	18	Set Estimate Time Display	12 12	00
Setting a Destination by	19	Set the Map Orientation	12	3
Intersection Destination Menu	19 14	Set a Destination Directly	13	0
Displaying and Editing Icons on	14	from Map Display Switching Map Display	13	0
the Map	26	Zoom In/Out Map	12	
	20	Map Color	26	1
E		•	20	1
Edit	4		., 20	1
Delete Previously Saved	7	Р		ī
Destination	25	- Precautions	3	
Editing Address Book	25	riodadiono	Ŭ	l
Editing Home	24	R		i
Editing Address Book	25	Recalling the Maneuver List		
Editing Home	24	during Guidance	23	١
Entertainment	30	Remote Control	27	١
Listening Audio	30	Repeating the Announcement	12	١
Download Music to Blackbird	31	Route	23	١
		Delete Route	23	
F		Finding Alternate Route	23	١
Find Local Places	20	Finding Detour	23	١
Finding a Way Home	22	Recall the Maneuver List		
Finding Alternate Route	22	during Guidance	23	Z
Finding Alternate Way to Go Home	22			Z
Finding Detour	23			
Frequency	27			

S	
Saving a Destination into the	
Address Book	20
Set a Destination and Go!	10
Set Waypoint	21
Set Estimate Time Display 12	, 27
	, 26
Setting a Destination by Address	14
Setting a Destination by Address	
Book	16
Setting a Destination by Coordinates	s 18
Setting a Destination by Places	16
Setting a Destination by Recently	
Entered Destination	18
Setting a Destination by Intersection	n 19
Setting Destination Directly from	
Map Display	13
	, 26
Setting the Map Color	26
Setting up System	27
Setting up the Clock	27
Setup	26
Customizing Display	26
Customizing Guidance	27
Setting up System	27
Setting up the Clock	27
Switching the Measuring Unit	27
Simulating Navigation	28
Specifications	34
Switching Map Display	13
Switching the Measuring Unit	27
System Features	8
т	
Table of Contents	6
Trail	26
Turning Voice On and Off	27
-	
U	
User Agreement	5
v	
Viewing GPS Status	29
Viewing System Information	29
Viewing Trip Information	28
Nowing hip information	20
W	
Warnings	2
Ζ	
Zoom In/Out Map	12

FCC Warning Message:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the users' authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

---Reorient or relocate the receiving antenna.

---Increase the separation between the equipment and receiver.

---Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

---Consult the dealer or an experienced radio/TV technician for help.

ALPINE ELECTRONICS OF AMERICA, INC. 19145 Gramercy Place, Torrance, California 90501, U.S.A. Phone 1-800-ALPINE-1 (1-800-257-4631) 1-888-NAV-HELP (1-888-628-4357)

ALPINE ELECTRONICS OF CANADA, INC. 777 Supertest Road, Toronto Ontario M3J 2M9 Canada Phone 1-416-736-6211 1-888-NAV-HELP (1-888-628-4357)

© 2005 NAVTEQ. All Rights Reserved. © 2005 Alpine Electronics of America, Inc. All Rights Reserved.



The WTR Logo is a trademark of the Consumer Electronics Association.