

LEAPFROG CONFIDENTIAL & PROPRIETARY

SCHAWKI!	<input type="checkbox"/> Package <input checked="" type="checkbox"/> Parent Guide <input type="checkbox"/> Other		<input checked="" type="checkbox"/> Layout <input type="checkbox"/> Color Match	
	File: 19172_LT_Cout_ScnShp_PGM1.indd			
Art#: 810-20936-A		Part#: 605-11671-A		Die line#: N/A
				Fold: accordian
Flat: 16"w x 6"h		Trim: 16"w x 6"h		Finished: 4"w x 6"h
				Bleed: N/A
Fonts: Gillsans-BoldCondensed, Gillsans-Condensed, Whitney-Black, Whitney-Bold, Whitney-Book, Whitney-BookItalic, Whitney-LightItalic, WhitneyCondensed-Black, WhitneyCondensed-Bold, WhitneyCondensed-Book, WhitneyCondensed-Semibold	K		m	
File Size: 100%	Output Size: 100%	Date: 20JUL10	AD: RL	PA: KD

Notes: Die line is FPO. Please refer to Agile/BOM for current version.
 Please refer to Agile DOC-160 for Parent Guide Fold Schematic and/or paper substrate for non-packaging items.

History: Mech 1: Artwork checked, Correction carried out as per annotated PDF & Slug updated; KD; 20JUL10



Shop, scan and discover food fun with pretend grocery play!

Parent Guide and Instructions

This guide contains important information. Please keep it for future reference.

Fun next steps on your child's path to learning!

From pretend play...



COUNT & SCAN SHOPPER
2+ years



Personalize me!

MY OWN LEAPTOP™*
2+ years

To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. Toys like Count & Scan Shopper encourage children to explore new skills through creative, open-ended play.



**LEAPSTER EXPLORER™
LEARNING EXPERIENCE***
4-9 years



Get more ideas to support your child's learning at:
leapfrog.com/learningpath

...to game play!

*Products sold separately. All products may not be available in all countries. Actual products may vary.



Learning Path™

See the Learning.™

See your child's play and learning with the LeapFrog® Learning Path. With each LeapFrog toy on your child's path, you can see the skills your child is exploring during play, learn about what comes next and discover creative learning ideas that are tailored uniquely to your child.

leapfrog.com/learningpath



The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning progress updates, articles, product news and special offers from LeapFrog.

leapfrog.com

Learning Stones

Shop, scan and discover food fun with pretend grocery play!

Early Number Sense

Scanning a number label in Counting Mode lets children count along with a fun rhyme or song.

Number Recognition

Hearing a number as it is scanned helps children associate the name of the number with its appearance.

Colors/Colours

Children can scan a food item to hear its color/colour or scan the shopping list and play a color/colour game.

Music

Children can sing along to the Aisle Song, the Counting Song or silly food songs in three genres.

Pretend Play

In addition to shopping play, children can press the scanner face to any object for a fun response.



Instructions for Play

Getting Started

To turn on Count & Scan Shopper, slide the volume switch to the desired volume setting. Hold scanner an inch or less from the number tag on each food item to “scan” it. To turn it off, slide the volume switch to the OFF position.

Note: Count & Scan Shopper will turn off automatically after a period of inactivity. You can wake it up again by changing modes or pressing the Free Play button.

Learning & Play Modes

Count & Scan Shopper offers four ways to play and learn!

Counting Mode

Scan any food item to hear a variety of musical or spoken responses that count up to the number that appears on that item. Scan the shopping list to count the 10 check marks.

Color/Colour Mode

Scan any food item to hear a variety of musical or spoken responses related to the color/colour of that item. Scan the shopping list to play the “Find a Color/Colour Game.” When your child scans the correct color/colour, he/she will be rewarded with fanfare!

Music Mode

Scan any food or the shopping list to hear the name of an item sung in a fun or silly way. Scan again for fun sound effects.

Free Play

In any mode, press the face of the scanner against your own items at home and listen to responses related to shopping, such as “Good choice!”, “Will it fit in the bag?” or cash register sounds.

Note: If your child presses the scanner to one of the Count & Scan Shopper foods or shopping list, he/she will hear about that food instead of hearing the general shopping response.

TO BE USED UNDER THE SUPERVISION OF AN ADULT.

Instructions for Care FOR DRY, INDOOR-LOCATION USE ONLY

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

DOIT ÊTRE UTILISÉ SOUS LA PRÉSENCE D'UN ADULTE.

Soin et entretien

UTILISER UNIQUEMENT EN INTÉRIEUR, DANS DES LIEUX SECS.

Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). N'utilisez pas de savon, de lessive, ou d'autres produits chimiques. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux fortes chaleurs et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION: Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.



WARNING: This product is not suitable for use with food or liquid.



ATTENTION: Ce produit n'est pas destiné à être utilisé avec de la vraie nourriture ou du vrai liquide.

NOTICE: SHOPPING BAG IS CONSTRUCTED FROM BREATHABLE MATERIAL. HOWEVER, IT IS RECOMMENDED THAT CHILDREN DO NOT WEAR THE SHOPPING BAG ON THEIR HEADS.

ATTENTION: LE SAC DE COURSES EST FAIT DE MATÉRIEL RESPIRABLE. CÉPENDANT, IL EST RECOMMANDÉ QUE LES ENFANTS NE METTENT PAS LE SAC DE COURSES SUR LEUR TÊTE.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les bornes d'alimentation.

Troubleshooting

Symptom

Toy does not turn on or does not respond

Try This

- Make sure the Off/Low/High switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Symptom

Toy makes improper responses

Try This

- Follow the above instructions to clean battery contacts
- Install new batteries

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. The IC term stands for "Industry Canada" followed by the certification number and all the "IC: 4810A-19172" signifies is that the equipment meet the Radio Standard Specification RSS-210. The IC certification number is located on the enclosure of the scanner.

Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada. Le terme IC signifie "Industrie Canada" et est suivi du numéro de certification et tous les "IC: 4810A-19172" signifient que l'équipement répond aux spécifications de la norme Radio RSS-210. Le numéro de certification IC se trouve dans l'enceinte du scanner.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

LeapFrog Enterprises, Inc., hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be found at www.leapfrog.com/DoC.

LeapFrog Enterprises, Inc., déclare par la présente que ce produit est conforme aux exigences essentielles et aux autres provisions pertinentes de la Directive 1999/5/EC. La déclaration de conformité peut être consultée sur www.leapfrog.com/DoC.

CONSUMER SUPPORT

U.S. Consumer Service Contacts Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@fantastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas. LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, MY OWN LEAPTOP, LEAPSTER EXPLORER, the Leapster Explorer logo and SEE THE LEARNING are trademarks or registered trademarks of LeapFrog Enterprises, Inc. Copyright © 2010 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 2 years and up. / Convient aux enfants à partir de 2 ans.
Item number: 19172 Part number: 605-11671-A