



LeapPad[™] ULTRA



Quick Start Guide

Follow these instructions
before your child plays



LeapPad[™] ULTRA

System Requirements

High-speed internet connection for parent account and device set-up required for use of some features.

For non-Wi-Fi set-up, download the LeapFrog Connect Application to your computer (free at leapfrog.com/connect).

Monitor resolution of 1024 x 768

Available USB port

1 GB of RAM

500 MB free disk space

Latest version of Adobe® Flash® Player

PC Requirements:

Pentium® 4 or equivalent (2 GHz processor or faster recommended)

Windows® XP, Windows Vista®, Windows® 7, or Windows® 8 operating system with latest service pack

Mac Computer Requirements:

Intel®-based Apple computer (1 GHz processor or faster recommended)

Mac OS X 10.6+ operating system software

MAC, APPLE and MAC OS are trademarks of Apple Inc., registered in the U.S. and other countries.

Part #: 615-10547-A

Get started in 5 easy steps!



- 1 POWER UP** and turn on your LeapPad™ Ultra with the included wall charger.*
- 2 SET UP** your device by following the on-screen prompts to connect to Wi-Fi.**
- 3 REGISTER** your device by creating a LeapFrog parent account.



- 4 DOWNLOAD** your included learning games.
- 5 PLAY & LEARN!** Your child is now ready to play with their LeapPad Ultra.***

*Registration and device set-up can continue while charging—charging may take up to 7 hours.

**If Wi-Fi is not available at time of device set-up, you can complete set-up using the included USB cable and by installing the LeapFrog Connect Application on your computer. Go to leapfrog.com/connect to download.

*** Full device set-up may take approximately 20 minutes or longer depending on your Wi-Fi connection speed.