

WATCH TYPE PAGER (LT2005W)

OPERATION MANUAL

FCC ID : QBT-LT2005W

Trade Name : WATCH PAGER

Model No. : LT2005W

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS :**

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND**
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
D OPERATION.**

**NOTE:THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT.SUCH MODIFICATIONS COULD VOID THE USER S AUTHORITY TO
OPERATE THE EQUIPMENT.**

www.leetek.org

leetek2001@yahoo.co.kr

**Lee Technology Korea.Co.,Ltd(LEETEK)
3rd #499-2 Sang3dong, Wonmi-gu,
Puchon-city, kyunggi-do, Korea
T:82-32-324-9838/9
F:82-32-324-9840**

WATCH-TYPE PAGER

1. PICTURE



2. SPEC

- 12 Segment Display
- 1.5V AAA Battery Included
- 2 Button Switch (Top Button, Side Button)
- Vibe Alert
- Maximum 12 Table Number Can Be Stored.

3. POWER ON/OFF

- 1) ON – Press the side Button for more than 5 seconds, and then it will be turned on.
- 2) OFF – Press the side button for more than 5 seconds, and then it will be turned off.

4. Time Setup

- 1) If you want to enter the Time Setting Mode, insert the battery. And then, you can automatically enter to the Time Setting Mode.
- 2) To change the number of the hour or the minute, press the side button.
- 3) Press the top button, to change the location of the edit bar from the hour to the minute.
- 4) It will be automatically exited to the initial screen after 3 seconds without any input.

5. Enter Table Setting Mode

- To enter the Table Setting Mode, press the Top Button about 2 seconds. And then it will enter the Table Setting Mode.

6. Alert Mode

- When the message is received, the vibration works for 15 seconds. If you push the button, the vibration will be stopped.

7. Message Reading

- 1) If you press the Side Button, "Call" is displayed.
- 2) The received message will be displayed if you push the Side Button once more.

8. Erase Message

- To delete the message, make the display screen indicating the table number.
- Then press the Side Button 3 seconds. The corresponding message will be erased.

9. Battery Information and Replacement

- 1) Watch-Typed Pager is designed to use a single AAA alkaline battery.
- 2) To replace the battery, do the following.
 - Slide the locking switch to the unlock position.
 - Take out the battery over.
 - Remove the old battery and insert a new AAA battery in the direction shown on the battery compartment.
 - Slide the battery cover back on the pager and slide the battery lock switch to the locked position.

GuestCall Troubleshooting

Charge light will not come on

- a. Make sure there is power to the outlet
- b. Try changing the position of the coasters on the stack. Make sure they are seated properly with the numbers facing front.
- c. Using a damp rag, clean metal contacts on coaster that will not light

- d. Check all connections on charger bases. If only one stack of coasters will not light on the charger,

There is probably a bad connection. Move wires and be sure they are all plugged into back of black coaster charger.

If you try all this and the coaster charging light will not come on you most likely have a blown power supply.

No range on coaster pagers

- a. Be sure transmitter is not near any large metal objects, fire walls, etc.
- b. Be sure antenna is connected properly and not broken.

Coasters are not paging or paging in a manner you did not program

Review Coaster modes and enter the code for the mode you would like. It probably has changed.

Coasters are not answering the page or acting strange

Make sure the Coaster has a full charge.

Before you call, try some of the following suggestion

*Remember that the capability of your system will be affected by: Foil backed wallboard, Metal mesh, wire reinforced glass, metal sheeting, large mirrors, suspended ceilings, lift shafts etc. These can all reflect and thereby reduce the signaling capability of the transmitter. A little forethought prior to installation, coupled with a few tests, can normally avoid most of these problems.

1. Read through the manual. Answers to most questions can be found there. A trouble shooting section further assists you in diagnosing the problem.

2. IMPORTANT NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

Warning: Changes or modifications made to this equipment not expressly approved by

LEETEK may void the FCC authorization to operate this equipment.

3. CAUTION : Never use any cleaner other than alcohol for the maintenance of this equipment. Organic solvent

such as benzene, toluene or acetone may spoil the plastic parts of this

equipment.

4.RF Radiation Exposure

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

5.Do not subject this equipment to:

- 1)Mechanical shock
- 2)Excessive humidity or moisture
- 3)Extremes of temperature
- 4)Corrosive liquids

6.Warning ! No user serviceable parts

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer,

will invalidate all manufacturer approvals and warranty. No adjustments can be undertaken except by qualified

and licensed persons as defined by the FCC Rules and Regulations. Operation of altered equipment can result

in fines, imprisonment, and /or confiscation of such equipment.

WARRANTY

LeeTek warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase.

This warranty does not include damage to the product resulting from accident, misuse or improper electrical connection. **Power supplies are warranted for 60 days.**

We recommend the use of a surge protector with all equipment. If this product should become defective within the warranty period, we will repair or replace with equivalent product, free of charge. We will return your product, transportation charges prepaid standard shipping mode, provided the product is shipped prepaid to:

LEETEK, 3rd FL #499-2 Sang 3-dong, Wonmi-gu, Puchon-city, Kyunggi-do, KOREA

No return will be received without prior authorization and the proper RMA # posted to the outside of the shipping container.

This warranty gives you specific legal rights and you may also have rights which

I need to send some transmitter in for repair - What do

I do?

Within warranty period / Covered by our Product-Care Program:

Ship malfunctioning components to the following address:

3rd FL, #499-2 Sang 3-dong, Wonmi-gu, Puchon-city, Kyunggi-do, Korea

Tel: 82-32-678-8605 Fax: 82-32-324-9840

1. Pack the components securely
2. Enclose a note with a brief description of the problem
3. Include a business card
4. Ship the equipment in a traceable manner for your protection. (ie UPS).
5. Insure the shipment for replacement value.

There are no charges for repaired equipment within the warranty period, or if covered by Product-Care, other than your shipping costs. We will pay shipping one way back to you.

(Shipping by the courier service is available at an additional charge on request)

Out of warranty items will be repaired and sent back C.O.D.

Hints and Tips

Training is the key to success with a paging system.

Orientating your entire staff and training your host staff on the use of the paging system is key to the success of the system.

As a part of the general host training program, time must be set aside to teach new hires about the use and care of the paging system. Be certain staff members understand the importance of asking for the transmitter back after work.

Benefits of a VISUAL paging system

Staff members are alerted thru the pager and know to quickly close the tab of a guest to help speed table turns.

LEE TECHNOLOGY KOREA CO., LTD.