SEEKER PAGER

[4 LED Pager]



User's MANUAL

LEE Technology Korea Co., Ltd.

1. To Turn pager ON

Press the button at the side of pager for more than 3 seconds, and then it will be turned on with a flashing on LEDs.

2. To stop the alert

Press the button shortly at the side of pager to stop the alert.

3. Page Alert

When the pager is alerted, vibrating lasts for 11 seconds and corresponding LED will keep flashing until the user presses the side button.

4. Program-mining page alert mode

Alert Type	Description
9393	Turn out of range OFF
9494	Turn out of range ON

5. To send a distinctive individual message

- With this feature, you have the option of receiving the different messages as described below;
- ① Return Pager: Press pager no. and "F1" button on the PS-3500 transmitter, then a LED at the "Return pager" will be vibrating for 11 seconds continuously and flashing until pressing the side button.
- ② Baby hungry: Press pager no. and "F2" button on the PS-3500 transmitter, then a LED at the "Baby hungry" will be vibrating 3 times for 11seconds and flashing until pressing the side button.
- ③ Child fine: Press pager no. and "F3" button on the PS-3500 transmitter, then a LED at the "Child fine" will be vibrating 4 times for 11 seconds and flashing until pressing the side button.
- 4 Please come: Press pager no. and "F4" button on the PS-3500 transmitter, then a LED at the "Please come" will be vibrating 6 times for 11 seconds and flashing until pressing the side button.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,

INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

LEE TECHNOLOGY KOREA Co., Ltd.