

USER'S MANUAL

(LTK-1300H)



FCC ID :QBTLTK-1300H

Trade Name :HandHeld-Table scout

Model No. :LTK-1300H

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS :**

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND**
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED
OPERATION.**

LEE TECHNOLOGY KOREA CO., LTD.

Thank you for purchasing LeeTek's Handheld Table Scout.

We are confident our cutting edge products and first rate service will satisfy your needs for years to come. Please read the manual thoroughly to familiarize yourself with the procedures for proper care of your system.

1. To Page

1) To page the pager,

Press the pager number and then press Enter key
; Enter Pager no. >> Press Enter key >> Sending

Cf. Preset and Message menu options shall be programmed OFF
if you want to page the pager only without sending any messages.

Cf. Example to page the pager no. 7



Action	Transmitter display
Press "7"	No>7
Press "Enter"	Sending AM 10:00 (Current time)

2) To send the Preset or Message (Numeric number)

Table scout is able to send one of them, Preset or Message (max. 12 Numeric numbers) to the pager as described below

(1) To send the Preset (PRESET/PRE / Default: C)

Preset menu (PRE) shall be set ON and Message (MSG) menu shall be set OFF prior to use the preset Menu.

- Press the pager number and press Enter key,
- Enter the preset number and press Enter key
; Enter Pager no. >> Enter key >> Enter one of the preset number 1~4 >> Enter key >>
Sending

Cf. Example to send the preset no. 3 to the pager no. 7

Action	Transmitter display
Press "7"	No>7
Press "Enter"	PRESET
Press "3"	PRESET3
Press "Enter"	Sending AM 10:00 (Current time)

(2) To send Message (Numeric numbers)

Message menu(MSG>ON) shall be set ON and Preset menu(PRE>OFF) shall be set OFF prior to use Message menu option

- Press the pager no. and press Enter key
- Enter the numeric numbers and then press Enter key

; Enter Pager no. >> Press Enter key >> input the max. 12 numeric numbers >> Press Enter key >> Sending

Cf. Example to send the numeric number message (12345678) to the pager no.7

Action	Transmitter display
Press "7"	No>7
Press "Enter"	M
Press "12345678"	M78 . (123456 will not be displayed but included)
(Press "876543"	M876543 if send 876543)
Press "Enter"	Sending
	AM 10:00 (Current time)

(3) Priority in Preset and Message menu option

- Message menu has the priority to be sent while the both, Preset menu & Message menu have been set ON in displaying the message on the pager.
- On the LCD, Preset menu is described as PRESET or PRE and Message menu as MESSAGE or MSG.

4. Pro-Host use

To send the message to the Pro-host or a pager,
Enter the table no. and press the function key (Seat, Close, Clear, Bus)

Cf. Example to send the message that clear the table no. 23

Action	Transmitter display
Press "23"	No>23
Press "Clear"	Sending
	AM 10:00 (Current time)

Cf. In this case, the pagers display "20237"



5. Power On/Off

1) Power Off

Following the below steps to turn its power off.

Action	Transmitter display
Press “Bus” & “Close” for 3 sec	P/W
Press “0000”	P/W0000
Press “Enter”	

2) Power On

Place the Handheld Table scout into the charging base and take it off from the charger
Then the Handheld Table Scout will be ON automatically

Troubleshooting

Charge light will not come on

- Make sure there is power to the outlet
- Try changing the position of the Transmitter on the charger base.
- Check all connections on charger bases.

Transmitter will not display anything

- Make sure there is power to the outlet
- Check all connections.

If you try all this and the transmitter still wont power up your power supply may be bad. If display is still blank, call us

Before you call, try some of the following suggestion

*Remember that the capability of your system will be affected by: Foil backed wallboard, Metal mesh, wire reinforced glass, metal sheeting, large mirrors, suspended ceilings, lift shafts etc. These can all reflect and thereby reduce the signaling capability of the transmitter. A little forethought prior to installation, coupled with a few tests, can normally avoid most of these problems.

1. Read through the manual. Answers to most questions can be found there.
A trouble shooting section further assists you in diagnosing the problem.

2. IMPORTANT NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

This device complies with Part 15 of the FCC Rules .

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation..

Warning: Changes or modifications made to this equipment not expressly approved by LEETEK may void the FCC authorization to operate this equipment.

3. CAUTION : Never use any cleaner other than alcohol for the maintenance of this equipment. Organic solvent such as benzene, toluene or acetone may spoil the plastic parts of this equipment.

4.RF Radiation Exposure

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

5.Do not subject this equipment to:

1)Mechanical shock 2)Excessive humidity or moisture 3)Extremes of temperature 4)Corrosive liquids

6.Warning ! No user serviceable parts

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer, will invalidate all manufacturer approvals and warranty. No adjustments can be undertaken except by qualified and licensed persons as defined by the FCC Rules and Regulations. Operation of altered equipment can result in fines, imprisonment, and /or confiscation of such equipment.

WARRANTY

LeeTek warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident, misuse or improper electrical connection. **Power supplies are warranted for 60 days. We recommend the use of a surge protector with all equipment.** If this product should become defective within the warranty period, we will repair or replace with equivalent product, free of charge. We will return your product, transportation charges prepaid standard shipping mode, provided the product is shipped prepaid to:

LEETEK, 3rd FL #499-2 Sang 3-dong, Wonmi-gu, Puchon-city, Kyunggi-do, KOREA

No return will be received without prior authorization and the proper RMA # posted to the outside of the shipping container.

This warranty gives you specific legal rights and you may also have rights which vary from state to state.

I need to send some transmitter in for repair - What do I do?

Within warranty period / Covered by our Product-Care Program:

Ship malfunctioning components to the following address:

3rd FL, #499-2 Sang 3-dong, Wonmi-gu, Puchon-city, Kyunggi-do, Korea

Tel: 82-32-678-8605 Fax: 82-32-324-9840

1. Pack the components securely
2. Enclose a note with a brief description of the problem
3. Include a business card
4. Ship the equipment in a traceable manner for your protection. (ie UPS).
5. Insure the shipment for replacement value.

There are no charges for repaired equipment within the warranty period, or if covered by Product-Care, other than your shipping costs. We will pay shipping one way back to you.

(Shipping by the courier service is available at an additional charge on request)

Out of warranty items will be repaired and sent back C.O.D.

Hints and Tips

Training is the key to success with a paging system.

Orientating your entire staff and training your host staff on the use of the paging system is key to the success of the system. As a part of the general host training program, time must be set aside to teach new hires about the use and care of the paging system. Be certain staff members understand the importance of asking for the transmitter back after work.

Benefits of a VISUAL paging system

Staff members are alerted thru the pager and know to quickly close the tab of a guest to help speed table turns.

LEE TECHNOLOGY KOREA CO., LTD.