

Pilot ServerCall

Transmitter

USER'S MANUAL

LEETEK (LEE TECHNOLOGY KOREA.CO.,LTD)
3rd FL #499-2 Sang 3-dong Wonmi-gu Pucheon –city
Kyunggi-do Korea

Pilot Servercall Transmitter

FCC NOTICE

WARNING : The antenna must be installed in a manner that ensures a minimum separation distance of 30 centimeters between the antenna and human beings.

Thank you for purchasing LEETEK's Pilot Servercall paging system. Your system has been Pre-programmed at the factory and will function once mounted and plugged in.

. PAGE

1. To page

To page the particular number of pager, Press its button and then Green light is On.

For example)

If you want to page the number 7 pager,

Press the number 7 button, then Green light is on and the pager with its number will be paged.

2. To cancel

Press its number button once again and then Green light is Off and the pager will not stop being paged.

3. To page the manger

Press the button MGR, Green light is On and Light will stay On for 3 seconds and then turn off.

Reference: Manager's pager shall be assigned to #91, Message-blank.

4. To sleep all pagers.

Press and hold the button "ALL SLEEP" for 3 sec. Green light will turn on and beep will sound. After 3 seconds, transmitter will send the signal and light will turn off.

Reference: Pager # assigned Group "0911" ; Message – "99"

5. To page all pagers

Press and hold the button " ALL PAGE" for 3 sec. Green light will turn on and beep will sound. After 3 seconds, transmitter will send the signal and light will turn off.

Reference: Pager# assigned Group "0911" ; Message – blank

6. To page with the message "22"

Press the button "X2" and press the pager number, transmitter will send the signal with message "22" (Vibe 2 times)

7. To page with the message "33"

Press the button "X3" and press the pager number, transmitter will send signal with message "33". (vibe 3 times)

8. To set the pager out of range On/Off

The transmitter Power ON. Press and hold the MGR button for 5 seconds.

Button 1 & 2 will light up and MGR light will be blinking to show that you're in the pager out of range menu.

1) To turn the out of range "ON".

Press button # 1 to turn the light to green and then send the "0911" with message "55" 3 times

2) To turn the out of range “OFF”.

Press button # 1 to turn the light to green and send the “0911” with message “44” 3 times

To get out of this function press “MGR” button again.

. System Programing Menu

To go to programming configuration, **TX power ON**. Press & hold X3 button for 5seconds. and then beep will sound. Light # 1-3 will blinking green. (initial menu)

Button # 1 – When this button is pressed, will be Beep sound and LED turn ON.
If this button pressed again, LED turns OFF.(LED Blinking)

Button # 3 – Transmitter Out of Range ON/OFF.
If you press the #3, out of range ON.
Press the #3 again , out of range OFF
(every 10seconds signal sending)

To save and get out of programming mode, press X3 again.

Button # 2 - If this button is pressed, button #1 and #3 is OFF, Button # 4, 5, 6 is lights up and blinking. On this mode , if you select the following button :

Button 1- Transition time is set to 30 seconds(LED 10sec ON-LED10sec slow blinking-LED fast blinking)
Button 2 - Transition time is set to 1 minute(LED 20sec ON-LED20sec slow blinking-LED fast blinking)
Button 3 -Transition time is set to 1 ½ minutes((LED 30sec ON-LED30sec slow blinking-LED fast blinking)

To save and get out of programming mode, press X3 again.