

ServerCall Transmitter

User Instruction Manual

FCC ID : QBTLTK-SCT

TRADE NAME: SERVERCALL TRANSMITTER

MODEL NO.: LTK-SCT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS :

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND**
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE
OPERATION.**


LEE TECHNOLOGY KOREA CO., LTD.

FCC NOTICE

WARNING : The antenna must be installed in a manner that ensures a minimum separation distance of 30 centimeters between the antenna and human beings.

SERVERCALL TRANSMITTER USER MANUAL

1. Equipment Setup

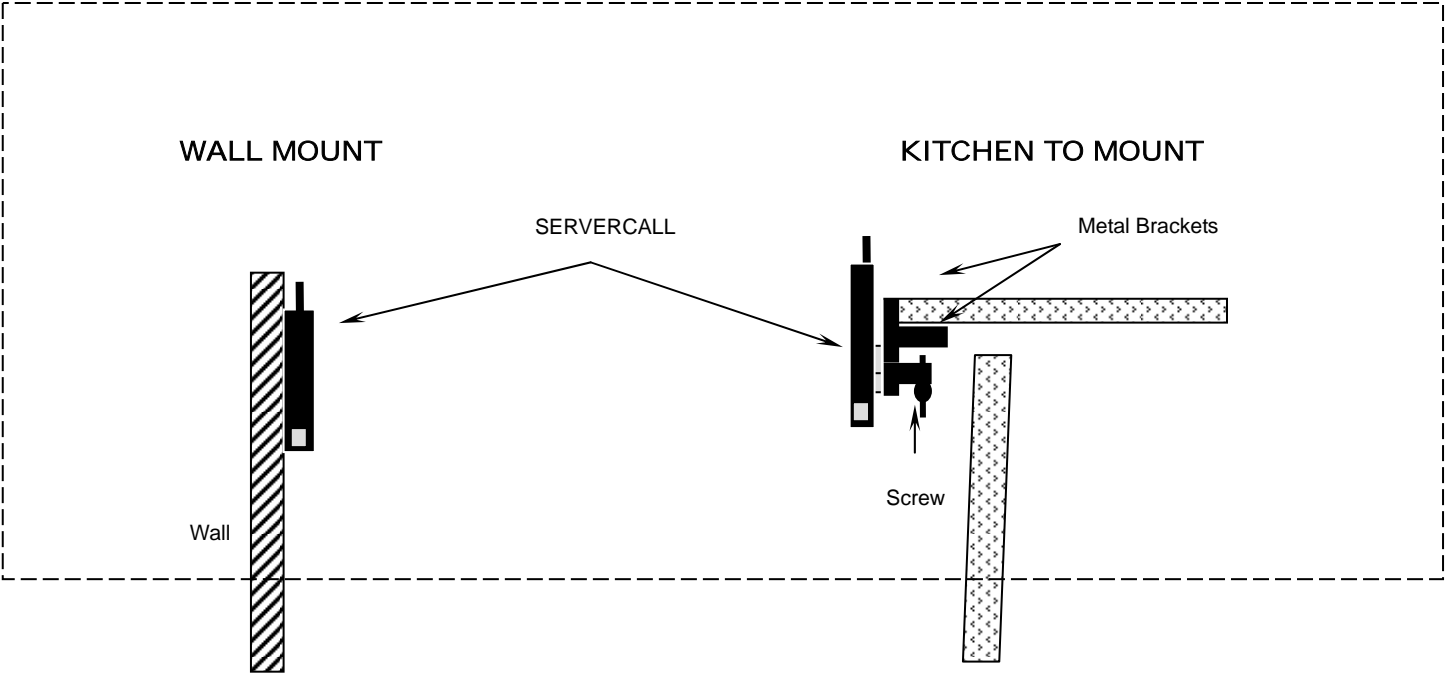

<SERVERCALL SET UP & MOUNTING INSTRUCTION>

2. System Operation



Write the server name next to his pager number with a Dry Erase Marker (included)

Warning! Regular ink will make permanent marks, making name changes difficult-clean with a non-abrasive cleaner ONLY! The name panels can easily be removed and replaced to simplify pager assignment.

Press the number that corresponds to the servers name on the sending unit and that pager will silently vibrate. Range of this system should easily cover even the largest of restaurants. You can send a single, double or triple vibration to servers, sending them to different parts of the kitchen.

For example: 1 vibrate means going to the hot line, 2 vibrates mean going to the salad station, etc.

1. To page a pager with a single vibrate

Press the corresponding number. If you make Set Default MSG ON, it will vibrate once and the green LED light on top will turn on according to its saved default message. And if you make Set Default MSG OFF, it will work with no message. (Z0410 Vibe only pager vibrates twice)

2. To page a pager with a dual vibrate (2X MENU function)

Press the 2X MENU button once and then press the corresponding pager number within 5 seconds. You can label what 2X means on the space. The pager will vibrate twice and the yellow LED light on top will turn on when it receives the page. (Z0410 Vibe only pager vibrates three times)

3. To page a pager with a triple vibe (3X SELECT function)

Press the 3X SELECT button once and then press the corresponding server pager number within 5 seconds. You can label what the 3X means on the space. The pager will vibrate 3 times and the red LED light on top will turn on when it receives the page. (Z0410 Vibe only pager vibrates 4 times)

4. Repage feature

You may select to have this system page the server one time only or repage them 3 times if the food has not been picked up. (See programming instructions) The system can also notify the manager on an optional digital pager with the tardy server pager number.

5. To cancel a pager

Press the corresponding number on the Servercall until it beeps once and the light goes off. If you do not cancel the page and the repage feature is turned on, the pager will repage the server 2 more times automatically every 15 seconds (this feature is adjustable for 15 seconds, 30 seconds, 45 seconds, 60 seconds, and 120 seconds). The Servercall will change from green (food up for 15 seconds) to yellow (food up for 30 seconds) to red (food up for 45 seconds) and flashing red (food dying in the window!). At that point the system can page the manager pager with notifying him the server number that there is food up in need of attention.

6. To page all pagers

Press ALL PAGE button over 3 seconds and the green light comes on. All pagers will vibrate 4 times. (Z0410 Vibe only pager vibrates 6 times)

7. To page manager(s)

Press the MGR 91-94 button shortly and then the green light comes on about 2 seconds.

When you want to page all managers, press the MGR ALL button over 3 seconds

These buttons only work if you have purchased the optional manager display pager. If you did not purchase a display pager, any pager (1-24) can be given to the manager and be used as a manager pager.

8. To sleep all pagers

Press ENTER button more than 5 seconds. And then all the pager including server pagers and

manager pagers go to sleep mode.

Troubleshooting

Transmitter will not display anything

- a. Make sure there is power to the outlet
- a. Check all connections.

If you try all this and the transmitter still won't power up your power supply may be bad. If display is still blank, call us

Before you call, try some of the following suggestion

*Remember that the capability of your system will be affected by: Foil backed wallboard, Metal mesh, wire reinforced glass, metal sheeting, large mirrors, suspended ceilings, lift shafts etc. These can all reflect and thereby reduce the signaling capability of the transmitter. A little forethought prior to installation, coupled with a few tests, can normally avoid most of these problems.

1. Read through the manual. Answers to most questions can be found there.
A trouble shooting section further assists you in diagnosing the problem.

2. IMPORTANT NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

This device complies with Part 15 of the FCC Rules .

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation..

Warning: Changes or modifications made to this equipment not expressly approved by Jun Electronics may void the FCC authorization to operate this equipment.

3. CAUTION : Never use any cleaner other than alcohol for the maintenance of this equipment. Organic solvent such as benzene, toluene or acetone may spoil the plastic parts of this equipment.

4.RF Radiation Exposure

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

5.Do not subject this equipment to:

1)Mechanical shock 2)Excessive humidity or moisture 3)Extremes of temperature 4)Corrosive liquids

6.Warning ! No user serviceable parts

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer, will invalidate all manufacturer approvals and warranty. No adjustments can be undertaken except by qualified and licensed persons as defined by the FCC Rules and Regulations. Operation of altered equipment can result in fines, imprisonment, and /or confiscation of such equipment.

WARRANTY

JUN ELECTRONICS warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident, misuse or improper electrical connection. **Power supplies are warranted for 60 days. We recommend the use of a surge protector with all equipment.** If this product should become defective within the warranty period, we will repair or replace with equivalent product, free of charge. We will return your product, transportation charges prepaid standard shipping mode, provided the product is shipped prepaid to:

**3rd FL #499-2 Sang3-dong, Wonmi-gu,
Pucheon-city, Kyunggi-do, Korea**

No return will be received without prior authorization and the proper RMA # posted to the outside of the shipping container.

This warranty gives you specific legal rights and you may also have rights which vary from state to state.

I need to send some transmitter in for repair - What do I do?

Ship malfunctioning components to the following address:

**LEE TECHNOLOGY KOREA CO., LTD.
3rd FL #499-2 Sang3-dong, Wonmi-gu, Pucheon-city, Kyunggi-do, Korea
TEL: 82-32-324-9838, FAX: 82-32-324-9840**