

Servercall Paging System

User Manual
(Manual Ver. 1.26B)

LEE TECHNOLOGY KOREA CO., LTD.

email sales@leetek.org
website www.leetekorea.com

KOREA HEADQUARTER

3rd Fl. 499-2, Sang3-dong,
Wonmi-gu, Bucheon City,
Kyunggi-do, Korea
Tel +82-32-324-9838
Fax +82-32-324-9840

US OFFICE

530 Highland Station Drive, Suite 2004,
Suwanee, GA 30024, U.S.A.
Tel +1-678-714-2161
Fax +1-678-714-2162

Servercall Transmitter


1. System introduction

- With Servercall, your servers are in constant communication with the kitchen and management teams without leaving their stations. Servers are alerted that they are needed in a discreet manner invisible to customers.

2. System Feature



3. Installation

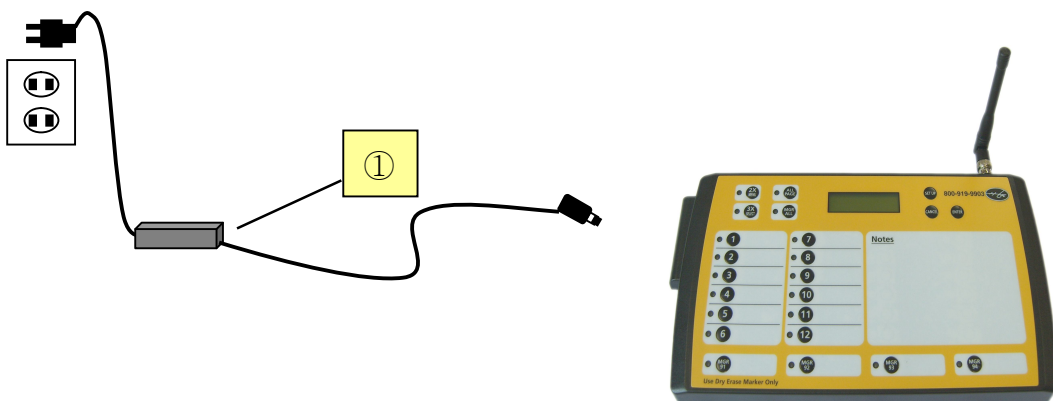

4. OPERATION

Write the server name next to his pager number with a dry erase marker.

Warning!! Regular ink will make permanent marks, making name changes difficult-clean with a non-abrasive cleaner ONLY!! The name panels can easily be removed and replaced to simplify pager assignment. Press the number that corresponds to the servers name on the sending unit and that pager will silently vibrate. Range of this system should easily cover even the largest of restaurants. You can send a single, double or triple vibration to servers, sending them to different parts of the kitchen.

For example, 1 vibrate means going to the hot line, 2 vibrates mean going to the salad station, etc.

1) To page a pager with a single vibrate

Press the corresponding pager number. If you make Set Default MSG ON, then it will vibrate once and the green LED light on top will turn on according to its saved default message. And if you make Set Default MSG OFF, it'll work with no message.

2) To page all pagers

Press ALL PAGE button more than 3 seconds and the green light comes on. All pagers will vibrate 4 times.

3) To page managers

Press the MGR 91-94 button shortly and then the green light comes on for 2 seconds.

When you want to page all managers, press MGR ALL button for 3 seconds.

These buttons only work if you have purchased the optional manager display pager. If you did not purchase a display pager, any pager can be given to the manager and used as a manager pager.

FCC ID: QBTLTK-SCTN

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.

This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 28 centimeters between the radiator and your body.

Cet équipement est conforme à l'exposition de la FCC rayonnements RF limites établies pour un environnement non contrôlé. Cet appareil et son antenne ne doivent pas être co-localisés ou fonctionnant en conjonction avec une autre antenne ou transmetteur.

Cet équipement doit être installé et utilisé avec une distance minimale de 28 centimètres entre le radiateur et votre corps.

IC : 5269A-LTKSCTN

Operation is subject to the following two conditions:
(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.