
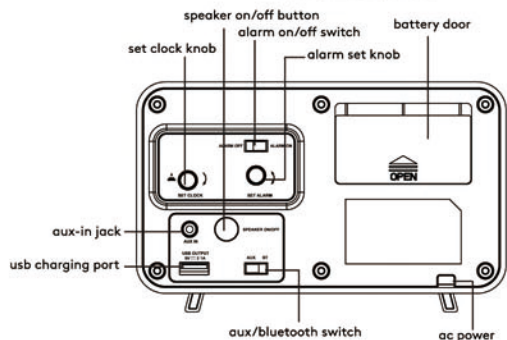


wireless clock speaker

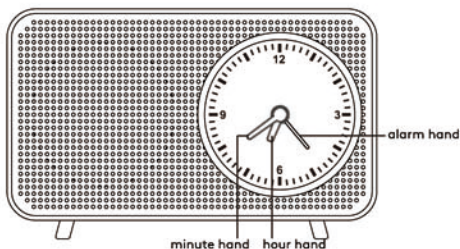

included

- clock speaker
- instruction manual

setup

- Remove any packaging materials from the unit.
- Connect the AC power cord to a wall outlet.



setting the time

- Push in and rotate the SET CLOCK knob clockwise to set time.
- Hour hand will move as the minute hand turns.
- For backup in a power outage, insert 2 AAA batteries in battery compartment at back of unit. Ensure polarity markings (+) and (-) are followed.

using the alarm

- Slide the ON/OFF switch to turn on the alarm.
- Rotate the SET ALARM knob to set the alarm time.
- To stop alarm, slide the ON/OFF switch to OFF.
- Note: If you do not turn off alarm, it will stop automatically after about 35 minutes \pm 15 minutes.
- Alarm accuracy: \pm 5 minutes

listening via bluetooth

- Press the SPEAKER ON/OFF button to turn the unit on.
- Slide the aux/bluetooth switch to "Bluetooth" and to hear pairing indicator sound.
- Use Bluetooth settings on your phone to pair with "HEYDAY CLOCK 01". If a window asks for a password, use "0000".
- When the Bluetooth is connected successfully you will hear a chime.
- Note: All operations only available on your phone (play/pause/skip/volume).

listening via aux cable

- Press the SPEAKER ON/OFF button to turn the unit on.
- Slide aux/bluetooth switch to "aux".
- Insert 3.5mm audio cable (not included) into the AUX IN (on the back of the unit).
- Insert opposite end of audio cable into the music source.
- Note: All operations only available on your phone (play/pause/skip/volume).

charging external device

- Plug the USB cable into the USB socket on the back of alarm clock. Plug the other end of USB cable into external device. Device will charge automatically.

need some help?

Can't get it to pair? Not accepting phone calls? Just have a question?



call us at: 1-877-698-4883

specifications

Power Requirements: AC 120 V~ 60 Hz
Battery for clock: 3V $\frac{2}{\text{LR03}}$ 2 x "AAA" size (LR03)
Power Consumption: 16 W
Dimensions (W x H x D): 16.0CM X 8.1CM X10.1CM (approx.)
Weight: 0.446 kg. (approx.)
Output Power: 3W
USB for charging: 5V $\frac{2}{\text{A}}$ 2.1A

bluetooth

Bluetooth Version.....Bluetooth V4.2
Bluetooth Profiles.....A2DP, AVRCP
Bluetooth Frequency range.....2.402GHz-2.480GHz
Operating Distance.....33 feet/10 meters

safety

Battery Precautions

Be sure to insert the batteries with correct positive "+" and negative "-" orientation. ALWAYS use batteries of the same type. Never mix different types of batteries together. When using rechargeable batteries, refer to the precautions on their labels. When the unit is not to be used for a long time (more than a month), remove the batteries to prevent them from leaking. Do not heat or disassemble batteries, and NEVER dispose of old batteries by throwing them in a fire.

Note:

It is strongly recommended that this product should be operated only from the type of power source indicated on the marking label. To prevent interference, avoid bundling audio signal cables together with the AC power cord.

CONDENSATION WARNING:

When the unit is moved from a cold or warm place, or is used following a sudden temperature change, there is the danger that water vapor in the air may condense on the unit, preventing proper operation. In such cases, leave the unit for 1-2 hours after plugging it into an AC outlet to allow it to stabilize at the temperature of its surroundings.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.



CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. **WARNING:** To prevent electric shock, do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Important Safety Instructions

1. Read these instructions—All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions—The safety and operating instructions should be retained for future reference.
3. Heed all warnings—All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions—All operating and use instructions should be followed.
5. Do not use this apparatus near water—The appliance should not be used near water or moisture—for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiations, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



15.



-This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

-Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

-The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

16.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

17. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

18. WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.

19. The use of the equipment in moderate climate.

20. The ventilation should not be impeded by covering the ventilation openings with items such as, newspapers, tablecloths, curtains, etc.

21. No naked flame sources, such as lighted candles, should be placed on the apparatus.

22. The symbol with \sim Indication AC voltage.

23. The symbol with --- indicate DC voltage.

24. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

25. Attention should be drawn to the environmental aspects of battery disposal.

26. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.