

Timmit™



MODEL: TMT-1000

TURNTABLE OPERATING INSTRUCTION

Important Safety Instruction

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14.



AVERTISSEMENT:

RISQUE DE CHOC ÉLECTRIQUE—NE PAS OUVRIR.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- a. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- b. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



15. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
16. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
17. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
18. The use of the equipment in moderate climate.
19. **WARNING:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
20. The ventilation should not be impeded by covering the ventilation openings with items such as

newspaper, table-cloths, curtains etc.

21. No naked flame sources, such as lighted candles, should be placed on the apparatus.
22. Do not install this equipment in a confined space such as a book case or similar unit.
23. The symbol with \sim Indication AC voltage.

Precautions

Safety Information-caution:

1. In order to shut off power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as during a vacation.
2. Use of controls, adjustments and performance of procedures other than those specified herein may result in hazardous radiation exposure.
3. To prevent electric shock, match wide blade of plug to wide slot, fully insert.
4. If this product is experience problems during operation, contact qualified service centers, and do not use the product in defective states.

Safety Precautions

WARNING:

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposures.

CAUTION

RISK OF ELECTRIC SHOCKS - DO NOT OPEN!

To reduce the risk of electric shock, do not remove cover or back.

No user serviceable parts inside. Refer servicing to qualified service personnel.



The light flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

(See markings on the back of the unit.)

Before Use

1. Choose unit installation location carefully. Avoid placing it in direct sunlight or close to a source of heat. Also avoid locations subject to vibrations and excessive dust, cold or moisture. Keep away from sources that hum, such as transformers or motors.
2. Do not open the cabinet as this may result in damage to the circuitry or electrical shock. If a foreign object should get into the set, contact Customer Service.
3. Be sure not to handle record with dirty fingers. Never play a record that has a crack on the surface.
4. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.

5. To protect the stylus, don't forget to put on the white protective needle cover after use.
6. Do not attempt to clean the unit with chemical solvents as this might damage the finish.
Use a clean, dry cloth.
7. In order to shut off the power to this product completely, unplug the power cord from the wall outlet. Be sure to unplug the unit if you do not intend to use it for an extended period of time, such as a vacation.
8. Keep this manual in a safe place for future reference.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 7.87inch from nearby persons.

 
How to Replace the Turntable Stylus (Needle)

Removing old stylus

1. Push down in the direction "A".
2. Remove the stylus by pulling it forward and down.



Installing a new stylus

1. Hold the tip of the stylus and insert the other edge by pressing in the direction "B".
2. Push up in the direction "C" until it locks at the tip.

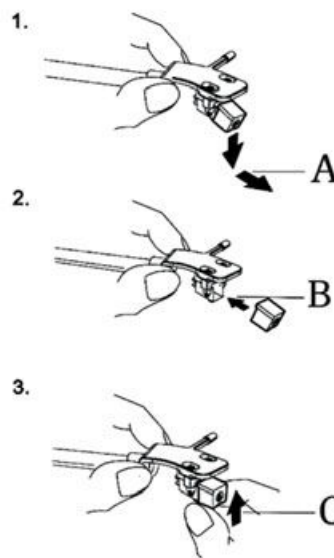

(Noted: In the case of normal, please do not touch the stylus. Only if necessary can you replace it.)

  Location of Controls

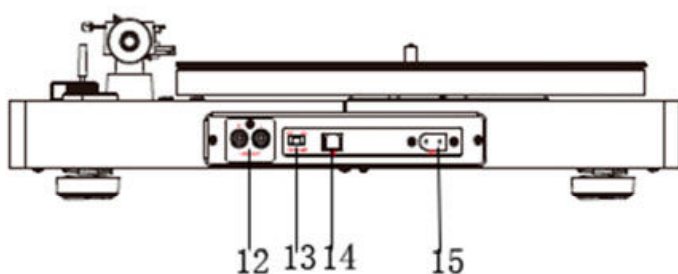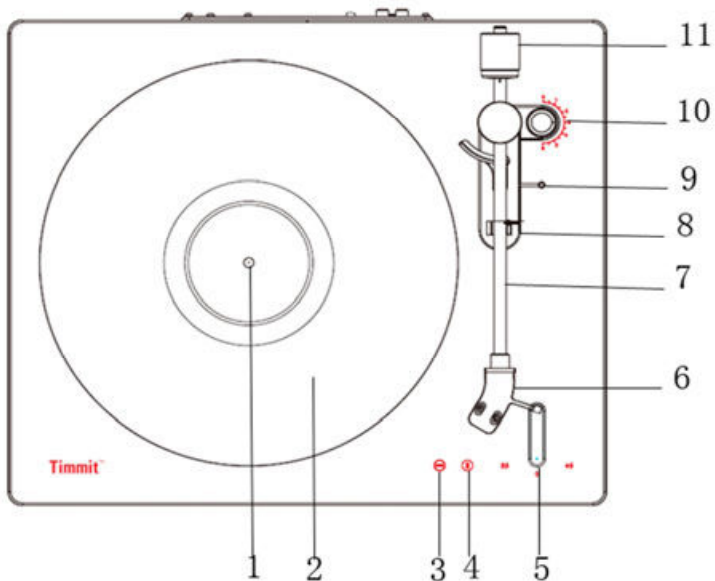

- | | |
|-------------------------|---------------------------|
| 1. Spindle | 9. Tone arm Lift Lever |
| 2. Turntable | 10. Anti-skating knob |
| 3. Pair | 11. Balance weight |
| 4. Bluetooth | 12. RCA Line out Sockets |
| 5. Off/33/45 switch | 13. Pre-amp off/on switch |
| 6. STYLUS | 14. USB socket |
| 7. Tone arm | 15. AC Power Socket |
| 8. Tone arm rest holder | |

Powering Your Turntable

Your turntable uses an AC power supply and is powered by a standard wall outlet.

1. Insert the AC power supply into the unit.
2. Insert the wall plug into an appropriate wall outlet.




EASY TO USE

1. Connect the AC power supply to the household outlet.
2. Switch the OFF / 33/45 knob to turn on the unit and Select the speed according to the record you are playing.
3. Put a record on the turntable. Remember to use the 45 RPM adaptor located on the top right corner when playing a 45 RPM record.
4. Lift and move the tone arm to turntable. Place the tone arm on the edge of the record and the record starts playing.
5. Assemble the balance weight and set it to a proper position.
NOTE: The balance weight is to adjust the pressure of the needle. If the pressure is too much, the sound will become distorted; if the pressure is too little, track skipping will easily happen. Please adjust the balance weight by turning the balance weight clockwise or counter-clockwise.
6. To pause or stop playing, you need to lift and move the tone arm back to the tone arm rest manually.
7. When the end of the record is reached, the tone arm and rotation stop. Lift the tone arm and place it to tone arm rest manually.

How to adjust the balance weight:

1. Rotary the balance weight clockwise or counter-clockwise to adjust balance.
2. Lift the tone arm and place it to tone arm rest manually.
3. Hold the balance weight knob, at the same time rotary the scale to "0".
4. Rotary the balance weight counter-clockwise to 3-6 grams.
(Noted: Each scale is equal to 0.5G.)

Listen to the Music by Bluetooth Transmit

1. Turn on your home Bluetooth amplifier device.
2. Power on the  Bluetooth touch button, the  LED indication will be light.
3. Press the Pair touch button, it will fast flash 3 seconds, if not success, press again to flash.
(Noted: If the  LED indicator still flash, please double check the step1)
4. The PAIR LED indication will be light until it pair success your home Bluetooth amplifier device.
5. Switch on the unit and the Bluetooth amplifier device you connected.
6. Adjust the volume only by the Bluetooth amplifier device.
7. Sometimes you want to reconnect it, you need to turn on your Bluetooth amplifier device again.

Line Out Operation

1. Switch the PRE-AMP OFF/ON SWITCH to ON position.
 2. Plug one end of the RCA cable (included) into the LINE OUT socket at the back of the unit. Be sure to match the color with the socket.
 3. Plug the other end of the cable into the LINE IN socket of your home amplifier device.
 4. Switch on the unit and the amplifier device you connected.
 5. Adjust the volume on the amplifier device.
-
1. Plug one end of the RCA cable (included) into the LINE OUT socket at the back of the unit. Be sure to match the color with the socket.
 2. Plug the other end of the cable into the LINE IN socket of your home amplifier device.
 3. Switch on the unit and the amplifier device you connected.

LISTENING TO RECORDS

1. Connect the external amplifier device.
2. Place a record on the turntable, over the central spindle. Place the EP adapter over the central spindle when playing 45 rpm records.
3. Set the Speed Selector to 33 or 45 rpm according to the record.
4. Release the tone arm clamp, and remove the needle cover from the stylus.
5. Lift the Tone arm with the Tone arm Lift Lever.
6. Move the tone arm to the beginning of the record, or to the start of a particular track.
7. Gently lower the tone arm onto the record with the Tone arm Lift lever to start playing.
8. When the record is finished the tone arm will automatically stop. To stop manually, lift the tone arm from the record and return it to the rest.

NOTES:

- Remove the needle cover before you balance the tone arm.
- Hold tone arm whenever you make any adjustment or action so as to protect the tone arm.
- Do not try to adjust the balance weight while playing a record as this could break the needle and scratch the record.
- Re-secured the tone arm before transportation to protect the needle.
- Remove the balance weight before transportation to prevent damage or breakage to the unit.
- Do not stop or turn the platter manually. Moving or jarring the turntable without securing the Tone arm clamp could result in damage to the Tone arm.

ANTI-SKATING

Normally the anti-skating should be set to its minimum setting. Anti-skate compensates for inward tracking forces that occur with certain pick-up when the stylus nears the center of the record. If the turntable is experiencing excessive skipping while nearing the center spindle, try increase the anti-skating in the increments indicated on the dial. Start by adding an increment of 1, test its performance, and then increase it more, and so on.

Note: During adjusting the anti-skating knob, leave the tone arm and balance weight alone to prevent damaging the stylus (needle).

USB TO PC Recording

Audacity Software-Version 2.1.3

The provided CD disc contains the following software:

(1)Audacity_for_MAC-----For Mac

(2)Audacity_for_WIN -----For Windows

The software is compatible with Window XP, VISTA, 7, 8& 10 and Mac.

NOTE:

- 2.1.3 is the final version that supports Windows XP. Windows 2000, NT, and 95 are not supported.

-A CPU that supports SSE2 is required (any CPU made after 2003 should support this). Please use the legacy Audacity 2.0.6 version if your machine lacks SSE2 support.

- Audacity is for Intel Mac running OS X 10.6 and later. MacOS 10.12 Sierra is partially supported. Audacity runs best with at least 1 GB RAM and a 1 GHz processor (2 GB RAM/2 GHz on OS X 10.7 and later).

- For lengthy multi-track projects, we recommend a minimum of 2 GB RAM and 2 GHz processor (4 GB RAM on OS X 10.7 and later).

- The 2.1.1 release was the final release for PPC Macs.

Because of the variation of different operation systems, some of the interface may not be the same as below.

 
Audacity Installation and USB Connection

Connect one end of USB cable to the turntable and the other end into your computer. Then connect the AC power cord of the turntable.

Audacity for Windows

Installing the Audacity Software

1. Please insert the Audacity software disk that comes with your unit. Go to My Computer and double click the CD ROM Drive.

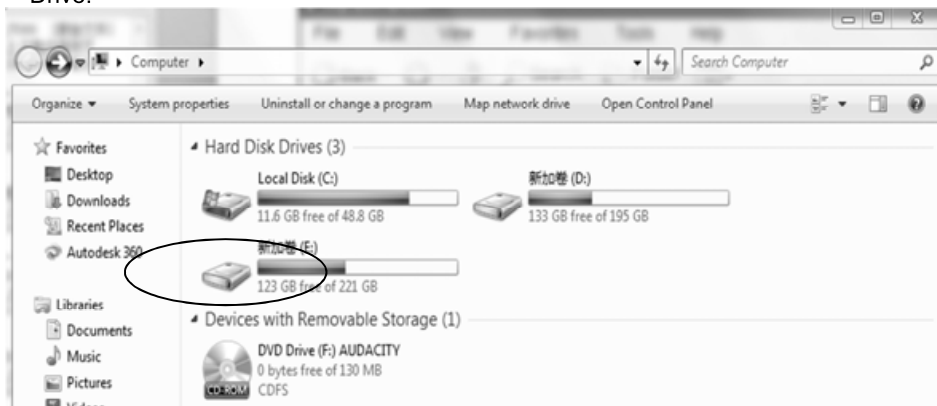

Specifications

GENERAL

Power Requirements..... AC 120V~60Hz
Power Consumption..... 5 W
Dimensions (W x D x H)..... 432x363x124cm
Weight.....4.10 kgs

RECORD PLAYER section

Motor..... DC servo motor
Drive System..... Belt Drive
Speeds..... Off/33-1/3 rpm, 45 rpm

Wow Flutter..... Less than 0.25% (WTD)
S/N Ratio..... 55 dB
Cartridge Type..... Moving Magnetic Cartridge(AT3600L)
RCA OUT..... 200-280 mV (5 cm/sec at 1 KHz-10dB)
Phono out..... 3-4mv ((5 cm/sec at 1 KHz-10dB)

BLUETOOTH TRANSMIT

Bluetooth Version..... Bluetooth V4.2
Bluetooth Profiles..... A2DP, AVRCP
Bluetooth Frequency range..... 2.402GHz-2.480GHz
Operating Distance..... 7 meters (30 ft.)

USB

Type.....USB series B connector
Full-Speed.....USB 2.0 full speed