


INSTALLATION

1. Remove the screw from the battery compartment cover.
2. Install 2 "CR2032" batteries (included) on the battery box, ensure the polarity is correct.
3. Replace the battery cover and screw.
4. Mount the magnetic door/window sensor

Choose a suitable location, stick the main unit to the door/window frames by attached double – side tape. Then stick the magnetic unit (smaller unit) to the door/window by attached double-side tape and make sure to align the "▼"mark to right "▼"mark on the main unit and "▲" facing "▲" at no more than 1/4" apart as shown in (fig.1a/b)



(fig.1a)

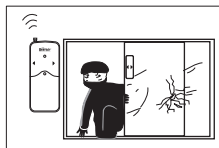


(fig.1b)

5.External Magnetic sensor terminal

You can additional wire magnetic sensor to expanding you desired detection area.


- a.remove the screw from the battery compartment cover
- b.remove the screw from terminal and take out connect wire (fig.2)

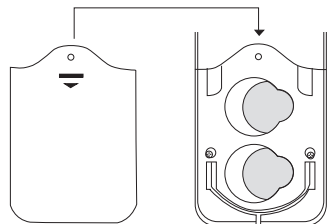

(fig.2)


- c.Measure the length of wire needed to connect the sensor to the transmitter, then cut the wire to the correct length. Strip about 1/2 inch of insulation from the wire ends, and twist the wires together
- d.Connect the sensor switch on door to the main terminal post using the wire you just cut. (There is no polarity need to be taken care of, any terminal will be fine, as long as the wires from a loop)
- e.Connect another sensor switch screw to another switch

terminal post by using the parallel another wire as shown in (Fig.3)

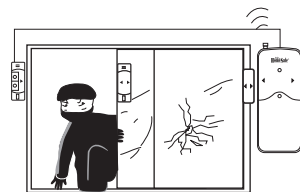

(fig.3)

f.If you connect more than one sensor to the main unit, connect them in series as shown in (Fig.4)

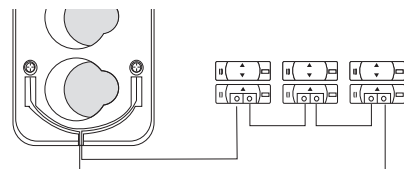

(fig.4)

NOTE: After select a location, you should test the sensor transmitting range before mount it permanently, turn the CHIME switch to ON of T015, T016 main unit or press HOME button of T018 main unit, then open/close the magnetic switch of door/window sensor to trigger, you will hear the main unit sounds "DING DONG" chime if signal is received successfully, if not, elongate mini retractable antenna or change location is required.

LEARNING CODE TO MAIN UNIT

The door/window sensor compatible T015, T016, T018 main unit, must learn code to main unit then use, learn code operation see main unit manual.

OPERATION

After 60 seconds installed battery, the unit will into standby mode. Once the door/window opened or the unit vibration will output wireless radio signal and LED flash.

BATTERY LOW INDICATOR

When battery goes low, the LED will light on 3 seconds and off 1 second, change a new alkaline 9V battery immediately, or the sensor might not detection properly.

Warning:


Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

This equipment has been tested and found to comply with the limits for a Class C digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

WIRELESS SLIM DOOR/WINDOW SENSOR

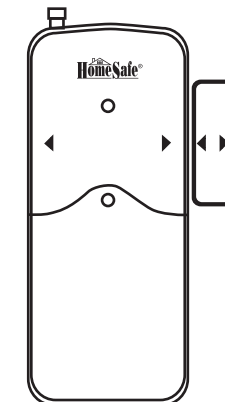

OWNER'S MANUAL