

Lenovo ideapad 110-14 15 Series Hardware Maintenance Manual

Notes:

- Before using this information and the product it supports, be sure to read the general information under “Notices” on page 77.
- This manual applies to the following models: Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL. The illustrations used in this manual are for Lenovo ideapad 110-15IBR unless otherwise stated.

First Edition (May. 2016)

© Copyright Lenovo 2016. All rights reserved.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2016 Lenovo

Contents

About this manual	iv
Safety information	1
General safety	2
Electrical safety	3
Safety inspection guide	5
Handling devices that are sensitive to electrostatic discharge	6
Grounding requirements	6
Safety notices: multilingual translations	7
Laser compliance statement	14
Important service information	16
Strategy for replacing FRUs	16
Strategy for replacing a hard disk drive	17
Important notice for replacing a system board	17
Important information about replacing RoHS compliant FRUs	18
General checkout	19
What to do first	20
Power system checkout	21
Checking the AC adapter	21
Checking operational charging	22
Checking the battery pack	22
Related service information	23
Restoring the factory contents by using OneKey Recovery	23
Restore of factory default	23
Passwords	24
Power-on password	24
Hard-disk password	24
Administrator password	24
Power management	25
Putting the computer to sleep or shutting it down	25
Putting your computer to sleep	25
Shutting down the computer	25
Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL	26
Specifications	26
Status indicators	28
Fn key combinations/Hotkeys	29
FRU replacement notices	30
Screw notices	30
Removing and replacing an FRU	31
1010 Optical drive	32
1020 Base cover	33
1030 Battery pack	35
1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)	37
1050 Hard disk drive	40
1060 PCI Express Mini Card for wireless LAN	42
1070 ODD Board (Lenovo ideapad 110-15IBR/ Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)	44
1080 Speaker	45
1090 System board	46
1100 Heat sink assembly (Lenovo ideapad 110-14IBR/ Lenovo ideapad 110-15IBR)	49
1110 Upper case	51
1120 LCD unit	53
1130 LCD hinges	55
1140 EDP cable and integrated camera	57
Locations	59
Front and right-side view	59
Bottom and left-side view	61
Parts list	62
Overall	63
LCD FRUs	71
Miscellaneous parts	74
AC adapters	74
Screws	76
Notices	77
Trademarks	78

About this manual

This manual contains service and reference information for the following Lenovo product:

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

Important:

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively.

Before servicing a Lenovo product, make sure to read all the information under “Safety information” on page 1 and “Important service information” on page 16.

Safety information

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL computer:

- “General safety” on page 2
- “Electrical safety” on page 3
- “Safety inspection guide” on page 5
- “Handling devices that are sensitive to electrostatic discharge” on page 6
- “Grounding requirements” on page 6
- “Safety notices: multilingual translations” on page 7
- “Laser compliance statement” on page 14

General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
 1. Make sure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
 4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Attention: Metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

Electrical safety

Observe the following rules when working on electrical equipments.

Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.
 - Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.
 - When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
 - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.

// *Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual*

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
 - Caution: do not become a victim yourself.
 - Switch off the power.
 - Send the victim to get medical aid.

Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards according to the attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Note:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא שכל הברגים, הקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש ללטלט את המחשב ולהקשיב לגילוי קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altri parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRUの交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

Safety notice 2

⚠ DANGER

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts- oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין לפרק סוללת המתנה, לטעון אותה מחדש, להשליך אותה לנאש או למים או לקצר אותה. יש לשלוק את הסוללה בנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המתאימה בשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 3**⚠ DANGER**

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארו הסוללה מכיל כמויות קטנות של ניקל וקדמיום. אין לפרק את מארו הסוללה, להשליך אותו לאש או למים או לקצר אותו. יש לשלוק את מארו הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה בזמן החלפת מארו הסוללה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 4

⚠ DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systematterie ist eine Lithiumatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לטלוק את המחבר המקוטב שלה, לפרק אותה או לחמם אותה לטמפרטורה העולה על 100 מעלות צלזיוס. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לטלוק את הסוללה כנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לשכנת שריפה או התפוצצות.

La batteria di supporto e una batteria al litio e puo incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscaldarla ad una temperatura superiore ai 100 gradi centigradi, incendiarla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクタの取り外し、バッテリー本体の分解、100°C (212°F) 以上への加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

Safety notice 5

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הנביש הנוזלי (LCD) נשבר והנוזל מתוך המסך בא במגע עם עיניים או ידיים, שטפו את האזורים הנוגעים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים הנובעים מהמגע עם הנוזל נמשכים לאחר השטיפה.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD の中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún sintoma del fluido despues de lavarse.

Safety notice 6

⚠ DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

Safety notice 7

⚠ DANGER

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארזת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

Safety notice 8**⚠ DANGER**

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב, לנתק את כל כבלי החשמל משקעי החשמל, להוציא את מטריז הסוללה, ואז לנתק כבלי חיבור אחרים אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRU を取り外す前に、**ThinkPad** の電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

凡未在这里指明的任何控制用法、调整、行为，都会导致严重后果。

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

Werden Steuer- und Einstellelemente anders als hier festgesetzt verwendet, kann gefährliche Laserstrahlung auftreten.

Az itt előírt eljárásoktól, beállítástoktól és vezérlésektől eltérni a lézersugárzás veszélye miatt kockázatos!

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použitie kontrol, úprav alebo iných vykonaní od iných výrobcov, ako je v tomto špecifikované, mohlo by mať za následok nebezpečenstvo vystavenia sa vyžiarovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open.**

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

⚠ DANGER

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos óticos e evite exposição direta com o feixe de luz.

开启时会有激光发射时，请勿直视激光束，请勿直接查看视觉仪器，并且避免直接接触在激光光束之中。

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár ! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Aprendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения. Не смотрите на луч, не разглядывайте его с помощью оптических инструментов, а также избегайте прямого воздействия лазерного луча.

Keď je laserová jednotka otvorená. Vyhnite sa priamemu pohľadu a nehladte priamo s optickými nástrojmi do lúča a vyhnite sa priamemu vystaveniu lúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

Important service information

This chapter presents the following important service information:

- “Strategy for replacing FRUs” on page 16
 - “Strategy for replacing a hard disk drive” on page 17
 - “Important notice for replacing a system board” on page 17
- “Important information about replacing RoHS compliant FRUs” on page 18

Important:

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site:

<http://support.lenovo.com>.

Strategy for replacing FRUs

Before replacing parts:

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

1. Go to <http://support.lenovo.com>.
2. Enter the serial number or select a product or use Lenovo smart downloading.
3. Select the BIOS/Driver/Applications and download.
4. Follow the directions on the screen and install the necessary software.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs one by one to see if the symptoms change. Replace only the FRU that changed the symptoms.

Attention: The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

Strategy for replacing a hard disk drive

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

Attention: The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

Important notice for replacing a system board

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

Attention: When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo’s requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

General checkout

This chapter presents the following information:

- “What to do first” on page 20
- “Power system checkout” on page 21

Before you go to the checkout, make sure to read the following important notes:

Important notes:

- **Only certified trained personnel can service the computer.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **Carefully remove screws for reuse when replacing FRUs.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace an FRU only with another FRU of the correct model.** When you replace an FRU, make sure that the machine model and the FRU part number are correct by referring to the FRU parts list.
- **An FRU should not be replaced just because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of servicer
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

Note for warranty: During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

The following symptoms might indicate damage caused by nonwarranted activities:

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

Power system checkout

To verify a symptom, follow the steps below:

1. Turn off the computer.
2. Remove the battery pack.
3. Connect the AC adapter.
4. Make sure that power is supplied when you turn on the computer.
5. Turn off the computer.
6. Disconnect the AC adapter and install the charged battery pack.
7. Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- “Checking the AC adapter” on page 21
- “Checking operational charging” on page 22
- “Checking the battery pack” on page 22

Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging”.

To check the AC adapter, follow the steps below:

1. Unplug the AC adapter cable from the computer.
2. Measure the output voltage at the plug of the AC adapter cable. See the following figure:



Pin	Voltage (V DC)
1	+5
2	0

Note: Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

3. If the voltage is not correct, replace the AC adapter.
4. If the voltage is acceptable, do the following:
 - Replace the system board.
 - If the problem persists, go to “Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/ 110 Touch-15ACL” on page 26.

Note: Noise from the AC adapter does not always indicate a defect.

Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not light on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator still does not light on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

Checking the battery pack

Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows® taskbar and wait for a moment (but do not click it), and the percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

Note: If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

Related service information

This chapter presents the following information:

- “Restoring the factory contents by using OneKey Recovery” on page 23
- “Passwords” on page 24
- “Power management” on page 25

Restoring the factory contents by using OneKey Recovery

Restore of factory default

The Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL computers come with pre-installed OneKey Recovery System. In order to save application files and the initial backed up files of the system, the hard disk in a Lenovo computer includes a hidden partition when it is shipped. If you need to restore the system to the point of your first boot up, just enter Lenovo OneKey Recovery System and run **System Recovery**. For details of OneKey Recovery System, see *the User Guide for Lenovo OneKey Recovery System*.

Note: This will delete all the new data on the system partition (C drive), which is not recoverable. Make sure to back up your critical data before you perform this action.

Passwords

As many as three passwords may be needed for any Lenovo computer: the power-on password (POP), the hard disk password (HDP), and the administrator password.

If any of these passwords has been set, a prompt for it appears on the screen whenever the computer is turned on. The computer does not start until the password is entered.

Power-on password

A power-on password (POP) protects the system from being powered on by an unauthorized person. The password must be entered before an operating system can be booted.

Hard-disk password

There are two hard-disk passwords (HDPs):

+ User HDP - for the user

+ Master HDP - for the system administrator, who can use it to get access to the hard disk drive even if the user has changed the user HDP

Attention: If the user HDP has been forgotten, check whether a master HDP has been set. If it has, it can be used for access to the hard disk drive. If no master HDP is available, neither Lenovo nor Lenovo authorized service technicians provide any services to reset either the user or the master HDP, or to recover data from the hard disk drive. The hard disk drive can be replaced for a scheduled fee.

Administrator password

Administrator password controls the access of the whole setup utility. Only Administrator password was set then User password can be set. If Administrator password was cleared, the User password was cleared too.

Power management

Note: Power management modes are not supported for APM operating system.

Putting the computer to sleep or shutting it down

When you have finished working with your computer, you can put it to sleep or shut it down.

Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep. When the computer is in sleep mode, you can quickly wake it to resume use, bypassing the startup process.

To put the computer to sleep, do one of the following:

- Close the display lid.
- Press the Power button.
- Open the start menu, and then select **Power**  → **Sleep**.

Attention: Wait until the power indicator light starts blinking (indicating that the computer is in sleep mode) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

To wake the computer, do one of the following:

- Press any key on the keyboard.
- Press the Power button.

Shutting down the computer

If you are not going to use your computer for a long time, shut it down.

To shut down the computer, do one of the following:

- Open the start menu, and then select **Power**  → **Shut down**.
- Right-click the **Start** button in the lower-left corner and select **Shut down or sign out** → **Shut down**.

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/ 110 Touch-15ACL

This chapter presents the following product-specific service references and product-specific parts information:

- “Specifications” on page 26
- “Status indicators” on page 28
- “Fn key combinations/Hotkeys” on page 29
- “FRU replacement notices” on page 30
- “Removing and replacing an FRU” on page 31
- “Locations” on page 59
- “Parts list” on page 62

Specifications

The following table lists the specifications of the Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL:

Table 1. Specifications

Feature	Description
Processor	<ul style="list-style-type: none"> • View the system properties of your computer. You can do this as follows: Open the Control Panel, and then select System and Security → System.
Bus architecture	<ul style="list-style-type: none"> • 1600 MHz DDR3L • PCIE • SATA • USB • LPC • HDA • EDP • HDMI
Graphic memory chip	<ul style="list-style-type: none"> • Integrated Graphics: Depends on CPU • Discrete Graphics: AMD R16M-M1-30 (Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL)
Display	<ul style="list-style-type: none"> • 14.0" 16:9, 1,366 × 768 pixels HD • 15.6" 16:9, 1,366 × 768 pixels HD
Standard memory	<ul style="list-style-type: none"> • DDR3L-1600 MHz, On board (max 8 GB) (Lenovo ideapad 110-14IBR/Lenovo ideapad 110-15IBR) • DDR3L-1600 MHz, SODIMM × 1 (max 8 GB) (Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL)
CMOS RAM	<ul style="list-style-type: none"> • Embedded in PCH
Storage devices	<ul style="list-style-type: none"> • 2.5-inch, 7.0 mm or 9.5 mm • HDD: SATA II/SATA III • SSD: SATA III
I/O port	<ul style="list-style-type: none"> • USB 2.0 × 1, USB 3.0 × 1 • Combo audio jack × 1 • HDMI port × 1 • RJ-45 × 1 (10/100 Mbps) • Memory card slot (SD/SDHC/SDXC/MMC)

Table 1. Specifications (continued)

Feature	Description
Audio	<ul style="list-style-type: none">• 3.5 mm Combo audio jack• 1.5 W speaker × 1• Single microphone
Ethernet	<ul style="list-style-type: none">• 10/100 Mbps
Bluetooth wireless	<ul style="list-style-type: none">• Bluetooth Optional
Keyboard	<ul style="list-style-type: none">• 6 rows Lenovo Frame Keyboard
Integrated camera	<ul style="list-style-type: none">• 0.3 M
Battery	<ul style="list-style-type: none">• Li-ion battery pack, 3 cells, 24 Wh
AC adapter	<ul style="list-style-type: none">• 20 V, 45 W / 65 W (depending on configuration)
Pre-installed operating system	<ul style="list-style-type: none">• Win 10 64bits• Free-DOS

Status indicators

The system status indicators below show the computer status:



Table 2. Status indicators

Indicator	Indicator status	Charge status	Meaning
1 Power 	On (solid white)	---	The computer is powered on.
	Blinking	---	The computer is in sleep mode.
	Off	---	The computer is powered off.
2 Battery 	On (solid white)	Charging	The battery has more than 80% charge.
		Discharging	The battery has more than 20% charge.
	On (solid amber)	Discharging	The battery has between 5% and 20% charge.
	Blinking slowly (white)	Charging	The battery has between 20% and 80% charge. When the battery reaches 80% charge, the light will stop blinking. However, charging will continue until the battery is fully charged.
			The battery has less than 20% charge. When the battery charge reaches 20%, the blinking color will change to white.
			The battery has less than 5% charge.
	Blinking quickly (amber)	Charging/Discharging	

Fn key combinations/Hotkeys

The following table shows the function of each combination of Fn with a function key.

Table 3. Fn key combinations

Fn + PrtSc (Lenovo ideapad 110-14IBR):	Activates the insert function.
Fn + B:	Activates the break function.
Fn + P:	Activates the pause function.
Fn + C:	Enables/disables the scroll lock.
Fn + S:	Activates the system request.
Fn + ↑:	Activates the Pgup key function.
Fn + ↓:	Activates the Pgdn key function.
Fn + ←:	Activates the home key function.
Fn + →:	Activates the end key function.

You can access certain system settings quickly by pressing the appropriate hotkeys.

Table 4. Hotkeys

 : Mutes/unmutes the sound.	 : Enables/disables Airplane mode.
 : Decreases the volume level.	 : Enables/disables the integrated camera.
 : Increases the volume level.	 : Locks the screen.
 : Enables/disables the microphone.	 : Toggles the display between the computer and an external device.
 : Refreshes the desktop or the currently active window.	 : Decreases the display brightness.
 : Enables/disables the touchpad.	 : Increases the display brightness.

FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.


Do the following when you service this machine:

- Keep the screw kit in your tool bag.
- Carefully remove screws for reuse when replacing FRUs.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional 90° after the screw head touches the surface of the plastic part:

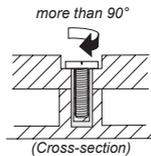

- **Logic card to plastic**

Turn an additional 180° after the screw head touches the surface of the logic card:

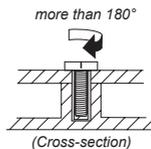

- **Torque driver**

If you have a torque screwdriver, refer to the "Torque" column for each step.

- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. **Carefully remove screws for reuse when replacing FRUs. Make sure that all screws are tightened firmly.**
- Ensure torque screwdrivers are calibrated correctly following country specifications.

Removing and replacing an FRU

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review "FRU replacement notices" on page 30.
3. Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
5. When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
6. When removing the FRU, move it in the direction as given by the arrow in the figure.
7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see "Locations" on page 59.
8. When replacing an FRU, use the correct screw as shown in the procedures.

DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.

Attention: After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

Attention: The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.

Notes:

- This manual applies to the following models: Lenovo ideapad 110-14IBR/ 110-15IBR/110-15ACL/110 Touch-15ACL.
- The illustrations used in this manual are for Lenovo ideapad 110-15IBR unless otherwise stated.

1010 Optical drive


Figure 1. Removal steps of optical drive

Remove the screw **1**, then gently pull the optical drive out in the direction shown by arrow **2**.



Step	Screw (quantity)	Color	Torque
1	M2 × 6 mm, Phillips head, nylok-coated (1) D cover → C cover	Black	1.85±0.15 kgf*cm

Remove the screw **3**, then carefully remove the optical drive bracket and bezel in the directions shown by arrows **4** and **5**.

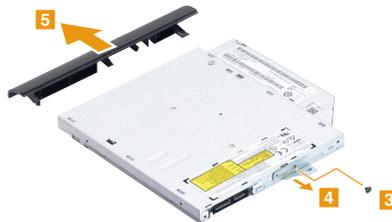

Step	Screw (quantity)	Color	Torque
3	M2 × 2.5 mm, Phillips head, nylok-coated (1) ODD BKT → ODD	Black	1.85±0.15 kgf*cm

1020 Base cover

For access, remove this FRU:

- “1010 Optical drive” on page 32

Figure 2. Removal steps of base cover

Remove the screws **1** and **2** from the bottom.



Step	Screw (quantity)	Color	Torque
1	M2 × 6 mm, Phillips head, nylok-coated (12) D cover → C cover	Black	1.85±0.15 kg*cm
2	M2 × 2 mm, Phillips head, nylok-coated (3) D cover → C cover (ODD location)	Black	1.85±0.15 kg*cm

Use a plastic prying tool to aid in separation, then remove the base cover in the direction shown by arrow **3**.



Note: Applying labels to the base cover

The new base cover FRU is shipped with a kit containing labels of several kinds. When you replace the base cover, you need to apply the following labels:


The following labels need to be peeled off from the old base cover, and need to be put on the new base cover.

- a** Rating label
- b** Rating print label
- c** OS label
- d** KCC/BIS label
- e** Argentina label
- f** BIS label
- g** Indonesia label
- h** WL/BT label
- i** Adp label


For some models, you also need to apply one or two FCC labels. Check the old base cover; if it has one or two FCC labels, find duplicates of them in the label kit and apply them to the new base cover.

For the location of each label, refer to the following figures:


Lenovo ideapad 110-14IBR

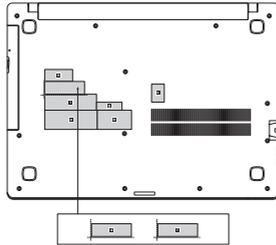

Lenovo ideapad 110-15IBR

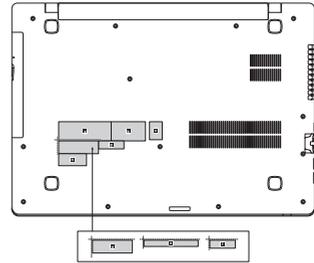

**Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL**

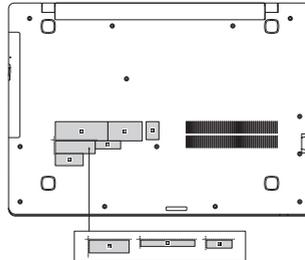

1030 Battery pack

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33

⚠ DANGER

Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.

Figure 3. Removal steps of battery pack

Detach the battery pack connector in the direction shown by arrow **1**, then remove the screws **2**. Remove the battery pack in the direction shown by arrow **3**.


Lenovo ideapad 110-14IBR/Lenovo ideapad 110-15IBR



// Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Figure 3. Removal steps of battery pack (continued)

Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL

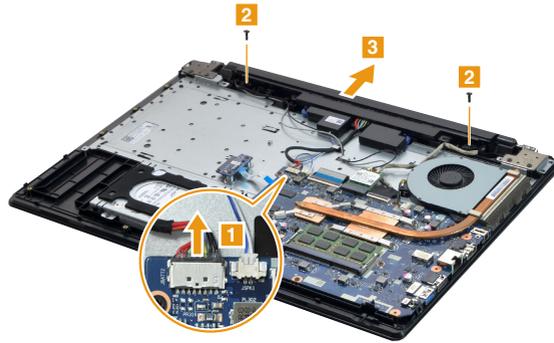

Step	Screw (quantity)	Color	Torque
2	M2 × 6 mm, Phillips head, nylok-coated (2) Battery → C cover	Black	1.85±0.15 kg*cm

When installing: Make sure that the battery connector is attached firmly and route the cable along the cable guides.


1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL)

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35

Figure 4. Removal steps of DIMM, fan and heat sink assembly (Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL)

Release the two latches on both edges of the socket at the same time in the directions shown by arrows **1**, and then unplug the DIMM in the direction shown by arrow **2**.

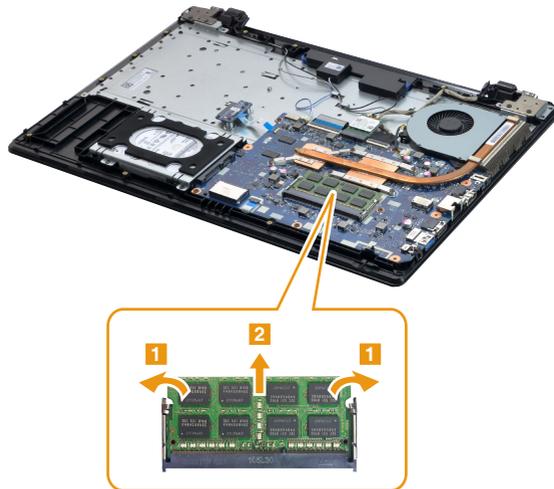


When installing: Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into place. Make sure that it is firmly fixed in the slot and is difficult to move.

Note: When replacing the memory is completed, you need to restart the computer after the first reboot.

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Figure 4. Removal steps of DIMM, fan and heat sink assembly
(Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL) (continued)

Unplug the fan connector in the direction shown by arrow **3**. Remove the screws **4** and loosen the screws **5**.

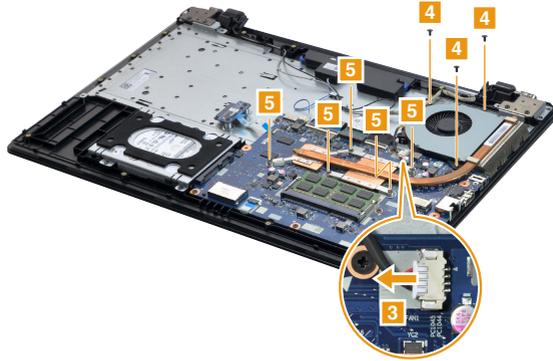


Step	Screw (quantity)	Color	Torque
4	M2 × 3 mm, Phillips head, nylok-coated (3) Fan → MB	Black	1.85±0.15 kg*cm

Lift the fan and the heat sink in the direction shown by arrow **6**.



Figure 4. Removal steps of DIMM, fan and heat sink assembly
(Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL) (continued)

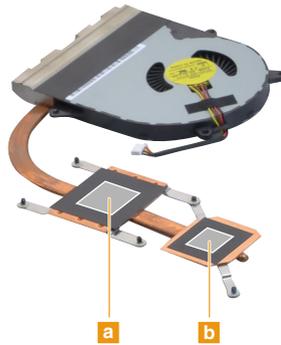

When installing:

Before you attach the fan assembly to the computer, apply thermal grease, at an amount of 0.2 grams, to the **a** and **b** part shown in the figure above. Either too much or too little grease application can cause a thermal problem due to imperfect contact with a component.

1050 Hard disk drive

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL)” on page 37

Attention:

- **Do not drop the hard disk drive or apply any physical shock to it.** The hard disk drive is sensitive to physical shock. Improper handling can cause damage and permanent loss of data.
- Before removing the drive, suggest the customer to backup all the information on it if possible.
- Never remove the drive while the system is operating or is in suspend mode.

Figure 5. Removal steps of hard disk drive

Remove the screws **1**, then remove the hard disk drive in the direction shown by arrow **2**.

Lenovo ideapad 110-14IBR

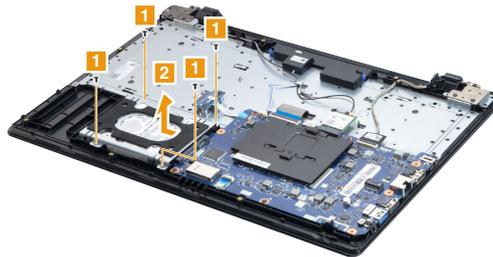


Figure 5. Removal steps of hard disk drive (continued)

**Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL**



Step	Screw (quantity)	Color	Torque
1	M2 × 3.5 mm, Phillips head, nylok-coated (4) HDD ASSY → C cover	Black	1.85±0.15 kgf*cm

Remove the screws **3**, and then take out the metal frame.



Step	Screw (quantity)	Color	Torque
3	M3 × 3 mm, Phillips head, nylok-coated (4) HDD → HDD bracket	Silver	3.0±0.3 kgf*cm

1060 PCI Express Mini Card for wireless LAN

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL)” on page 37

Important: The preinstalled WLAN module may only be replaced with a Lenovo approved module in order to comply with FCC and IC regulations. Refer to “Table 5. Parts list—Overall” on page 65 for Lenovo part numbers for the approved modules.

Figure 6. Removal steps of PCI Express Mini Card for wireless LAN

Disconnect the two wireless LAN cables (black, grey) **1**, and then remove the screw **2**.



In step **1**, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by the arrows.

Notes: The wireless LAN card has 2 cables in step **1**.
The wireless LAN card in some models might have 3 cables in step **1**.

Step	Screw (quantity)	Color	Torque
2	M2 × 3.5 mm, Phillips head, nylok-coated (1) Mini PCI → C cover	Black	1.85±0.15 kgf*cm

Figure 6. Removal steps of PCI Express Mini Card for wireless LAN (continued)

Remove the card in the direction shown by arrow **3**.



When installing:

- In models with a wireless LAN card that has two antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **MAIN**, and the grey cable (2nd) (AUX) into the jack labeled **AUX** on the card.
- In models with a wireless LAN card that has three antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, the grey cable (3rd) into the jack labeled **3**, and the white cable (2nd) (AUX) into the jack labeled **2** on the card.

1070 ODD Board

(Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/
 Lenovo ideapad 110 Touch-15ACL)” on page 37

*Figure 7. Removal steps of ODD Board (Lenovo ideapad 110-15IBR/
 Lenovo ideapad 110-15ACL/Lenovo ideapad 110 Touch-15ACL)*

Detach the ODD board connector in the directions shown by arrows **1** and **2**.
 Remove the screws **3**.



Step	Screw (quantity)	Color	Torque
3	M2 × 3.5 mm, Phillips head, nylok-coated (2) ODD convert BD → C cover	Black	1.85±0.15 kgf*cm

When installing: Make sure that the connector is attached firmly.

Remove the ODD board **4**.




1080 Speaker

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 37

Figure 8. Removal steps of speaker

Detach the speaker connector in the direction shown by arrow **1**. Remove the speaker **2**.

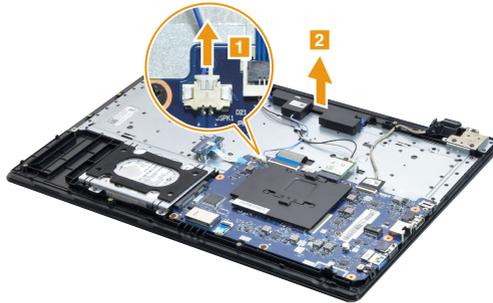

When installing: Make sure that the speaker connector is attached firmly.

1090 System board

Important notices for handling the system board:

When handling the system board, bear the following in mind.

- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- In the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface such as an ESD mat or conductive corrugated material.

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 37
- “1050 Hard disk drive” on page 40
- “1060 PCI Express Mini Card for wireless LAN” on page 42
- “1070 ODD Board (Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 44
- “1080 Speaker” on page 45

Figure 9. Removal steps of system board

Detach the three connectors (the LCD connector, KB FPC connector and touchpad connector) in the directions shown by arrows **1** and **2**. Remove the screws **3**.

Lenovo ideapad 110-14IBR

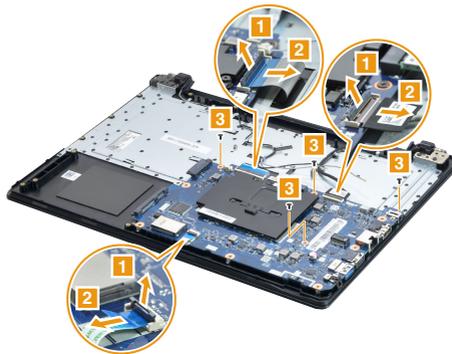


Figure 9. Removal steps of system board (continued)

**Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL**



Step	Screw (quantity)	Color	Torque
3	M2 × 3.5 mm, Phillips head, nylok-coated (4) (Lenovo ideapad 110-14IBR) MB → C cover	Black	1.85±0.15 kgf*cm
3	M2 × 3.5 mm, Phillips head, nylok-coated (6) (Lenovo ideapad 110-15IBR/ Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL) MB → C cover & DC-IN CONN → C cover	Black	1.85±0.15 kgf*cm


When installing: Make sure that the connectors are attached firmly.

// *Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL* *Hardware Maintenance Manual*


Figure 9. Removal steps of system board (continued)

Remove the system board in the direction shown by arrow 4.

Lenovo ideapad 110-14IBR

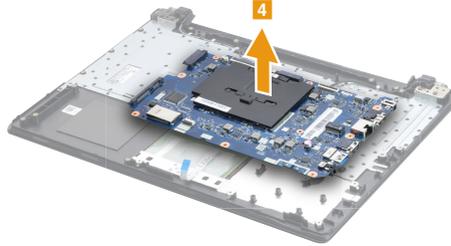

Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL

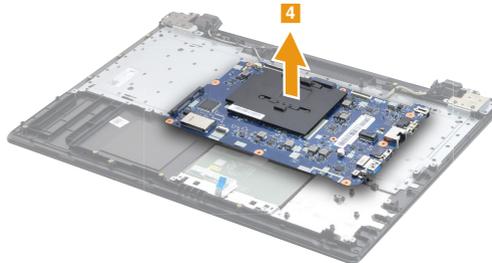


1100 Heat sink assembly (Lenovo ideapad 110-14IBR/ Lenovo ideapad 110-15IBR)

For access, remove these FRUs in order:


- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL)” on page 37
- “1050 Hard disk drive” on page 40
- “1060 PCI Express Mini Card for wireless LAN” on page 42
- “1070 ODD Board (Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL)” on page 44
- “1080 Speaker” on page 45
- “1090 System board” on page 46

*Figure 10. Removal steps of heat sink assembly (Lenovo ideapad 110-14IBR/
Lenovo ideapad 110-15IBR)*

Loosen the screws **1**.

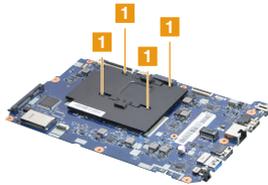

Lift the heat sink in the direction shown by arrow **2**.

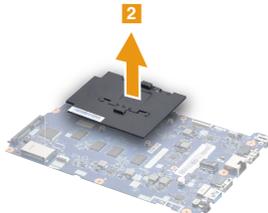

// Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Figure 10. Removal steps of heat sink assembly (Lenovo ideapad 110-14IBR/
Lenovo ideapad 110-15IBR) (continued)



When installing:

Before you attach the fan assembly to the computer, apply thermal grease, at an amount of 0.2 grams, to the **a** part shown in the figure above. Either too much or too little grease application can cause a thermal problem due to imperfect contact with a component.

1110 Upper case

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 37
- “1050 Hard disk drive” on page 40
- “1060 PCI Express Mini Card for wireless LAN” on page 42
- “1070 ODD Board (Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 44
- “1080 Speaker” on page 45
- “1090 System board” on page 46

Figure 11. Removal steps of upper case

Remove the screws **1**.




Step	Screw (quantity)	Color	Torque
1	M2 × 6 mm, Phillips head, nylok-coated (4) Hinge → C cover	Black	1.85±0.15 kgf*cm


// Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Figure 11. Removal steps of upper case (continued)

Open the hinge in the direction shown by arrows **2**. Release the LCD cable and antenna cables from the cable guides.

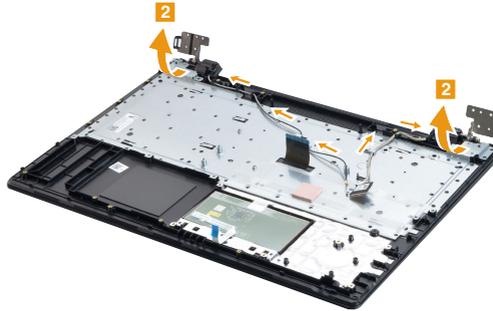

Remove the upper case from LCD unit in the direction shown by arrow **3**.

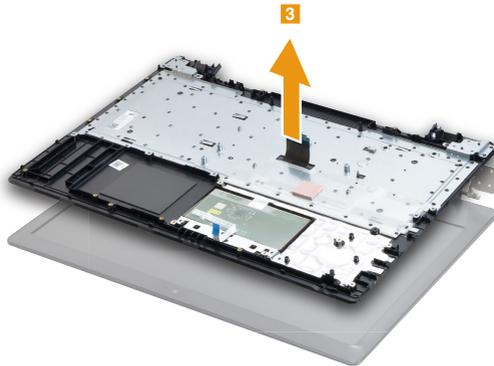


1120 LCD unit

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 37
- “1050 Hard disk drive” on page 40
- “1060 PCI Express Mini Card for wireless LAN” on page 42
- “1070 ODD Board (Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 44
- “1080 Speaker” on page 45
- “1090 System board” on page 46
- “1110 Upper case” on page 51

Figure 12. Removal steps of LCD unit


Remove the LCD front bezel in the direction shown by arrows **1**.

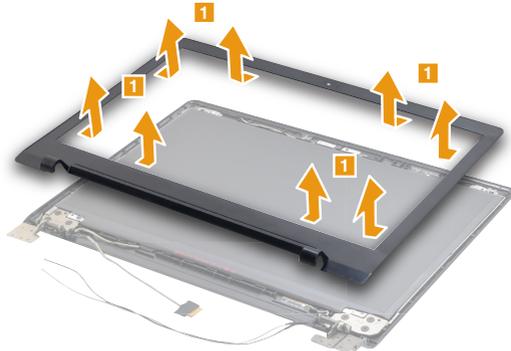

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Figure 12. Removal steps of LCD unit (continued)

Remove the screws **2**. Lift the LCD panel slightly **3**. Peel off the adhesive tape and detach the connector in the direction shown by arrow **4**. Then remove the LCD panel.

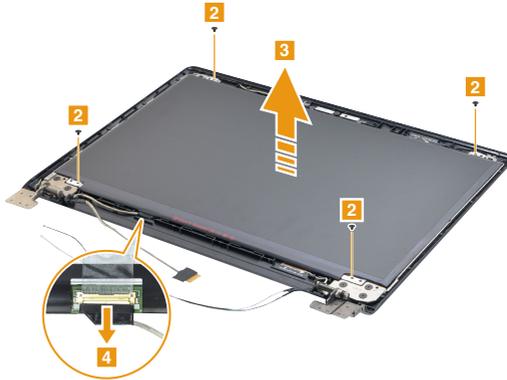

Step	Screw (quantity)	Color	Torque
2	M2 × 2.5 mm, Phillips head, nylok-coated (4) Lcd Panel → A cover	Black	1.85±0.15 kgf*cm

When installing: Make sure that the metal connector is attached firmly.


1130 LCD hinges

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 37
- “1050 Hard disk drive” on page 40
- “1060 PCI Express Mini Card for wireless LAN” on page 42
- “1070 ODD Board (Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 44
- “1080 Speaker” on page 45
- “1090 System board” on page 46
- “1110 Upper case” on page 51
- “1120 LCD unit” on page 53

Figure 13. Removal steps of LCD hinges

Remove the screws **1**.

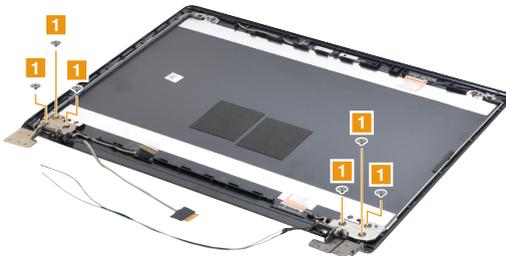


Step	Screw (quantity)	Color	Torque
1	M2.5 × 2.5 mm, Phillips head, nylok-coated (6) Hinge → A cover	Silver	3.0±0.3 kgf*cm

// Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Figure 13. Removal steps of LCD hinges (continued)

Release the two hinges in the direction shown by arrows **2**.

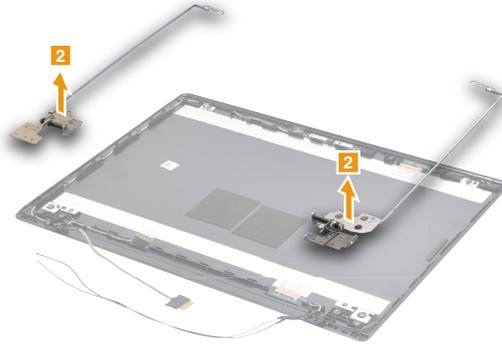

1140 EDP cable and integrated camera

For access, remove these FRUs in order:

- “1010 Optical drive” on page 32
- “1020 Base cover” on page 33
- “1030 Battery pack” on page 35
- “1040 DIMM, Fan and heat sink assembly (Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 37
- “1050 Hard disk drive” on page 40
- “1060 PCI Express Mini Card for wireless LAN” on page 42
- “1070 ODD Board (Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL)” on page 44
- “1080 Speaker” on page 45
- “1090 System board” on page 46
- “1110 Upper case” on page 51
- “1120 LCD unit” on page 53
- “1130 LCD hinges” on page 55

Figure 14. Removal steps of EDP cable and integrated camera

Note: The integrated camera is stuck on the top center of the LCD cover.


Detach the connector in the direction shown by arrow **1**, then remove the camera board in the direction shown by arrow **2**.



When installing: Stick the integrated camera to the top center of the LCD cover and adjust the placement of it to make sure the connector is attached firmly.

Figure 14. Removal steps of EDP cable and integrated camera (continued)

Remove the EDP cable in the direction shown by arrows **3**.

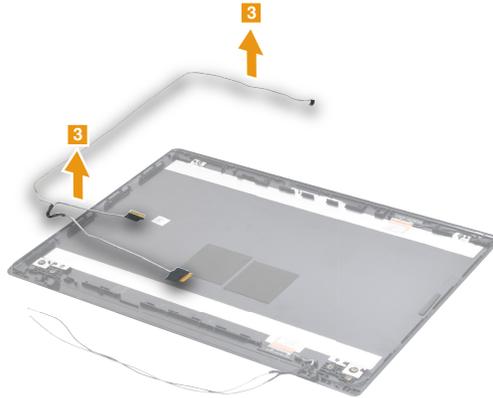

Locations

Front and right-side view

- 1 Integrated camera
- 2 Wireless LAN antennas
- 3 Computer display
- 4 Speaker
- 5 Built-in microphone
- 6 System status indicators

Note: For the description of each indicator, see “Status indicators” on page 28.

- 7 Touchpad
- 8 Optical drive (on select models)
- 9 Power button
- 10 Kensington mini security slot

Lenovo ideapad 110-14IBR




**Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL**




Bottom and left-side view

- 1 Memory card slot
- 2 Combo audio jack
- 3 USB ports
- 4 RJ-45 port
- 5 HDMI port
- 6 Novo button
- 7 AC power adapter jack
- 8 Louvers

Lenovo ideapad 110-14IBR

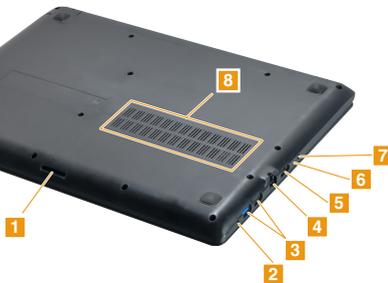

Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/ Lenovo ideapad 110 Touch-15ACL

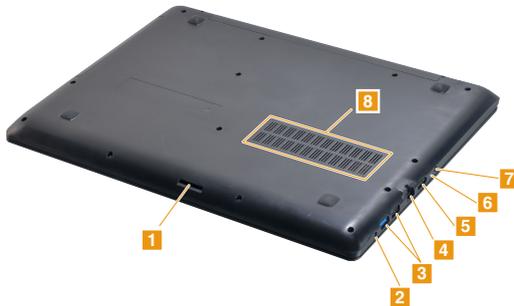

Parts list

This section presents the following service parts:

- “Overall” on page 63
- “LCD FRUs” on page 71
- “Miscellaneous parts” on page 74
- “AC adapters” on page 74
- “Screws” on page 76

Note:


Each FRU is available for all types or models, unless specific types or models are specified.

Attention:

Do not attempt to replace an FRU on your own. If an FRU is damaged, contact a Lenovo authorized servicer or a marketing representative for replacement or repair. Only qualified technicians can inspect or repair this product.

Overall

Lenovo ideapad 110-14IBR

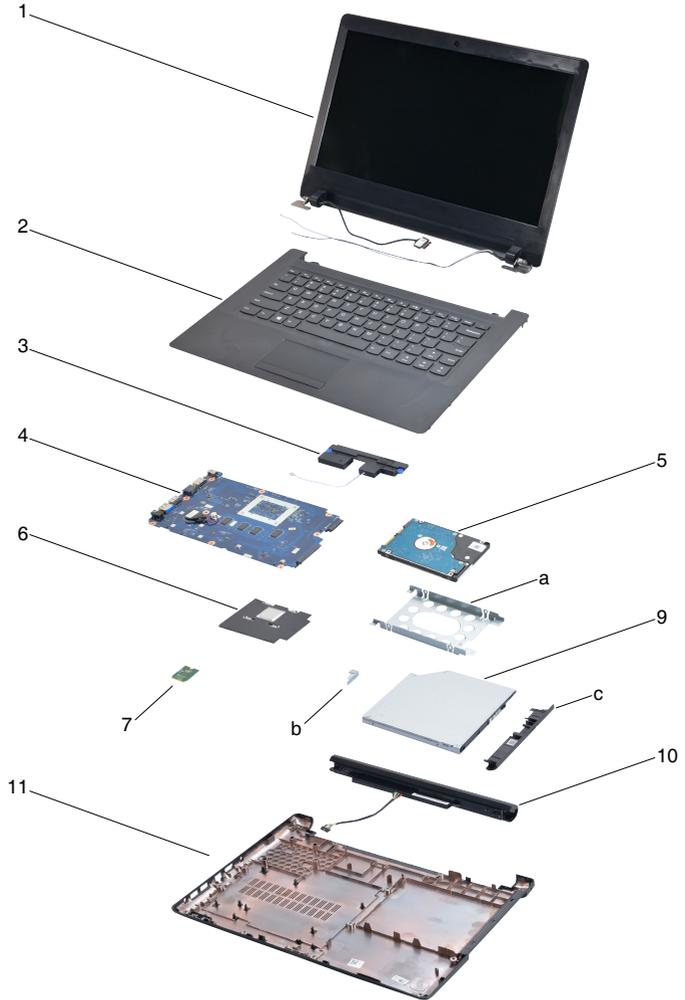

**Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL**

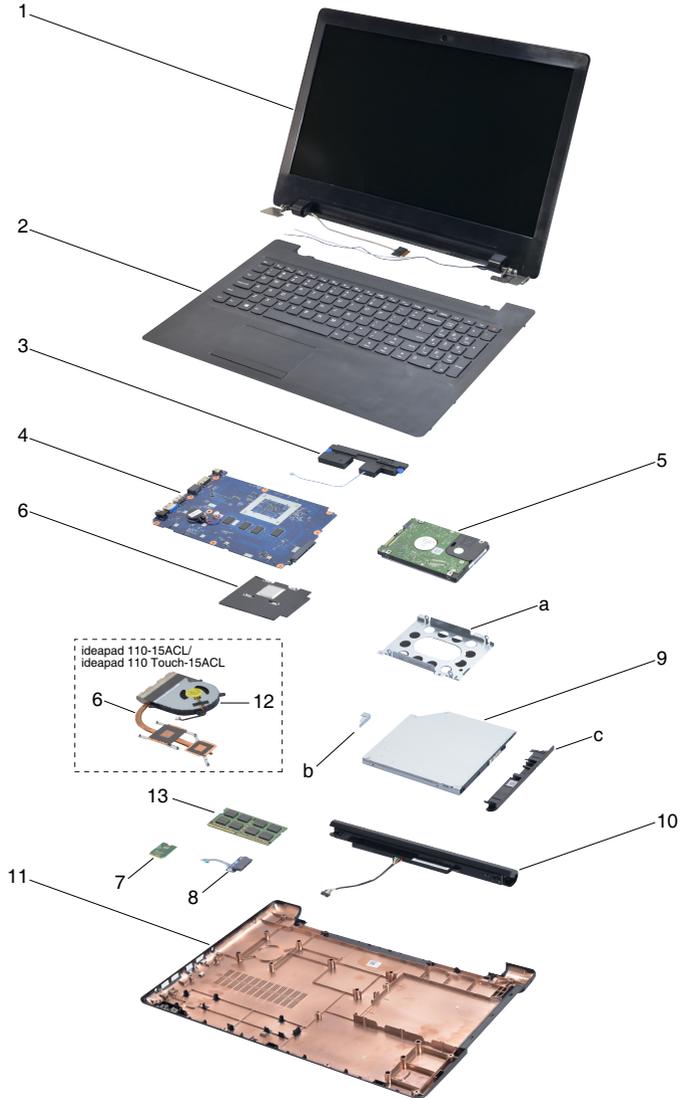


Table 5. Parts list—Overall

No.	FRU	FRU no.	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
a-c	See "Miscellaneous parts" on page 74.						
1	LCD unit (see "LCD FRUs" on page 71.)						
2	UpperCaseASML_US 80T6BKTEX US KB	5CB0L45729	N	•			
2	UpperCaseASML_UK 80T6BKTEX UK KB	5CB0L45728		•			
2	UpperCaseASML_UK 80T6BKTEX ITA KB	5CB0L45750		•			
2	UpperCaseASML_UK 80T6BKTEX SPA KB	5CB0L45735		•			
2	UpperCaseASML_UK 80T6BKTEX TUR KB	5CB0L45772		•			
2	UpperCaseASML_US 80T6BKTEX THAI KB	5CB0L45725		•			
2	UpperCaseASML_UK 80T6BKTEX POR KB	5CB0L45751		•			
2	UpperCaseASML_UK 80T6BKTEX LASPAKB	5CB0L45748		•			
2	UpperCaseASML_UK 80T6BKTEX CFEN KB	5CB0L45759		•			
2	UpperCaseASML_US 80T6BKTEX KOR KB	5CB0L45776		•			
2	UpperCaseASML_US 80T6BKTEX TC KB	5CB0L45738		•			
2	UpperCaseASML_US 80T6BKTEX RUS KB	5CB0L45764		•			
2	UpperCaseASML_UK 80T6BKTEX FR KB	5CB0L45746		•			
2	UpperCaseASML_UK 80T6BKTEX GERKB	5CB0L45737		•			
2	UpperCaseASML_US 80T6BKTEX ARAKB	5CB0L45768		•			
2	UpperCaseASML_UK 80T6BKTEX BRAKB	5CB0L45779		•			
2	UpperCaseASML_UK 80T6BKTEX DUTCHKB	5CB0L45730		•			
2	UpperCaseASML_US 80T6BKTEX GREKB	5CB0L45762		•			
2	UpperCaseASML_US 80T6BKTEX HEBKB	5CB0L45781		•			
2	UpperCaseASML_UK 80T6BKTEX HUNKB	5CB0L45745		•			
2	UpperCaseASML_UK 80T6BKTEXNORDICKB	5CB0L45767		•			
2	UpperCaseASML_UK 80T6BKTEX BELKB	5CB0L45763		•			
2	UpperCaseASML_UK 80T6BKTEX ILDKB	5CB0L45732		•			
2	UpperCaseASML_UK 80T6BKTEX SLEKB	5CB0L45769		•			
2	UpperCaseASML_UK 80T6BKTEX SWSKB	5CB0L45755		•			
2	UpperCaseASML_US 80T6BKTEXUSINTEKB	5CB0L45773		•			
2	UpperCaseASML_UK80T6BKTEXCZH-SLKKB	5CB0L45736		•			
2	UpperCaseASML_UK 80T6BKTEX BUL KB	5CB0L45774		•			
2	UpperCaseASML_US 80T6BKTEX IDKB	5CB0L45766		•			
2	UpperCaseASML_UK80T6BKTEXFR-AR KB	5CB0L45775		•			
2	UpperCaseASML80T7 US_USKB TEXBLK	5CB0L46248			•		
2	UpperCaseASML80T7 UK_UKKB TEXBLK	5CB0L46210			•		
2	UpperCaseASML80T7 UK_ITKB TEXBLK	5CB0L46251			•		
2	UpperCaseASML80T7 UK_SPNKB TEXBLK	5CB0L46217			•		
2	UpperCaseASML80T7 UK_TRKKB TEXBLK	5CB0L46206			•		
2	UpperCaseASML80T7 US_TLKB TEXBLK	5CB0L46219			•		
2	UpperCaseASML80T7 UK_PTGBK TEXBLK	5CB0L46233			•		
2	UpperCaseASML80T7 UK_LTSKB TEXBLK	5CB0L46212			•		
2	UpperCaseASML80T7 UK_CFRKB TEXBLK	5CB0L46223			•		
2	UpperCaseASML80T7 US_KRKB TEXBLK	5CB0L46224			•		
2	UpperCaseASML80T7 US_TRCNKB TEXBLK	5CB0L46201			•		
2	UpperCaseASML80T7 US_RUSKB TEXBLK	5CB0L46240			•		
2	UpperCaseASML80T7 UK_FRNKB TEXBLK	5CB0L46236			•		
2	UpperCaseASML80T7 UK_GERKB TEXBLK	5CB0L46226			•		

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL	
2	UpperCaseASML80T7 US_ARBKB TEXBLK	5CB0L46202	N		•			
2	UpperCaseASML80T7 UK_BRZKB TEXBLK	5CB0L46221			•			
2	UpperCaseASML80T7 UK_DUTKB TEXBLK	5CB0L46213			•			
2	UpperCaseASML80T7 US_GRKKB TEXBLK	5CB0L46247			•			
2	UpperCaseASML80T7 US_HBWKB TEXBLK	5CB0L46231			•			
2	UpperCaseASML80T7 UK_HUGKB TEXBLK	5CB0L46242			•			
2	UpperCaseASML80T7 UK_NRDKB TEXBLK	5CB0L46239			•			
2	UpperCaseASML80T7 UK_BLGKB TEXBLK	5CB0L46200			•			
2	UpperCaseASML80T7 UK_ILKB TEXBLK	5CB0L46214			•			
2	UpperCaseASML80T7 UK_SLVNBK TEXBLK	5CB0L46218			•			
2	UpperCaseASML80T7 UK_SWSKB TEXBLK	5CB0L46208			•			
2	UpperCaseASML80T7 US_USINTKBTEXBLK	5CB0L46249			•			
2	UpperCaseASML80T7 UK_CZHKB TEXBLK	5CB0L46243			•			
2	UpperCaseASML80T7 UK_BLGRKB TEXBLK	5CB0L46205			•			
2	UpperCaseASML80T7 US_INDKB TEXBLK	5CB0L46246			•			
2	UpperCaseASML80T7 UK_FARBKB TEXBLK	5CB0L46232			•			
2	UpperCaseASM L80TJ US_USKB TEXBLK	5CB0L46295					•	•
2	UpperCaseASM L80TJ UK_UKKB TEXBLK	5CB0L46294					•	
2	UpperCaseASM L80TJ UK_ITKB TEXBLK	5CB0L46287					•	
2	UpperCaseASM L80TJ UK_SPNBK TEXBLK	5CB0L46263					•	•
2	UpperCaseASM L80TJ UK_TRKKB TEXBLK	5CB0L46253					•	
2	UpperCaseASM L80TJ US_TLKB TEXBLK	5CB0L46276					•	
2	UpperCaseASM L80TJ UK_PTGKB TEXBLK	5CB0L46289					•	
2	UpperCaseASM L80TJ UK_LTSKB TEXBLK	5CB0L46298					•	
2	UpperCaseASM L80TJ UK_CFRKB TEXBLK	5CB0L46279					•	•
2	UpperCaseASM L80TJ US_KRKB TEXBLK	5CB0L46273					•	
2	UpperCaseASML80TJ US_TRCNKB TEXBLK	5CB0L46286					•	
2	UpperCaseASM L80TJ US_RUSKB TEXBLK	5CB0L46259					•	
2	UpperCaseASM L80TJ UK_FRNBK TEXBLK	5CB0L46285					•	
2	UpperCaseASM L80TJ UK_GERKB TEXBLK	5CB0L46274					•	
2	UpperCaseASM L80TJ US_ARBKB TEXBLK	5CB0L46265					•	
2	UpperCaseASM L80TJ UK_BRZKB TEXBLK	5CB0L46255					•	
2	UpperCaseASM L80TJ UK_DUTKB TEXBLK	5CB0L46299					•	
2	UpperCaseASM L80TJ US_GRKKB TEXBLK	5CB0L46277					•	
2	UpperCaseASM L80TJ US_HBWKB TEXBLK	5CB0L46280					•	
2	UpperCaseASM L80TJ UK_HUGKB TEXBLK	5CB0L46254					•	
2	UpperCaseASM L80TJ UK_NRDKB TEXBLK	5CB0L46304					•	
2	UpperCaseASM L80TJ UK_BLGKB TEXBLK	5CB0L46301					•	
2	UpperCaseASM L80TJ UK_ILKB TEXBLK	5CB0L46256					•	
2	UpperCaseASML80TJ UK_SLVNBK TEXBLK	5CB0L46268					•	
2	UpperCaseASM L80TJ UK_SWSKB TEXBLK	5CB0L46252					•	
2	UpperCaseASML80TJUS_USINTKB TEXBLK	5CB0L46282					•	
2	UpperCaseASM L80TJ UK_CZHKB TEXBLK	5CB0L46257				•		
2	UpperCaseASML80TJ UK_BLGRKB TEXBLK	5CB0L46260				•		
2	UpperCaseASM L80TJ US_INDKB TEXBLK	5CB0L46272				•		
2	UpperCaseASML80TJ UK_FARBKB TEXBLK	5CB0L46284				•		

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/ 110 Touch-15ACL

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
3	SPEAKER L80T6	5SB0L45777		●	●	●	●
4	MB L80T6 N3710 UMA D2G WIN RTC	5B20L45740		●			
4	MB L80T6 N3710 UMA D2G NOK RTC	5B20L45782		●			
4	MB L80T6 N3160 UMA D4G WIN RTC	5B20L45742		●			
4	MB L80T6 N3160 UMA D4G NOK RTC	5B20L45771		●			
4	MB L80T6 N3060 UMA D4G WIN RTC	5B20L45724		●			
4	MB L80T6 N3060 UMA D4G NOK RTC	5B20L45739		●			
4	MB L80T6 N3060 UMA D2G WIN RTC	5B20L45733		●			
4	MB L80T6 N3060 UMA D2G NOK RTC	5B20L45727		●			
4	MB L80T6 N3160 UMA D2G WIN RTC	5B20L45744		●			
4	MB L80T6 N3160 UMA D2G NOK RTC	5B20L45734		●			
4	MB L80T6 N3710 UMA D4G WIN RTC	5B20L45754		●			
4	MB L80T6 N3710 UMA D4G NOK RTC	5B20L45778		●			
4	MBL80T7MA801N3710UMAD4G WIN RTC	5B20L46220			●		
4	MBL80T7MA801N3710UMAD4GNOK RTC	5B20L46222			●		
4	MBL80T7MA801N3160UMAD2G WIN RTC	5B20L46209			●		
4	MBL80T7MA801N3160UMAD2G NOK RTC	5B20L46241			●		
4	MBL80T7MA801N3060UMAD2G WIN RTC	5B20L46199			●		
4	MBL80T7MA801N3060UMAD2G NOK RTC	5B20L46225			●		
4	MBL80T7MA801N3060UMAD4G WIN RTC	5B20L46211			●		
4	MBL80T7MA801N3060UMAD4G NOK RTC	5B20L46235			●		
4	MBL80T7MA801N3160UMAD4G WIN RTC	5B20L46204			●		
4	MBL80T7MA801N3160UMAD4G NOK RTC	5B20L46229			●		
4	MBL80T7MA801N3710UMAD2G WIN RTC	5B20L46238	N		●		
4	MBL80T7MA801N3710UMAD2G NOK RTC	5B20L46203			●		
4	MBL80TJ MA841 A87410V2G WIN RTC	5B20L46267				●	
4	MBL80TJ MA841 A87410V2G NOK RTC	5B20L46302				●	
4	MBL80TJ MA841 A87410UMA WIN RTC	5B20L46266				●	
4	MBL80TJ MA841 A87410UMA NOK RTC	5B20L46278				●	
4	MBL80TJ MA841 A67310UMA WIN RTC	5B20L46262				●	
4	MBL80TJ MA841 A67310UMA NOK RTC	5B20L46303				●	
4	MBL80TJ MA841 A47210V2G WIN RTC	5B20L46275				●	
4	MBL80TJ MA841 A47210V2G NOK RTC	5B20L46292				●	
4	MBL80TJ MA841 E27110V2G WIN RTC	5B20L46296				●	
4	MBL80TJ MA841 E27110V2G NOK RTC	5B20L46283				●	
4	MBL80TJ MA841 E17010V2G WIN RTC	5B20L46293				●	
4	MBL80TJ MA841 E17010V2G NOK RTC	5B20L46300				●	
4	MBL80TJ MA841 E17010UMA WIN RTC	5B20L46264				●	
4	MBL80TJ MA841 E17010UMA NOK RTC	5B20L46281				●	
4	MBL80TJ MA841 A67310V2G WIN RTC	5B20L46271				●	
4	MBL80TJ MA841 A67310V2G NOK RTC	5B20L46297				●	
4	MBL80TJ MA841 E27110UMA WIN RTC	5B20L46258				●	
4	MBL80TJ MA841 E27110UMA NOK RTC	5B20L46270				●	
4	MBL80TJ MA841 A47210UMA WIN RTC	5B20L46291				●	
4	MBL80TJ MA841 A47210UMA NOK RTC	5B20L46290				●	

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL	
4	MBL80V7 A67310 UMANORAM WINRTC	5B20L72719	N				•	
4	MBL80V7 A67310 UMANORAM NOKRTC	5B20L72715					•	
4	MBL80V7 E17010 UMANORAM WINRTC	5B20L72717					•	
4	MBL80V7 E17010 UMANORAM NOKRTC	5B20L72723					•	
4	MBL80V7 A87410 UMANORAM WINRTC	5B20L72714					•	
4	MBL80V7 A87410 UMANORAM NOKRTC	5B20L72720					•	
4	MBL80V7 A47210 UMANORAM WINRTC	5B20L72725					•	
4	MBL80V7 A47210 UMANORAM NOKRTC	5B20L72724					•	
4	MBL80V7 E27110 UMANORAM WINRTC	5B20L72722					•	
4	MBL80V7 E27110 UMANORAM NOKRTC	5B20L72718					•	
5	HDD, 250G 5400rpm, WD MN500S-2, WD WD2500LPCX-24VHAT0	5H20J35763			•	•	•	•
5	HDD, 500G 5400rpm, Seagate Yarra (1D), ST500LT012 6G 7mm 5.4K 500G HDD	16200383			•	•	•	•
5	HDD, 500G 5400rpm, WD MN500S-2, WD WD5000LPCX-24VHAT0	5H20J35762			•	•	•	•
5	HDD, 500G 5400rpm, Toshiba Aquarius B slim, MQ01ABF050 6G 7mm 5.4K 500G HDD	16200433			•	•	•	•
5	HDD, 500G 5400rpm, HGST Jaguar B7 R, HTS545050A7E660 6G 7mm 5.4K 500G HDD	5H20H14223			•	•	•	•
5	HDD, 1T 5400rpm, Seagate M8 BP2, ST1000LM024 6G 9.5mm 5.4K 1T HDD	16200385			•	•	•	•
5	HDD, 1T 5400rpm, WD ML500M, WD10JPCX-24UE4T0 6G 9.5mm 5.4K 1T HDD	16200393			•	•	•	•
5	HDD, 1T 5400rpm, Toshiba Aquarius B, TSB MQ01ABD100 6G 9.5mm 5.4K 1T HDD	16200429			•	•	•	•
5	HDD, 1T 5400rpm, HGST Jaguar B, HTS541010A9E660 6G 9.5mm 5.4K 1T HDD	16200400			•	•	•	•
5	HDD, 2TB 5400RPM(9.5mm), Seagate M9TBP,ST2000LM003 9.5mm 5400rpm 2T HDD	5H20K10149			•	•	•	•
5	HDD, 500G+8G Hybrid, Seagate KahunaR 8G, ST500LM000 6G 7mm 500G+8G SSHD	5H20H24608			•	•	•	•
5	HDD, 500G+8G Hybrid, Toshiba P2.0, Toshiba MQ02ABF050H 7mm 5.4k 500GB+8GB SSHD	5H20H12631			•	•	•	•
5	SSD, 128G 2.5" SATA(low cost), Samsung(CM871)Plan EOL @2016/7Samsung MZYL128HCHP 2.5" 5mm 128GB SSD	5SD0H45117			•	•	•	•
5	SSD, 128G 2.5" SATA(low cost), Samsung(CM871a) TBD	TBD			•	•	•	•
5	SSD, 128G 2.5" SATA(low cost), Hynix(SC300), Hynix HFS128G3BMND-3210A	5SD0K44056			•	•	•	•
5	SSD, 256G 2.5" SATA, Samsung(CM871a), MZYT256HDHP-000L2 2.5" 256G 5mm SSD	5SD0L14644				•		
5	SSD, 256G 2.5" SATA, Liteon(CV3), CV3-DE256 2.5" 5mm 256G SSD	5SD0L02316				•		
6	Thermal Module UMA L80T6	5H40L45765			•	•		
6	THERMAL MODULE L80TJ DIS	5H40L46288					•	
6	THERMAL MODULE L80TJ UMA	5H40L46261					•	•

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/ 110 Touch-15ACL

Table 5. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
7	WLAN, 1x1AC+BT4.0, Intel(except for Egypt/ Russia/Indonesia), Intel 3165 1x1AC+BT PCIE M.2 WLAN	SW10H24486	N	•	•		
7	WLAN, 1x1AC+BT4.0, Cybertan, Cbt RTL8821AE 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11648		•	•	•	•
7	WLAN, 1x1AC+BT4.0, Liteon, Ltn NFA435 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11641		•	•	•	•
8	ODD BOARD L80T7 W/FFC	5C50L46237	*		•	•	•
9	DUMMY ODD L80T6 BLACK	5M20L45743		•			
9	DUMMY ODD BLACK L80T7	5M20L46207			•	•	•
9	ODD, HLDS GUEON 9.0mm Slim Tray Rambo ODD	5DX0J46488		•	•	•	•
9	ODD, PLDS DA-8AESH 9.0 Rambo mm Slim Tray Rambo ODD	5DX0L08424		•	•	•	•
9	ODD, TSST SU-228HB 9.0mm Slim Tray Rambo ODD	5DX0L08425		•	•	•	•
9	ODD, PLDS DA-8A6SH 9.0mm Slim Tray Rambo ODD	5DX0F86404		•	•	•	
9	ODD, TSST SU-228GB 9.0 Rambo ODD	5DX0H14227		•	•	•	
10	Battery, 3cell 24Wh Li-Cylinder, Sanyo, N110 SY L15S3A02 10.8V24Wh3cell bty	5B10L04215		•	•	•	•
10	Battery, 3cell 24Wh Li-Cylinder, LG, N110 LG L15L3A03 10.8V24Wh3cell bty	5B10L04167		•	•	•	•
10	Battery, 3cell 24Wh Li-Cylinder, Celxpert, N110 CP/L L15C3A03 10.8V24Wh3cell bty	5B10L04166	•	•	•	•	
11	Lower Case ASM L80T6 BLACK TEX	5CB0L45757	•				
11	Lower Case L80T7 15T BLK TEX	5CB0L46244		•			
11	Lower Case L80TJ 15T BLK TEX	5CB0L46269			•	•	
12	FAN L80QQ	5F10K25451			•	•	
13	RAM, Samsung, M471B5173EB0-YK0 4GB DDR3L 1600	5M30G18425			•	•	
13	RAM, SK hynix, HMT451S6DFR8A-PB 4GB DDR3L 1600	5M30K59780			•	•	
13	RAM, Ramaxel(Micron), RMT3170MN68F9F-1600 4GB DDR3L 1600	5M30G75129	N			•	
13	RAM, Micron, MT8KTF51264HZ-1G9P1 4GB DDR3L 1600	5M30K59782				•	•
13	RAM, Ramaxel(Micron), RMT3170MP68F9F-1600 4GB DDR3L 1600	5M30L20980				•	•
13	RAM, Samsung, M471B1G73EB0-YK0 8GB DDR3L 1600	5M30G18424				•	•
13	RAM, SK hynix, HMT41GS6DFR8A-PB 8GB DDR3L 1600	5M30K59783				•	•
13	RAM, Ramaxel(Micron), RMT3160MN68FAF-1600 8GB DDR3L 1600	5M30J33427				•	
13	RAM, Micron, MT16KTF1G64HZ-1G9P1 8GB DDR3L 1600	5M30K59785				•	•
13	RAM, Ramaxel(Micron), RMT3160MP68FAF-1600 8GB DDR3L 1600	5M30L20981				•	•

// Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

Table 5. Parts list—Overall (continued)


No.	FRU	FRU no.	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
13	RAM, M471B5674EB0-YK0 2GB DDR3L 1600	5M30K59779	N				•
13	RAM, HMT425S6CFR6A-PB 2GB DDR3L 1600	5M30G99881					•
13	RAM, RMT3190MN76F8F-1600	5M30J33428					•
13	RAM, MT4KTF25664HZ-1G9P1 2GB DDR3L 1600	5M30K59781					•
—	AC adapter (see “AC adapters” on page 74).						

LCD FRUs

In Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL, there are following types of LCDs.

- “14.0-in. HD LED”


Lenovo ideapad 110-14IBR

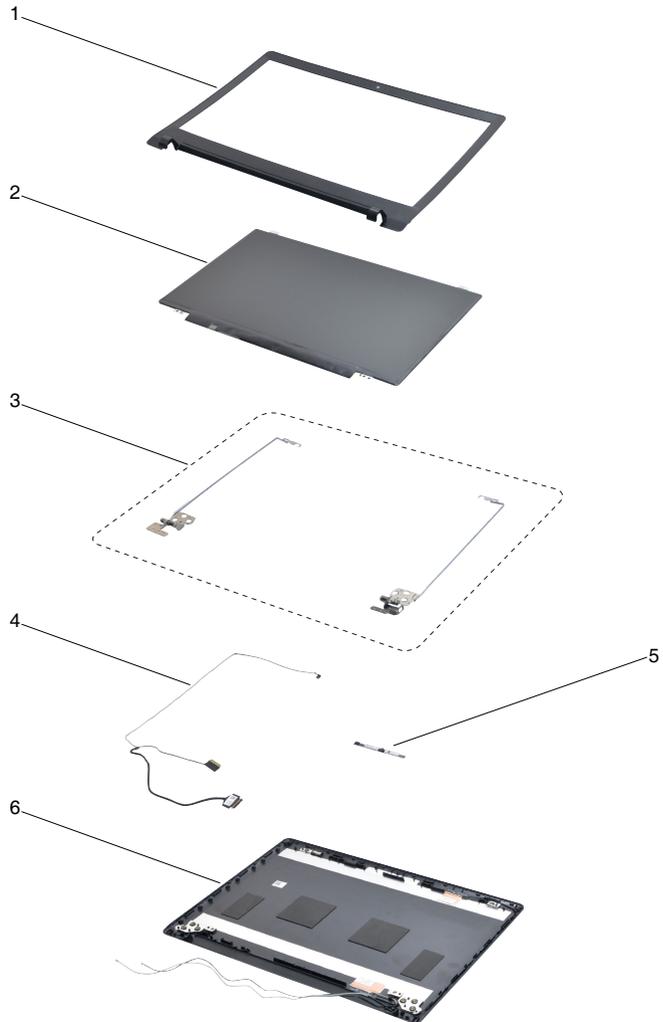

// *Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL*
Hardware Maintenance Manual

- “15.6-in. HD LED”

**Lenovo ideapad 110-15IBR/Lenovo ideapad 110-15ACL/
Lenovo ideapad 110 Touch-15ACL**

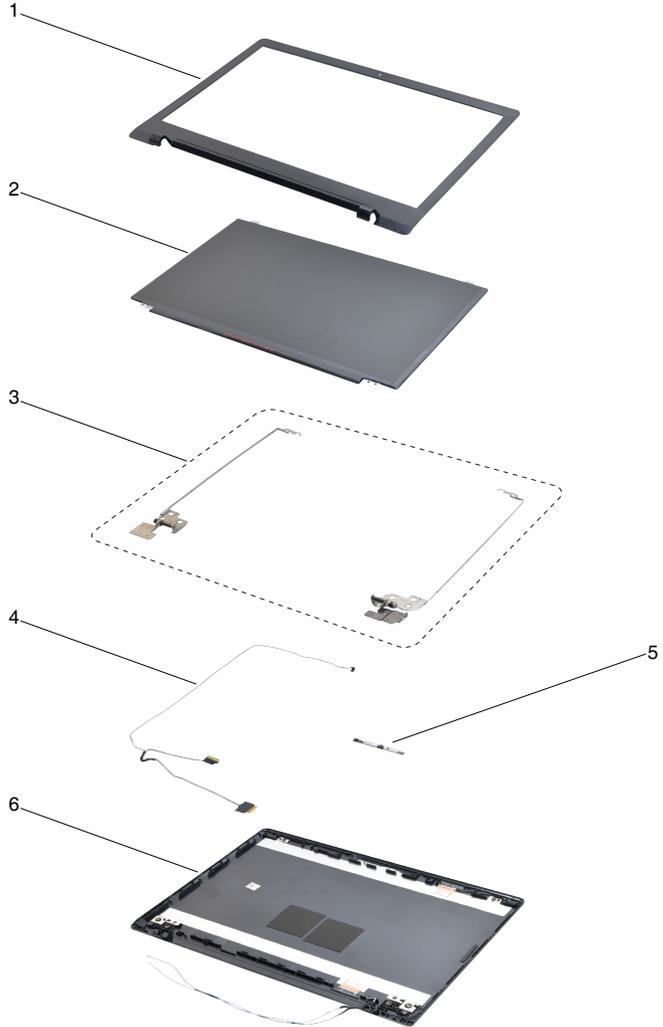

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/ 110 Touch-15ACL

Table 6. Parts list—LCD FRUs

No.	FRU	FRU no.	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
1	LCD BEZEL L80T6 BLACK TEX MAGNET	5B30L45780	N	•			
1	LCD BEZEL L80T7 TEX W/MAGNET	5B30L46234			•	•	•
2	Panel, HD-G eDP TN 3.0t 14", AUO B140XTN02.D 2A HD G S NB	5D10H13021		•			
2	Panel, HD-G eDP TN 3.0t 14", IN N140BGA-EB3 HDT G S NB	5D10K85754		•			
2	Panel, HD-G eDP TN 3.0t 14", BO NT140WHM-N31 HDT G S NB	5D10K81083		•			
2	Panel, HD-G eDP TN 3.0t 14", LG LP140WHU-TPG1 HDT G S NB	5D10K81460		•			
2	Panel, HD-G eDP TN 3.0t 14", IV M140NWR6-R0 HDT G S NB	5D10K81642		•			
2	Panel, HD-G eDP TN 3.0t 14", SD LTN140AT39-L01 HDT G S NB	5D10K81457		•			
2	Panel, HD-G eDP 3.2t 15", AU B156XTN07.0 1A HDT G S NB	5D10K90419			•	•	
2	Panel, HD-G Edp 3.2t 15", INX N156BGA-EB2 HDT G S NB	5D10K81084			•	•	
2	Panel, HD-G eDP 3.2t 15", BO NT156WHM-N32 V8 HDT G S NB	5D10K81087			•	•	
2	Panel, HD-G eDP 3.2t 15", SD LTN156AT38-L02 HDT G S NB	5D10K81459			•	•	
2	Panel, HD-G eDP 3.2t 15", LG LP156WHU-TPG1 HDT G S NB	5D10K81458			•	•	
2	Panel, AU B156XTK01.0 HDT G S NB(T)	5D10K81094					•
2	Panel, IN N156BGN-E41 HDT G S NB(T)	5D10K81098					•
3	HINGE L+R L80T6	5H50L45747			•		
3	HINGE L+R 15T L80T7	5H50L46245				•	•
4	EDP CABLE L80T6	5C10L45753			•		
4	EDP CABLE 15T L80T7	5C10L46227				•	•
4	EDP CABLE L80V7	5C10L72721					•
5	CAMERA L80T6 0.3M W/O MIC	5C20L45731			•	•	•
6	LCD Cover L80T6 BK TEX W/ANTE EDP	5CB0L45741			•		
6	LCDCVR L80T7 TEXBLK W/ANT,EDPCABLE	5CB0L46228			•	•	
6	LCDCVR L80V7TEXBLK W/ANT,EDPCABLE	5CB0L72716					•

Miscellaneous parts

Table 8. Parts list—Miscellaneous parts

FRU	P/N	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
System miscellaneous parts:						
• (a)HDD BRACKET L80T6 7MM W/SPONGE	5B40L45770	N	•			
• (a)HDD BRACKET L80T6 9.5MM W/SPONGE	5B40L45760		•			
• (a)HDD BRACKET L80T7 7MM W/SPONGE	5B40L46230			•	•	•
• (a)HDD BRACKET L80T7 9.5MM W/SPONGE	5B40L46216			•	•	•
• (b)ODD BRACKET L80T6	5B40L45726		•	•	•	•
• (c)ODD BEZEL L80T6 BLACK	5B30L45756		•			
• (c)ODD BEZEL L80T7 15T	5B30L46250			•	•	•
• (*)SSD BRACKET 15T L80T7	5B40L46215			•	•	•
• (*)SSD BRACKET L80T6	5B40L45758		•			
Note: Italicized letters in parentheses are references to the exploded view in "Overall" on page 63.						

AC adapters

Table 9. Parts list—AC adapters

FRU	P/N	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
Adapter, 45W wall mount with round plug, Delta ADP-45DW AA 20V2.25A adapter	5A10H43620	*	•	•	•	
Adapter, 45W wall mount with round plug, Delta ADP-45DW JA 20V2.25A adapter	5A10H43623		•	•	•	
Adapter, 45W wall mount with round plug, Delta ADP-45DW BA 20V2.25A adapter	5A10H43630		•	•	•	•
Adapter, 45W wall mount with round plug, Delta ADP-45DW DA 20V2.25A adapter	5A10H43621		•	•	•	
Adapter, 45W wall mount with round plug, Delta ADP-45DW HA 20V2.25A adapter	5A10H43627		•	•	•	
Adapter, 45W wall mount with round plug, Delta ADP-45DW GA 20V2.25A adapter	5A10H43617		•	•	•	
Adapter, 45W wall mount with round plug, Delta ADP-45DW EA 20V2.25A adapter	5A10H43626		•	•	•	
Adapter, 45W wall mount with round plug, Delta ADP-45DW CA 20V2.25A adapter	5A10H43632		•	•	•	
Adapter, 45W wall mount with round plug, Delta ADP-45DW KA 20V2.25A adapter	5A10H43624		•	•	•	
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LN 20V2.25A adapter	5A10H42921		•	•	•	
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LG 20V2.25A adapter	5A10H42920		•	•	•	
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LL 20V2.25A adapter	5A10H42923		•	•	•	•
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LK 20V2.25A adapter	5A10H42917		•	•	•	
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LI 20V2.25A adapter	5A10H42926		•	•	•	

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/ 110 Touch-15ACL

Table 9. Parts list—AC adapters (continued)

FRU	P/N	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LR 20V2.25A adapter	5A10H42919		•	•	•	
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LS 20V2.25A adapter	5A10H42922		•	•	•	
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LU 20V2.25A adapter	5A10H42925		•	•	•	
Adapter, 45W wall mount with round plug, Liteon PA-1450-55LZ 20V2.25A adapter	5A10H42918		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCA 20V2.25A adapter	5A10H43629		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCB 20V2.25A adapter	5A10H43618		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCC 20V2.25A adapter	5A10H43625		•	•	•	•
Adapter, 45W wall mount with round plug, Chicony ADL45WCD 20V2.25A adapter	5A10H43631		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCK 20V2.25A adapter	5A10H43619		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCE 20V2.25A adapter	5A10H43633		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCF 20V2.25A adapter	5A10H43622		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCG 20V2.25A adapter	5A10H43628		•	•	•	
Adapter, 45W wall mount with round plug, Chicony ADL45WCH 20V2.25A adapter	5A10H43616	*	•	•	•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGCG2A 20V3.25A adapter	5A10K78762				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGG2A 20V3.25A adapter	5A10K78739				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGU2A 20V3.25A adapter	5A10K78742				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGK2A 20V3.25A adapter	5A10K78743				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGI2A 20V3.25A adapter	5A10K78759				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGR2A 20V3.25A adapter	5A10K78748				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGA2A 20V3.25A adapter	5A10K78741				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGE2A 20V3.25A adapter	5A10K78753				•	
Adapter, 65W wall mount with round plug, Delta ADLX65CDGB2A 20V3.25A adapter	5A10K78754				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGC2A 20V3.25A adapter	5A10K78736				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGG2A 20V3.25A adapter	5A10K78749				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGU2A 20V3.25A adapter	5A10K78745				•	

Lenovo ideapad 110-14IBR/110-15IBR/110-15ACL/110 Touch-15ACL Hardware Maintenance Manual

FRU	P/N	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGK2A 20V3.25A adapter	5A10K78750				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGI2A 20V3.25A adapter	5A10K78740				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGR2A 20V3.25A adapter	5A10K78746				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGA2A 20V3.25A adapter	5A10K78758				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGE2A 20V3.25A adapter	5A10K78752				•	
Adapter, 65W wall mount with round plug, Liteon ADLX65CLGB2A 20V3.25A adapter	5A10K78755				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGC2A 20V3.25A adapter	5A10K78744				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGG2A 20V3.25A adapter	5A10K78756	*			•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGU2A 20V3.25A adapter	5A10K78761				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGK2A 20V3.25A adapter	5A10K78757				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGI2A 20V3.25A adapter	5A10K78760				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGR2A 20V3.25A adapter	5A10K78747				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGA2A 20V3.25A adapter	5A10K78737				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGE2A 20V3.25A adapter	5A10K78751				•	
Adapter, 65W wall mount with round plug, Chicony ADLX65CCGB2A 20V3.25A adapter	5A10K78738				•	

Screws

Table 10. Parts list—Screws

FRU	P/N	CRU ID.	ideapad 110-14IBR	ideapad 110-15IBR	ideapad 110-15ACL	ideapad 110 Touch-15ACL
SCREW L80T6 MM 2.5D 2.5L K 8.0D NI	5S10L45749		•	•	•	•
SCREW L80T6 MM 2.0D 5.9L K 4.6D ZK	5S10L45752		•	•	•	•
ViennaSCREW M M3.0D3.0L K 4.0D0.4T	90204955		•	•	•	•
AILZA Screw M M 2.0D 2.5L K 5D	90203988	N	•	•	•	•
AILZA Screw M M 2 2.0D 2L K 7D	90203987		•	•	•	•
ACLU1 ScrewPanel-A/MB-D/IO BD-D	90205117		•	•	•	•
SCREW L MM2D5LK4.6D ZKNL CR3+	5S10K25418			•	•	•

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

The following terms are trademarks or registered trademarks of Lenovo in the United States, other countries, or both.

Lenovo
OneKey
ideapad

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, products, or service names may be trademarks or service marks of others.