

# Safety Information

# LJ2208/LJ2208W/M7208/M7208W

## Important

The safety information and precautions contained herein are provided for your safety and that of others, and to prevent damage to your equipment. Be sure to read this guide carefully before operating your printer or performing any maintenance work. Lenovo (Beijing) Co., Ltd shall not be responsible for any damage resulting from the operation or maintenance of this product in any way other than as instructed in this guide.

Before using this product, be sure to read and understand all instructions in this guide. Keep this guide in a safe place for future reference.

Contents of this guide and the specifications for the product are subject to change without notice.

## Power Source

120V~ 60Hz 7 A

Be sure to connect the power cord to a power source as above.

## Items you are prohibited from replicating or printing illegally

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

- \* Bank notes
- \* Revenue stamps
- \* Bonds or other certificates of indebtedness
- \* Bank books
- \* Documents or drafts relating to mandatory military service
- \* Stocks
- \* Bank drafts
- \* Checks
- \* Passports
- \* Driver's license
- \* Welfare documents
- \* Immigration documents
- \* Checks or bank drafts issued by government agencies
- \* Identity documents
- \* Emblems or insignias
- \* Stamps (canceled or uncanceled)

Use of copyrighted materials: Some copyrighted materials may be partially reproduced under the principle of "fair use". Making multiple copies, however, would constitute improper use. All artworks are protected under the same standards as copyrighted materials.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

## Important safety symbols

### Warning

Indicates a potentially hazardous situation, which, if instructions are not followed, could result in death or serious injury.

### Caution

Indicates a potentially hazardous situation, which, if instructions are not followed, may result in minor or moderate injury, or loss of property.

## Environments Where the Machine Can be Used

Place this machine on a level and sturdy surface where it will not be subjected to significant vibration and movement. This machine should be placed near a standard grounded power outlet. Set up and use this machine in a location where ambient temperature is within 10 °C - 32 °C and humidity is within 15% - 80% with no condensation.

### Warning

Do not expose this machine to direct sunlight, extreme heat, open flames, corrosive gases, humidity, or dust. Otherwise, it could cause electric shock, short circuit, fire, and/or equipment damage or malfunction.

Do not place small objects, or containers holding water or any other liquids, on or close to the machine. Fire or electric shock could result from spillage or if such objects or substances fall inside the printer.

Do not place the machine where its vents and grilles may be covered or obstructed.

The vents and grilles are for ventilation purposes. Obstructing these openings could result in internal overheating or fire. When choosing a location for the printer, be sure to consider the space required for the paper feed tray and power cord plug.

Please note the following:

- \* Keep a gap of at least 100 mm between the vents and the wall.
- \* Place the machine on a stable, level and sturdy surface where it will not be subjected to significant vibration and movement.

### Caution

Do not place heavy objects on the printer. Doing so can cause it to topple over, possibly resulting in injury or equipment damage. Important Note: If you have young children around, be sure to place the machine in a safe location out of their reach.

Do not place any object in front of the machine where it may obstruct the ejecting paper. Doing so could cause a paper jam.

Keep the machine in an area that is within its optimum environmental conditions. Operating the machine in an environment that is outside the recommended ranges of humidity and temperature can cause an electrical fire hazard. Keep the area around the socket free of dust. Accumulated dust can become an electrical fire hazard.

Make sure the room in which you are using this machine is regularly ventilated and spacious. Operating the machine in a poorly ventilated room for an extended period of time, or printing in large quantities, could compromise the air quality in the room and have negative impacts on your health. Ventilation is especially important if the machine is heavily used.

## Operating this printer

### Warning

Be sure to locate the printer as close as possible to a wall outlet. This will allow easy disconnection of the power cord in the event of an emergency.

If the printer emits smoke or odors, or if it behaves unusually, disconnect the power cord plug from the wall outlet immediately. Then contact your service representative and report the problem. Do not use the printer. Doing so could result in fire or electric shock.

If metal objects, or water or other fluids fall inside the printer, disconnect the power cord plug from the wall outlet immediately. Then contact your service representative and report the problem. Do not use the printer. Doing so could result in fire or electric shock.

Do not touch the printer if a lightning strike occurs in the immediate vicinity. Doing so could result in an electric shock.

The following explains the warning messages on the plastic bag used in this product's packaging.

- \* Keep the polythene materials (bags, etc.) supplied with the printer away from babies and small children at all times. Suffocation could result if polythene materials are brought into contact with the mouth or nose.

Do not use any type of spray to clean the inside or outside of the printer. Doing so could result in fire or electric shock. Refer to the section on printer maintenance in the User Guide for instructions on cleaning the printer.

### Caution

Be careful not to trap your fingers when opening or closing the cover of the printer.

Before moving the printer, unplug the power cord from the wall outlet, and disconnect the power cord from the printer. While moving the printer, take care not to damage the power cord. Doing so could result in fire or electric shock.

Do not forcibly remove paper from the printer while printing is in progress. Otherwise, it could damage the printer.

Exercise caution when changing paper or removing jammed paper. Fresh papers may have sharp edges and could cause cuts.

## Handling internal components

### Warning

Do not remove any covers or screws. Inside the printer are high voltage components that could cause electric shocks and laser components that could cause blindness. Contact your sales or service representative if any of the printer's internal components require maintenance, adjustment, or repair.

Do not attempt to disassemble or modify the printer yourself. Doing so risks burns and electric shock.

Important Note: Exposure to the laser components inside this printer risks blindness.

### Caution

Some of the printer's internal components can get very hot. For this reason, take care when removing jammed paper. Not doing so could result in burns.

Recommendation: Always allow time for the main unit to fully cool before attempting to remove jammed paper.

Be careful not to trap or hurt your fingers when removing jammed paper.

Be careful not to trap or hurt your fingers when loading fresh paper.

## Handling power cords and power cord plugs

### Warning

Do not touch the prongs of the power cord plug with any metal object. Doing so constitutes a fire and electric shock hazard.

Do not use frequencies outside of the specified range. Doing so could result in fire or electric shock.

Do not use power sources that do not meet the specifications stated in this guide. Doing so could result in fire or electric shock.

Do not use multi-socket adaptors. Doing so could result in fire or electric shock.

Do not use extension cords. Doing so could result in fire or electric shock.

Do not use power cords that are damaged, broken, or modified. Also, do not use power cords that have been trapped under heavy objects, pulled hard, or bent severely. Doing so could result in fire or electric shock.

It is dangerous to handle the power cord plug with wet hands. Doing so could result in electric shock.

Do not use a power cord if it is damaged or if its inner wires are exposed or broken. In these situations, contact your service representative for a power cord replacement. Use of damaged power cords could result in fire or electric shock.

If the plug does not fit easily into the power outlet, do not insert the plug forcibly. Doing so could result in electric shock. Contact a licensed electrician to replace the power outlet.

### Caution

Be sure to disconnect the power cord from the wall outlet at least once a year and check for the following conditions:

- \* The power cord's inner wires are exposed, broken, etc.
- \* The power cord's coating has a crack or dent.
- \* When bending the power cord, the power turns off and on.
- \* Part of the power cord becomes hot.
- \* The power cord is damaged.

If any of the above conditions exists, do not use the power cord and consult your dealer or service representative. Use of such power cords could result in fire or electric shock.

Be sure to disconnect the plug from the wall outlet at least once a year and check for the following conditions:

- \* There are burn marks on the plug.
- \* The prongs on the plug are deformed.

If any of the above conditions exists, do not use the power cord and consult your dealer or service representative. Use of such power cords could result in fire or electric shock.

Be sure to connect the power cord to a grounded power outlet. Failing to do so could result in fire or electric shock

Be sure to disconnect the plug from the wall outlet and clean the prongs and the area around the prongs at least once a year. Allowing dust to build up on the plug could result in fire.

Be sure to push the power cord plug fully into the wall outlet. Partially inserted plugs can create an unstable connection and cause unsafe buildup of heat.

If the printer is not going to be used for several days or longer at a time, disconnect its power cord from the wall outlet.

When disconnecting the power cord from the wall outlet, always pull the plug, not the cord. Pulling the cord can damage the power cord. Use of damaged power cords could result in fire or electric shock.

When performing maintenance on the printer, always disconnect the power cord from the wall outlet.

Do not allow pets to chew on the power cord. Doing so could result in fire or electric shock, and risks injury to you and your pets.

Ensure that the power cord is secured properly and does not present a tripping risk.

## Handling the consumables

### Warning

Do not use a vacuum cleaner to remove spilled toner (including used toner). The absorbed toner dust could ignite due to electrical contact flickering inside the vacuum cleaner, and result in a fire or explosion. However, it is possible to use a vacuum cleaner that is explosion-proof and dust ignition-proof.

If toner is spilled on the floor, remove the spilled toner slowly using a wet cloth, so that the toner is not scattered.

Do not incinerate toner (new or used) or toner containers. Doing so risks burns. Toner dust might ignite when exposed to an open flame.

Do not store toner (new or used) or toner containers anywhere near naked flames. Doing so risks fire and burns. Toner dust might ignite when exposed to an open flame.

The following explains the warning messages on the plastic bag used in this product's packaging.

- \* Keep the polythene materials (bags, etc.) supplied with the printer away from babies and small children at all times.
- \* Suffocation could result if polythene materials are brought into contact with the mouth or nose.

### Caution

If toner or used toner is inhaled, gargle with plenty of water and go to a place with fresh air. Consult a doctor if necessary.

When removing jammed paper or replacing toner, avoid getting toner (new or used) on your clothing. If toner comes into contact with your clothing, wash the stained area with cold water. Hot water will set the toner into the fabric and make removing the stain impossible.

If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor immediately.

When removing jammed paper or replacing toner, avoid getting toner (new or used) on your skin. If toner comes into contact with your skin, wash the affected area thoroughly with soap and water.

Do not crush or squeeze toner containers. Doing so can cause toner spillage, possibly resulting in dirtying of skin, clothing, and floor, and accidental ingestion.

Store toner (new or used), toner containers, and components that have been in contact with toner out of reach of children.


All Lenovo products meet high quality and functionality standards. It is recommended that you use only original Lenovo consumables.

## Safety labels in this printer

### Locations of Warning and Caution labels

Warning and Caution labels, and sealed components with engraved markings, are found in the following locations in this printer. For your safety, operate the printer only as instructed.

Location(s):

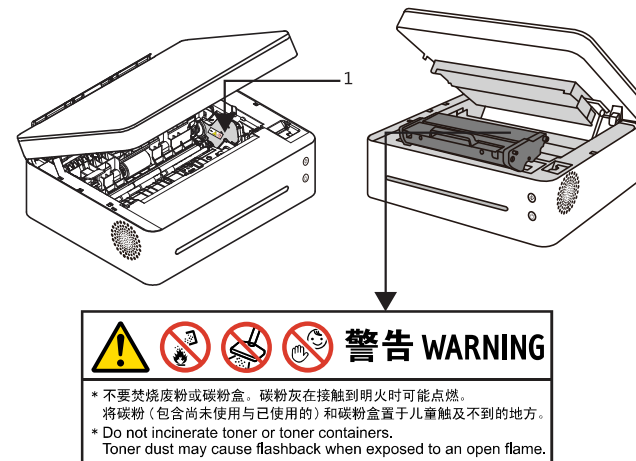

Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame.

Store toner (both new and used) and toner containers out of reach of children.

Do not incinerate used toner or toner containers.

Toner dust could ignite when exposed to an open flame.

Do not use a vacuum cleaner to remove spilled toner (including used toner). Due to electrical contact flickering inside the vacuum cleaner, the absorbed toner dust could ignite and result in a fire or explosion. However, it is possible to use a vacuum cleaner that is dust ignition-proof. If toner is spilled on the floor, remove the spilled toner slowly using a wet cloth, so that the toner is not scattered.

Store toner (new or used), toner containers, and components that have been in contact with toner out of reach of children.

Warnings and Precautions



Do not touch parts with the above label. The inside of the printer could be very hot. Position of the label: The inner right side of the printer.

## Laser Safety

### CDRH Regulations

This machine complies with the requirements of IEC60825-1:2014 for class 1 laser product. This machine contains AlGaAs laser diode, 11-milliwatt, 775-800 nanometer wavelength for each emitter. The beam divergence angle is 25degrees (minimum) and 35 degrees (maximum) in the vertical direction, and 7 degrees (minimum) and 12 degrees (maximum) in the horizontal direction, and laser beams are generated in Continuous Wave (CW) mode.

### Caution

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

## Notes to USA Users of FCC Requirements

### Part 15 of the FCC Rules

#### Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio /TV technician for help.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

### Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.