





Installation is complete.

DI-000-VRCS2-02A-X1-BETA

#### WARNINGS AND CAUTIONS:

to release

To be installed and/or used in accordance with appropriate electrical codes and regulations.

at a time to attach

- If you are unsure about any part of these instructions, consult an electrician.
- Vizia RF +™ electronic combo switches are not compatible with standard 3-way or 4-way switches. They must be used with compatible Vizia RF +™ controllers.

#### WARNINGS AND CAUTIONS:

- Becommended minimum wall box depth is 2-1/2"
- Disconnect power at circuit breaker or fuse when servicing, installing or removing fixture.
- Use this device only with copper or copper clad wire.
- **INSTALLING YOUR SWITCH** Single Pole Wiring Application: Testing your Switch prior to mounting Step 5 Step 4 INTRODUCTION in wall box: **NOTE:** Use check boxes  $|\sqrt{}|$  when Steps are completed. Leviton's Vizia RF +<sup>™</sup> Z-Wave<sup>®</sup> components are designed to communicate 0 with each other via Radio Frequency (RF) to provide remote control of WARNING: TO AVOID FIRE SHOCK OR DEATH; TURN 0 Step 1 your lighting. Using RF technology allows Leviton to provide the greatest OFF POWER at circuit breaker or fuse and test that power is off signal integrity possible. Each module in Leviton's Vizia RF +™ component **Tornillo terminal Negro** before wiring! line is a Z-Wave® enabled device. In a Z-Wave® network, each device is marcado (**B**K) designed to act as a router. These routers will re-transmit the RF signal from one device to another until the intended device is reached. This ensures that the signal is received by its intended device by routing the Tornillo terminal Amarillo/Rojo signal around obstacles and radio dead spots. The Scene Capable Combo marcado (YL/RD) ио <u>110</u> и и 110 ио <u>110</u> и <u>110</u> ио <u>17</u> и <u>110</u> ио <u>17</u> Switch is compatible with any Z-Wave® enabled network, regardless of OFF Etiqueta terminal: the manufacturer and can also be used with other devices displaying the  $\bigcirc$ Z-Wave® logo. Sólo use esta terminal para aplicaciones de 3-Vías o más. CAUTION:  $\cap$ Para aplicaciones unipolares, · Position all wires to provide room in outlet wall box for device. Identifying your wiring application (most common): Step 2 Tc Remember to exercise common sense when using the Timer features of • Ensure that the word "TOP" is facing up on device strap. no quite esta etiqueta. Ro vour Remote - especially when scheduling unattended devices. There Single Pole 0 0 · Partially screw in mounting screws in wall box mounting holes. can be some unexpected consequences if not used with care. DO NOT 1. Line (Hot) **USE** the remote for the control of high power heating appliances such NOTE: Dress wires with a bend as shown in diagram in order to NOTE: If the wiring in your wall box does 2. Neutral as portable heaters. This device will not control lighting that is used with relieve stress when mounting device. not resemble any of these configurations, 3. Ground Interruptor electronic low-voltage and high frequency power supply transformers, nor consult a qualified electrician. 4. Load 1 high pressure discharge lamps (HID lighting). This includes mercury-vapor, ô 5. Load 2 sodium vapor and metal halide lamps. Fase (Negro) WH BK · Restore power at circuit breaker or fuse. FEATURES → Verde a tierra Press pad until locator light is OFF. Lights Preparing and connecting wires: Step 3 Switch ON/OFF should turn ON. RD YL/RD Negro If lights do not turn ON, refer to the Scene Capable Línea 0 TROUBLESHOOTING section. ON/OFF LED 120 VCA, 60Hz Two way communication Carga Sólo use esta terminal para aplicaciones de 3-Vías o más. RF reliability 5/8" Para aplicaciones unipolares no quite esta etiqueta Strip Gage Ease of installation – No new wiring (1.6 cm) Blanco (measure bare Compatible with other Z-Wave® enabled devices Cut wire here) Step 6 Switch Mounting: (if necessary) Neutro (Blanco) TURN OFF POWER AT CIRCUIT BREAKER OR FUSE. Tools needed to install your Switch Slotted/Phillips Screwdriver Electrical Tape Pliers · Make sure that the ends of the wires from the wall box are WIRING COMBO SWITCH: Pencil Cutters Ruler straight (cut if necessary). Connect wires per WIRING DIAGRAM as follows: · Remove insulation from each wire in the wall box as shown. Changing the color of your Switch: · Single-Pole Application, go to Step 4. · Green or bare copper wire in wall box to Green switch lead Your switch includes three color options. The switch ships with the White Line Hot wall box wire to Black switch lead. For non-standard wiring applications, frame attached. To change color of frame, proceed as follows: Line Neutral wall box wire to White dimmer lead. refer to Wire Nut and Connector Size Chart · Load 1 wall box wire to Red switch lead. · Load 2 wall box wire to Blue switch lead. WIRE CONNECTOR / # OF COND. COMBINATION CHART Installation may now be completed by tightening Proceed to Step 5. mounting screws into wall box. attach wallplate. 1 - #12 w/ 1 to 3 #14. #16 or #18 2 - #12 w/ 1 or 2 #16 or #18 **Restore Power:** Push in Line up tabs and Step 7 1 - #14 w/ 1 to 4 #16 or #18 side at tab press in sides one Restore power at circuit breaker or fuse. 2 - #14 w/ 1 to 3 #16 or #18



### NOTES:

- If using a non-Leviton Programmer/Controller, refer to the Programmer/Controller instruction sheet for Including a device.
- If using VRCPG install checklist go directly to step B.
- A) If using a Leviton Z-Wave® Programmer/Controller, Cat. No. VRCPG, press the Menu button and scroll down to System Setup. Press the center button to select System Setup Menu. Choose Advanced Settings. Press the center button to select Network.

Including Combo Switch into Z-Wave® Network:

- B) Press and hold both buttons until the locator LED's turn amber. Release buttons and locator LED's should blink amber. LED's will continue to flash once every second.
- C) While standing close to the combo switch (approximately 1 foot), press the center button to <Include> device in the network. Device will include as a controller.

**NOTE:** This is the first step of the inclusion process. Once your combo switch has been included as a controller, next include each switch as a standard switch device following steps D-F below. **NOTE:** Only one device may be included at a time. **DO NOT** put multiple devices into the Inclusion mode at any time.

D) While the Programmer/Controller is in the Inclusion mode and the Locator LED is ON on the switch, press the push pad to turn on the switch. The Programmer/Controller will verify inclusion and the Locator LED will turn OFF.

If the switch is flashing Amber while in the Inclusion mode, the Programmer/Controller is still trying to communicate with the switch. Wait until the device stops flashing, then press the push pad. **NOTE:** If the Locator LED on the switch turns solid Red while including, there has been a communication error. Refer to Troubleshooting section.

E) The Primary Programmer/Controller will assign a node ID number (Name) for each switch in the device.


NOTE: This ID number (Name) will be stored in the controller to be used for future reference.

NOTE: You may name or edit your device at this time.

### F) The switch is now installed in the network.

**NOTE:** If the switch has been successfully Included in the network and the user tries to Include it again without first excluding it from the network, the switch will retain the first node ID it had received and ignore the second.

Programmer/Controller Cat. No. VRCPG

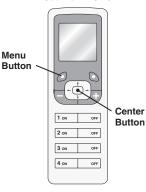

## Step 8 cont'd

Programmer/Controller Cat. No. VRCPG



**NOTE:** Programmer/Controller must be in close proximity to switch when including in the network.

# Step 9 Excluding Switch from Z-Wave<sup>®</sup> Network:

**NOTE:** It is very important to accurately Exclude devices from the network when moving or removing a device from a Z-Wave<sup>®</sup> network. This ensures that all information has been removed from your Primary Programmer/ Controller's information table and is not counted on to be part of the mesh network.

- A) If using a Leviton Z-Wave® Programmer/Controller, Cat. No. VRCPG, press the Menu button and scroll down to System Setup. Press the center button to select System Setup Menu. Choose Advanced Settings. Press the center button to select Network.
- B) While standing close to the switch (approximately 1 foot), press the center button to <Exclude> device from the network.
- C) While the Programmer/Controller is in the Exclusion mode and the locator LED is ON on the combo switch, press the push pad to turn on the switch. The Programmer/Controller will verify Exclusion and the locator LED will turn OFF.

If the switch is flashing Amber while in the Exclusion mode, the Programmer/Controller is still trying to communicate with the switch. Wait until the device stops flashing, then press the push pad.

#### Factory Default:

If your switch is not responding, or you are unable to control it after you have tried to Include/Exclude it multiple times, it may be necessary to reset the switch to its original factory settings. To accomplish this, proceed as follows:

Press and hold both buttons until the locator LED's turn amber. LED's will
continue to flash once every second. While standing close to the combo
switch (approximately 1 foot), press the center button to <Exclude>
device from network or primary remote.

**CAUTION:** SETTING A DEVICE TO A FACTORY DEFAULT DOES NOT EXCLUDE THAT DEVICE FROM A NETWORK. THE EXCLUSION PROCEDURE MUST STILL BE FOLLOWED TO REMOVE THE DEVICE FROM THE PRIMARY CONTROLLER'S INFORMATION TABLE. FAILURE TO DO SO MAY RESULT IN SYSTEM THAT IS SLOW TO RESPOND, OR MAY FAIL TO RESPOND TO SOME DEVICES.

# OPERATION


**NOTE:** The locator light will illuminate when the load is in the OFF position to facilitate access in the dark.

### Push Pad (Default settings)

**Turn ON from OFF position:** Tap – Lights turn ON.

**Turn OFF from ON position:** Tap – Lights turn OFF.

If there is a power outage, when the power is restored, the lights will return to the last setting before the power interruption. **Cleaning:** Clean with a damp cloth. **DO NOT** use chemical cleaners.

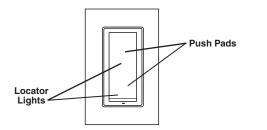

# TROUBLESHOOTING

- Lights Flickering
   Lamp has a bad connection.
- Wires not secured firmly with wire connectors of switch.
- Light does not turn ON and Locator LED does not turn ON
   Circuit breaker or fuse has tripped.
- Lamp is burned out.
- Lamp Neutral connection is not wired.

#### Remote does not operate lights

- Ensure that total wire length does not exceed 300 ft (90 m).

For additional information, contact Leviton's Techline at 1-800-824-3005 or visit Leviton's website at www.viziarfplus.com

Protected under U.S. Patent Number 6,388,399 and patents pending and licensed under U.S. Patents Numbers 5,905,442, and 5,982,103

## FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving Antenna.

- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/tv technician for help.

FCC CAUTION: Any changes or modifications not expressly approved by Leviton Manufacturing Co., Inc., could void the user's authority to operate the equipment.

© 2009 Leviton Mfg. Co., Inc.

DI-000-VRCS2-02A-X1-BETA

### LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option, if within such five year period the product is returned prepaid, with proof of purchase date, and a description of the problem to Leviton Manufacturing Co., Inc., Att: Quality Assurance Department, 201 North Service Road, Melville, N.Y. 11747. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overladed, musiced, or altered in any manner, or is not used under normal oft any contance with any labels or a particular purpose, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty is consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or otherwise.



S
Ž
Ο
Ĕ
A
Ö
Ĩ.
N.
S
Ľ
Ξ
Ē
X
Ë
2
<
F
E
4

œ
Z
0
F
5
ш

PART NUMBER DI-000-VRSC2-02A-X1-BETA	REV DESCRIPTION	N Instruction sheet
SPECIFICATIONS :		
Dimensions:         8.5" × 14"           * Thickness:         40 lb.           * Material:         410 lb.           * Finish:         100 lb.	* Color(s): 1 over 1 1: Black 2: 3: 3: 1	* Fonts: * Fonts: 1: Helvetica 2: 3: 4:
* For manuals - designates cover specifications MANUAL INTERIORS / BINDERY / FOI	Die Line Key: Perforate —— Die Cut Fold Line	Kiss Cut
Fold	Color(s):over	Fonts: Spot 2:
	FOLD SCHEME / E	SCHEME / BINDERY DIAGRAM
	Die Cut	This pare) This pare) Fold Line Punch/Drill Hole
COMMENTS :		
The information in this document is the exclusive PROPRIETARY property of LEVITON MANUFACTURING COMPANY, INC. It is disclosed with the undestanding that acceptance or review by the recipient constitues an undertaking by the recipient. (1) to hold this information in strict confidence, and (2) not to disclose, duplicate, copy, modify or use the information for any pupose other than that for which disclosed. FOR LEVITON USE ONLY	ON MANUFACTURING COMPANY, INC. It is disclosed entaking by the recipient. (1) to hold this information in struct r any pupose other than that for which disclosed.	© 2009 Leviton Mfg. Co., Inc. Unpublished, All Rights Reserved
Approvals: 🗸 Plant 08 J. Tang	od M. Crandall	A. Mancuso
Mktg	Eng B. I	S&A Othor
	Vuter P. Patel	
<b>ARN</b> : 1448	ECO Number:	Pilot Rev:
Artist: <u>H. Sanchez</u>	Arth	Artwork Release Date:
Notes:		

twork Print Specification Sheet Rev A04.eps