1	QUICK GUIDE	11
2	BASIC FUNCTION	29
3	NAVIGATION SYSTEM	71
4	AUDIO/VISUAL SYSTEM	137
5	VOICE COMMAND SYSTEM	297
6	INFORMATION	313
7	PERIPHERAL MONITORING SYSTEM	317
8	PHONE	343
9	LEXUS ENFORM	381
10	12.3-INCH DISPLAY	409
	INDEX	417

About the following equipment, see the "Owner's Manual".

• Air conditioning

• Fuel consumption

• Energy monitor (LS600hL)

• Vehicle customization settings

• Lexus night view

1

#### Introduction

#### NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL

This manual explains the operation of the system. Please read this manual carefully to ensure proper use. Keep this manual in your vehicle at all times.

The screen shots in this document and the actual screens of the system differ depending on whether the functions and/or a contract existed and the map data available at the time of producing this document.

In some situations when changing between screens, it may take longer than normal for the screen to change, the screen may be blank momentarily or noise may be displayed. Please be aware that the content of this manual may be different from the system in some cases, such as when the system's software is updated.

#### NAVIGATION SYSTEM (WITH NAVIGATION FUNCTION)

The Navigation System is one of the most technologically advanced vehicle accessories ever developed. The system receives satellite signals from the Global Positioning System (GPS) operated by the U.S. Department of Defense. Using these signals and other vehicle sensors, the system indicates your present position and assists in locating a desired destination.

The navigation system is designed to select efficient routes from your present starting location to your destination. The system is also designed to direct you to a destination that is unfamiliar to you in an efficient manner. The system uses DENSO maps. The calculated routes may not be the shortest nor the least traffic congested. Your own personal local knowledge or "short cut" may at times be faster than the calculated routes.

The navigation system's database includes Point of Interest categories to allow you to easily select destinations such as restaurants and hotels. If a destination is not in the database, you can enter the street address or a major intersection close to it and the system will guide you there.

The system will provide both a visual map and audio instructions. The audio instructions will announce the distance remaining and the direction to turn in when approaching an intersection. These voice instructions will help you keep your eyes on the road and are timed to provide enough time to allow you to maneuver, change lanes or slow down.

Please be aware that all current vehicle navigation systems have certain limitations that may affect their ability to perform properly. The accuracy of the vehicle's position depends on satellite conditions, road configuration, vehicle condition or other circumstances. For more information on the limitations of the system, refer to page 132.

#### **TOYOTA MOTOR CORPORATION**

### IMPORTANT INFORMATION ABOUT THIS MANUAL

For safety reasons, this manual indicates items requiring particular attention with the following marks.



### **CAUTION**

This is a warning against anything which may cause injury to people if the warning is ignored. You are informed about what you must or must not do in order to reduce the risk of injury to yourself and others.



#### **NOTICE**

This is a warning against anything which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed about what you must or must not do in order to avoid or reduce the risk of damage to your vehicle and its equipment.

#### SYMBOLS USED IN ILLUSTRATIONS



#### Safety symbol


The symbol of a circle with a slash through it means "Do not", "Do not do this" or "Do not let this happen".



#### Arrows indicating operations

- Indicates the action (pressing, turning, etc.) used to operate switches and other devic-
- Indicates the outcome of an operation (e.g. a lid opens).

### **HOW TO READ THIS MANUAL**

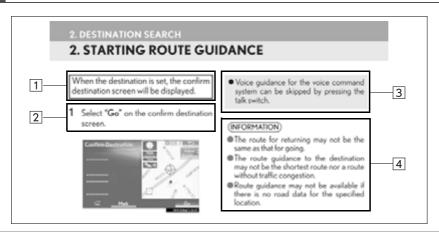

No.	Name	Description
1	Operational Outlines	An outline of the operation is explained.
2	Main Operations	The steps of an operation are explained.
3	Related Operations	A main operation's supplementary operations are described.
4	Information	Useful information for the user is described.

# ■ INFORMATION FOR HYBRID VEHICLES IS WRITTEN IN BRACKETS NEXT TO THE INFORMATION FOR GASOLINE VEHICLES

Different writing styles for gasoline and hybrid vehicles

#### **►** Example

When the <u>engine</u>\*1 <<u>power</u>>\*2 switch is turned to ACCESSORY or <u>IGNITION</u>  $\underline{ON}^{*1} < \underline{ON}^{*2}$  mode, the initial screen will be displayed and the system will begin operating.

- \*1: Vehicles with gasoline engine
- \*2: Vehicles with hybrid system

4

# SAFETY INSTRUCTION (WITH NAVIGATION FUNCTION)

To use this system in the safest possible manner, follow all the safety tips shown below

This system is intended to assist in reaching the destination and, if used properly, can do so. The driver is solely responsible for the safe operation of your vehicle and the safety of your passengers.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed. Only when the vehicle is not moving, can the destination and route selection be done.

### **CAUTION**

- For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.
- While driving, be sure to obey the traffic regulations and maintain awareness of the road conditions. If a traffic sign on the road has been changed, route guidance may not have the updated information such as the direction of a one way street.

While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when it is safe. However, do not totally rely on voice guidance. Use it just for reference. If the system cannot determine the current position correctly, there is a possibility of incorrect, late, or non-voice guidance.

The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before following any instructions from the system, look to see whether the instruction can be done safely and legally.

This system cannot warn about such things as the safety of an area, condition of streets, and availability of emergency services. If unsure about the safety of an area, do not drive into it. Under no circumstances is this system a substitute for the driver's personal judgement.

Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting the use of video and navigation screens next to the driver.

### SAFETY INSTRUCTION (WITHOUT NAVIGATION **FUNCTION**)

To use this system in the safest possible manner, follow all the safety tips shown below.

Do not use any feature of this system to the extent it becomes a distraction and prevents safe driving. The first priority while driving should always be the safe operation of the vehicle. While driving, be sure to observe all traffic regulations.

Prior to the actual use of this system, learn how to use it and become thoroughly familiar with it. Read the entire manual to make sure you understand the system. Do not allow other people to use this system until they have read and understood the instructions in this manual.

For your safety, some functions may become inoperable when driving. Unavailable screen buttons are dimmed.



### **CAUTION**

For safety, the driver should not operate the navigation system while he/she is driving. Insufficient attention to the road and traffic may cause an accident.

### TABLE OF CONTENTS

1	QUICK GUIDE		
1. B <i>A</i>	ASIC FUNCTION	12	
1	Remote Touch	12	
•	"Menu" SCREEN14		
2. C	UICK REFERENCE	18	
	"Setup" SCREEN		
•	"Information" SCREEN	20	
3. N	AVIGATION OPERATION	22	
	REGISTERING HOME	22	
	REGISTERING PRESET DESTINATIONS	22	
	OPERATION FLOW:	23	
,	GUIDING THE ROUTE	24	
:	SETTING HOME AS		
	THE DESTINATION		
4. Fl	JNCTION INDEX	26	
	FUNCTION INDEX	26	
2	BASIC FUNCTION		
1 D /	ASIC INFORMATION		
	BEFORE OPERATION	30	
	NITIAL SCREEN		
	HOW TO USE THE Remote Touch		
1	ENTERING LETTERS AND		
	NUMBERS/LIST SCREEN OPERATION	2.4	
	SCREEN ADJUSTMENT		
	luetooth® SETTINGS		
	REGISTERING/CONNECTING	37	
l	Bluetooth® DEVICE	39	
	SETTING Bluetooth® DETAILS		
3. C	THER SETTINGS	56	
	GENERAL SETTINGS	56	
	VOICE SETTINGS		
,	VELUCI E CETTINIC C	45	

3 NAVIGATION SYSTEM	
1. BASIC OPERATION	72
QUICK REFERENCE	
MAP SCREEN OPERATION	
MAP SCREEN INFORMATION	
TRAFFIC INFORMATION	
2. DESTINATION SEARCH	88
DESTINATION SEARCH	
OPERATION	
STARTING ROUTE GUIDANCE	
3. ROUTE GUIDANCE	
ROUTE GUIDANCE SCREEN	105
TYPICAL VOICE GUIDANCE	111
PROMPTS EDITING ROUTE	112
4. MEMORY POINTS	
MEMORY POINTS SETTINGS	
5. SETUP	
DETAILED NAVIGATION	
SETTINGS	126
TRAFFIC SETTINGS	
6. TIPS FOR THE NAVIGATION	
SYSTEM	132
GPS (GLOBAL POSITIONING	
SYSTEM)	132
MAP DATABASE VERSION AND	135

4 AUDIO/VISUAL SYSTEM	
1. BASIC OPERATION	140
QUICK REFERENCE	140
SOME BASICS	
2. RADIO OPERATION	151
AM/FM RADIO	151
XM Satellite Radio	161
INTERNET RADIO	167
3. MEDIA OPERATION	168
CD	168
DVD	
USB MEMORY	
iPod	180
Bluetooth® AUDIO	
AUX	189
4. AUDIO/VISUAL REMOTE CONTROLS	193
STEERING SWITCHES	193
REAR SEAT AUDIO CONTROLS	
5. SETUP	199
AUDIO SETTINGS	199
6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM	204
OPERATING INFORMATION	204
7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES	014
	210
REAR SEAT ENTERTAINMENT SYSTEM FEATURES	216
SOME BASICS	219
8. REAR SEAT ENTERTAINMENT	
SYSTEM OPERATION	_
AM/FM/SAT RADIO	
CD	229

DVD (DVD VIDEO AND AVCHD™ DISC)235 Blu-ray Disc™	1
(BD-Video AND BDAV)242 USB MEMORY250 iPod253	2
Bluetooth <sup>®</sup> AUDIO	3
9. SETUP FOR REAR SEAT ENTERTAINMENT SYSTEM272	4
REAR SEAT ENTERTAINMENT SYSTEM SETTINGS272 10. TIPS FOR OPERATING	5
REAR SEAT ENTERTAINMENT SYSTEM275	6
OPERATING INFORMATION275	
5 VOICE COMMAND SYSTEM	7
5 VOICE COMMAND SYSTEM  1. VOICE COMMAND SYSTEM  OPERATION	8
1. VOICE COMMAND SYSTEM	
1. VOICE COMMAND SYSTEM OPERATION	8
1. VOICE COMMAND SYSTEM OPERATION	8
1. VOICE COMMAND SYSTEM OPERATION	8
1. VOICE COMMAND SYSTEM OPERATION	8
1. VOICE COMMAND SYSTEM OPERATION	8


### TABLE OF CONTENTS

PERIPHERAL MONITORIN SYSTEM	IG	9 LEXUS ENFORM	
		1. LEXUS ENFORM-OVERVIEW	382
1. LEXUS PARKING	040	FUNCTIONAL OVERVIEW	382
ASSIST MONITOR	318	TYPE A: FUNCTION	
LEXUS PARKING ASSIST MONITOR	210	ACHIEVED BY USING A CELLULAR PHONE	38,
ESTIMATED COURSE LINE	310	TYPE B: FUNCTION	50-
DISPLAY MODE	323	ACHIEVED BY	
PARKING ASSIST GUIDE LINE		USING DCM AND THE NAVIGATION SYSTEM	200
DISPLAY MODE	325	TYPE C: FUNCTION	388
LEXUS PARKING ASSIST MONITOR PRECAUTIONS	327	ACHIEVED BY USING DCM	39
THINGS YOU SHOULD KNOW		2. LEXUS ENFORM OPERATION	
2. INTUITIVE PARKING ASSIST	334	LEXUS Enform Remote	
INTUITIVE PARKING ASSIST	334	LEXUS Enform Service Connect	
INTUITIVE PARKING		LEXUS App Suite	394
ASSIST SETTING	341	LEXUS Enform Destinations	400
O DIJONE		Lexus Insider	
8 PHONE		3. SETUP	406
1. PHONE OPERATION		LEXUS App Suite SETTINGS	406
(HANDS-FREE SYSTEM FOR		10 12.3-INCH DISPLAY	
CELLULAR PHONES)	344	10 12.3-INCH DISPLAY	
QUICK REFERENCE		1.12.3-INCH DISPLAY	
SOME BASICS	345	OPERATION	410
CALLING ON THE Bluetooth <sup>®</sup> PHONE	240	12.3-INCH DISPLAY-OVERVIEW	410
RECEIVING ON THE Bluetooth®	349	USING "Side Display"	412
PHONE	355		
TALKING ON THE Bluetooth®		INDEX	
PHONE	356	ALPHABETICAL INDEX	410
Bluetooth <sup>®</sup> PHONE MESSAGE FUNCTION	359	ALPHABETICAL INDEX	410
2. SETUP			
PHONE SETTINGS	364		
3. WHAT TO DO IF			
TDOLIDI ESLICOTINIC	275		

1	BASIC FUNCTION	
1.	Remote Touch	12
2.	"Menu" SCREEN	14
	STATUS DISPLAY	16
2	QUICK REFERENCE	
1.	"Setup" SCREEN	18
2.	"Information" SCREEN	20
3	NAVIGATION OPERATION	
1.	REGISTERING HOME	22
2.	REGISTERING PRESET DESTINATIONS	23
3.	OPERATION FLOW: GUIDING THE ROUTE	24
4.	SETTING HOME AS THE DESTINATION	25
4	FUNCTION INDEX	
1	FUNCTIONINDEX	26

# 1. BASIC FUNCTION

# 1. Remote Touch

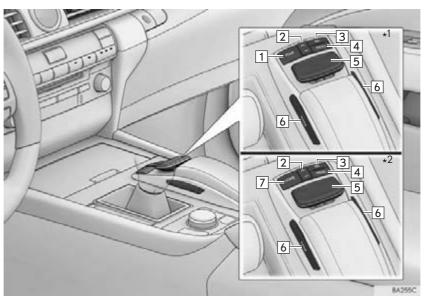


No.	Name	Function	Page
1	"MAP" button	Press to display the current position, cancel the screen scroll, start guidance, and repeat a voice guidance.	72,75
2	"^·V" button	Press to scroll the list screen and to change the scale of the $map^\star.$	32, 35, 76
3	Back button	Press to display the previous screen.	32
4	"MENU" button	Press to display the "Menu" screen.	14
5	Remote Touch knob	Move in the desired direction to select a function, letter and screen button.  Press to enter the selected function, letter or screen button.	32
6	"ENTER" button	Press to enter the selected function, letter or screen button.	32
7	"HOME" button	Press to display the compass mode screen.	_

<sup>\*:</sup> With navigation function

### 1. BASIC FUNCTION

# 2. "Menu" SCREEN

The "Menu" screen can be reached by the following methods: Press the "MENU" button on the Remote Touch.

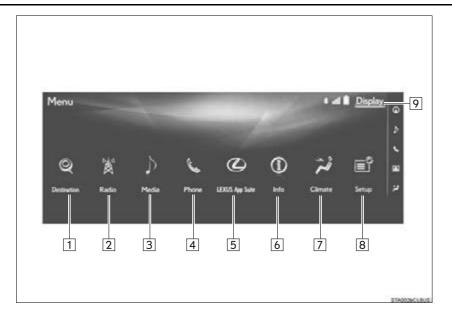

No.	Function	Page
1 *1	Select to display the "Destination" screen.	88
2	Select to display the radio control screen.	140
3	Select to display the media control screen.	140
4	Select to display the hands-free operation screen.	344
5 *1,2	Select to display the "LEXUS App Suite" screen.	394
6	Select to display the "Information" screen.	20
7	Select to display the air conditioning control screen.	"Owner's Manual"
8	Select to display the "Setup" screen.	18
9	Select to adjust the contrast and brightness of the screens, turn the screen off, etc.	37

### (INFORMATION)

 $\bullet$  When the split-screen display is selected, the "Menu" screen will be displayed on the "Main Display". (  $\to$  P. 410)

<sup>\*1.</sup> With navigation function \*2: This function is not made available on some models.

# STATUS DISPLAY

The condition of the Bluetooth<sup>®</sup> connection, as well as the level of reception and the amount of cellular phone battery charge left, are displayed on the status bar. This status bar is shown on all modes.





FAV0016CLSUS

No.	Indicators	Conditions
1	The condition of the Bluetooth® connection	No connection Poor Good  • An antenna for the Bluetooth® connection is built into the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places:  The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box or console box).  The cellular phone is touching or is covered with metal materials.  • Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.

16

No.	Indicators	Conditions
2	The level of reception	Poor Excellent  The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have.  When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No Service" is displayed.  "Rm" is displayed when receiving in a roaming area. While roaming, display "Rm" top-left on the icon.  The receiving area may not be displayed depending on the type of phone you have.
3	The amount of battery charge left	Empty Full  • The amount displayed does not always correspond with the amount displayed on the Bluetooth <sup>®</sup> device.  The amount of battery charge left may not be displayed depending on the type of the Bluetooth <sup>®</sup> device connected.  This system does not have a charging function.

### 2. QUICK REFERENCE

# 1. "Setup" SCREEN

The "Setup" screen can be reached by the following methods: Press the "MENU" button on the Remote Touch, then select "Setup".




No.	Function	Page
1	Select to change the selected language, operation sound, automatic screen change settings, etc.	56
2	Select to set the voice guidance settings.	63
3	Select to set Bluetooth $^{\circledR}$ phones and Bluetooth $^{\circledR}$ audio devices.	45
4	Select to set radio and external media settings.	199
5 *1, 2	Select to set traffic information.	130
6 <sup>*1</sup>	Select to set memory points (home, preset destinations, address book entries, areas to avoid), navigation details or to delete previous destinations.	116, 126
7	Select to set vehicle information such as maintenance information.	65
8	Select to set the phone sound, contacts, message settings, etc.	364
9 *1, 2	Select to set LEXUS App Suite settings.	406
10*2	Select to set data services settings.	316

<sup>\*1.</sup> With navigation function \*2: This function is not made available on some models.

### 2. QUICK REFERENCE

# 2. "Information" SCREEN

The "Information" screen can be reached by the following methods: Press the "MENU" button on the Remote Touch, then select "Info".

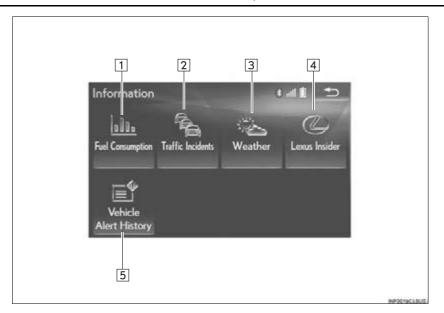


No.	Function	Page
1	Select to display the energy monitor or fuel consumption screen.	"Owner's Manual"
2 *1, 2	Select to display traffic information.	85
3*2	Select to display weather information.	314
4 *1, 2	Select to display the "LEXUS Insider" screen.	403
5 *1, 2	Select to display the vehicle alert history.	_

<sup>\*1:</sup> With navigation function \*2: This function is not made available on some models.

# 1. REGISTERING HOME\*

Press the "MAP" button on the Remote Touch.

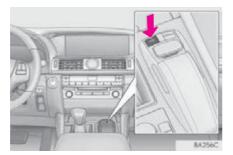

- 2 Select "Dest.".
- 3 Select "Go Home".
- 4 Select "Yes".
- 5 There are different kinds of methods to search for your home. (→P.88)
- 6 Select "Enter".
- 7 Select "OK".


Registration of home is complete.

- ► Registering home in a different way →P. 117
- ► Editing the name, location, phone number and icon
  - →P. 117
- ► Setting home as the destination →P. 90

\*: With navigation function

### 2. REGISTERING PRESET DESTINATIONS\*

Press the "MAP" button on the Remote Touch.

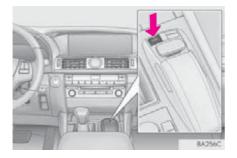

- 2 Select "Dest.".
- Select one of the preset destination buttons.
- 4 Select "Yes".
- 5 There are different kinds of methods to search for a destination.
  (→P. 88)
- 6 Select "Enter".
- 7 Select "OK".


Registration of preset destinations is complete.

- ► Registering preset destinations in a different way
  - →P.118
- ► Editing the name, location, phone number and icon
  - →P.119
- ► Setting preset destinations as the destination
  - →P. 90

\*: With navigation function

## 3. OPERATION FLOW: GUIDING THE ROUTE\*

Press the "MAP" button on the Remote Touch.

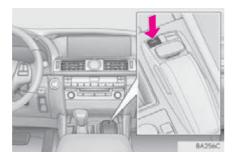


- 2 Select "Dest.".
- There are different kinds of methods to search for a destination.
  (→P. 88)
- 4 Select "Go".
- 5 Select "OK".

Selecting routes other than the one recommended ( $\rightarrow$ P. 101)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

### 4. SETTING HOME AS THE DESTINATION\*

Press the "MAP" button on the Remote Touch.

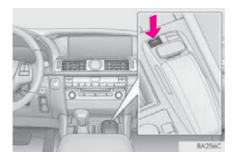

- 2 Select "Dest.".
- 3 Select "Go Home".
- 4 Select "OK".

Selecting routes other than the one recommended ( $\rightarrow$ P. 101)

Guidance to the destination is displayed on the screen and can be heard via voice guidance.

 $^{\star}$ : With navigation function

### 4. FUNCTION INDEX

# 1. FUNCTION INDEX

### ► Map\*

Displaying maps	Page
Viewing the map screen	72
Displaying the current position	75
Viewing the current position vicinity map	78
Changing the scale	76
Changing the map orientation	77
Displaying map Information	80
Displaying the estimated travel/arrival time to the destination	105
Selecting the map mode	78
Displaying traffic information	85

Searching for destinations	Page
Searching for the destination	88
Changing the search area	90

### ► Route guidance\*

Before starting or during route guidance	Page
Starting route guidance	100
Editing the route	112
Viewing the entire route map	107
Adjusting route guidance volume	63
Deleting the destination	113

Address book	Page
Registering address book entries	120
Marking icons on the map	121

26

### ► Useful functions

Information	Page
Displaying vehicle maintenance*	66
Hands-free system (for cellular phone)	Page
Registering/connecting a Bluetooth <sup>®</sup> phone	39
Making a call on a Bluetooth <sup>®</sup> phone	349
Receiving a call on the Bluetooth <sup>®</sup> phone	355
Voice command system	Page
Operating the system with your voice	298
Peripheral monitoring system	Page
Viewing behind the rear of the vehicle	318

<sup>\*:</sup> With navigation function

# 2

## **BASIC FUNCTION**

					2
1	BASIC INFORMATION BEFORE OPERATION	2	Bluetooth <sup>®</sup> SETTINGS		
1.	INITIAL SCREEN30	1.	REGISTERING/CONNECTING Bluetooth® DEVICE	39	
2.	HOW TO USE THE Remote Touch 32		REGISTERING A Bluetooth® PHONE FOR THE FIRST TIME	39	
3.	ENTERING LETTERS AND NUMBERS/LIST SCREEN		REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME	41	
	OPERATION34		PROFILES		
	ENTERING LETTERS AND NUMBERS 34 LIST SCREEN	2.	SETTING Bluetooth® DETAILS		
,			"Bluetooth* Setup" SCREENREGISTERING A Bluetooth® DEVICE		
4.	SCREEN ADJUSTMENT 37		DELETING A Bluetooth® DEVICE		
			CONNECTING A Bluetooth® DEVICE	48	
			EDITING THE Bluetooth® DEVICE INFORMATION	50	
			"System Settings" SCREEN	52	
		3	OTHER SETTINGS		
		1.	GENERAL SETTINGS	56	
			GENERAL SETTINGS SCREEN	56	
		2.	VOICE SETTINGS		
			VOICE SETTINGS SCREEN	63	
		3.	WAINTENANCE		
			ITAINTENAINCE	00	

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

29

#### 1. BASIC INFORMATION BEFORE OPERATION

### 1. INITIAL SCREEN

- When the engine 'power' switch is turned to ACCESSORY or IGNITION ON 'ON' mode, the initial screen will be displayed and the system will begin operating.
- Images shown on the initial screen can be changed to suit individual preferences. (→P. 59)
- After a few seconds, the "CAUTION" screen will be displayed. Waiting about 5 seconds or selecting "Continue" switches to the last displayed screen. (Press any button on the Remote Touch, the function's corresponding screen will be displayed.)

### **A** CAUTION

 When the vehicle is stopped with the engine running <the hybrid system operating>, always apply the parking brake for safety.

#### MAINTENANCE INFORMATION\*

This system reminds users when to replace certain parts or components and shows dealer information (if registered) on the screen.

When the vehicle reaches a previously set driving distance or date specified for a scheduled maintenance check, the "Maintenance Reminder" screen will be displayed when the system is turned on.

- This screen goes off if the screen is not operated for several seconds.
- To prevent this screen from being displayed again, select "Do Not Display This Message Again".
- To register maintenance information: →P. 66
- If selected, the registered phone number can be called.

### **RESTARTING THE SYSTEM**

When system response is extremely slow, the system can be restarted.

1 Press and hold the "PWR•VOL" knob for 3 seconds or more.




### 2. HOW TO USE THE Remote Touch

This system can be operated by the Remote Touch when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.

1 Use the Remote Touch knob to select the desired button on the screen.



2 To select a screen button, press the Remote Touch knob or an "ENTER" button. Once a button has been selected, the screen will change.

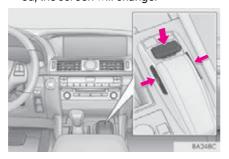

- When the pointer moves close to a button, it will be automatically pulled onto that button. The strength of this pull can be adjusted. (→P. 56)
- The pointer will disappear from the screen if it is not moved for 6 seconds. Operation of the Remote Touch knob will cause the pointer to reappear.
- "A" and "V" buttons on the Remote Touch can be used to scroll up and down on list screens

With navigation function: Press the " $\Lambda$ " button on the Remote Touch to zoom in on the map screen and the " $\nu$ " button to zoom out.

- When is displayed on the screen, select or press the button on the Remote Touch to return to the previous
- Press the "MENU" button on the Remote Touch to display the "Menu" screen. (→P. 14)
- With navigation function: The map screen can be displayed by pressing the "MAP" button on the Remote Touch. (→P. 75) Without navigation function: The compass screen can be displayed by pressing the "HOME" button on the Remote Touch.



### **A** CAUTION

- Do not allow fingers, fingernails or hair to become caught in the Remote Touch as this may cause an injury.
- Be careful when touching the Remote Touch in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.



#### NOTICE

- Do not allow the Remote Touch to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
- Do not subject the Remote Touch to excessive pressure or strong impact as the knob may bend or break off.
- Do not allow coins, contact lenses or other such items to become caught in the Remote Touch as this may cause it to stop functioning.
- Items of clothing may rip if they become caught on the Remote Touch knob.
- If your hand or any object is on the Remote Touch knob when the engine power> switch is in ACCESSORY mode, the Remote Touch knob may not operate properly.

#### (INFORMATION)

 Under extremely cold conditions, the Remote Touch knob may react slowly.

### 1. BASIC INFORMATION BEFORE OPERATION

# 3. ENTERING LETTERS AND NUMBERS/LIST SCREEN OPERATION

When searching by an address, name, etc., or entering data, letters and numbers can be entered via the screen.

# ENTERING LETTERS AND NUMBERS



No.	Function
1	Select to enter desired characters.
2	Text field. Entered character(s) will be displayed.
3	During character entry, when there is only one available option for the next character(s), the next character(s) will be displayed in gray text in the text field automatically. Gray text is entered by selecting this button.
4	Select to erase one character. Select and hold to continue erasing characters.
5	Select to display the alphabet keys.
6	Select to display other symbols.

- On certain letter entry screens, letters can be entered in upper or lower case.
- : Select to enter in lower case.
- : Select to enter in upper case.
- Keyboard layout can be changed. (→P. 56)

### **LIST SCREEN**

### LIST SCREEN OPERATION

When a list is displayed, use the appropriate screen button to scroll through the list.

With navigation function: The list screen may be displayed after entering characters.



IRRO23aCLSUS			
Icon	Function		
±	Select to skip to the next or previous page.  Select and hold or to scroll through the displayed list.		
	This indicates the displayed screen's position.		
A: Y	If appears to the right of an item name, the complete name is too long to display.  Select to scroll to the end of the name.  Select to move to the beginning of the name.		

#### (INFORMATION)

- With navigation function: Matching items from the database are listed even if the entered address or name is incomplete.
- With navigation function: The list will be displayed automatically if the maximum number of characters is entered or matching items can be displayed on a single list screen.
- With navigation function: The number of matching items is shown on the right side of the screen. If the number of matching items is more than 999, the system displays "\*\*\*" on the screen.
- The "^" and "v" buttons on the Remote Touch can be used to scroll up and down on list screens.

#### ■ SELECTING ALL ITEMS

Some lists contain "Select All". If "Select All" is selected, it is possible to select all items.

1 Select "Select All".



"Unselect All": Unselect all items in the list.

#### **SORTING\***

The order of a list displayed on the screen can be sorted in the order of distance from the current location, date, category, etc.

1 Select "Sort".



2 Select the desired sorting criteria.

# CHARACTER JUMP BUTTONS IN LISTS

Some lists contain character screen buttons, "ABC", "DEF" etc., which allow a direct jump to list entries that begin with the same letter as the character screen button.

1 Select the desired character jump buttons.



#### (INFORMATION)

• Every time the same character screen button is selected, the list starting with the subsequent character is displayed.

\*: With navigation function

The contrast and brightness of the screen display and the image of the camera display can be adjusted. The screen can also be turned off, and/or changed to either day or night mode. (For information regarding audio/visual screen adjustment: →P. 149)

1 Press the "MENU" button on the Remote Touch.



2 Select "Display".

3 Select the items to be set.



No.	Function	Page
1	Select to turn the screen off. To turn it on, press any but- ton on the audio panel or on the Remote Touch.	_
2	Select to turn day mode on/off.	38
3	Select to adjust the screen display.	30
4	Select to adjust the camera display.	38

**BASIC FUNCTION** 

## CHANGING BETWEEN DAY AND NIGHT MODE

Depending on the position of the headlight switch, the screen changes to day or night mode. This feature is available when the headlight is switched on.

1 Select "Day Mode".

### (INFORMATION)

• If the screen is set to day mode with the headlight switch turned on, this condition is memorized even with the engine <a href="https://www.nybrid.com/">hybrid system> turned off.</a>

## ADJUSTING THE CONTRAST/BRIGHTNESS

The contrast and brightness of the screen can be adjusted according to the brightness of your surroundings.

- 1 Select "General" or "Camera".
- 2 Select the desired item.
- "Display (General)" screen only: Select "<" or ">" to select the desired display.

Screen button	Function
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.

## 1. REGISTERING/CONNECTING Bluetooth® DEVICE

### REGISTERING A Bluetooth<sup>®</sup> PHONE FOR THE FIRST TIME


To use the hands-free system, it is necessary to register a Bluetooth  $^{\circledR}$  phone with the system.

Once the phone has been registered, it is possible to use the hands-free system.

This operation cannot be performed while driving.

For details about registering a Bluetooth<sup>®</sup> device:  $\rightarrow$ P. 46

- 1 Turn the Bluetooth<sup>®</sup> connection setting of your cellular phone on.
- This function is not available when Bluetooth<sup>®</sup> connection setting of your cellular phone is set to off.
- 2 Press the "MENU" button on the Remote Touch.

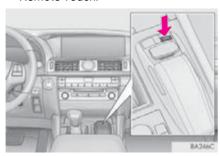

3 Select "Phone".



- Operations up to this point can also be performed by pressing the switch on the steering wheel.
- 4 Select "Yes" to register a phone.



**5** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth<sup>®</sup> device.



- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select "Cancel".

BASIC FUNCTION

- **6** Register the Bluetooth<sup>®</sup> device using your Bluetooth<sup>®</sup> device.
- A PIN code is not required for SSP (Secure Simple Pairing) compatible Bluetooth<sup>®</sup> devices. Depending on the type of Bluetooth<sup>®</sup> device being connected, a message confirming registration may be displayed on the Bluetooth<sup>®</sup> device's screen. Respond and operate the Bluetooth<sup>®</sup> device according to the confirmation message.
- 7 Check that the following screen is displayed, indicating pairing was successful (a Bluetooth<sup>®</sup> link has been established but registration is not yet complete).



- The system waits for connection requests coming from the registered device.
- $\bullet$  At this stage, the Bluetooth  $^{\circledR}$  functions are not yet available.
- To cancel the registration, select "Cancel".

**8** Check that "Connected" is displayed and registration is complete.



- If displayed, select "OK" to complete the registration process.
- If an error message is displayed, follow the guidance on the screen to try again.

#### (INFORMATION)

If a cellular phone does not operate properly after being connected, turn the cellular phone off and on and then connect it again.

### REGISTERING A Bluetooth® AUDIO PLAYER FOR THE FIRST TIME

To use the Bluetooth<sup>®</sup> Audio, it is necessary to register an audio player with the system.

Once the player has been registered, it is possible to use the Bluetooth<sup>®</sup> Audio. This operation cannot be performed while driving.

For details about registering a Bluetooth<sup>®</sup> device:  $\rightarrow$ P. 46

- 1 Turn the Bluetooth<sup>®</sup> connection setting of your audio player on.
- This function is not available when the Bluetooth<sup>®</sup> connection setting of your audio player is set to off.
- 2 Press the "MENU" button on the Remote Touch.



3 Select "Radio" or "Media".



4 Select "Source".




5 Select "Bluetooth\*"



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

#### 2 Bluetooth® SETTINGS

6 Select "Connect".

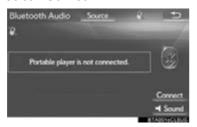

7 Select "Yes" to register a audio player.



**8** Follow the steps in "REGISTERING A Bluetooth<sup>®</sup> PHONE FOR THE FIRST TIME" from "STEP 5". (→P. 39)

## **PROFILES**

This system supports the following services.

Bluetooth <sup>®</sup> Device	Spec.	Function	Require- ments	Recom- menda- tions
Bluetooth <sup>®</sup> Phone/ Bluetooth <sup>®</sup> Audio Player	$Bluetooth^{ exttt{ extbf{@}}}Specification$	Registering a Bluetooth <sup>®</sup> de- vice	Ver.2.0	Ver.3.0 +EDR
Bluetooth <sup>®</sup> Device	Profile	Function	Require- ments	Recom- menda- tions
Bluetooth <sup>®</sup> Phone  Bluetooth <sup>®</sup> Audio Player	HFP (Hands-Free Profile)	Hands-free system	Ver. 1.0	Ver. 1.6
	OPP (Object Push Profile)	Transferring the	Ver.1.1	Ver.1.2
	PBAP (Phone Book Access Profile)	contacts	Ver. 1.0	Ver. 1.1
	MAP (Message Access Profile)	Bluetooth <sup>®</sup> phone message	_	Ver. 1.0
	SPP (Serial Port Profile)	"LEXUS App Suite" function*	_	Ver. 1.2
	A2DP (Advanced Audio Distribution Profile)	$Bluetooth^{ exttt{ exttt{ extit{ exttt{ extit{ exttt{ extt{ exttt{ extt{ exttt{ extt{ exttt{ ex$	Ver. 1.0	Ver. 1.3
	AVRCP (Audio/Video Remote Control Profile)	dio system	Ver. 1.0	Ver. 1.5

<sup>\*:</sup> With navigation function

### 2. Bluetooth® SETTINGS

### (INFORMATION)

- If your cellular phone does not support HFP, registering the Bluetooth<sup>®</sup> phone or using OPP, PBAP, MAP or SPP profiles individually will not be possible.
   If the connected Bluetooth<sup>®</sup> device version is older than recommended or incompatible, the Bluetooth<sup>®</sup> device function may not work properly.
- Refer to http://www.lexus.com/MobileLink to find approved Bluetooth® phones for this system.

## **Bluetooth**®

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## 2. SETTING Bluetooth® DETAILS

1 Press the "MENU" button on the Remote Touch.



2 Select "Setup".



3 Select "Bluetooth\*".



4 Select the desired item to be set.



"Bluetooth\* Setup" SCREEN




Function	Page
Registering a Bluetooth® device	46
Deleting a Bluetooth <sup>®</sup> device	48
Connecting a Bluetooth $^{\circledR}$ device	48
Editing the Bluetooth $^{\circledR}$ device information	50
Bluetooth <sup>®</sup> system settings	52

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### DISPLAYING THE "Bluetooth\* Setup" SCREEN IN A DIFFERENT WAY

- 1 Press the "MENU" button on the Remote Touch.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Connect Phone".

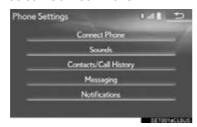

## REGISTERING A Bluetooth® DEVICE


Up to 5 Bluetooth<sup>®</sup> devices can be registered.

Bluetooth<sup>®</sup> compatible phones (HFP) and audio players (AVP) can be registered simultaneously.

This operation cannot be performed while driving.


- Display the "Bluetooth\* Setup" screen. (→P. 45)
- 2 Select "Add".
- ► When another Bluetooth<sup>®</sup> device is connected
- $\bullet$  To disconnect the Bluetooth  $^{\circledR}$  device, select "Yes".
- ► When 5 Bluetooth<sup>®</sup> devices have already been registered
- A registered device needs to be replaced.
   Select "Yes", and select the device to be replaced.
- \*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

**3** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth<sup>®</sup> device.

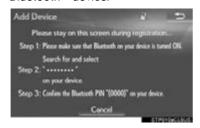


- For details about operating the Bluetooth® device, see the manual that comes with it.
- To cancel the registration, select "Cancel".
- 4 Register the Bluetooth<sup>®</sup> device using your Bluetooth<sup>®</sup> device.
- A PIN code is not required for SSP (Secure Simple Pairing) compatible Bluetooth® devices. Depending on the type of Bluetooth® device being connected, a message confirming registration may be displayed on the Bluetooth® device's screen. Respond and operate the Bluetooth® device according to the confirmation message.

5 Check that the following screen is displayed, indicating pairing was successful (a Bluetooth<sup>®</sup> link has been established but registration is not yet complete).

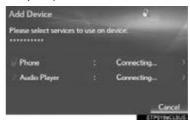

- The system waits for connection requests coming from the registered device.
- At this stage, the Bluetooth<sup>®</sup> functions are not yet available.
- To cancel the registration, select "Cancel".
- **6** Check that "Connected" is displayed and registration is complete.

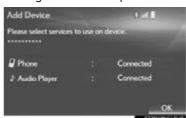

- If displayed, select "OK" to complete the registration process.
- If an error message is displayed, follow the guidance on the screen to try again.

## DELETING A Bluetooth® DEVICE

This operation cannot be performed while driving.

- 1 Display the "Bluetooth\* Setup" screen. (→P. 45)
- 2 Select "Remove".
- 3 Select the desired device.



- 4 Select "Yes" when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

#### (INFORMATION)

 When deleting a Bluetooth<sup>®</sup> phone, the contact data will be deleted at the same time.

## CONNECTING A Bluetooth® DEVICE

Up to 5 Bluetooth<sup>®</sup> devices (Phones (HFP) and audio players (AVP)) can be registered.

If more than 1 Bluetooth<sup>®</sup> device has been registered, select which device to connect to.

- Display the "Bluetooth\* Setup" screen.
   (→P. 45)
- 2 Select the device to be connected.



- Supported profile icons will be displayed.
- : Phone
- : Audio player
- : Phone/"LEXUS App Suite" service
- The profile icon for a currently connected device will be displayed in color.
- Selecting a profile icon which is not currently connected will switch the connection to the function.
- If the desired Bluetooth<sup>®</sup> device is not on the list, select "Add" to register the device. (→P. 46)
- \*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

3 Select the desired connection.



- 4 Check that a confirmation screen is displayed when the connection is complete.
- If an error message is displayed, follow the guidance on the screen to try again.

#### (INFORMATION)

- It may take time if the device connection is carried out during Bluetooth<sup>®</sup> audio playback.
- Depending on the type of Bluetooth<sup>®</sup> device being connected, it may be necessary to perform additional steps on the device.
- When disconnecting a Bluetooth<sup>®</sup> device, it is recommended to disconnect using the system.

### ■ AUTO CONNECTION MODE

To turn auto connection mode on, set "Bluetooth\* Power" to on.  $(\rightarrow P. 53)$  Leave the Bluetooth<sup>®</sup> device in a location where the connection can be established.

- When the engine 'power' switch is in ACCESSORY or IGNITION ON 'ON' mode, the system searches for a nearby registered device.
- The system will connect with the registered device that was last connected, if it is nearby. When automatic connection priority is set to on and there is more than one registered Bluetooth<sup>®</sup> phone available, the system will automatically connect to the Bluetooth<sup>®</sup> phone with the highest priority. (→P. 53)

#### **■ CONNECTING MANUALLY**

When the auto connection has failed or "Bluetooth\* Power" is turned off, it is necessary to connect Bluetooth<sup>®</sup> manually.

- 1 Press the "MENU" button on the Remote Touch.
- 2 Select "Setup".
- 3 Select "Bluetooth\*".
- 4 Follow the steps in "CONNECTING A Bluetooth® DEVICE" from "STEP 2". (→P. 48)
- \*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## ■ RECONNECTING THE Bluetooth® PHONE

If a Bluetooth<sup>®</sup> phone is disconnected due to poor reception from the Bluetooth<sup>®</sup> network when the engine 'power' switch is in ACCESSORY or IGNITION ON 'ON' mode, the system automatically reconnects the Bluetooth<sup>®</sup> phone.

## EDITING THE Bluetooth® DEVICE INFORMATION

The Bluetooth<sup>®</sup> device's information can be displayed on the screen. The displayed information can be edited.

This operation cannot be performed while driving.

- 1 Display the "Bluetooth\* Setup" screen. (→P. 45)
- 2 Select the desired device to be edited.
- 3 Select "Device Info".



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

4 Confirm and change the Bluetooth® device information.





No.	Information
1	The name of the Bluetooth $^{\circledR}$ device. Can be changed to a desired name. $(\rightarrow P.51)$
2	Select to set the Bluetooth $^{\circledR}$ audio player connection method. $(\rightarrow P.52)$
3	Device address is unique to the device and cannot be changed.
4	Phone number of the Bluetooth $^{\circledR}$ phone.
5	Compatibility profile of the Bluetooth $^{\mathbb{B}}$ device.
6	Select to reset all setup items.

### (INFORMATION)

- ●If 2 Bluetooth<sup>®</sup> devices have been registered with the same device name, the devices can be distinguished referring to the device's address.
- Depending on the type of phone, some information may not be displayed.

### CHANGING A DEVICE NAME

- 1 Select "Device Name".
- 2 Enter the name and select "OK".

### (INFORMATION)

Even if the device name is changed, the name registered in your Bluetooth<sup>®</sup> device does not change.

## SETTING AUDIO PLAYER CONNECTION METHOD

- 1 Select "Connect Audio Player from".
- **2** Select the desired connection method.



"Vehicle": Select to connect the audio system to the audio player.

"Device": Select to connect the audio player to the audio system.

 Depending on the audio player, the "Vehicle" or "Device" connection method may be best. As such, refer to the manual that comes with the audio player.

## "System Settings" SCREEN

The Bluetooth<sup>®</sup> settings can be confirmed and changed.

- Display the "Bluetooth\* Setup" screen.
   (→P. 45)
- 2 Select "System Settings".
- 3 Select the desired item to be set.



No.	Function	Page
1	Select to set Bluetooth® connection on/off.	53
2	Select to change the automatic connection priority of the registered Bluetooth® devices.	53
3	Select to edit the system information.	54
4	Select to reset all setup items.	_

<sup>\*:</sup> Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## CHANGING "Bluetooth\* Power"

### 1 Select "Bluetooth\* Power".

#### When "Bluetooth\* Power" is on:

The Bluetooth<sup>®</sup> device is automatically connected when the engine power> switch is in ACCESSORY or IGNITION ON <ON> mode.

#### When "Bluetooth\* Power" is off:

The Bluetooth  $^{\circledR}$  device is disconnected, and the system will not connect to it next time.

### (INFORMATION)

- While driving, the auto connection state can be changed from off to on, but cannot be changed from on to off.
- \*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## SETTING AUTOMATIC CONNECTION PRIORITY

The automatic connection priority of the registered Bluetooth  $^{\circledR}$  devices can be changed.

- 1 Select "Preferred Device Settings".
- 2 Select the desired item to be set.



No.	Function	Page
1	Select to set automatic connection priority on/off.	_
2	Select to change the automatic connection priority of the registered Bluetooth® phones.	54
3	Select to change the automatic connection priority of the registered Bluetooth® audio players.	54
4	Select to reset all setup items.	_

#### (INFORMATION)

• A newly registered Bluetooth<sup>®</sup> device will automatically be given the highest automatic connection priority.

## ■ CHANGING PHONE AUTOMATIC CONNECTION PRIORITY

- 1 Select "Preferred Phones".
- 2 Select the desired Bluetooth<sup>®</sup> device and select "Up" or "Down" to change the preferred order.



- CHANGING AUDIO PLAYER AUTOMATIC CONNECTION PRIORITY
- 1 Select "Preferred Audio Players".
- 2 Select the desired Bluetooth<sup>®</sup> device and select "Up" or "Down" to change the preferred order.



## EDITING THE SYSTEM INFORMATION

- 1 Select "System Information".
- 2 Select the desired item to be set.





No.	Information	Page
1	Displays system name. Can be changed to a desired name.	55
2	PIN code used when the Bluetooth® device was registered. Can be changed to a desired code.	55
3	Device address is unique to the device and cannot be changed.	_
4	Select to set the phone connection status display on/off.	_
5	Select to set the connection status display of the audio player on/off.	_
6	Compatibility profile of the system	_
7	Select to reset all setup items.	_

### ■ EDITING THE SYSTEM NAME


- 1 Select "System Name".
- 2 Enter a name and select "OK".
- EDITING THE PIN CODE
- 1 Select "System PIN Code".
- 2 Enter a PIN code and select "OK".

### 3. OTHER SETTINGS

## 1. GENERAL SETTINGS

Settings are available for automatic screen change, operation sounds, etc.

1 Press the "MENU" button on the Remote Touch.

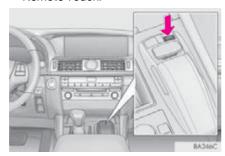

- 2 Select "Setup".
- 3 Select "General".
- 4 Select the items to be set.

## GENERAL SETTINGS SCREEN









No.	Function
1	Select to change the time zone, set the daylight saving time on/off and set the automatic adjustment of the clock on/off. $(\rightarrow P.58)$
2	Select to change the language.
3*	Select to change the unit of measure for distance.
4	Select to change the screen button color.
5	Select to change the keyboard layout.
6	Select to customize the startup/ screen off images. $(\rightarrow P. 59)$
7*	Select to set automatic screen changes from the audio/air conditioning control screen to the previous screen to on/off. When set to on, the screen will automatically return to the previous screen from the audio/air conditioning control screen after 20 seconds.
8	Select to set the selection sounds on/off.
9	Select to set the pointer sounds on/ off.
10	Select to set the error sounds on/off.

. With navidation function	*:	With	navigation	function
----------------------------	----	------	------------	----------

No.	Function
11	Select to adjust the pointer sound volume.
12	Select to adjust the strength of the pull from the buttons to the pointer.
13	Select to delete personal data. $(\rightarrow P. 61)$
14	Select to update software versions. For details, contact your Lexus dealer.
15	Select to update "Gracenote" data- base versions. For details, contact your Lexus dealer.
16	Select to display the software information. Notices related to third party software used in this product are enlisted. (This includes instructions for obtaining such software, where applicable.)

### **CLOCK SETTINGS**

Used for changing the time zone and setting of daylight saving time and automatic time adjustment on/off.

- 1 Display the "General Settings" screen. (→P. 56)
- 2 Select "Clock".
- 3 Select the items to be set.



No.	Function
1	Select to change the time zone. $(\rightarrow P. 58)$
2	Select to set daylight saving time on/ off.
3	Select to set automatic adjustment of the clock by GPS on/off. When set to on, the system will automatically adjust the clock to the current position's time zone when the vehicle moves to a different time zone. When set to off, the clock can be manually adjusted. $(\rightarrow P.58)$

### ■ SETTING THE TIME ZONE

- 1 Select "Time Zone".
- 2 Select the desired time zone.
- If "Other" is selected, the zone can be adjusted manually. Select "+" or "-" to adjust the time zone.

### ■ MANUAL CLOCK SETTING

When "Auto Adjust by GPS" is turned "Off", the clock can be manually adjusted.

1 Select the desired item.



No.	Function
1	Select "+" to set the time forward one hour and "-" to set the time back one hour.
2	Select "+" to set the time forward one minute and "-" to set the time back one minute.
3	Select to round to the nearest hour. e.g. $1:00$ to $1:29 \rightarrow 1:00$ $1:30$ to $1:59 \rightarrow 2:00$

## CUSTOMIZING THE STARTUP AND SCREEN OFF IMAGES

An image can be copied from a USB memory and used as the startup and screen off Images.

The built-in movie can also be set as the startup image.

When the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode, the initial screen (startup image) will be displayed. (→P. 30)

When "Screen Off" on the "Display" screen is selected, the screen is turned off and the desired screen off image that is set is displayed. (To turn the screen off: →P. 37)

- Display the "General Settings" screen. (→P. 56)
- 2 Select "Customize Images".

3 Select the items to be set.



No.	Function	Page
1	Select to copy images from a USB memory.	60
2	Select to delete images.	61
3	Select to set an image as the startup or screen off image.	61

### **■ TRANSFERRING IMAGES**

1 Open the console box, then open the cover and connect a USB memory.



- Turn on the power of the USB memory if it is not turned on.
- 2 Close the console box.
- 3 Select "Copy from USB".
- 4 Select the desired images from the list and then select "Copy".
- The selected image is displayed on the right side of the screen. If the selected
  - image file is broken or incompatible, will be displayed.
- The remaining number of image files that can be transferred is displayed at the bottom of the screen.
- 5 Select "Yes" when the confirmation screen appears.



#### **NOTICE**


Depending on the size and shape of the device that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the device or the terminal, etc.

### (INFORMATION)

- When saving image files to a USB memory to be transferred to the system, save the images in a folder named "Image" (Image, case sensitive). If a different folder name is used, the system will not recognize the image files.
- The compatible file extensions are JPG and JPEG.
- An image's file name, including file extension, can be up to 32 characters.
- Image files of 10 MB or less can be transferred.
- Up to 10 images can be transferred to the system.
- Files with non-ASCII filenames can not be transferred.

## ■ SETTING THE STARTUP AND SCREEN OFF IMAGES

- 1 Select "Set Images".
- 2 Select the "Movies" or "Images" tab and select the desired movie or image.
- 3 Select the desired items to be set.

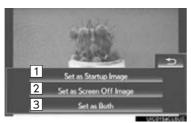

No.	Function
1	Select to set an image as the startup image.
2	Select to set an image as the screen off image.
3	Select to set an image as both the startup and screen off image.

## ■ DELETING TRANSFERRED IMAGES

- 1 Select "Delete Images".
- 2 Select the images to be deleted and select "Delete".
- **3** Select "Yes" when the confirmation screen appears.

## DELETING PERSONAL DATA

- 1 Display the "General Settings" screen. (→P. 56)
- 2 Select "Delete Personal Data".
- 3 Select "Delete".
- 4 Select "Yes" when the confirmation screen appears.

### 3. OTHER SETTINGS

 Registered or changed personal settings will be deleted or returned to their default conditions.

For example:

- General settings
- Navigation settings\*
- Audio settings
- Phone settings
- Lexus Enform settings\*
- \*: With navigation function




### **NOTICE**

With navigation function: Make sure the map microSD card is inserted when deleting personal data. The personal data cannot be deleted when the map microSD card is removed. To delete the data, after inserting the map microSD card, turn the engine power> switch to ACCESSORY or IGNITION ON <ON> mode.

### 2. VOICE SETTINGS

Voice guidance etc. can be set.

Press the "MENU" button on the Remote Touch.

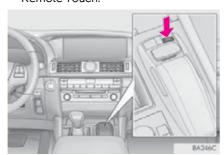

- 2 Select "Setup".
- 3 Select "Voice".
- 4 Select the items to be set.

### (INFORMATION)

● "Voice Settings" screen can also be displayed from the voice recognition top screen. (→P. 301)

## VOICE SETTINGS SCREEN





\*: With navigation function

**BASIC FUNCTION** 

No.	Function
1	Select to adjust the volume of voice guidance.
2*	Select to set the voice guidance during route guidance on/off.
3*	Select to set the voice guidance during audio/visual and/or air conditioning system use on/off.
4	Select to set the voice recognition prompts on/off.
5	Select to train voice recognition. The voice command system adapt the user accent.
6	Select to set the voice confirmation display on/off.
7*	Select to set the beep sound of navigation guidance.
8	Select to reset all setup items.

<sup>\*:</sup> With navigation function

## 3. VEHICLE SETTINGS

Settings are available for maintenance, vehicle customization, intuitive parking assist-sensor, etc.

1 Press the "MENU" button on the Remote Touch.



- 2 Select "Setup".
- 3 Select "Vehicle".

4 Select the items to be set.



No.	Function	Page
1*	Select to set maintenance.	66
2	Select to set vehicle customization.	"Owner's Manual"
3	Select to set intuitive parking assist-sensor.	341
4	Select to set back camera guide line.	322

\*: With navigation function

RASIC FUNCTION

## MAINTENANCE\*

When the system is turned on, the "Maintenance Reminder" screen displays when it is time to replace a part or certain components. (→P. 30)

- 1 Display the "Vehicle Settings" screen. (→P.65)
- 2 Select "Maintenance".
- 3 Select the desired item.



No.	Function	Page
1	Select to set the condition of parts or components.	67
2	Select to add new information items separately from provided ones.	_
3	Select to cancel all conditions which have been entered.	_
4	Select to reset the items which have expired conditions.	_
5	Select to call the registered dealer.	_
6	Select to register/edit dealer information.	67
7	When set to on, the indicator will illuminate. The system is set to give maintenance information with the "Maintenance Reminder" screen.	30

### (INFORMATION)

• When the vehicle needs to be serviced, the screen button color will change to orange.

## MAINTENANCE INFORMATION SETTING

- Select the desired part or component screen button.
- 2 Set the conditions.



No.	Function					
1	Select to enter the next maintenance date.					
2	Select to enter the driving distance until the next maintenance check.					
3	Select to cancel the conditions which have been entered.					
4	Select to reset the conditions which have expired.					

3 Select "OK" after entering the conditions.

### (INFORMATION)

- For scheduled maintenance information, refer to "Warranty and Services Guide/ Owner's Manual Supplement/Scheduled Maintenance".
- Depending on driving or road conditions, the actual date and distance that maintenance should be performed may differ from the stored date and distance in the system.

### **DEALER SETTING**

Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.

- 1 Select "Set Dealer".
- 2 Select the desired item to search for the location. (→P. 88)
- The editing dealer screen appears after setting the location.

3 Select the items to be edited.



No.	Function	Page
1	Select to enter the name of a dealer.	68
2	Select to enter the name of a dealer member.	68
3	Select to set the location.	68
4	Select to enter the phone number.	68
5	Select to delete the dealer information displayed on the screen.	_
6	Select to set the displayed dealer as a destination.	100

## ■ EDITING DEALER OR CONTACT NAME

- 1 Select "Edit" next to "Dealer" or "Contact".
- 2 Enter the name and select "OK".

### ■ EDITING THE LOCATION

- 1 Select "Edit" next to "Location".
- 2 Scroll the map to the desired point (→P.79) and select "OK".

### **■ EDITING PHONE NUMBER**

- 1 Select "Edit" next to "Phone #".
- 2 Enter the phone number and select "OK".

## 3

## NAVIGATION SYSTEM\*

1	BASIC OPERATION		2	DESTINATION SEARCH	
1.	QUICK REFERENCE		1.	DESTINATION SEARCH OPERATION	88
	NAVIGATION OPTIONS SCREEN			SELECTING SEARCH AREA	90
2.	MAP SCREEN OPERATION			SETTING HOME AS DESTINATION SETTING PRESET DESTINATIONS AS DESTINATION	
	MAP SCALE 7	6		SEARCHING BY ADDRESS	91
	ORIENTATION OF THE MAP			SEARCHING BY POINT OF INTEREST	92
	SCREEN SCROLL OPERATION	8		DESTINATION SEARCH BY DESTINATION ASSIST	96
	SMALL INCREMENTS7	9		SEARCHING FROM PREVIOUS DESTINATIONS	96
3.	MAP SCREEN INFORMATION 8	0		SEARCHING BY ADDRESS BOOK	96
	DISPLAYING MAP INFORMATION 8	0		SEARCHING BY EMERGENCY	97
	DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET			SEARCHING BY INTERSECTION AND FREEWAYSEARCHING BY MAPSEARCHING BY COORDINATES	99
4.	TRAFFIC INFORMATION		2.	STARTING ROUTE GUIDANCE CONFIRM DESTINATION SCREEN ENTIRE ROUTE MAP SCREEN	<b>100</b> 101


# 

	NAVIG	ATIO	2NC	SYSTEM*		
3	ROUTE GUIDANCE		5	SETUP		3
1.	ROUTE GUIDANCE SCREEN SCREEN FOR ROUTE GUIDANCE ROUTE OVERVIEW	105	1.	DETAILED NAVIGATION SETTINGSSCREENS FOR NAVIGATION		
	DURING FREEWAY DRIVINGWHEN APPROACHING	107	2.	SETTINGS		
	INTERSECTION TURN LIST SCREEN TURN-BY-TURN ARROW SCREEN	110	_	SCREEN FOR TRAFFIC SETTINGS		
2.	TYPICAL VOICE GUIDANCE PROMPTS	111	6	SYSIEM		
3.	EDITING ROUTE ADDING DESTINATIONSREORDERING DESTINATIONS	112	1.	GPS (GLOBAL POSITIONING SYSTEM)		
	DELETING DESTINATIONS SETTING ROUTE PREFERENCES	113	2.	THE NAVIGATION SYSTEM  MAP DATABASE VERSION  AND COVERED AREA		
	SELECTING ROUTE TYPE  DETOUR SETTING  STARTING FROM ADJACENT ROAD.	114		MAP INFORMATIONABOUT THE MAP DATA	135	
4	MEMORY POINTS					
1.	MEMORY POINTS SETTINGS					
	SETTING UP PRESET DESTINATIONS					
	SETTING UP ADDRESS BOOK	123				
*: \	With navigation function	123				

## 1. QUICK REFERENCE

## MAPSCREEN

The map screen can be reached by the following methods: Press the "MAP" button on the Remote Touch.

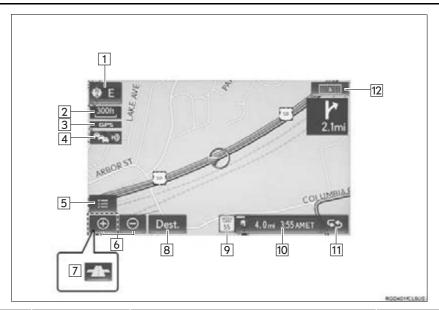

No.	Name	Function	Page
1	2D north up, 2D heading up or 3D heading up sym- bol	Indicates whether the map orientation is set to north-up or heading-up. The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north). In 3D map, only a heading-up view is available.	77
2	Scale indicator	This figure indicates the map scale.	76
3	"GPS" mark (Global Position- ing System)	Shows that the vehicle is receiving signals from the GPS.	132
4*	Traffic indicator	Shows that traffic information is received. Select to start voice guidance for traffic information. When traffic information is received via HD Radio broadcast, HD mark is displayed on the right.	85
5	Options button	Select to display the "Navigation Options" screen.	74

72

No.	Name	Function	Page
6	Zoom in/out but- ton	Select to magnify or reduce the map scale. When either button is selected, the map scale indicator bar appears at the bottom of the screen.	76
7	Footprint map button	Select to display the footprint map screen.	76
8	Destination but- ton	Select to display the "Destination" screen.	88
9	Speed limit icon	Indicates the speed limit on the current road. The display of the speed limit icon can be set to on/off.	80
10	Route information bar	Displays the current street name, or the distance with the estimated travel time/arrival time to the destination. The route information bar fills from left to right as the vehicle progresses on the route.	105
11	Route information button	Select to change the display between the current street name and the distance with the estimated travel/arrival time.	
12	Screen change button	Select to change the map screen to full screen display.	_


<sup>\*:</sup> This function is not made available on some models.

#### (INFORMATION)

- Certain screen buttons on the map screen will disappear several seconds after the Remote Touch has been operated. This setting can be changed so that all the screen buttons will always be displayed.(→P. 126)
- Press the "MAP" button on the Remote Touch to display the address of the current position on the map screen or repeat voice guidance.


### NAVIGATION OPTIONS SCREEN

The navigation options screen can be reached by the following methods: Select  $\longrightarrow$  on the map screen. ( $\rightarrow$ P. 72)

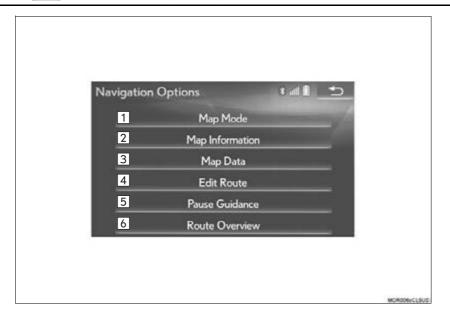

1 Select to display the desired map configuration. 78 Select to set display of the map information such as POI icons, route 80 2 trace, speed limit, etc. 135 3 Select to display the map version and coverage area. Select to edit the set route. 112 4 Select to pause or resume route guidance. 5 Select to display the overview of the entire route. 107 6

1 Press the "MAP" button on the Remote Touch.

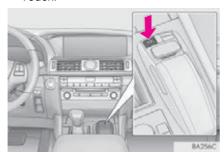

- 2 Check that the current position map is displayed.
- Selecting will change the map screen to full screen display.
- To correct the current position manually: $\rightarrow$ P. 129

#### (INFORMATION)

- While driving, the current position mark is fixed on the screen and the map moves.
- The current position is automatically set as the vehicle receives signals from the GPS (Global Positioning System). If the current position is not correct, it is automatically corrected after the vehicle receives signals from the GPS.
- After the 12-volt battery disconnection, or on a new vehicle, the current position may not be correct. As soon as the system receives signals from the GPS, the correct current position is displayed.
- When the vehicle travels out of the coverage area, the guidance screen changes to the whole compass mode screen.

#### **MAP SCALE**

1 Select or to change the scale of the map screen.



- The scale indicator bar appears at the bottom of the screen.
- Select and hold or to continue changing the scale of the map screen.
- The scale of the map screen can also be changed by selecting the scale bar directly.
   This function is not available while driving.

#### (INFORMATION)

- Press the "^" button on the Remote Touch to zoom in on the map screen and the "V" button to zoom out.
- In areas where the footprint map is available the map scale changes from to when at the minimum range.

#### **FOOTPRINT MAP**

For areas covered by the footprint map (some major cities), a footprint map on a scale of 75 ft. (25 m) can be selected.

When the map is scaled down to 150 ft.

(50 m), changes to and can be selected to display the footprint map.

- 1 Select on the map screen.
- 2 Check that the footprint map is displayed.



• To return to the normal map display, select



#### (INFORMATION)

- If the map or the current position is moved to the area which is not covered by the footprint map, the screen scale automatically changes to 150 ft. (50 m).
- On the footprint map, a one way street is displayed by
- Scrolling on the footprint map is not available while driving.

Building footprints in the database were created and provided by HERE.

#### 3D CITY MODEL MAP

A 3D city model map can be displayed for some areas in major cities when the map scale is 700 ft. (200 m) or less on the 3D map screen.

● To display the normal map, select 🔯 🖺

#### (INFORMATION)

• The 3D city model map can be set the display on/off. (→P. 126)

#### **ROTATING 3D MAP**

3D map and 3D city model map can be rotated when arrows appear around the cursor while scrolling.

Select an arrow to rotate.



#### (INFORMATION)

• The viewing angle of the 3D map can be changed. (→P. 128)

#### ORIENTATION OF THE MAP

The orientation of the map can be changed between 2D north-up, 2D heading-up and 3D heading-up by selecting the orientation symbol displayed at the top left of the screen.

DE: North-up symbol

Regardless of the direction of vehicle travel, north is always up.

• Heading-up symbol

The direction of vehicle travel is always up.

: 3D Heading-up symbol

The direction of vehicle travel is always up.

 The letter(s) beside this symbol indicate the vehicle's heading direction (e.g. N for north).

#### SWITCHING THE MAP MODE

- 1 Select on the map screen.  $(\rightarrow P.72)$
- 2 Select "Map Mode".
- **3** Select the desired configuration button.




No.	Function	Page
1	Select to display the single map screen.	_
2	Select to display the turn list screen.	110
3	Select to display the free- way exit list screen.	107
4	Select to display the inter- section guidance screen or the guidance screen on the freeway.	109
5	Select to display the turn- by-turn arrow screen.	110

• Depending on the conditions, certain screen configuration buttons cannot be selected.

## SCREEN SCROLL OPERATION

Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.

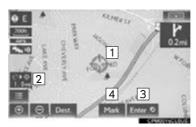

No.	Information/Function
1	Cursor mark
2	Distance from the current position to the cursor mark
3	Select to set as a destination. When selecting "Go to ③" on the following map screen, the navigation system performs a search for the route. (→P. 100) If a destination has already been set, "Go to ③" and "Add to Route" will be displayed. "Go to ③": Select to delete the existing destination(s) and set a new one. "Add to Route": Select to add a destination.
4	Select to register as a memory point. To change the icon, name, etc.: →P. 120


- To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob. The map will continue scrolling in that direction until the knob is released.
- Press the "MAP" button on the Remote Touch to return to the current position.

## ADJUSTING LOCATION IN SMALL INCREMENTS

The cursor location can be adjusted in small increments when "Adjust Location" is selected on the setting map screen.

Also, when changing the location of memory points on the editing screen  $(\rightarrow P. 122)$  and adjusting the current position mark manually on the "Calibration" screen  $(\rightarrow P. 129)$ , 8 directional arrows may appear for this purpose.

1 Select one of the 8 directional arrows to move the cursor to the desired point and then select "OK".

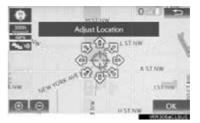

#### 3. MAP SCREEN INFORMATION

## DISPLAYING MAP INFORMATION

Information such as POI icons, route trace, speed limit, etc. can be displayed on the map screen.

- 1 Select  $\stackrel{\blacksquare}{=}$  on the map screen.  $(\rightarrow P.72)$
- 2 Select "Map Information".
- **3** Select the desired items to be displayed.



No.	Function	Page
1	Select to display the selected POI icons.	_
2	Select to select or change POI icons.	80
3*	Select to display eDestination icons.	401
4	Select to display route trace.	82
5*	Select to display traffic information.	85
6	Select to display speed limit icon.	_

- \*: This function is not made available on some models.
- When set to on, the indicator will illuminate.

#### SELECTING THE POLICONS

- 1 Display the "Map Information" screen. (→P.80)
- 2 Select "Select POI".
- When the POI icons to be displayed on the map screen have already been set, "Change POI" is displayed.
- 3 Select the desired POI category and select "OK".



No.	Information/Function	Page
1	Displays up to 5 selected POI icons on the map screen.	-
2	Select to cancel the selected POI icons.	-
3	Displays up to 6 POI icons as favorite POI categories	127
4	Select to display other POI categories if the desired POIs cannot be found on the screen.	81
5	Select to search for the nearest POIs.	81

## ■ SELECTING OTHER POI ICONS TO BE DISPLAYED

- 1 Select "Other POIs".
- 2 Select the desired POI categories and select "OK".

"List All Categories": Select to display all POI categories. To add more POI categories, select "More".

## ■ DISPLAYING THE LOCAL POILIST

POIs that are within 20 miles (32 km) of the current position will be listed from among the selected categories.

- 1 Select "Find Local POI".
- 2 Select the desired POI.

"Near...": Select to search for POIs near the current position or along the route.

- **3** Check that the selected POI is displayed on the map screen.
- ► When "Near..." is selected
- 1 Select the desired item.



No.	Function
1	Select to search for POIs near the current position.
2	Select to search for POIs along the route.

#### **ROUTE TRACE**

The traveled route can be stored and retraced on the map screen. This feature is available when the map scale is 30 miles (50 km) or less.

## ■ START RECORDING THE ROUTE TRACE

- Display the "Map Information" screen.
   (→P.80)
- 2 Select "Route Trace".
- The "Route Trace" indicator illuminates and the route trace starts.
- **3** Check that the traveled line is displayed.



## ■ STOP RECORDING THE ROUTE TRACE

- 1 Display the "Map Information" screen. (→P.80)
- 2 Select "Route Trace" again.
- 3 A confirmation screen will be displayed. "Yes": Select to keep the recorded route trace.

"No": Select to erase the recorded route trace.


#### (INFORMATION)

● The traveled route can be stored up to 124 miles (200 km).

#### DISPLAYING INFORMATION ABOUT THE ICON WHERE THE CURSOR IS SET

When the cursor is placed over an icon on the map screen, the name bar is displayed on the upper part of the screen. If "Info" appears on the right side of the name bar, detailed information can be displayed.

- 1 Place the cursor over an icon.
- 2 Select "Info".

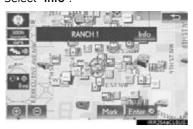

"Mark": Select to register as a memory point. To change the icon, name, etc.:
→P.120

**"Enter • ":** Select to set as a destination.

: Select to call the registered number.

"Delete": Select to delete destination or memory point.

"Edit": Select to display the edit memory point screen.

"Detail": Select to display detailed information.


#### (INFORMATION)

- Even when traffic information is not currently being received, traffic information and "Info" will be displayed for a while after traffic information has been received.
- In some situations, calls to a POI may automatically change to an international call or may not be possible as a domestic call.

### STANDARD MAPICONS

lcon	Name
<b>2</b>	Island
<b>A</b>	Park
	Industry
	Business facility
<b>T</b>	Airport
•	Military
盘	University
	Hospital
6	Stadium
M	Shopping mall
4	Golf

display traffic information on the map

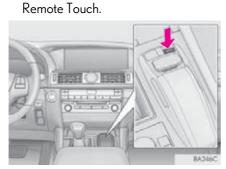

- 2 Select "Info".
- 3 Select "Traffic Incidents".
- 4 Select the desired item.

"Traffic Event List": Select to display a list of current traffic information.  $(\rightarrow P. 85)$ 

"Predictive Traffic Map": Select to display a map with predictive traffic data. (→P. 86)

#### (INFORMATION)

 If a large amount of information is being received, it may take longer than normal for the information to be displayed on the

### DISPLAYING TRAFFIC INFORMATION

A list of current traffic information can be displayed along with information on the location and the distance of the incident

- 1 Display the "Traffic" screen.  $(\rightarrow P. 85)$
- 2 Select "Traffic Event List".
- 3 Select the desired traffic information.

"On Current Road": Select to display traffic information for the current road.

"On Current Route": Select to display traffic information for the set route.

- When set to on, the indicator will illuminate.
- 4 Check that the traffic information is displayed.

"Detail": Select to display detailed traffic information.

\*: This function is not made available on some models.

85

## DISPLAYING PREDICTIVE TRAFFIC MAP

A map with predictive traffic data can be displayed.

- 1 Display the "Traffic" screen.  $(\rightarrow P. 85)$
- 2 Select "Predictive Traffic Map".
- 3 Scroll the map to the desired point and set the time of predictive traffic information.
- The time of the predictive traffic information can be displayed in 15-minute steps up to +45 minutes.
- "+": Moves the time forward 15 minutes.
- "-": Moves the time back 15 minutes.

## DISPLAYING TRAFFIC INFORMATION ON THE MAP

- 1 Select on the map screen.  $(\rightarrow P.72)$
- 2 Select "Map Information".
- 3 Select "Traffic Information".
- When set to on, the indicator will illuminate.
- 4 Check that the traffic information is displayed.

: The icons show traffic incident, road repair, traffic obstacles, etc. Select to display traffic information and start voice guidance for the traffic information.

: The color of the arrow changes depending on the traffic information received.

- The indicator is displayed as follows:
- : Traffic information has been received.

: Traffic information has been received via HD Radio broadcast.


No icon: Traffic information has not been received.

#### 2. DESTINATION SEARCH

#### 1. DESTINATION SEARCH OPERATION

The "Destination" screen can be reached by the following methods:

- ► From the map screen Select "Dest." on the map screen.  $(\rightarrow P.72)$
- ► From the "Menu" screen Select "Destination" on the "Menu" screen. (→P. 14)

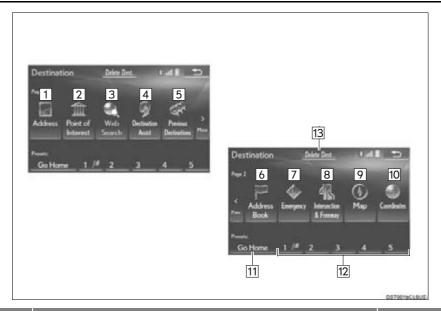

No.	Function	Page
1	Select to search for a destination by address.	91
2	Select to search for a destination by point of interest.	92
3*	Select to search for a destination by online database.	398
4*	Select to search for a destination via the Lexus response center.	400
5	Select to search for a destination from previously set destinations.	96
6	Select to search for a destination from a registered entry in "Address Book".	96
7	Select to search for a destination from emergency service points.	97
8	Select to search for a destination by intersection or freeway entrance/exit.	97

88

No.	Function	Page
9	Select to search for a destination by the last displayed map.	99
10	Select to search for a destination by coordinates.	99
11	Select to set a destination by home.	90
12	Select to set a destination from preset destinations.	90
13	Select to delete set destinations.	113

<sup>\*:</sup> This function is not made available on some models.

#### **SELECTING SEARCH AREA**

The selected state (province) can be changed to set a destination from a different state (province) by using "Address", "Point of Interest" or "Intersection & Freeway".

- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Address", "Point of Interest" or "Intersection & Freeway".
- 3 Select "Select State/Province" or "Change State/Province".



- If a state (province) has not been selected yet, "Select State/Province" is displayed.
- 4 Select the desired state (province).
- To change countries, select the "United States", "Canada" or "Mexico" tab.
- For map database information and updates:
   →P. 135

## SETTING HOME AS DESTINATION

To use this function, it is necessary to register a home address.  $(\rightarrow P. 117)$ 

- 1 Display the "Destination" screen. (→P. 88)
- 2 Select "Go Home".
- The navigation system performs a search for the route and the entire route map is displayed. (→P. 101)

#### SETTING PRESET DESTINATIONS AS DESTINATION

To use this function, it is necessary to register preset destinations to the preset screen buttons (1-5).  $(\rightarrow P. 118)$ 

- Display the "Destination" screen.
   (→P. 88)
- 2 Select any of the preset destination buttons (1-5).



 The navigation system performs a search for the route and the entire route map is displayed. (→P. 101)

#### SEARCHING BY ADDRESS

There are 2 methods to search for a destination by address.

- Display the "Destination" screen.
  (→P. 88)
- 2 Select "Address".
- 3 Select the desired search method.



No.	Function	Page
1	Select to search by city.	91
2	Select to search by street address.	92

#### **SEARCHING BY CITY**

- 1 Select "City".
- 2 Enter a city name and select "OK".

"Last 5 Cities": Select the city name from the list of the last 5 cities.

- **3** Select the desired city name.
- 4 Enter a street name and select "OK".
- **5** Select the desired street name.
- 6 Enter a house number and select "OK".
- If the same address exists, the address list screen will be displayed. Select the desired address.

### SEARCHING BY STREET ADDRESS

- 1 Select "Street Address".
- 2 Enter a house number and select "OK".
- **3** Enter a street name and select "OK".
- 4 Select the desired street name.
- 5 Enter a city name and select "OK".
- 6 Select the desired city name.
- If the same address exists, the address list screen will be displayed. Select the desired address.

#### (INFORMATION)

- A street name can be searched using only the body part of its name.
   For example: S WESTERN AVE
  - A search can be performed by entering "S WESTERN AVE", "WESTERN AVE" or "WESTERN".

## SEARCHING BY POINT OF INTEREST

There are 4 methods to search for a destination by Points of Interest.

- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Point of Interest".
- 3 Select the desired search method.



No.	Function	Page
1	Select to search by name.	93
2	Select to search by category.	94
3	Select to search by phone number.	95
4*	Select to search by eDestination.	402

<sup>\*:</sup> This function is not made available on some models.

#### **SEARCHING BY NAME**

- 1 Select "Name".
- 2 Enter a POI name and select "OK".
- **3** Select the desired POI.



No.	Function	Page
1	Select to search for POI in the desired city.	93
2	Select to search for POI from the category list.	93
3	Select to search for POI using online database.	94

 When entering the name of a specific POI, and there are 2 or more sites with the same name, the list screen will be displayed. Select the desired POI.

#### (INFORMATION)

 To search for a facility name using multiple search words, put a space between each word.

#### ■ SELECTING A CITY TO SEARCH

- 1 Select "City".
- 2 Enter a city name and select "OK".

"Any City": Select to cancel the city setting.

- 3 Select the desired city name.
- 4 Select the desired POI.

## ■ SELECTING FROM THE CATEGORIES

- 1 Select "Category".
- **2** Select the desired category.
- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.

**"List All Categories"**: Select to display all POI categories.

**3** Select the desired POI.

## ■ SEARCHING FOR POI USING WEB SEARCH\*

1 Select "▼" next to "Web Search" to select a search engine.



- 2 Select the desired search engine icon.
- The selected search engine icon will be displayed on the top center of the POI list screen.
- 3 Select the search engine icon.
- Accessing to a search engine
   For the procedure on how to conduct a search via a search engine, go to "SET-TING A DESTINATION USING LEXUS App Suite" (→P. 398), and follow the steps from 3 onward.

#### SEARCHING BY CATEGORY

- 1 Select "Category".
- 2 Select the desired search point.



No.	Function
1	Select to set the search point from near the current position.
2	Select to search for POIs along the set route.
3	Select to set the search point from near a city center. $(\rightarrow P. 95)$
4	Select to set the search point from near a destination. When more than 1 destination has been set, a list will be displayed on the screen. Select the item to be set.

<sup>\*:</sup> This function is not made available on some models.

- **3** Select the desired POI category.
- If there is more than 1 detailed item of the selected category, the detailed list will be displayed.
- "List All Categories": Select to display all POI categories.
- "Favorite POI Categories": Select to use the 6 POIs that have been previously set.(→P.127)
- 4 Select the desired POI.
- "Web Search": Select to search for POI using online database.  $(\rightarrow P. 94)$

#### (INFORMATION)

 The names of POIs located within approximately 200 miles (320 km) from the selected search point can be displayed.

- ► When "Near a City Center in XX\*" is selected
- 1 Select "Near a City Center in XX".
- 2 Enter a city name and select "OK".

"Last 5 Cities": Select the city name from the list of the last 5 cities.

- 3 Select the desired city name.
- 4 Select "OK" when the city center map screen is displayed.
- 5 Follow the steps from 3 onward in "SEARCHING BY CATEGORY". (→P. 94)
  - \*: XX represents the selected search area name.

#### (INFORMATION)

 If the navigation system has never been used, selecting the city name from "Last 5 Cities" will not be available.

### SEARCHING BY PHONE NUMBER

- 1 Select "Phone #".
- 2 Enter a phone number and select "OK".
- If there is more than 1 site with the same number, the list screen will be displayed.

#### (INFORMATION)

 If there is no match for the entered phone number, a list of identical numbers with different area codes will be displayed.

## DESTINATION SEARCH BY DESTINATION ASSIST\*

The destination can be searched by calling an operator of Destination Assist. You can request either a specific business, address, or ask for help locating your desired destination. ( $\rightarrow$ P. 400)

## SEARCHING FROM PREVIOUS DESTINATIONS

- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Previous Destinations".
- **3** Select the desired destination.

"Previous Start Point": Select to display the start point map of the previous guided route.

"Delete": Select to delete the previous destination. (→P. 125)

#### (INFORMATION)

 The previous start point and up to 100 previously set destinations are displayed on the screen.

## SEARCHING BY ADDRESS BOOK

To use this function, it is necessary to register an address book entry.  $(\rightarrow P.120)$ 

- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Address Book".
- 3 Select the desired address book entry.

"Options": Select to register or edit address book entries. (→P. 121)

<sup>\*:</sup> This function is not made available on some models.

## SEARCHING BY EMERGENCY

- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Emergency".
- **3** Select the desired emergency category.
- 4 Select the desired destination.


#### (INFORMATION)

• The navigation system does not guide in areas where route guidance is unavailable. (→P. 133)

#### SEARCHING BY INTERSECTION AND FREEWAY

There are 2 methods to search for a destination by Intersection & Freeway.


- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Intersection & Freeway".
- 3 Select the desired method.

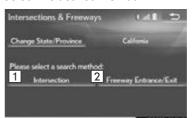

No.	Function	Page
1	Select to search by intersection.	98
2	Select to search by freeway entrance/exit.	98

### SEARCHING BY INTERSECTION

- 1 Select "Intersection".
- 2 Enter the name of the first intersecting street which is located near the destination and select "OK".
- **3** Select the desired street name.
- 4 Enter the name of the second intersecting street and select "OK".
- **5** Select the desired street name.
- If the 2 streets cross at more than 1 intersection in a city, the list of intersections will be displayed.

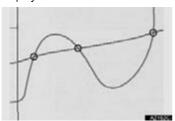

### SEARCHING BY FREEWAY ENTRANCE/EXIT

- 1 Select "Freeway Entrance / Exit".
- 2 Enter a freeway name and select "OK".
- 3 Select the desired freeway.
- 4 Select "Entrance" or "Exit".
- 5 Enter a freeway entrance or exit name and select "OK".
- **6** Select the desired entrance or exit name.

#### (INFORMATION)

• Be sure to use the complete name of the freeway or highway, including the hyphen, when entering the destination. Freeways and interstates use an "I" (I-405). US highways use the state designation before the number (CA-118).

#### SEARCHING BY MAP

By selecting "Map" the last displayed location is displayed again on the map screen. You can search for a destination from this map.

- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Map".
- 3 Scroll the map to the desired point and select "Go to a".

"Adjust Location": Select to adjust the position in smaller increments.  $(\rightarrow P.79)$ 

- If a destination has already been set, "Go to o" and "Add to Route" will be displayed.
- "Go to ": Select to delete the existing destination(s) and set a new one.

"Add to Route": Select to add a destination.

 The navigation system performs a search for the route and the entire route map is displayed. (→P. 100)

## SEARCHING BY COORDINATES

- Display the "Destination" screen.
   (→P. 88)
- 2 Select "Coordinates".
- 3 Enter the latitude and longitude and select "OK".

#### 2. STARTING ROUTE GUIDANCE

When the destination is set, the confirm destination screen will be displayed.

1 Select "Go" on the confirm destination screen.



- $\bullet$  For details about this screen:  $\rightarrow$ P. 101
- 2 Select "OK" on the entire route map screen.



ullet For details about this screen: ightarrowP. 101



Be sure to obey traffic regulations and keep road conditions in mind while driving. If a traffic sign on the road has been changed, the route guidance may not indicate such changed information.

#### (INFORMATION)


- The route for returning may not be the same as that for going.
- The route guidance to the destination may not be the shortest route or a route without traffic congestion.
- Route guidance may not be available if there is no road data for the specified location.
- When setting the destination on a map with a scale more than 0.5 mile (800 m), the map scale changes to 0.5 mile (800 m) automatically. If this occurs, set the destination again.
- If a destination that is not located on a road is set, the vehicle will be guided to the point on a road nearest to the destination. The road nearest to the selected point is set as the destination.

## CONFIRM DESTINATION SCREEN



No.	Function
1	Select to adjust the position in smaller increments. $(\rightarrow P.79)$
2	Select to register as a memory point.
3	Select to search for the route.  (→P.100)  If a destination has already been set,  "Go Directly" and "Add to Route"  will be displayed.  "Go Directly": Select to delete the  existing destination(s) and set a new  one.  "Add to Route": Select to add a des-  tination.
4	Select to call the registered number.

### ENTIRE ROUTE MAP SCREEN

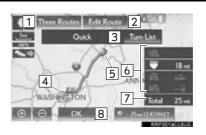

No.	Information/Function
1	Select the desired route from 3 possible routes. $(\rightarrow P. 102)$
2	Select to change the route. $(\rightarrow P. 104)$
3	Select to display a list of the turns required to reach the destination. $(\rightarrow P. 103)$
4	Current position
5	Destination point
6	Type of route and its distance
7	Distance of the entire route
8	<ul> <li>Select to start guidance.</li> <li>Select and hold to start demo mode. (→P. 102)</li> </ul>

#### STARTING DEMO MODE

Before starting the route guidance, the demonstration of the route guidance can be viewed.

- 1 Select and hold "OK" on the entire route map screen until a beep sounds.
- During demo mode, "Demo" is displayed on the map screen.
- To end demo mode: Press the "MAP" button on the Remote Touch.

#### 3 ROUTES SELECTION

- 1 Select "Three Routes".
- 2 Select the desired route.



No.	Function
1	Select to display the quickest route.
2	Select to display the alternative route.
3	Select to display the route that is the shortest distance to the set destination.
4	Select to display the information about the 3 routes. $(\rightarrow P. 103)$

#### ■ DISPLAYING 3 ROUTES INFOR-MATION

- 1 Select "Info".
- 2 Check that the "Information for Three Routes" screen is displayed.



No.	Information
1	Time necessary for the entire trip
2	Distance of the entire trip
3	Distance of the toll road
4	Distance of the freeway
5	Distance of the ferry trip

#### **DISPLAYING TURN LIST**

A list of turn information from the current position to the destination can be displayed.

- 1 Select "Turn List".
- **2** Check that the turn list is displayed.



No.	Information
1	Current position
2	Distance to the next turn
3	Turn direction at the intersection
4	Select to display the map of the selected point.

#### (INFORMATION)

• However, not all road names on the route may appear on the list. If a road changes its name without requiring a turn (such as on a street that runs through 2 or more cities), the name change will not appear on the list. The street names will be displayed in order from the starting point, along with the distance to the next turn.

#### **EDITING ROUTE**

Destinations can be added, reordered or deleted, and conditions for the route to the destination can be changed.

- 1 Select "Edit Route".
- 2 Select the desired item.



No.	Function	Page
1	Select to add destinations.	112
2	Select to delete destinations.	113
3	Select to reorder destinations.	112
4	Select to set route preferences.	113
5	Select to change route type.	113

#### (INFORMATION)

- Even if the "Freeways" indicator is dimmed, the route cannot avoid including a freeway in some cases. (→P. 113)
- If the calculated route includes a trip by ferry, the route guidance shows a sea route. After traveling by ferry, the current position may be incorrect. Upon reception of GPS signals, it is automatically corrected.

### 1. ROUTE GUIDANCE SCREEN

During the route guidance, various types of guidance screens can be displayed depending on conditions.

## SCREEN FOR ROUTE GUIDANCE

3. ROUTE GUIDANCE



No.	Information
1	Distance to the next turn and an arrow indicating the turning direction
2	Guidance route
3	Current position
4	Current street name or route information

#### (INFORMATION)

- If the vehicle goes off the guidance route, the route is searched again.
- For some areas, the roads have not been completely digitized in our database. For this reason, the route guidance may select a road that should not be traveled on
- When arriving at the set destination the destination name will be displayed on the upper part of the screen.

### CHANGING ROUTE INFORMATION BAR

When the vehicle is on the guidance route, the route information bar displays the current street name or the distance with the estimated travel/arrival time to the destination.

1 Select the route information bar (1) or the route information button (2) to change the display of the route information bar.



No.	Information
1	Select to change the display between the estimated travel time and the estimated arrival time.  "Arrival Time": Select to display the estimated arrival time.  "Time to Dest.": Select to display the estimated travel time.
2	Select to change the display be- tween the current street name and the distance with the estimated trav- el/arrival time.

#### (INFORMATION)

- When the vehicle is on the guidance route, the distance measured along the route is displayed. Travel time and arrival time are calculated based on the average speed for the specified speed limit.
- When the vehicle gets off the guidance route, the arrow facing the destination is displayed instead of the estimated travel/ arrival time.
- The route information bar fills from left to right as the vehicle progresses on the route.

#### DISTANCE AND TRAVEL/ ARRIVAL TIME

When driving on the guidance route with more than 1 destination set, a list of the distance with estimated travel/arrival time from the current position to each destination is displayed.

1 Select the route information bar.



2 Check that the list of the distance and time is displayed.



• By selecting one of the number buttons, the desired route information is displayed.

#### ROUTE OVERVIEW

The entire route from the current position to the destination can be displayed during the route guidance.

- 1 Select on the map screen. (→P. 72)
- 2 Select "Route Overview".
- 3 Check that the entire route map is displayed.
- $\bullet$  For details about this screen:  $\rightarrow$ P. 101

#### **DURING FREEWAY DRIVING**

During freeway driving, the freeway information screen will be displayed.




No./ Icon	Information/Function
1	Distance and time from the current position to the road traffic facilities.
2	Name of the road traffic facilities.
3	POIs that are close to a freeway exit
4	Select to display the selected map of the exit vicinity.
5	Select to display the nearest road traffic facilities from the current position.
٨	Select to scroll to farther road traffic facilities.
٧	Select to scroll to closer road traffic facilities.

#### (INFORMATION)

• When the map screen is set to full screen display, the freeway information screen will be displayed on the "Side Display".

# WHEN APPROACHING FREEWAY EXIT OR JUNCTION


When the vehicle approaches an exit or junction, the freeway guidance screen will be displayed.

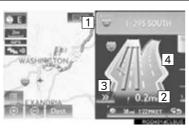

No.	Information/Function
1	Next exit or junction name
2	Distance from the current position to the exit or junction
3	Select to hide the freeway guidance screen. To return to the freeway guidance screen, press the "MAP" button on the Remote Touch.
4	Remaining distance bar to the guidance point

#### TOLLGATE GUIDANCE

When the vehicle approaches a tollgate, the tollgate view will be displayed.

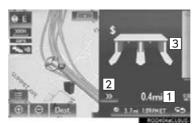

No.	Information/Function
1	Distance from the current position to the tollgate
2	Select to hide the tollgate guidance screen. To return to the tollgate guidance screen, press the "MAP" button on the Remote Touch.
3	Remaining distance bar to the guidance point

## REAL FREEWAY JUNCTION VIEW


When the vehicle approaches a junction, the junction view with signage will be displayed.



No.	Information/Function
1	Next junction or street name
2	Select to hide the real freeway junction view. To return to the real freeway junction view, press the "MAP" button on the Remote Touch.
3	Distance from the current position to the next junction
4	Remaining distance bar to the guidance point

# WHEN APPROACHING INTERSECTION

When the vehicle approaches an intersection, the intersection guidance screen will be displayed.

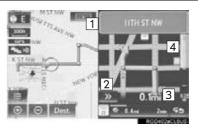

No.	Information/Function
1	Next street name
2	Select to hide the intersection guidance screen. To return to the intersection guidance screen, press the "MAP" button on the Remote Touch.
3	Distance to the intersection
4	Remaining distance bar to the guidance point

#### (INFORMATION)

When the map screen is set to full screen display, the intersection guidance screen will be displayed on the "Side Display".

#### TURN LIST SCREEN

- 1 Select "Turn List" on the "Map Mode" screen. (→P. 78)
- 2 Check that the turn list screen is displayed.



No.	Information
1	Turn direction
2	Distance between turns
3	Next street or destination name

#### (INFORMATION)

When the map screen is set to full screen display, the turn list screen will be displayed on the "Side Display".

# TURN-BY-TURN ARROW SCREEN

On this screen, information about the next turn on the guidance route can be displayed.

- 1 Select "Turn-by-Turn Arrow" on the "Map Mode" screen. (→P. 78)
- 2 Check that the turn-by-turn arrow screen is displayed.



No.	Information
1	Exit number or street name
2	Turn direction
3	Distance to the next turn

#### (INFORMATION)

When the map screen is set to full screen display, the turn-by-turn arrow screen will be displayed on the "Side Display".

#### 2. TYPICAL VOICE GUIDANCE PROMPTS

As the vehicle approaches an intersection, or point, where maneuvering the vehicle is necessary, the system's voice guidance will provide various messages.

#### **CAUTION**

Be sure to obey the traffic regulations and keep the road condition in mind especially when you are driving on IPD roads (roads that are not completely digitized in our database). The route guidance may not have the updated information such as the direction of a one way street.

#### (INFORMATION)

- To hear a voice guidance command again if it cannot be heard, press the "MAP" button on the Remote Touch.
- To adjust the voice guidance volume:  $\rightarrow$ P.63
- Voice guidance may be made early or late.
- If the system cannot determine the current position correctly, you may not hear voice guidance or may not see the magnified intersection on the screen.

#### 3. ROUTE GUIDANCE

#### 3. EDITING ROUTE

- 1 Select on the map screen.  $(\rightarrow P.72)$
- 2 Select "Edit Route".
- 3 Select the item to be set.



No.	Function	Page
1	Select to add destinations.	112
2	Select to delete destinations.	113
3	Select to reorder destinations.	112
4	Select to set route preferences.	113
5	Select to change route type.	113
6	Select to set detours.	114
7	Select to start from adjacent road.	115

**4** Check that the entire route map is displayed. (→P. 101)

#### **ADDING DESTINATIONS**

- 1 Display the "Route" screen.  $(\rightarrow P. 112)$
- 2 Select "Add".
- 3 Search for an additional destination in the same way as a destination search. (→P.88)
- 4 Select "Add Destination Here" to insert the new destination into the route.

## REORDERING DESTINATIONS

When more than 1 destination has been set, the arrival order of the destinations can be changed.

- 1 Display the "Route" screen.  $(\rightarrow P. 112)$
- 2 Select "Reorder".
- 3 Select the desired destination and select "Move Up" or "Move Down" to change the arrival order. Then select "OK".

#### **DELETING DESTINATIONS**

- 1 Display the "Route" screen.  $(\rightarrow P. 112)$
- 2 Select "Delete".
- 3 Select "Yes" when the confirmation screen appears.
- When more than 1 destination has been set, a list will be displayed on the screen. Select the item(s) to be deleted.
- "Delete All": Select to delete all destinations on the list.
- If more than 1 destination has been set, the system will recalculate the route(s) to the set destination(s) as necessary.

# SETTING ROUTE PREFERENCES

The conditions to determine the route can be selected from various choices such as freeways, toll roads, ferries, etc.

- 1 Display the "Route" screen.  $(\rightarrow P. 112)$
- 2 Select "Preferences".
- 3 Select the desired route preferences and select "OK".
- When set to on, the indicator will illuminate.

#### **SELECTING ROUTE TYPE**

- **1** Display the "Route" screen. (→P. 112)
- 2 Select "Route Type".
- 3 Select the desired route type and select "OK".
- During driving, the route guidance starts after selecting the desired route type.
- 4 The entire route from the starting point to the destination is displayed.
- For details about this screen:  $\rightarrow$  P. 101

#### **DETOUR SETTING**

During the route guidance, the route can be changed to detour around a section of the route where a delay is caused by road repairs, an accident, etc.


- 1 Display the "Route" screen.  $(\rightarrow P. 112)$
- 2 Select "Detour".
- **3** Select the desired detour distance.



No.	Function
1	Select to detour within 1 mile of the current position.
2	Select to detour within 3 miles of the current position.
3	Select to detour within 5 miles of the current position.
4	Select to detour on the entire route.
5*	Select to make the system search for the route based on traffic congestion information received from traffic in- formation. (—P. 85)

<sup>\*:</sup> This function is not made available on some models.

#### (INFORMATION)

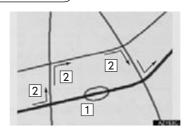

- This picture shows an example of how the system would guide around a delay caused by a traffic jam.
- 1 This position indicates the location of a traffic jam caused by road repairs, an accident, etc.
- 2 This route indicates the detour suggested by the system.
- ●When the vehicle is on a freeway, the detour distance selections are 5, 15 and 25 miles (or 5, 15 and 25 km if units are in km).
- The system may not be able to calculate a detour route depending on the selected distance and surrounding road conditions.

# STARTING FROM ADJACENT ROAD

When a freeway and a surface road run in parallel, the system may show the guidance route going on the freeway while driving on the surface road, or vice versa.

If this happens, you can instantly choose the adjacent road for the route guidance.

- 1 Display the "Route" screen.  $(\rightarrow P. 112)$
- 2 Select "Start from Adjacent Road".

#### (INFORMATION)

• When there is no adjacent road, this screen button will not be displayed.

#### 4. MEMORY POINTS

#### 1. MEMORY POINTS SETTINGS

Home, preset destinations, address book entries, areas to avoid can be set as memory points. The registered points can be used as the destinations.  $(\rightarrow P. 88)$ 

Registered areas to avoid, will be avoided when the system searches for a route.

1 Press the "MENU" button on the Remote Touch.



- 2 Select "Setup".
- 3 Select "Navigation".

4 Select the desired item to be set.



No.	Function	Page
1	Select to set home.	117
2	Select to set preset destinations.	118
3	Select to set the address book.	120
4	Select to set areas to avoid.	123
5	Select to delete previous destinations.	125
6	Select to set detailed navigation settings.	126

#### SETTING UP HOME

If home has been registered, that information can be recalled by selecting "Go Home" on the "Destination" screen.  $(\rightarrow P.90)$ 

- **1** Display the "Navigation Settings" screen. (→P. 116)
- 2 Select "Home".
- 3 Select the desired item to be set.



No.	Function	Page
1	Select to register home.	117
2	Select to edit home.	117
3	Select to delete home.	117

#### **REGISTERING HOME**

- 1 Select "Set Home Location".
- 2 Select the desired item to search for the location. (→P. 88)
- 3 Select "OK" when the editing home screen appears.

#### **EDITING HOME**

- 1 Select "Edit".
- 2 Select the desired item to be edited.



No.	Function	Page
1	Select to edit the home name.	122
2	Select to set display of the home name on/off.	_
3	Select to edit location information.	122
4	Select to edit the phone number.	122
5	Select to change the icon to be displayed on the map screen.	121

3 Select "OK".

#### DELETING HOME

- 1 Select "Delete".
- 2 Select "Yes" when the confirmation screen appears.

# SETTING UP PRESET DESTINATIONS

If a preset destination has been registered, that information can be recalled by using preset destinations on the "Destination" screen. (→P. 90)

- **1** Display the "Navigation Settings" screen. (→P. 116)
- 2 Select "Preset Destinations".
- 3 Select the desired item.



No.	Function	Page
1	Select to register a preset destination.	118
2	Select to edit a preset destination.	119
3	Select to delete a preset destination.	119

### REGISTERING PRESET DESTINATIONS

- 1 Select "Set".
- 2 Select the desired item to search for the location.  $(\rightarrow P. 88)$
- 3 Select a position for this preset destina-
- 4 Select "OK" when the editing preset destination screen appears. (→P. 119)

#### (INFORMATION)

Up to 5 preset destinations can be registered.

### EDITING PRESET DESTINATIONS

- 1 Select "Edit".
- **2** Select the desired preset destination.
- 3 Select the item to be edited.



No.	Function	Page
1	Select to edit the preset destination name.	122
2	Select to set display of the preset destination name on/off.	_
3	Select to edit location information.	122
4	Select to edit the phone number.	122
5	Select to change the icon to be displayed on the map screen.	121

4 Select "OK".

### DELETING PRESET DESTINATIONS

- 1 Select "Delete".
- 2 Select the preset destination to be deleted and select "Delete".
- 3 Select "Yes" when the confirmation screen appears.

#### SETTING UP ADDRESS BOOK

#### Points on the map can be registered.

- **1** Display the "Navigation Settings" screen. (→P. 116)
- 2 Select "Address Book".
- 3 Select the desired item.



No.	Function	Page
1	Select to register address book entries.	120
2	Select to edit address book entries.	121
3	Select to delete address book entries.	122

### REGISTERING ADDRESS BOOK ENTRIES

- 1 Select "New".
- 2 Select the desired item to search for the location.  $(\rightarrow P. 88)$
- 3 Select "OK" when the editing address book entry screen appears.  $(\rightarrow P. 121)$

#### (INFORMATION)

● Up to 100 address book entries can be registered.

### EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Select "Edit".
- 2 Select the desired address book entry.
- 3 Select the item to be edited.



No.	Function	Page
1	Select to edit the address book entry name.	122
2	Select to set display of the address book entry name on/off.	_
3	Select to edit location information.	122
4	Select to edit the phone number.	122
5	Select to change the icon to be displayed on the map screen.	121

4 Select "OK".

#### ■ CHANGING THE ICON

- 1 Select "Edit" next to the "Icon".
- 2 Select the desired icon.



- Change pages by selecting the "Page 1" "Page 2" or "With Sound" tab.
- "With Sound": Select the memory points with a sound
- ► When the "With Sound" tab is selected

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

- 1 Select the "With Sound" tab.
- 2 Select the desired sound icon.
- : Select to play the sound.
- When "Bell (with Direction)" is selected, select an arrow to adjust the direction and select "OK".

#### (INFORMATION)

 The bell sounds only when the vehicle approaches this point in the direction that has been set.

#### 4. MEMORY POINTS

#### ■ CHANGING THE NAME

- 1 Select "Edit" next to "Name".
- 2 Enter a name and select "OK".

#### ■ CHANGING THE LOCATION

- 1 Select "Edit" next to "Location".
- 2 Scroll the map to the desired point (→P.79) and select "OK".

#### ■ CHANGING PHONE NUMBER

- 1 Select "Edit" next to "Phone #".
- 2 Enter the phone number and select "OK".


### DELETING ADDRESS BOOK ENTRIES

- 1 Select "Delete".
- 2 Select the item to be deleted and select "Delete".
- 3 Select "Yes" when the confirmation screen appears.

# SETTING UP AREAS TO AVOID

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as "Areas to Avoid".

- **1** Display the "Navigation Settings" screen. (→P. 116)
- 2 Select "Areas to Avoid".
- 3 Select the desired item.

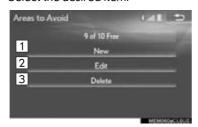

No.	Function	Page
1	Select to register areas to avoid.	123
2	Select to edit areas to avoid.	124
3	Select to delete areas to avoid.	124

### REGISTERING AREAS TO AVOID

- 1 Select "New".
- 2 Select the desired item to search for the location.  $(\rightarrow P. 88)$
- 3 Select either or to to change the size of the area to be avoided and select "OK".



4 Select "OK" when the editing area to avoid screen appears.

#### (INFORMATION)

- If a destination is entered in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.

#### **EDITING AREAS TO AVOID**

The name, location and/or area size of a registered area can be edited.

- 1 Select "Edit".
- 2 Select the area and select "OK".
- 3 Select the item to be edited.



No.	Function	Page
1	Select to edit the name of the area to avoid.	124
2	Select to set display of the area to avoid name on/off.	_
3	Select to edit area location.	124
4	Select to edit area size.	124
5	Select to set the area to avoid function on/off.	_

4 Select "OK".

#### ■ CHANGING THE NAME

- 1 Select "Edit" next to "Name".
- 2 Enter a name and select "OK".

#### ■ CHANGING THE LOCATION

- 1 Select "Edit" next to "Location".
- 2 Scroll the map to the desired point (→P. 79) and select "OK".

#### ■ CHANGING THE AREA SIZE

- 1 Select "Edit" next to "Size".
- 2 Select either or to to change the size of the area to be avoided and select "OK".

#### DELETING AREAS TO AVOID

- 1 Select "Delete".
- 2 Select the area to be deleted and select "Delete".
- **3** Select "Yes" when the confirmation screen appears.

# DELETING PREVIOUS DESTINATIONS

#### Previous destinations can be deleted.

- **1** Display the "Navigation Settings" screen. (→P. 116)
- 2 Select "Delete Previous Dest.".
- 3 Select the previous destination to be deleted and select "Delete".
- 4 Select "Yes" when the confirmation screen appears.

#### 5. SETUP

#### 1. DETAILED NAVIGATION SETTINGS

Settings are available for pop-up information, favorite POI categories, low fuel warning, etc.

1 Press the "MENU" button on the Remote Touch.



- 2 Select "Setup".
- 3 Select "Navigation".
- 4 Select "Detailed Navi. Settings".
- 5 Select the items to be set.

# SCREENS FOR NAVIGATION SETTINGS





No.	Function	Page
1	Select to set the automatic screen button hiding function on/off. When set to on, certain screen buttons on the map screen will disappear several seconds after the Remote Touch has been operated. When set to off, all the screen buttons will always be displayed.	_
2	Select to set display of popup information on/off.	_
3	Select to set favorite POI categories that are used for POI selection to display on the map screen.	127
4	Select to set display of low fuel warning on/off.	128
5	Select to set IPD road guidance on/off.	_
6	Select to set the voice guidance for the next street name on/off.	_
7	Select to set display of the 3D city model map on/off.	_
8	Select to change the viewing angle of the 3D map.	128
9	Select to adjust the current position mark manually or to adjust miscalculation of the distance caused by tire replacement.	129
10	Select to reset all setup items.	_

### FAVORITE POI CATEGORIES (SELECT POI ICONS)

Up to 6 POI icons, which are used for selecting POIs on the map screen, can be selected as favorites.

- 1 Display the "Detailed Navi. Settings" screen. (→P.126)
- 2 Select "Favorite POI Categories".
- **3** Select the category to be changed.



- "Default": Select to set the default categories.
- 4 Select the desired POI category.
- "List All Categories": Select to display all POI categories.
- **5** Select the desired POI icon.

#### LOW FUEL WARNING

When the fuel level is low, a warning message will pop up on the screen.

- **1** Display the "Detailed Navi. Settings" screen. (→P. 126)
- 2 Select "Low Fuel Warning".
- 3 Select "On" or "Off".
- SEARCHING GAS STATION IN LOW FUEL WARNING

A nearby gas station can be selected as a destination.

- 1 Select "Yes" when the low fuel warning appears.
- **2** Select the desired nearby gas station.
- 3 Select "Enter on" to set as a destination. "Info": Select to display gas station information. (→P. 83)

### CHANGING VIEWING ANGLE OF 3D MAP

- **1** Display the "Detailed Navi. Settings" screen. (→P. 126)
- 2 Select "3D Map Viewing Angle".
- 3 Select "Up" or "Down" to change the viewing angle.



"Default": Select to set the initial angle.

### CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Display the "Detailed Navi. Settings' screen. (→P. 126)
- 2 Select "Calibration".
- 3 Select the desired item.
- For additional information on the accuracy of a current position:  $\rightarrow$  P. 132

#### ■ POSITION/DIRECTION CALI-BRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

- 1 Select "Position / Direction".
- 2 Scroll the map to the desired point (→P. 79) and select "OK".
- 3 Select an arrow to adjust the direction of the current position mark and select "OK".

#### ■ TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

- 1 Select "Tire Change".
- The message appears and the quick distance calibration starts automatically.

#### (INFORMATION)

 If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

#### 2. TRAFFIC SETTINGS\*

Traffic information such as traffic congestion or traffic incident warnings can be made available.

1 Press the "MENU" button on the Remote Touch.



- 2 Select "Setup".
- 3 Select "Traffic".
- 4 Select the items to be set.

# SCREEN FOR TRAFFIC SETTINGS



No.	Function
1	Select to set the avoid traffic function auto/manual. $(\rightarrow P. 131)$
2	Select to set the usage of traffic information for the estimated arrival time on/off.
3	Select to set the display of an arrow of free flowing traffic on/off.
4	Select to set to on/off whether to consider the predictive traffic information ( $\rightarrow$ P. 86) with estimated arrival time and detoured route search.
5	Select to set traffic incident voice warning on/off.
6	Select to reset all setup items.

<sup>\*:</sup> This function is not made available on some models.

#### **AUTO AVOID TRAFFIC**

- **1** Display the "Traffic Settings" screen. (→P.130)
- 2 Select "Avoid Traffic".
- 3 Select the desired item.



No.	Function
1	Select to automatically change routes when congestion information of the guidance route has been received.
2	Select to select manually whether or not to change routes when conges- tion information of the guidance route has been received. In this mode, a screen will appear to ask if you wish to reroute.
3	Select to not reroute when congestion information for the guidance route has been received.

#### ■ CHANGING THE ROUTE MANU-**ALLY**

When the navigation system calculates a new route, the following screen will be displayed.

1 Select the desired item.



No.	Function
1	Select to start route guidance using the new route.
2	Select to confirm the new route and current route on the map.
3	Select to continue the current route guidance.

### 1. GPS (GLOBAL POSITIONING SYSTEM)

# LIMITATIONS OF THE NAVIGATION SYSTEM

This navigation system calculates the current position using satellite signals, various vehicle signals, map data, etc. However, an accurate position may not be shown depending on satellite conditions, road configuration, vehicle condition or other circumstances.

The Global Positioning System (GPS) developed and operated by the U.S. Department of Defense provides an accurate current position, normally using 4 or more satellites, and in some case 3 satellites. The GPS system has a certain level of inaccuracy. While the navigation system compensates for this most of the time, occasional positioning errors of up to 300 ft. (100 m) can and should be expected. Generally, position errors will be corrected within a few seconds.

When the vehicle is receiving signals from satellites, the "GPS" mark appears at the top left of the screen.

The GPS signal may be physically obstructed, leading to inaccurate vehicle position on the map screen. Tunnels, tall buildings, trucks, or even the placement of objects on the instrument panel may obstruct the GPS signals.

The GPS satellites may not send signals due to repairs or improvements being made to them.

Even when the navigation system is receiving clear GPS signals, the vehicle position may not be shown accurately or inappropriate route guidance may occur in some cases.

#### **⚠** NOTICE

The installation of window tinting may obstruct the GPS signals. Most window tinting contains some metallic content that will interfere with GPS signal reception of the antenna in the instrument panel. We advise against the use of window tinting on vehicles equipped with navigation systems.

- Accurate current position may not be shown in the following cases:
  - When driving on a small angled Y-shaped road.
  - · When driving on a winding road.
  - When driving on a slippery road such as in sand, gravel, snow, etc.
  - When driving on a long straight road.
  - When freeway and surface streets run in parallel.
  - After moving by ferry or vehicle carrier.
  - When a long route is searched during high speed driving.
  - When driving without setting the current position calibration correctly.
  - After repeating a change of direction by going forward and backward, or turning on a turntable in a parking lot.
  - When leaving a covered parking lot or parking garage.
  - When a roof carrier is installed.
- When driving with tire chains installed.
- When the tires are worn.
- After replacing a tire or tires.
- When using tires that are smaller or larger than the factory specifications.
- When the tire pressure in any of the 4 tires is not correct.
- If the vehicle cannot receive GPS signals, the current position can be adjusted manually. For information on setting the current position calibration: →P.129

- Inappropriate route guidance may occur in the following cases:
  - When turning at an intersection off the designated route guidance.
  - If you set more than 1 destination but skip any of them, auto reroute will display a route returning to the destination on the previous route.
  - When turning at an intersection for which there is no route guidance.
  - When passing through an intersection for which there is no route guidance.
  - During auto reroute, the route guidance may not be available for the next turn to the right or left.
  - During high speed driving, it may take a long time for auto reroute to operate. In auto reroute, a detour route may be shown.
  - After auto reroute, the route may not be changed.
  - If an unnecessary U-turn is shown or announced.
  - If a location has multiple names and the system announces 1 or more of them.
  - · When a route cannot be searched.
  - If the route to your destination includes gravel, unpaved roads or alleys, the route guidance may not be shown.
  - Your destination point might be shown on the opposite side of the street.
  - When a portion of the route has regulations prohibiting the entry of the vehicle that vary by time, season or other reasons.
  - The road and map data stored in the navigation system may not be complete or may not be the latest version.
  - After replacing a tire: →P. 129

#### (INFORMATION)

This navigation system uses tire turning data and is designed to work with factory-specified tires for the vehicle. Installing tires that are larger or smaller than the originally equipped diameter may cause inaccurate display of the current position. The tire pressure also affects the diameter of the tires, so make sure that the tire pressure of all 4 tires is correct.

#### 2. MAP DATABASE VERSION AND COVERED AREA

#### **MAPINFORMATION**

Coverage areas and legal information can be displayed and map data can be updated.

- 1 Select on the map screen.  $(\rightarrow P.72)$
- 2 Select "Map Data".
- 3 Check that the map data screen is displayed.



	W 1100 1 50 1 100 0
No.	Function
1	Map version
2	Select to update map.
3	Select to display map coverage areas.
4	Select to display legal information.

#### (INFORMATION)

 Map data updates are available for a fee. Contact your Lexus dealer for further information.

#### **ABOUT THE MAP DATA**

Map data for the navigation system is contained in a microSD card that is inserted in the microSD card slot located at the bottom of the audio control panel. Do not eject the microSD card, as doing so may deactivate the navigation system.



#### **NOTICE**

Do not edit or delete the map data on the microSD card, as doing so may deactivate the navigation system.

#### (INFORMATION)



microSDHC Logo is a trademark of SD-3C,LLC.

#### 6. TIPS FOR THE NAVIGATION SYSTEM

# 4

### AUDIO/VISUAL SYSTEM

1	BASIC OPERATION	2.	XM Satellite Radio		
1.	QUICK REFERENCE14	40	HOW TO SUBSCRIBE TO AN XM Satellite Radio		4
2.	SOME BASICS 14	42	DISPLAYING THE RADIO ID	165	
	TURNING THE SYSTEM ON AND OFF1		SELECTING A CHANNEL FROM THE LIST	165	
	SELECTING AN AUDIO SOURCE		IF THE SATELLITE RADIO TUNER MALFUNCTIONS	166	
	USB/AUX PORT1	<sup>45</sup> 3.	INTERNET RADIO	167	
	"Sound Settings" SCREEN 1-	46	LISTENING TO INTERNET RADIO	167	
	AUDIO SCREEN ADJUSTMENT14	48			
	VOICE COMMAND SYSTEM15	50	MEDIA OPERATION		
2	RADIO OPERATION	1.	CD	168	
1.	AM/FM RADIO1	151	OVERVIEW	168	
	OVERVIEW	<sub>151</sub> 2.	DVD	171	
	PRESET BUTTON SCREEN 1	54	OVERVIEW	171	
	SELECTING A STATION FROM THE LIST1!	55	DVD OPTIONS		
	CACHING A RADIO PROGRAM1	55 <b>3</b> .	USB MEMORY		
	RADIO BROADCAST DATA SYSTEM 1	57	OVERVIEW	176	
	USING HD Radio™ TECHNOLOGY 15	58 <b>4</b> .	iPod	180	
	AVAILABLE HD Radio™ TECHNOLOGY1!		OVERVIEWiPod AUDIO	180	
	TROUBLESHOOTING GUIDE10	60	iPod VIDEO		

5.	Bluetooth® AUDIO	184	7	REAR SEAT ENTERTAINMEN SYSTEM FEATURES	T
	CONNECTING A Bluetooth® DEVICE. LISTENING TO Bluetooth® AUDIO		1.	REAR SEAT ENTERTAINMENT	041
<b>)</b> .	AUXOVERVIEW			SYSTEM FEATURESQUICK REFERENCE	
	EXTERNAL OPTIONS	192	2.	SOME BASICS	219
4	AUDIO/VISUAL REMOTE CONTROLS			CONTROLLER TURNING ON/OFF THE REAR ENTERTAINMENT SYSTEM	
	STEERING SWITCHES	193		INSERTING MEDIA OR CONNECTING A DEVICE TO THE REAR PLAYER	
2.	REAR SEAT AUDIO CONTROLS	196		SELECTING THE SOUND MODE	224
5	SETUP			OPERATING REAR SEAT ENTERTAINMENT SYSTEM FROM THE FRONT SEATS	
	AUDIO SETTINGS				
	AUDIO SETTINGS SCREEN	199	8	REAR SEAT ENTERTAINMEN SYSTEM OPERATION	T
6	TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM		1.	AM/FM/SAT RADIO	
	OPERATING INFORMATION		2.	CD	
	DVD PLAYER AND DISC	205		OVERVIEW	229
	FILE INFORMATION				
	ERROR MESSAGES	215			

138

3.	VIDEO CD	232
	OVERVIEW	232
	VIDEO CD OPTIONS	233
4.	DVD (DVD VIDEO AND	
т.	AVCHD™ DISC)	235
	OVERVIEW	
	DVD VIDEO OPTIONS	237
	AVCHD™ VIDEO OPTIONS	241
5.	Blu-ray Disc™	
٠.	(BD-Video AND BDAV)	242
	OVERVIEW	242
	BD-VIDEO OPTIONS	244
	BDAV OPTIONS	248
6.	USB MEMORY	250
	OVERVIEW	250
7.	iPod	253
	OVERVIEW	
	iPod AUDIO	
8.	Bluetooth® AUDIO	256
0.	OVERVIEW	
	Bluetooth® AUDIO	
9.	SD CARD	
	SELECTING THE SD MODE	
	MUSIC	
	VIDEO/MOVIE	
	VIDEO (SD AVCHD <sub>TM</sub> )	
10.	EXTERNAL DEVICES	
	OVERVIEW	2/1

9	SETUP FOR REAR SEAT ENTERTAINMENT SYSTEM		
1.	REAR SEAT ENTERTAINMENT SYSTEM SETTINGS	272	4
	DISPLAYING THE SETTING SCREEN	. 272	
10	TIPS FOR OPERATING REAR SEAT ENTERTAINMENT SYSTEM		
1.	OPERATING INFORMATION		
	CAUTION SCREEN	. 276	
	WHEN  APPEARS ON		
	THE SCREEN		
	THE REMOTE CONTROLLER		
	HEADPHONES	. 277	
	VOLUME	. 277	
	COPYRIGHTS AND TRADEMARKS	278	
	CD/DVD/Blu-ray Disc™ PLAYER		
	AND DISCS	282	
	SD CARD	291	
	A/V INPUT PORT	296	

#### 1. BASIC OPERATION

#### 1. QUICK REFERENCE

The audio control screen can be reached by the following methods:

► Using the instrument panel

Press the "RADIO" or "MEDIA" button.

► From the "Menu" screen

Press the "MENU" button on the Remote Touch, then select "Radio" or "Media".


The audio functions can also be displayed and operated on the "Side Display".  $(\rightarrow P. 413)$ 

Some audio functions can also be operated from the rear seat.  $(\rightarrow P. 216)$ 

#### **■ CONTROL SCREEN**



#### ■ CONTROL PANEL

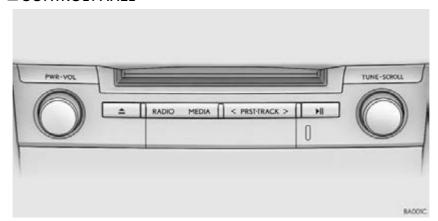

Function	Page
Using the radio	151
Playing an audio CD or MP3/WMA/AAC disc	168
Playing a DVD	171
Playing a USB memory	176
Playing an iPod <sup>®</sup>	180
Playing a Bluetooth <sup>®</sup> device	184
Using the AUX port	189
Using the steering wheel audio switches	193
Using the rear seat audio controls*	196
Audio system settings	199
Using the rear seat entertainment system*	216

<sup>\*:</sup> If equipped

#### (INFORMATION)

 $\bullet$  The display and button positions will differ depending on the type of the system.

#### 1. BASIC OPERATION

#### 2. SOME BASICS

This section describes some of the basic features of the audio/visual system. Some information may not pertain to your system.

Your audio/visual system works when the engine <power> switch is in ACCES-SORY or IGNITION ON <ON> mode.

#### ,

#### NOTICE


To prevent the 12-volt battery from being discharged, do not leave the audio/visual system on longer than necessary when the engine is not running <the hybrid system is not operating>.

#### **CERTIFICATION**

#### CAUTION:

- For vehicles sold in U.S.A.:
   Part 15 of the FCC Rules
   FCC WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equip
- Laser products
  - USE OF CONTROL OR ADJUST-MENT OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIA-TION EXPOSURE.
  - THE USE OF OPTICAL INSTRU-MENTS WITH THIS PRODUCT WILL INCREASE EYE HAZARD.

# TURNING THE SYSTEM ON AND OFF

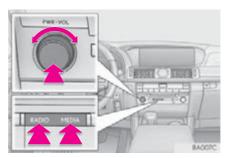


"PWR·VOL" knob: Press to turn the audio/ visual system on and off. The system turns on in the last mode used. Turn this knob to adjust the volume.

"RADIO", "MEDIA" button: Press to display screen buttons for the audio/visual system.

 A function that enables automatic return to the previous screen from the audio/ visual screen can be selected. (→P. 56)

# SELECTING AN AUDIO SOURCE

- Display the audio control screen.
   (→P. 140)
- ► Using the instrument panel
- 2 Each time the "RADIO" or "MEDIA" button is pressed, the audio source changes.

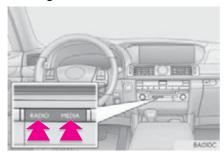

- "RADIO" button: To change radio modes.
  "MEDIA" button: To change media modes.
- From the audio source selection screen
- 2 Select "Source".
- 3 Select the desired source.

#### (INFORMATION)

- Dimmed screen buttons cannot be operated.
- When there are two pages, select ">" or "<" to change the page.</p>
- •When "Rear" is selected, the rear seat entertainment system can be operated from the front seats. (→P. 227)

### REORDERING THE AUDIO SOURCE

- Display the audio control screen.
   (→P. 140)
- 2 Select "Source".
- 3 Select "Reorder".
- 4 Select the desired audio source then "<" or ">" to reorder.

#### **DISC SLOT**

#### **INSERTING A DISC**


1 Insert a disc into the disc slot.



• After insertion, the disc is automatically loaded.

#### EJECTING A DISC

Press the ≜ button and remove the disc.

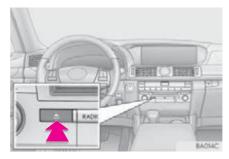

#### NOTICE

 Never try to disassemble or oil any part of the DVD player. Do not insert anything other than a disc into the slot.

#### (INFORMATION)

- The player is intended for use with 4.7 in. (12 cm) discs only.
- When inserting a disc, gently insert the disc with the label facing up.

# **USB/AUX PORT**

There are 2 USB ports and an AUX port in the console box.

1 Open the console box, then open the cover and connect a USB memory.



- Turn on the power of the device if it is not turned on.
- 2 Close the console box.




#### **NOTICE**

Depending on the size and shape of the device that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the device or the terminal, etc.

#### (INFORMATION)

 There are grooves in the tray allowing audio devices and cellular phones to be connected to the sockets while they are on the tray in the console box.

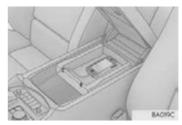


• If 2 devices are connected to the USB ports, depending on the devices, both may not be able to be recognized by the system at the same time.

#### USING A 4-POLE AUX CABLE

To view a video on an iPod video or External video, it is necessary to use a 4-pole AUX cable to connect the portable audio device.

When connecting a portable audio device to the AUX port, use a 4-pole AUX cable with a plug that matches the exact layout shown in the illustration.

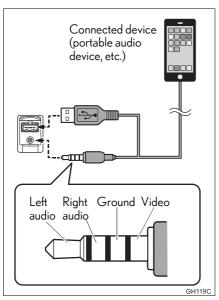


 When using an iPod video, a cable that has a 4-pole AUX plug and a USB connector is necessary. Connect the plug and connector to the AUX and USB ports.

#### (INFORMATION)

 If a 4-pole AUX cable with a different layout is used, audio and/or video may not be output properly.

## "Sound Settings" SCREEN

- Display the audio control screen.
   (→P. 140).
- 2 Select ■Sound.
- 3 Select the desired tab to be set.

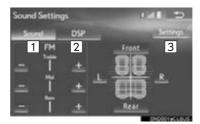

No.	Information	Page
1	Select to set the tone and balance.	147
2	Select to set the DSP control.	148
3	Select to change audio settings.	199

#### **TONE AND BALANCE**

#### TONE:


How good an audio program sounds is largely determined by the mix of the treble, mid and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid and bass.

#### **BALANCE:**

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that when listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of 1 group of sounds while decreasing the volume of another.

1 Select the "Sound" tab and select the desired item to be set.

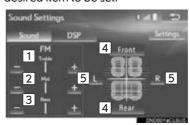

No.	Function	
1	Select "+" or "-" to adjust high- pitched tones.	
2	Select "+" or "-" to adjust mid-pitched tones.	
3	Select "+" or "-" to adjust low-pitched tones.	
4	Select to adjust the sound balance between the front and rear speakers.	
5	Select to adjust the sound balance between the left and right speakers.	

## **DSP CONTROL**

1 Select the "DSP" tab and select the desired item to be set.



No.	Function
1	The system adjusts to the optimum volume and tone quality according to vehicle speed to compensate for increased vehicle noise.
2	This function can create a feeling of presence.

# AUDIO SCREEN ADJUSTMENT

## **SCREEN SIZE SETTINGS**

The screen size can be selected for each type of media.

- ► DVD video/iPod video/External video
- Display the audio control screen.(→P. 140)
- 2 Select "Options".
- 3 Select "Wide".
- 4 Select the desired item to be adjusted.



No.	Function
1	Select to display a $4:3$ screen, with either side in black.
2	Select to enlarge the image horizontally and vertically to full screen.
3	Select to enlarge the image by the same ratio horizontally and vertically.

#### CONTRAST, BRIGHTNESS, COLOR AND TONE ADJUSTMENT

The brightness, contrast, color and tone of the screen can be adjusted.

- ► DVD video/iPod video/External video
- Display the audio control screen.(→P. 140)
- 2 Select "Options".
- 3 Select "Display".

# 4 Select the desired item to be adjusted.

Screen button	Function
"Color" "R"	Select to strengthen the red color of the screen.
"Color" "G"	Select to strengthen the green color of the screen.
"Tone" "+"	Select to strengthen the tone of the screen.
"Tone" "-"	Select to weaken the tone of the screen.
"Contrast" "+"	Select to strengthen the contrast of the screen.
"Contrast" "-"	Select to weaken the contrast of the screen.
"Brightness" "+"	Select to brighten the screen.
"Brightness" "-"	Select to darken the screen.

#### (INFORMATION)

Depending on the audio source, some functions may not be available.

# VOICE COMMAND SYSTEM

1 Press this switch to operate the voice command system.



 The voice command system and its list of commands can be operated. (→P. 298)


# 2. RADIO OPERATION

# 1. AM/FM RADIO


# OVERVIEW

The radio operation screen can be reached by the following methods:  $\rightarrow$ P. 143

## **■**CONTROL SCREEN

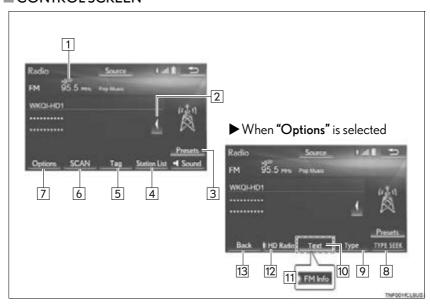

## **■** CONTROL PANEL

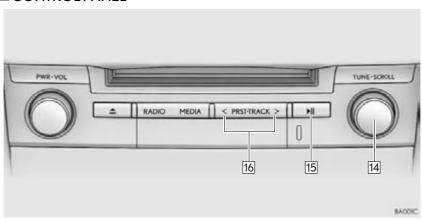

No.	Function
1	Select to display HD) multicast channels available. ( $\rightarrow$ P. 158)
2	Select to display the cache radio operation buttons. ( $\rightarrow$ P. 155)
3	Select to display the radio preset buttons. ( $\rightarrow$ P. 154)
4	Select to display a list of receivable stations. ( $\rightarrow$ P. 155)
5	Select to store artist and song title information. ( $\rightarrow$ P. 159)
6	<ul> <li>Select to scan for receivable stations.</li> <li>When a program type is selected: Select to scan for receivable stations of the selected program type/channel category.</li> </ul>
7	Select to change the screen buttons (at the bottom of the screen) to the optional screen buttons.
8	Select to seek a receivable station of the selected category.
9	Select to display the "Type List" screen. ( $\rightarrow$ P. 157)
10	Select to display text messages.
11	Analog FM only: Select to display RBDS text messages. ( $\rightarrow$ P. 157)
12	Select to turn HD Radio mode on/off. When the "HD Radio" indicator is off, the station list shows only analog broadcasts.
13	Select to change the screen buttons (at the bottom of the screen) back to the standard screen buttons.

152

No.	Function	
14	<ul><li>Turn to step up/down frequencies.</li><li>Turn to move up/down the list.</li></ul>	
15	Cache radio only: Press to turn mute on/off.	
16	<ul><li>Press to select a preset station.</li><li>Press and hold to seek for a station.</li></ul>	

# (INFORMATION)

• The radio automatically changes to stereo reception when a stereo broadcast is received.

# PRESET BUTTON SCREEN

Two preset button screens are available: the "Mixed Presets" screen and "Individual Presets" screen.

On the "Mixed Presets" screen, preset stations for all radio modes (AM, FM and XM Satellite Radio modes) are displayed together.

On the "Individual Presets" screen, only preset stations for the current radio mode are displayed.

- 1 Select "Presets".
- 2 Select the desired item.



No.	Function
1	Select to tune in to the desired preset station/channel.
2	Select to change to the "Individual Presets" screen. (On the "Individual Presets" screen, select "Mixed Presets" to change to the "Mixed Presets" screen.
3	Select to display the control screen.

#### (INFORMATION)

On the "Mixed Presets" screen, up to 36 stations (6 stations per page x 6 pages) can be set as presets.

On the "Individual Presets" screen, up to another 12 AM stations, 12 FM stations, and 12 XM Satellite Radio stations can be set as presets. (Maximum 72 stations)

#### PRESETTING A STATION

- 1 Tune in the desired station.
- 2 Select "Presets".
- 3 Select "add new".
- To change the preset station to a different one, select and hold the preset station.
- 4 Select "Yes" on the confirmation screen.
- 5 Select "OK" after setting the new preset station.

#### (INFORMATION)

•The number of preset radio stations displayed on the screen can be changed. (→P. 200)

# SELECTING A STATION FROM THE LIST

- 1 Select "Station List".
- **2** FM radio only: Select the desired program type.
- **3** Select the desired station.
- "Info": Select to display the control screen.

#### ■ REFRESHING THE STATION LIST

- 1 Select "Refresh" on the "Station List" screen and the following screen will be displayed.
- "Cancel Refresh": Select to cancel the refresh.
- "Source": Select to change to another audio source while refreshing.

#### (INFORMATION)

- The audio system sound is muted during refresh operation.
- In some situations, it may take some time to update the station list.

# CACHING A RADIO PROGRAM


A radio program can be cached and played back in a time-shifted manner.

# PLAYING BACK THE CACHE MANUALLY

The broadcast cached in the program cache can be played back manually.

1 Select  $\overline{\mathbf{I}}$  on the right side of the screen.

2 Select the desired cache radio operation button.

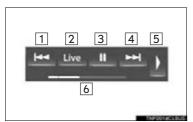

No.	Function
1	Select: Skips backward 2 minutes Select and hold: Fast rewinds contin- uously
2	Returns to the live radio broadcast
3	Pauses the playback (To restart, se-
	lect )
4	Select: Skips forward 2 minutes Select and hold: Fast forwards con- tinuously
5	Hides the cache operation buttons
6	Red vertical bar: Shows what portion of the cached broadcast is currently playing Light blue bar: Shows time in which cache writing is in progress

# AUTOMATIC PLAYBACK OF THE CACHE

If the radio broadcast is interrupted by another audio output, such as an incoming phone call, the system will automatically cache the interrupted portion and perform time-shift playback when the interruption ends. To manually operate the cache operation: ( $\rightarrow$ P. 155)

#### (INFORMATION)

- The system can store up to 10 minutes. Cached data will be erased when the radio mode or station is changed or when the audio system is turned off.
- If noise or silence occurs during the caching process, cache writing will continue, with the noise or silence recorded as is. In this case, the cached broadcast will contain the noise or silence when played back.

# RADIO BROADCAST DATA SYSTEM

This audio system is equipped with Radio Broadcast Data Systems (RBDS). RBDS mode allows text messages to be received from radio stations that utilize RBDS transmitters.

When RBDS is on, the radio can

- only select stations of a particular program type,
- display messages from radio stations,
- search for a stronger signal station.

RBDS features are available only when listening to an FM station that broadcasts RBDS information and the "FM Info" indicator is on.

# SELECTING A DESIRED PROGRAM TYPE

- 1 Select "Options".
- 2 Select "Type".
- 3 Select to select a program type/channel category.

- Once a program type has been set, "TYPE SEEK" will appear on the screen.
- The program list is in the following order:
  - "Classical"
  - "Country"
  - "EasyLis" (Easy Listening)
  - "Inform" (Information)
  - "Jazz"
  - "News"
  - "Oldies"
  - "Other"
  - "Pop Music"
  - "Religion"
  - · "Rock"
  - "R&B" (Rhythm and Blues)
  - "Sports"
  - "Talk"
  - "Traffic" (Not available when "HD Radio" indicator is off.)
  - "Alert" (Emergency Alert)
- 4 Select "TYPE SEEK" and the system will start to seek for stations in the relevant program type/channel category.

#### (INFORMATION)

• If no relevant program can be found, "no type" will appear on the screen.

# USING HD Radio™ TECHNOLOGY

HD Radio<sup>TM</sup> Technology is the digital evolution of analog AM/FM radio. Your radio product has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts have better sound quality than analog broadcasts as digital broadcasts provide free, crystal clear audio with no static or distortion. For more information, and a guide to available radio stations and programming, refer to www.hdradio.com.

# HD Radio features included in Lexus radios:

- Digital Sound HD Radio broadcasts deliver crystal-clear, digital audio quality to listeners.
- HD2/HD3 Channels FM stations can provide additional digital only audio programming with expanded content and format choices on HD2/HD3 channels.
- PSD Program Service Data (PSD) gives you on-screen information such as artist name and song title.
- iTunes Tagging Listeners can tag (store) songs they like for later review and purchase through iTunes.
- Artist Experience Images related to the broadcast are displayed on the radio screen, such as album cover art and station logos.



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

## AVAILABLE HD Radio™ TECHNOLOGY

#### **MULTICAST**

On the FM radio frequency most digital stations have "multiple" or supplemental programs on one FM station.

1 Select the "HD)" logo.



- 2 Select the desired channel.
- Turning the "TUNE-SCROLL" knob can also select the desired multicast channel.

# PRESERVING A MUSIC INFORMATION

Tag information in the music broadcasting is preserved in the system and transmits to an iPod.

- 1 Select "Tag" to bookmark the music information.
- 2 Connect an iPod.  $(\rightarrow P. 145)$
- Turn on the power of the iPod if it is not turned on.
- Once an iPod is connected, the music tag moves from the radio into the iPod.
- When the iPod is connected to iTunes, the "tagged" information of the songs which were tagged while listening to the radio can be viewed. Then a user may decide to purchase the song or CD/Album which had been listened to on their radio.

#### (INFORMATION)

- The tag information can not be preserved while scanning or caching the radio station
- If tagging the music information fails, "Saving the HD Radio tag failed." will be displayed on the screen. If this occurs, tag the information again.
- lacktriangle HD Radio  $^{\text{TM}}$  stations can be preset.
- •An orange "HD)" logo indicator will be displayed on the screen when in digital. The "HD)" logo will first appear in a gray color indicating the station is indeed (an analog and) a digital station. Once the digital signal is acquired, the logo will change to a bright orange color.
- The song title, artist name and music genre will appear on the screen when available by the radio station. In addition, radios stations may send album cover pictures when available.
- As a user works through the analog radio stations, (where applicable) the radio receiver will automatically tune from an analog signal to a digital signal within 5 seconds.


# TROUBLESHOOTING GUIDE

Experience	Cause	Action
Mismatch of time alignment- a user may hear a short period of programming replayed or an echo, stutter or skip.	The radio stations analog and digital volume is not properly aligned or the station is in ballgame mode.	None, radio broadcast issue. A user can contact the radio station.
Sound fades, blending in and out.	Radio is shifting between analog and digital audio.	Reception issue, may clear-up as the vehicle continues to be driven. Turning the indicator of the "HD Radio" button off can force radio in an analog audio.
Audio mute condition when an HD2/HD3 multicast channel had been playing.	The radio does not have access to digital signals at the moment.	This is normal behavior, wait until the digital signal returns. If out of the coverage area, seek a new sta- tion.
Audio mute delay when selecting an HD2/HD3 multicast channel preset.	The digital multicast content is not available until HD Radio™ broadcast can be decoded and make the audio available. This takes up to 7 seconds.	This is normal behavior, wait for the audio to become available.
Text information does not match the present song audio.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/ report_radio_station_experiences.
No text information shown for the present selected frequency.	Data service issue by the radio broadcaster.	Broadcaster should be notified. Complete the form; www.ibiquity.com/automotive/ report_radio_station_experiences.


# OVERVIEW

The radio operation screen can be reached by the following methods:  $\rightarrow$ P. 143

#### **■**CONTROL SCREEN

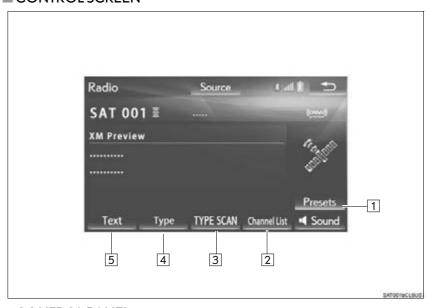

#### **■ CONTROL PANEL**

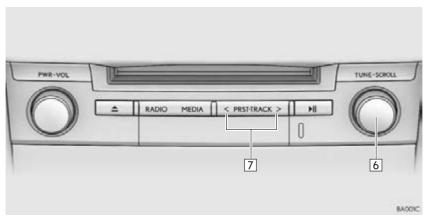

1

AUDIO/VISUAL SYSTEM

No.	Function
1	Select to display the radio preset buttons. ( $\rightarrow$ P. 154)
2	Select to display a receivable channel list. ( $\rightarrow$ P. 165)
3	Select to scan for receivable channels of the selected program type/channel category.
4	Select to display the "Type List" screen. ( $\rightarrow$ P. 157)
5	Select to display text messages.
6	<ul><li>Turn to step up/down channels.</li><li>Turn to move up/down the list.</li></ul>
7	<ul><li>Press to select a preset channel.</li><li>Press and hold to seek for a channel.</li></ul>

# HOW TO SUBSCRIBE TO AN XM Satellite Radio

To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary.

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription. Availability is limited to the 48 contiguous U.S. states and some Canadian provinces.

#### **HOW TO SUBSCRIBE**

It is necessary to enter into a separate service agreement with XM Satellite Radio in order to receive satellite broadcast programming in the vehicle. Additional activation and service subscription fees apply that are not included in the purchase price of the vehicle and digital satellite tuner.

- For complete information on subscription rates and terms, or to subscribe to XM Satellite Radio:
- ► U.S.A. Refer to <u>www.siriusxm.com</u> or call 1-877-447-0011.
- Canada
  Refer to <u>www.siriusxm.ca</u> or call
  1-877-438-9677.

## A.

#### NOTICE

- XM Radio Services Legal Disclaimers and Warnings
  - Fees and Taxes Subscription fee, taxes, one time activation fee, and other fees may apply. Subscription fee is consumer only. All fees and programming subject to change.

Subscriptions subject to Customer Agreement available at

www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada) XM service only available in the 48 contiguous United States and Canada.

Explicit Language Notice — Channels with frequent explicit language are indicated with an "XL" preceding the channel name. Channel blocking is available for XM Satellite Radio receivers by notifying XM at;

U.S.A. Customers:

Visit <u>www.siriusxm.com</u> or calling 1-877-447-0011

Canadian Customers:

Visit <u>www.siriusxm.ca</u> or calling 1-877-438-9677

- It is prohibited to copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise make available any technology or software incorporated in receivers compatible with the XM Satellite Radio System or that support the XM website, the Online Service or any of its content. Furthermore, the AMBE® voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc.
- Note: this applies to XM receivers only and not XM Ready devices.

#### (INFORMATION)

- XM Radio Services Descriptions
  - Radio and Entertainment XM offers more than 170 satellite radio channels of commercial-free music and premier sports, news, talk, and entertainment. XM is broadcast via satellites to millions of listeners across the continental United States. XM subscribers listen to XM on satellite radio receivers
  - nental United States. XM subscribers listen to XM on satellite radio receivers for the car, home, and portable use. More information about XM is available online at <a href="https://www.siriusxm.com">www.siriusxm.com</a> (U.S.A.) or www.siriusxm.ca (Canada).
- XM Radio Services Subscription Instructions
  - For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

paragraph shall be included.
Required XM Radio monthly subscriptions sold separately after trial period.
Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at <a href="https://www.siriusxm.com">www.siriusxm.com</a> (U.S.A.) or <a href="https://www.siriusxm.com">www.siriusxm.com</a> (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces. © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at: U.S.A. Customers:

Visit www.siriusxm.com or call 1-877-447-0011 Canadian Customers: Visit www.siriusxm.ca or call 1-877-438-9677

#### (INFORMATION)

- XM Satellite Radio is solely responsible for the quality, availability and content of the satellite radio services provided, which are subject to the terms and conditions of the XM Satellite Radio customer service agreement.
- Customers should have their radio ID ready; the radio ID can be found by tuning to "Ch 000" on the radio. For details, see "DISPLAYING THE RADIO ID" below.
- All fees and programming are the responsibility of XM Satellite Radio and are subject to change.

# SATELLITE TUNER TECHNOLOGY NOTICE

Lexus's satellite radio tuners are awarded Type Approval Certificates from XM Satellite Radio Inc. as proof of compatibility with the services offered by XM Satellite Radio.

#### (INFORMATION)

Satellite tuner

The tuner supports only Audio Services (Music and Talk) and the accompanying Text Information of XM<sup>®</sup> Satellite Radio.

# DISPLAYING THE RADIO ID

Each XM tuner is identified with a unique radio ID. The radio ID is required when activating an XM service or when reporting a problem.

● If "Ch 000" is selected using the "TUNE-SCROLL" knob, the ID code, which is 8 alphanumeric characters, will be displayed. If another channel is selected, the ID code will no longer be displayed. The channel (000) alternates between displaying the radio ID and the specific radio code.

# SELECTING A CHANNEL FROM THE LIST

- 1 Select "Channel List".
- ${\bf 2} \quad {\sf Select the \, desired \, channel \, category.}$
- **3** Select the desired channel.

"Info": Select to display the control screen.

# IF THE SATELLITE RADIO TUNER MALFUNCTIONS

When problems occur with the XM tuner, a message will appear on the screen. Referring to the table below to identify the problem, take the suggested corrective action.

Message	Explanation
"Ck Antenna"	The $XM$ antenna is not connected. Check whether the $XM$ antenna cable is attached securely.
CK/titeling	A short circuit occurs in the antenna or the surrounding antenna cable. See a Lexus certified dealer for assistance.
"Ch Unauth"	You have not subscribed to XM Satellite Radio. The radio is being updated with the latest encryption code. Contact XM Satellite Radio for subscription information. When a contract is canceled, you can choose "Ch 000" and all free-to-air channels.
Cil Ollautii	The premium channel you selected is not authorized. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel. To listen to the premium channel, contact XM Satellite Radio.
"No Signal"	The XM signal is too weak at the current location. Wait until your vehicle reaches a location with a stronger signal.
"Loading"	The unit is acquiring audio or program information. Wait until the unit has received the information.
"Ch Off Air"	The channel you selected is not broadcasting any programming. Select another channel. $ \\$
	There is no song/program title or artist name/feature associated with the channel at that time. No action is required.
"Ch Unavail"	The channel you selected is no longer available. Wait for about 2 seconds until the radio returns to the previous channel or "Ch 001". If it does not change automatically, select another channel.

#### (INFORMATION)

Contact the XM Listener Care Center at 1-877-447-0011 (U.S.A.) or 1-877-438-9677 (Canada).

## 3. INTERNET RADIO

# LISTENING TO INTERNET RADIO\*

One of LEXUS App Suite's features is the ability to listen to internet radio. In order to use this service, a compatible phone and the system needs to be set up. For details: →P. 394

- 1 Display the audio source selection screen. (→P. 143)
- 2 Select the desired application screen button.
- The internet radio application screen is displayed.
- Perform operations according to the displayed application screen.
- For the instrument panel operation method and the Remote Touch operation method: →P. 143
- By pressing the "RADIO" button, the "Audio" screen can be returned to.

#### (INFORMATION)

- Other applications can be activated while listening to internet radio.
- •An iPhone cannot be connected via Bluetooth® and USB connection at the same time. However, it is possible to recharge an iPhone while using applications by connecting via USB. The system uses the connection method that was used last. Therefore, if connected via USB after Bluetooth® connection, it is necessary to reconnect the iPhone via Bluetooth®.
- Some parts of applications can be adjusted using the switches on the steering wheel.
- For additional information, refer to http://www.lexus.com/enform/ or call 1-800-255-3987.

4

AUDIO/VISUAL SYSTEM

\*: With navigation function


## 3. MEDIA OPERATION

# **1. CD**


# OVERVIEW

The CD operation screen can be reached by the following methods:  $\rightarrow$ P. 143  $\blacktriangleright$  Inserting a disc ( $\rightarrow$ P. 144)

## **■ CONTROL SCREEN**

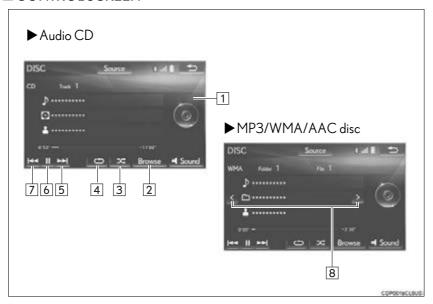

#### **■ CONTROL PANEL**

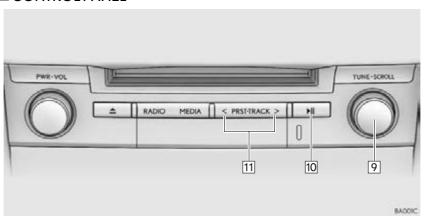

168

No.	Function
1	<ul><li>Displays cover art</li><li>Select to display a track/file list.</li></ul>
2	<ul> <li>Audio CD: Select to display a track list.</li> <li>MP3/WMA/AAC disc: Select to display a folder list. To return to the top screen, select "Now Playing" on the list screen.</li> </ul>
3	Select to set random playback. $(\rightarrow P. 170)$
4	Select to set repeat playback. ( $\rightarrow$ P. 170)
5	<ul><li>Select to select a track/file.</li><li>Select and hold to fast forward.</li></ul>
6	Select to play/pause.
7	<ul><li>Select to select a track/file.</li><li>Select and hold to rewind.</li></ul>
8	Select to select a folder.
9	<ul><li>Turn to select a track/file.</li><li>Turn to move up/down the list.</li></ul>
10	Press to play/pause.
11	<ul><li>Press to select a track/file.</li><li>Press and hold to fast forward/rewind.</li></ul>

# (INFORMATION)

- $lacktriangled{\bullet}$  If a disc contains CD-DA files and MP3/WMA/AAC files, only the CD-DA files can be played back.
- If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 characters can be displayed.

#### REPEATING

The track/file or folder currently being listened to can be repeated.

- 1 Select
- Each time is selected, the mode changes as follows:
- ► Audio CD
  - track repeat  $\rightarrow$  off
- ►MP3/WMA/AAC disc
  - file repeat  $\rightarrow$  folder repeat  $\rightarrow$  off<sup>\*1</sup>
  - file repeat  $\rightarrow$  off\*2
- \*1: When random playback is off
- \*2: When random playback is on

#### RANDOM ORDER

Tracks/files or folders can be automatically and randomly selected.

- 1 Select
- Each time is selected, the mode changes as follows:
- ► Audio CD
  - random (1 disc random)  $\rightarrow$  off
- ►MP3/WMA/AAC disc
  - random (1 folder random)  $\rightarrow$  folder random (1 disc random)  $\rightarrow$  off

#### 3. MEDIA OPERATION

#### 2. DVD

For safety reasons, the DVD video discs can only be viewed when the following conditions are met:

- (a) The vehicle is completely stopped.
- (b) The engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.
- (c) The parking brake is applied.


While driving in DVD video mode, only the DVD's audio can be heard.

The playback condition of some DVD discs may be determined by the DVD software producer. This DVD player plays a disc as the software producer intended. As such, some functions may not work properly. Be sure to read the instruction manual that comes with the individual DVD disc.  $(\rightarrow P. 205)$ 


# **OVERVIEW**

The DVD operation screen can be reached by the following methods:  $\rightarrow$ P. 143  $\blacktriangleright$  Inserting a disc ( $\rightarrow$ P. 144)

#### **■ CONTROL SCREEN**

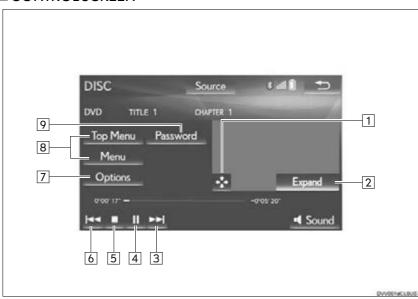

## **■** CONTROL PANEL

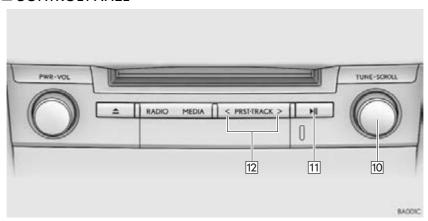

No.	Function
1	Select to display the menu control key.
2	Select to display full screen video.
3	<ul> <li>Select to select a chapter.</li> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>
4	Select to play/pause.
5	Select to stop the video screen.
6	<ul><li>Select to select a chapter.</li><li>Select and hold to rewind.</li></ul>
7	Select to display the option screen. $(\rightarrow P. 174)$
8	Select to display the menu screen.
9	Select to display the password input screen.
10	Turn to select a chapter.
11	Press to play/pause.
12	<ul><li>Press to select a chapter.</li><li>Press and hold to fast forward/rewind.</li></ul>

172



# **A** CAUTION

Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or when you change to a different audio source. The louder sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

#### (INFORMATION)

- According to the DVD disc, some menu items can be selected directly. (For details, see the manual that comes with the DVD disc provided separately.)
- lacktriangle If lacktriangle appears on the screen when a control is selected, the operation relevant to the control is not permitted.

# **DVD OPTIONS**

- 1 Select "Options".
- **2** The following screen is displayed.



No.	Function	Page
1	Select to display the title search screen.	174
2	Select to display the predetermined scene on the screen and start playing.	_
3	Select to display the audio selection screen.	174
4	Select to display the subtitle selection screen.	175
5	Select to display the angle selection screen.	175
6	Select to change the screen size.	148
7	Select to display the image quality adjustment screen.	149

## SEARCHING BY TITLE

- 1 Select "Search".
- 2 Enter the title number and select "OK".
- The player starts playing video for that title number.

# CHANGING THE AUDIO LANGUAGE

- 1 Select "Audio".
- 2 Each time "Change" is selected, the audio language is changed.
- The languages available are restricted to those available on the DVD disc.

# CHANGING THE SUBTITLE LANGUAGE

- 1 Select "Subtitle".
- 2 Each time "Change" is selected, the language the subtitles are displayed in is changed.
- The languages available are restricted to those available on the DVD disc.
- When "Hide" is selected, the subtitles can be hidden.

#### **CHANGING THE ANGLE**

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select "Angle".
- 2 Each time "Change" is selected, the angle is changed.
- The angles available are restricted to those available on the DVD disc.

# 3. MEDIA OPERATION


# 3. USB MEMORY

# OVERVIEW


The USB memory operation screen can be reached by the following methods:  $\rightarrow$  P. 143

ightharpoonup Connecting a USB memory (ightharpoonup 145)

## **■ CONTROL SCREEN**

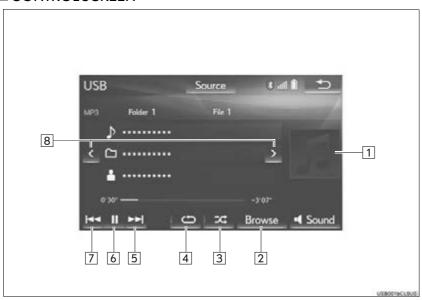

## **■ CONTROL PANEL**

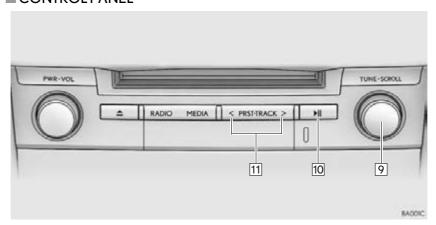

176

No.	Function
1	<ul> <li>Displays cover art</li> <li>Select to display a file/track list.</li> <li>To return to the top screen, select "Now Playing" on the list screen.</li> </ul>
2	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.
3	Select to set random playback. $(\rightarrow P. 179)$
4	Select to set repeat playback. $(\rightarrow P. 179)$
5	<ul><li>Select to select a file/track.</li><li>Select and hold to fast forward.</li></ul>
6	Select to play/pause.
7	<ul><li>Select to select a file/track.</li><li>Select and hold to rewind.</li></ul>
8	Select to select a folder/album.
9	<ul><li>Turn to select a file/track.</li><li>Turn to move up/down the list.</li></ul>
10	Press to play/pause.
11	<ul><li>Press to select a file/track.</li><li>Press and hold to fast forward/rewind.</li></ul>



# **A** CAUTION

Do not operate the player's controls or connect the USB memory while driving.



#### NOTICE

- Depending on the size and shape of the USB memory that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the USB memory or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its ter-

# (INFORMATION)

• If tag information exists, the file/folder names will be changed to track/album names.

# AUDIO/VISUAL SYSTEM

#### **REPEATING**

The file/track or folder/album currently being listened to can be repeated.

- 1 Select 🗢 .
- Each time is selected, the mode changes as follows:
- ► When random playback is off
  - file/track repeat  $\rightarrow$  folder/album repeat  $\rightarrow$  off
- ► When random playback is on
  - file/track repeat → off

#### RANDOM ORDER

Files/tracks or folders/albums can be automatically and randomly selected.

- 1 Select
- Each time is selected, the mode changes as follows:
  - random (1 folder/album random)  $\rightarrow$  folder/album random (all folder/album random)  $\rightarrow$  off


# 3. MEDIA OPERATION

# 4. iPod


# OVERVIEW

The iPod operation screen can be reached by the following methods:  $\rightarrow$ P. 143  $\blacktriangleright$  Connecting an iPod ( $\rightarrow$ P. 145)

## **■ CONTROL SCREEN**

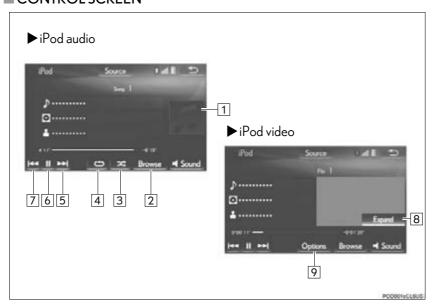

#### **■ CONTROL PANEL**

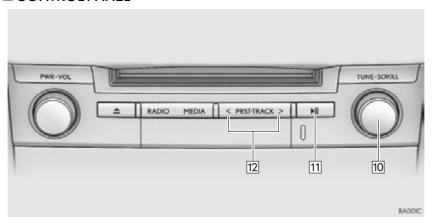

180

No.	Function		
-1 <b>10</b> .	Audio	Video	
1	<ul> <li>Displays cover art</li> <li>Select to display a track list.         To return to the top screen, select "Now Playing" on the list screen.     </li> </ul>	_	
2	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.	Select to display the play mode selection screen. To return to the top screen, select "Now Playing" on the list screen.	
3	Select to set random playback. ( $\rightarrow$ P. 183)	_	
4	Select to set repeat playback. ( $\rightarrow$ P. 183)	_	
5	<ul><li>Select to select a track.</li><li>Select and hold to fast forward.</li></ul>	<ul><li>Select to select a file.</li><li>Select and hold to fast forward.</li></ul>	
6	Select to play/pause.	Select to play/pause.	
7	<ul><li>Select to select a track.</li><li>Select and hold to rewind.</li></ul>	<ul><li>Select to select a file.</li><li>Select and hold to rewind.</li></ul>	
8	_	Select to display full screen video.	
9	_	Select to display the option screen. $(\rightarrow P. 183)$	
10	<ul><li>Turn to select a track.</li><li>Turn to move up/down the list.</li></ul>	<ul><li>Turn to select a file.</li><li>Turn to move up/down the list.</li></ul>	
11	Press to play/pause.	Press to play/pause.	
12	<ul><li>Press to select a track.</li><li>Press and hold to fast forward/rewind.</li></ul>	<ul><li>Press to select a file.</li><li>Press and hold to fast forward/rewind.</li></ul>	



### **CAUTION**

Do not operate the player's controls or connect the iPod while driving.



#### **NOTICE**

- Depending on the size and shape of the iPod that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the iPod or the terminal, etc.
- Do not leave your portable player in the car. In particular, high temperatures inside the vehicle may damage the portable player.
- Do not push down on or apply unnecessary pressure to the portable player while it is connected as this may damage the portable player or its terminal.
- Do not insert foreign objects into the port as this may damage the portable player or its ter-

#### (INFORMATION)

- The system can only output the sound while driving.
- When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.
- Depending on the iPod, the video sound may not be able to be heard.
- Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to "On" or "Off" ( $\rightarrow$ P. 200) It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.
- When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume playing from the same point it was last used.
- Depending on the iPod that is connected to the system, certain functions may not be avail-
- For viewing videos from an iPod, it is necessary to set "Video Sound Input" to "A/V".  $(\to P. 200)$
- ullet If an iPhone is connected via Bluetooth $^{ar{\mathbb{R}}}$  and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to http://www.lexus.com/enform/.
- The system may not function properly if a conversion adapter is used to connect a device.

# iPod AUDIO

### **REPEATING**

The track currently being listened to can be repeated.

- 1 Select .
- Each time is selected, the mode changes as follows:
  - track repeat → off

# **RANDOM ORDER**

Tracks or albums can be automatically and randomly selected.

- 1 Select .
- Each time is selected, the mode changes as follows:
  - track shuffle  $\rightarrow$  album shuffle  $\rightarrow$  off

# iPod VIDEO

To change to iPod video mode, select "Browse" on the iPod audio screen, then select the "Videos" tab and select the desired video file.

#### iPod VIDEO OPTIONS

- 1 Select "Options".
- ${f 2}$  Select the desired settings to change.



No.	Function	Page
1	Select to change the screen size.	148
2	Select to display the image quality adjustment screen.	149
3	Select to change audio settings.	199

# 3. MEDIA OPERATION

# 5. Bluetooth® AUDIO

The Bluetooth  $^{\circledR}$  audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.

This audio system supports Bluetooth  $^{\circledR}$ , a wireless data system capable of playing portable audio music without cables. If your device does not support Bluetooth  $^{\circledR}$ , the Bluetooth  $^{\circledR}$  audio system will not function.


# **OVERVIEW**

The Bluetooth  $^{\circledR}$  audio operation screen can be reached by the following methods:  $\rightarrow$  P. 143


Depending on the type of portable player connected, some functions may not be available and/or the screen may look differently than shown in this manual.

► Connecting a Bluetooth  $^{\textcircled{R}}$  audio device ( $\rightarrow$ P. 188)

### **■ CONTROL SCREEN**

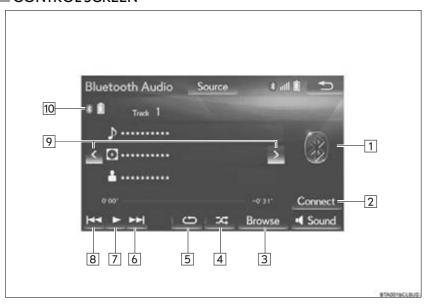

# ■ CONTROL PANEL

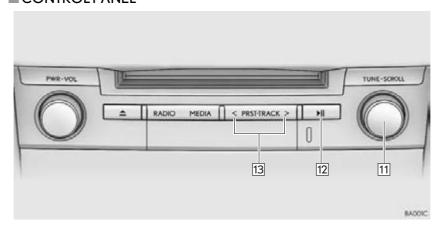

No.	Function
1	<ul> <li>Displays cover art</li> <li>Select to display a track list.</li> <li>To return to the top screen, select "Now Playing" on the list screen.</li> </ul>
2	Select to display the portable device connection screen. ( $\rightarrow$ P. 188)
3	Select to display the playlist screen. To return to the top screen, select "Now Playing" on the list screen.
4	Select to set random playback. ( $\rightarrow$ P. 188)
5	Select to set repeat playback. $(\rightarrow P. 188)$
6	<ul><li>Select to select a track.</li><li>Select and hold to fast forward.</li></ul>
7	Select to play/pause.
8	<ul><li>Select to select a track.</li><li>Select and hold to rewind.</li></ul>
9	Select to select an album.
10	Displays Bluetooth $^{\circledR}$ device condition
11	<ul><li>Turn to select a track.</li><li>Turn to move up/down the list.</li></ul>
12	Press to play/pause.
13	<ul><li>Press to select a track.</li><li>Press and hold to fast forward/rewind.</li></ul>

# A

### CAUTION

- $\bullet$  Do not operate the player's controls or connect to the Bluetooth  $^{\circledR}$  audio system while driving.
- Your audio unit is fitted with Bluetooth<sup>®</sup> antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth<sup>®</sup> antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.



#### NOTICE

Do not leave your portable player in the vehicle. In particular, high temperatures inside the vehicle may damage the portable player.

#### (INFORMATION)

- Depending on the Bluetooth<sup>®</sup> device that is connected to the system, the music may start playing when selecting while it is paused. Conversely, the music may pause when selecting while it is playing.
- In the following conditions, the system may not function:
  - The Bluetooth® device is turned off.
  - The Bluetooth® device is not connected.
  - The Bluetooth® device has a low battery.
- It may take time to connect the phone when Bluetooth® audio is being played.
- For operating the portable player, see the instruction manual that comes with it.
- If the Bluetooth<sup>®</sup> device is disconnected due to poor reception from the Bluetooth<sup>®</sup> network when the engine 'power' switch is in ACCESSORY or IGNITION ON 'ON' mode, the system automatically reconnects the portable player.
- If the Bluetooth<sup>®</sup> device is disconnected on purpose, such as it was turned off, this does not happen. Reconnect the portable player manually.
- Bluetooth  $^{\circledR}$  device information is registered when the Bluetooth  $^{\circledR}$  device is connected to the Bluetooth  $^{\circledR}$  audio system. When selling or disposing of the vehicle, remove the Bluetooth  $^{\circledR}$  audio information from the system. (→P. 61)
- In some situations, sound output via the Bluetooth® audio system may be out of sync with the connected device or output intermittently.

# CONNECTING A Bluetooth® DEVICE

To use the Bluetooth $^{(\!R\!)}$  audio system, it is necessary to register a Bluetooth $^{(\!R\!)}$  device with the system.

- ► Registering an additional device
- 1 Select "Connect" on the Bluetooth<sup>®</sup> audio control screen.
- **2** For more information:  $\rightarrow$  P. 46
- ► Selecting a registered device
- 1 Select "Connect" on the Bluetooth<sup>®</sup> audio control screen.
- **2** For more information:  $\rightarrow$ P. 48

# LISTENING TO Bluetooth® AUDIO

#### REPEATING

The track or album currently being listened to can be repeated.

- 1 Select
- Each time is selected, the mode changes as follows:
  - track repeat  $\rightarrow$  album repeat  $\rightarrow$  off

# RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

- 1 Select .
- Each time is selected, the mode changes as follows:
- album random  $\rightarrow$  all track random  $\rightarrow$  off

# 3. MEDIA OPERATION


# 6. AUX

While driving, video will not be displayed. Only sound will be output.


# **OVERVIEW**

The AUX operation screen can be reached by the following methods:  $\rightarrow$ P. 143  $\blacktriangleright$  Connecting a device to the AUX port ( $\rightarrow$ P. 145)

# **■**CONTROL SCREEN

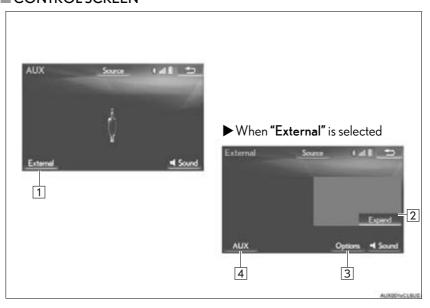

# **■** CONTROL PANEL

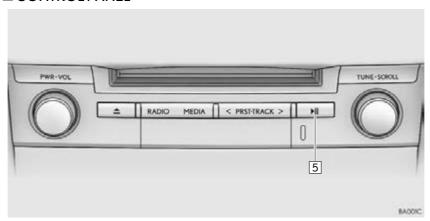

No.	Function		
	AUX	External	
1	Select to display the external operation screen.	_	
2	_	Select to display full screen video.	
3	_	Select to display the option screen. $(\rightarrow P. 192)$	
4	_	Select to display the aux operation screen.	
5	Press to turn mute on/off.	Press to turn mute on/off.	



# **CAUTION**

Do not connect portable audio device or operate the controls while driving.



#### **NOTICE**

- Depending on the size and shape of the portable audio device that is connected to the system, the console box may not close fully. In this case, do not forcibly close the console box as this may damage the portable audio device or the terminal, etc.
- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.

#### (INFORMATION)

- ●When connecting an external device that does not output an image, select "AUX". If "External" is selected, an all-black (blank) screen will be displayed.
- If the source is changed between AUX and External while the system is operating, sound may not be output momentarily.

# **EXTERNAL OPTIONS**


- 1 Select "Options".
- 2 Select the desired settings to change.



No.	Function	Page
1	Select to change the screen size.	148
2	Select to display the image quality adjustment screen.	149

# 1. STEERING SWITCHES

Some parts of the audio/visual system can be adjusted using the switches on the steering wheel.

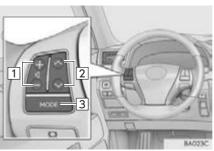

No. Switch

1 Volume control switch

2 "^v switch

3 "MODE" switch

### ► Volume control switch

Mode	Operation	Function
	Press	Volume up/down
All	Press and hold (0.8 sec. or more)	Volume up/down continuously

,

4 AUDIO/VISUAL SYSTEM

# ► "∧ ∨" switch

Mode	Operation	Function
	Press	Preset station up/down
AM, FM	Press and hold (0.8 sec. or more)	Seek up/down continuously while the switch is being pressed
	Press	Preset channel up/down
SAT	Press and hold (0.8 sec. or more)	Type seek up/down
	Press and hold (1.5 sec. or more)	Fast up/down
	Press	Track up/down
CD	Press and hold (0.8 sec. or more)	Fast forward/rewind
MP3/	Press	File up/down
WMA/AAC disc	Press and hold (0.8 sec. or more)	Fast forward/rewind
	Press	Chapter up/down
DVD	Press and hold (0.8 sec. or more)	Fast forward/rewind
	Press	File/Track up/down
USB	Press and hold (0.8 sec. or more)	Fast forward/rewind
	Press	Track/File up/down
iPod	Press and hold (0.8 sec. or more)	Fast forward/rewind
Bluetooth <sup>®</sup>	Press	Track up/down
audio	Press and hold (0.8 sec. or more)	Fast forward/rewind

# ► "MODE" switch

	Mode	Operation	Function
	AM, FM,	Press	Change audio modes
	SAT, AUX	Press and hold (0.8 sec. or more)	Mute
	CD, MP3/ WMA/AAC	Press	Change audio modes
d	disc, DVD, USB, iPod, Bluetooth <sup>®</sup> audio, APPS*	Press and hold (0.8 sec. or more)	Pause

<sup>\*:</sup> With navigation function


### (INFORMATION)

• In the APPS mode, some operation may be done on the screen depend on the selected APPS.

# 4. AUDIO/VISUAL REMOTE CONTROLS

# 2. REAR SEAT AUDIO CONTROLS\*

Some parts of the audio/visual system can be adjusted using the switches on the rear seat audio controls.

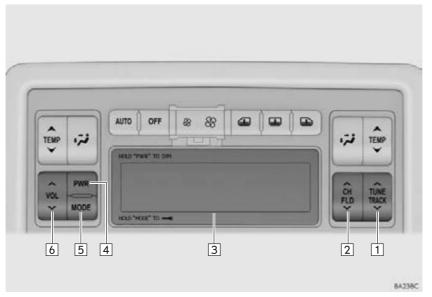

No.	Switch
1	"TUNE/TRACK" switch
2	"CH/FLD" switch
3	Display
4	"PWR" switch
5	"MODE" switch
6	"VOL" switch

\*: If equipped

196

# ► "TUNE/TRACK" switch

Mode	Operation	Function
	Press	Tune the frequency up/down
AM, FM	Press and hold (0.8 sec. or more)	Seek up/down continuously while the switch is being pressed
	Press	Select a channel
SAT	Press and hold (0.8 sec. or more)	Fast up/down
	Press	Track up/down
CD	Press and hold (0.8 sec. or more)	Fast forward/rewind
MP3/	Press	File up/down
WMA/AAC disc	Press and hold (0.8 sec. or more)	Fast forward/rewind
	Press	Chapter up/down
DVD	Press and hold (0.8 sec. or more)	Fast forward/rewind
	Press	File/Track up/down
USB	Press and hold (0.8 sec. or more)	Fast forward/rewind
	Press	Track/File up/down
iPod	Press and hold (0.8 sec. or more)	Fast forward/rewind
Bluetooth <sup>®</sup>	Press	Track up/down
audio	Press and hold (0.8 sec. or more)	Fast forward/rewind

# 4. AUDIO/VISUAL REMOTE CONTROLS

# ► "CH/FLD" switch

Mode	Operation	Function
AM, FM, SAT	Press	Preset station/channel up/down
MP3/ WMA/AAC disc	Press	Folder up/down
USB	Press	Folder/Album up/down
Bluetooth <sup>®</sup> audio	Press	Album up/down

# ► "PWR" switch

Mode	Operation	Function
	Press	Audio system on/off
All	Press and hold (3 sec. or more)	Control panel illumination on the rear armrest on/off

# ► "MODE" switch

Mode	Operation	Function
	Press	Change audio modes
All	Press and hold (3 sec. or more)	Lock/Unlock the buttons on the rear armrest

# ► "VOL" switch

Mode	Operation	Function
	Press	Volume up/down
All	Press and hold (0.8 sec. or more)	Volume up/down continuously

# (INFORMATION)


● In the APPS mode, some operation may be done on the screen depend on the selected APPS.

198

# 1. AUDIO SETTINGS


Detailed audio settings can be programmed.

1 Press the "MENU" button on the Remote Touch.

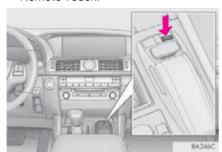

- 2 Select "Setup".
- 3 Select "Audio".
- 4 Select the desired item to be set.

# AUDIO SETTINGS SCREEN

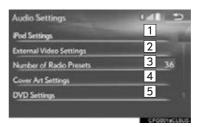

No.	Function	Page
1	Select to set the iPod audio signal input settings.	200
2	Select to set the video signal format settings.	200
3	Select to change the number of preset radio stations displayed on the screen.	200
4	Select to set detailed cover art settings.	200
5*	Select to set detailed DVD settings.	201

<sup>\*:</sup> Only in DVD video mode

1

4 AUDIO/VISUAL SYSTEM

#### iPod SETTINGS

- Display the audio setting screen.(→P. 199)
- 2 Select "iPod Settings".
- 3 Select "Video Sound Input".
- 4 Select a screen button for the desired setting.

#### **EXTERNAL VIDEO SETTINGS**

- 1 Display the audio setting screen. (→P. 199)
- 2 Select "External Video Settings".
- 3 Select "Video Signal Switch".
- 4 Select a screen button for the desired setting.

# SETTING THE NUMBER OF RADIO PRESETS

- Display the audio setting screen.(→P. 199)
- 2 Select "Number of Radio Presets".
- 3 Select the button with the desired number to be displayed.
- "Default": Select to default the settings.

#### **COVER ART SETTINGS**

- 1 Display the audio setting screen. (→P. 199)
- 2 Select "Cover Art Settings".
- 3 Select the desired button to be set.



No.	Function
1	Select on/off to set the cover art display in DISC mode.
2	Select on/off to set the cover art display in USB mode.
3	Select on/off to set the priority of the Gracenote database in USB mode.
4	Select on/off to set the cover art display in iPod mode.
5	Select on/off to set the priority of the Gracenote database in iPod mode.

#### (INFORMATION)

 Images from the Gracenote database displayed on the screen may be different from the actual cover art.

# **DVD SETTINGS**

- Display the audio setting screen.
   (→P. 199)
- 2 Select "DVD Settings".
- 3 Select the items to be set.





No.	Function	Page
1	Select to change the audio language.	202
2	Select to change the subtitle language.	202
3	Select to change the language of the DVD video menu.	202
4	Select to set the angle mark on/off.	_
5	Select to set the parental lock.	202
6	Select to set the auto start playback on/off. Discs that are inserted while the vehicle is in motion will automatically start playing. Certain discs may not play.	_
7	Select to set a dynamic range.	202
8	Select to initialize all menus.	_

#### **AUDIO LANGUAGE**

- 1 Select "Audio Language".
- 2 Select the desired language to be heard.
- If the desired language to be heard cannot be found on this screen, select "Other" and enter a language code. (→P. 203)

### **■ SUBTITLE LANGUAGE**

- 1 Select "Subtitle Language".
- 2 Select the desired language to be read.
- If the desired language to be read cannot be found on this screen, select "Other" and enter a language code. (→P. 203)

#### **■ MENU LANGUAGE**

- 1 Select "Menu Language".
- 2 Select the desired language to be read.
- If the desired language to be read cannot be found on this screen, select "Other" and enter a language code. (→P. 203)

#### ■ PARENTAL LOCK

- 1 Select "Parental Lock".
- 2 Enter the 4-digit personal code.
- 3 Select a parental level (1-8).

#### ■ SOUND DYNAMIC RANGE

The difference between the lowest volume and the highest volume can be adjusted.

- 1 Select "Dynamic Range".
- 2 Select "MAX", "STD" or "MIN".

# LANGUAGE CODES LIST

Code	Language	Code	Language	Code	Language	Code	Language
0514	English	0515	Esperanto	1214	Lingala	1913	Samoan
1001	Japanese	0520	Estonian	1215	Laotian	1914	Shona
0618	French	0521	Basque	1220	Lithuanian	1915	Somali
0405	German	0601	Persian	1222	Latvian, Lettish	1917	Albanian
0920	Italian	0609	Finnish	1307	Malagasy	1918	Serbian
0519	Spanish	0610	Fiji	1309	Maori	1919	Siswati
2608	Chinese	0615	Faroese	1311	Macedonian	1920	Sesotho
1412	Dutch	0625	Frisian	1312	Malayalam	1921	Sundanese
1620	Portuguese	0701	Irish	1314	Mongolian	1923	Swahili
1922	Swedish	0704	Scottish-Gaelic	1315	Moldavian	2001	Tamil
1821	Russian	0712	Galician	1318	Marathi	2005	Telugu
1115	Korean	0714	Guarani	1319	Malay	2007	Tajik
0512	Greek	0721	Gujarati	1320	Maltese	2008	Thai
0101	Afar	0801	Hausa	1325	Burmese	2009	Tigrinya
0102	Abkhazian	0809	Hindi	1401	Nauru	2011	Turkmen
0106	Afrikaans	0818	Croatian	1405	Nepali	2012	Tagalog
0113	Amharic	0821	Hungarian	1415	Norwegian	2014	Setswana
0118	Arabic	0825	Armenian	1503	Occitan	2015	Tongan
0119	Assamese	0901	Interlingua	1513	(Afan) Oromo	2018	Turkish
0125	Aymara	0905	Interlingue	1518	Oriya	2019	Tsonga
0126	Azerbaijani	0911	Inupiak	1601	Punjabi	2020	Tatar
0201	Bashkir	0914	Indonesian	1612	Polish	2023	Twi
0205	Byelorussian	0919	Icelandic	1619	Pashto, Pushto	2111	Ukrainian
0207	Bulgarian	0923	Hebrew	1721	Quechua	2118	Urdu
0208	Bihari	1009	Yiddish	1813	Rhaeto-Romance	2126	Uzbek
0209	Bislama	1023	Javanese	1814	Kirundi	2209	Vietnamese
0214	Bengali, Bangla	1101	Georgian	1815	Romanian	2215	Volapük
0215	Tibetan	1111	Kazakh	1823	Kinyarwanda	2315	Wolof
0218	Breton	1112	Greenlandic	1901	Sanskrit	2408	Xhosa
0301	Catalan	1113	Cambodian	1904	Sindhi	2515	Yoruba
0315	Corsican	1114	Kannada	1907	Sango	2621	Zulu
0319	Czech	1119	Kashmiri	1908	Serbo-Croatian		
0325	Welsh	1121	Kurdish	1909	Sinhalese		
0401	Danish	1125	Kirghiz	1911	Slovak		
0426	Bhutani	1201	Latin	1912	Slovenian		

#### 6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

### 1. OPERATING INFORMATION

#### NOTICE

- To avoid damage to the audio/visual system:
  - Be careful not to spill beverages over the audio/visual system.
  - Do not put anything other than an appropriate disc into the disc slot.

#### (INFORMATION)

• The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio/visual system which you are listening to. However, this does not indicate a malfunction.

#### **RADIO**

Usually, a problem with radio reception does not mean there is a problem with the radio — it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or phone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther the vehicle is from a station, the weaker its signal will be. In addition, reception conditions change constantly as the vehicle moves.

Here, some common reception problems that probably do not indicate a problem with the radio are described.

#### FM

Fading and drifting stations: Generally, the effective range of FM is about 25 miles (40 km). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path: FM signals are reflective, making it possible for 2 signals to reach the vehicle's antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering: These occur when signals are blocked by buildings, trees or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping: If the FM signal being listened to is interrupted or weakened, and there is another strong station nearby on the FM band, the radio may tune in the second station until the original signal can be picked up again.

#### **AM**

Fading: AM broadcasts are reflected by the upper atmosphere – especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference: When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static: AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening or electrical motors. This results in static.

#### XM

- Cargo loaded on the roof luggage carrier, especially metal objects, may adversely affect the reception of XM Satellite Radio.
- Alternation or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

# **DVD PLAYER AND DISC**

- This DVD player is intended for use with 4.7 in. (12 cm). discs only.
- Extremely high temperatures can keep the DVD player from working. On hot days, use the air conditioning system to cool the inside of the vehicle before using the player.
- Bumpy roads or other vibrations may make the DVD player skip.
- If moisture gets into the DVD player, the discs may not be able to be played. Remove the discs from the player and wait until it dries.

# **A** CAUTION

The DVD player uses an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

# 6. TIPS FOR OPERATING THE AUDIO/VISUAL SYSTEM

# **DVD PLAYER**




- Use only discs marked as shown above.
   The following products may not be playable on your player:
  • SACD

  - dts CD
  - Copy-protected CDDVD-Audio

  - Video CD
  - DVD-RAM


#### ► Special shaped discs

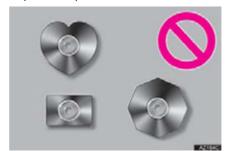

► Transparent/translucent discs



► Low quality discs

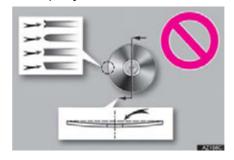


#### ► Labeled discs



#### NOTICE

- Do not use special shaped, transparent/ translucent, low quality or labeled discs such as those shown in the illustrations. The use of such discs may damage the player, or it may be impossible to eject the disc.
- This system is not designed for use of Dual Discs. Do not use Dual Discs because they may cause damage to the player.
- Do not use discs with a protection ring.
   The use of such discs may damage the player, or it may be impossible to eject the disc.
- Do not use printable discs. The use of such discs may damage the player, or it may be impossible to eject the disc.

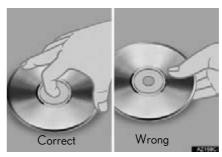

- Handle discs carefully, especially when inserting them. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scratches, warping, pin holes or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)
- Remove discs from the players when not in use. Store them in their plastic cases away from moisture, heat and direct sunlight.



To clean a disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in circles). Dry it with another soft, lint-free cloth. Do not use a conventional record cleaner or anti-static device.

# CD-R/RW AND DVD-R/RW DISCS

- CD-R/CD-RW discs that have not been subject to the "finalizing process" (a process that allows discs to be played on a conventional CD player) cannot be played.
- It may not be possible to play CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of the unit.
- It may not be possible to play discs recorded on a personal computer depending on the application settings and the environment. Record with the correct format. (For details, contact the appropriate application manufacturers of the applications.)
- CD-R/CD-RW discs may be damaged by direct exposure to sunlight, high temperatures or other storage conditions. The unit may be unable to play some damaged discs.
- If you insert a CD-RW disc into the player, playback will begin more slowly than with a conventional CD or CD-R disc.
- Recordings on CD-R/CD-RW cannot be played using the DDCD (Double Density CD) system.

#### **DVD VIDEO DISCS**

This DVD player conforms to NTSC/PAL color TV formats. DVD video discs conforming to another format such as SECAM cannot be used.

Region codes: Some DVD video discs have the following region code indicating which countries the DVD video disc can be played in on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, error message appears on the screen. Even if the DVD video disc does not have a region code, there are cases when it cannot be used.

Code	Country
ALL	All countries
1	North America

#### MARKS SHOWN ON DVD VIDEO DISCS

NTSC/PAL	Indicates NTSC/PAL format of color TV.
2))	Indicates the number of audio tracks.
2	Indicates the number of language subtitles.
<u>∞</u> 3 1	Indicates the number of angles.
16:9 LB 4:3	Indicates the screen to be selected. Wide screen: 16:9 Standard: 4:3
	Indicates a region code by which this vid- eo disc can be played. "ALL": in all countries Number: region code

#### DVD VIDEO DISC GLOSSARY

DVD video discs: Digital Versatile Disc that holds video. DVD video discs have adopted "MPEG2", one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help users enjoy the more advanced technology of DVD video.

Viewer restrictions: This feature limits what can be viewed in conformity with a level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

- Level 1: DVD video discs for children can be played.
- Level 2 7: DVD video discs for children and G-rated movie can be played.
- Level 8: All types of the DVD video discs can be played.

**Multi-angle feature**: The same scene can be enjoyed from different angles.

Multi-language feature: The subtitle and audio language can be selected.

Region codes: The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. For region codes:  $(\rightarrow P. 208)$ 

**Audio**: This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.

**Title and chapter**: Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

**Title**: The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

**Chapter**: A unit smaller than that of title. A title comprises of several chapters.

 Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

#### iPod



- "Made for iPod", "Made for iPhone", and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.
- iPad, iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning is a trademark of Apple Inc.
- The Lightning connector works with iPhone 5s, iPhone 5c, iPhone 5, iPod touch (5th generation), and iPod nano (7th generation).
- The 30-pin connector works with iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 4th generation), iPod classic, and iPod nano (1st through 6th generation).
- USB works with iPhone 5s, iPhone 5c, iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, iPod touch (1st through 5th generation), iPod classic, and iPod nano (1st through 7th generation).
- Bluetooth<sup>®</sup> technology works with iPhone 5s, iPhone 5c, iPhone 5, iPhone 4S, iPhone 4, iPhone 3GS, iPhone 3G, iPhone, and iPod touch (2nd through 5th generation).

#### Made for

- iPod touch (5th generation)\*
- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (7th generation)\*
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 5s\*
- iPhone 5c\*
- iPhone 5\*
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone
- \*: iPod video not supported

#### (INFORMATION)

 Depending on differences between models or software versions etc., some models might be incompatible with this system.

# FILE INFORMATION

**■ COMPATIBLE** 

**FILES** 

# **■ COMPATIBLE USB DEVICES**

USB communication formats	USB 2.0 HS (480 Mbps) and FS (12 Mbps)	
File formats	FAT 16/32	
Correspondence class	Mass storage class	

# COMPRESSED

ltem	USB/iPod	DISC
Compatible file format (audio)	MP3/WMA/AAC	
Folders in the device	Maximum 3000	Maximum 192
Files in the device	Maximum 9999	Maximum 255
Files per folder	Maximum 255	_

# ■ CORRESPONDING SAMPLING FREQUENCY

File type	Frequency (kHz)
MP3 files: MPEG1LAYER3	32/44.1/48
MP3 files: MPEG 2 LSF LAYER 3	16/22.05/24
WMA files: Ver. 7, 8, 9* (9.1/9.2)	32/44.1/48
AAC files: MPEG4/AAC-LC	11.025/12/16/ 22.05/24/32/ 44.1/48

<sup>\*:</sup> Only compatible with Windows Media Audio Standard

#### ■ CORRESPONDING BIT RATES\*1

File type	Bit rate (kbps)
MP3 files: MPEG1LAYER 3	32 - 320
MP3 files: MPEG 2 LSF LAYER 3	8 - 160
WMA files: Ver. 7, 8	CBR 48 - 192
WMA files: Ver. 9* <sup>2</sup> (9.1/9.2)	CBR 48 - 320
AAC files: MPEG4/AAC-LC	8 - 320


 <sup>\*1.</sup> Variable Bit Rate (VBR) compatible
 \*2. Only compatible with Windows Media Audio Standard

#### **■ COMPATIBLE CHANNEL MODES**


File type	Channel mode	
MP3 files	Stereo, joint stereo, dual channel and monaural	
WMA files	2ch	
AAC files	1ch, 2ch (Dual channel is not supported)	

- MP3 (MPEG Audio Layer 3), WMA (Windows Media Audio) and AAC (Advanced Audio Coding) are audio compression standards.
- This system can play MP3/WMA/AAC files on CD-R/CD-RW/DVD-R/DVD-RW discs and USB memory.
- This system can play disc recordings compatible with ISO 9660 level 1 and level 2 and with the Romeo and Joliet file system and UDF (2.01 or lower).
- When naming an MP3/WMA/AAC file, add an appropriate file extension (.mp3/.wma/.m4a).
- This system plays back files with .mp3/ .wma/.m4a file extensions as MP3/WMA/ AAC files respectively. To prevent noise and playback errors, use the appropriate file extension.
- This system can play only the first session/ border when using multi session/border compatible discs.
- MP3 files are compatible with the ID3 Tag Ver. 1.0, Ver. 1.1, Ver. 2.2 and Ver. 2.3 formats. This system cannot display disc title, track title and artist name in other formats.
- WMA/AAC files can contain a WMA/ AAC tag that is used in the same way as an ID3 tag. WMA/AAC tags carry information such as track title and artist name.
- The emphasis function is available only when playing MP3 files.
- This system can play back AAC files encoded by iTunes.

- The sound quality of MP3/WMA files generally improves with higher bit rates. In order to achieve a reasonable level of sound quality, discs recorded with a bit rate of at least 128 kbps are recommended.
- m3u playlists are not compatible with the audio player.
- MP3i (MP3 interactive) and MP3PRO formats are not compatible with the audio player.
- The player is compatible with VBR (Variable Bit Rate).
- When playing back files recorded as VBR (Variable Bit Rate) files, the play time will not be correctly displayed if the fast forward or reverse operations are used.
- It is not possible to check folders that do not include MP3/WMA/AAC files.
- MP3/WMA/AAC files in folders up to 8 levels deep can be played. However, the start of playback may be delayed when using discs containing numerous levels of folders. For this reason, we recommend creating discs with no more than 2 levels of folders.

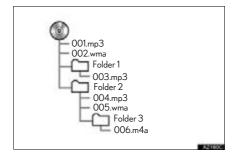

 The play order of the compact disc with the structure shown above is as follows:

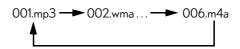

 The order changes depending on the personal computer and MP3/WMA/AAC encoding software you use.

#### **TERMS**

#### **PACKET WRITE**

 This is a general term that describes the process of writing data on-demand to CD-R, etc., in the same way that data is written to floppy or hard discs.

#### **ID3TAG**

• This is a method of embedding track-related information in an MP3 file. This embedded information can include the track number, track title, the artist's name, the album title, the music genre, the year of production, comments, cover art and other data. The contents can be freely edited using software with ID3 tag editing functions. Although the tags are restricted to a number of characters, the information can be viewed when the track is played back.

#### **WMATAG**

 WMA files can contain a WMA tag that is used in the same way as an ID3 tag. WMA tags carry information such as track title and artist name.

#### ISO 9660 FORMAT

- This is the international standard for the formatting of CD-ROM folders and files. For the ISO 9660 format, there are 2 levels of regulations.
- Level 1: The file name is in 8.3 format (8 character file names, with a 3 character file extension. File names must be composed of one-byte capital letters and numbers. The "\_" symbol may also be included.)
- Level 2: The file name can have up to 31 characters (including the separation mark
   "" and file extension). Each folder must contain fewer than 8 hierarchies.

#### m3u

• Playlists created using "WINAMP" software have a playlist file extension (.m3u).

#### MP3

 MP3 is an audio compression standard determined by a working group (MPEG) of the ISO (International Standard Organization). MP3 compresses audio data to about 1/10 the size of that on conventional discs.

#### WMA

 WMA (Windows Media Audio) is an audio compression format developed by Microsoft<sup>®</sup>. It compresses files into a size smaller than that of MP3 files. The decoding formats for WMA files are Ver. 7, 8 and 9.

#### AAC

 AAC is short for Advanced Audio Coding and refers to an audio compression technology standard used with MPEG2 and MPEG4.

# ERROR MESSAGES

Mode	Message	Explanation
CD/DVD	"No disc found."	It indicates that there is no disc in the DVD player.
	"Check disc"	It indicates that the disc is dirty, damaged, or it was inserted upside down. Clean the disc or insert it correctly. It indicates a disc which is not playable is inserted.
	"DISC Error"	There is a trouble inside the system. Eject the disc.
	"Region Code Error"	It indicates that the DVD region code is not set properly.
USB	"USB Error"	This indicates a problem in the USB memory or its connection.
	"No music files found."	This indicates that no MP3/WMA/AAC files are included in the USB memory.
iPod	"iPod Error."	This indicates a problem in the iPod or its connection.
	"No music files found."	This indicates that there is no music data in the iPod.
	"No video files found."	This indicates that no video files are included in the iPod.
	"Please check the iPod firmware version."	This indicates that the software version is not compatible. Perform the iPod firmware updates and try again.
	"iPod authorization failed."	This indicates that it failed to authorize the iPod. Please check your iPod.
Bluetooth <sup>®</sup> Audio	"Music tracks not support- ed. Please check your por- table player."	This indicates a problem in the Bluetooth $^{\circledR}$ device.

# (INFORMATION)

• If the malfunction is not rectified: Take your vehicle to your Lexus dealer.

# 7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

# 1. REAR SEAT ENTERTAINMENT SYSTEM FEATURES\*

# QUICK REFERENCE

The rear seat entertainment system is designed for the rear passengers to enjoy video such as Blu-ray  $Disc^{TM}$  (BD) and DVD disc separately from the front audio/visual system.


The system can be used when the engine <power> switch is in ACCESSORY or IGNITION ON <ON> mode.

### **FUNCTION INDEX**

Operation	Page
Using the remote controller	
Turning on/off the rear entertainment system	
Turning on/off the display (with rear console display)	
Opening/Closing the display (with overhead display)	
Inserting media or connecting a device to the rear player	
Selecting the sound mode	
Selecting the source	
Operating rear seat entertainment system from the front seats	
Rear seat entertainment system operation	
Rear seat entertainment system settings	
Tips for operating rear seat entertainment system	

### **OVERVIEW**


### ►5-seat models

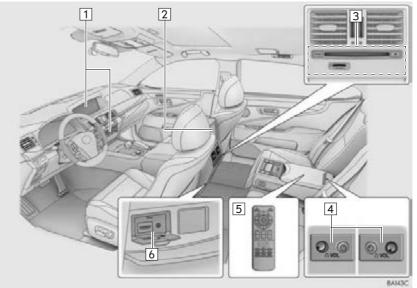

No.	Name
1	Front audio/visual system
2	Display
3	Rear player
4	Headphone volume control dials and headphone jacks
5	Remote controller
6	A/V input port (VTR and HDMI port)

### 7. REAR SEAT ENTERTAINMENT SYSTEM FEATURES

### ▶ 4-seat models

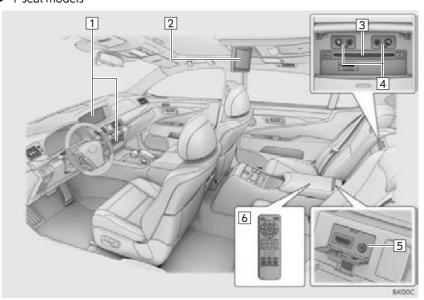

No.	Name
1	Front audio/visual system
2	Display
3	Rear player
4	Headphone volume control dials and headphone jacks
5	A/V input port (VTR and HDMI port)
6	Remote controller

# USING THE REMOTE CONTROLLER

The rear seat entertainment system can be operated with the remote controller.

The system cannot be operated by touching the switches on the screen directly.


Before using the remote controller (for new vehicle owners):  $\rightarrow$  P.276

### **OPENING THE COVER**

1 To use the buttons under the cover, slide the cover down.



### **BASIC OPERATION**

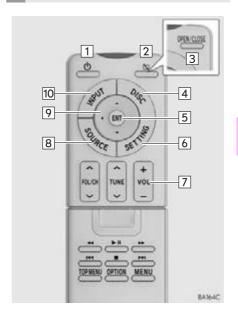

4

AUDIO/VISUAL SYSTEM

No.	Function
1	Press to turn on/off the rear seat entertainment system.
2	Press to turn on/off the display (with rear console display). ( $\rightarrow$ P.221)
3	Press to open/close the display (with overhead display). ( $\rightarrow$ P.221)
4	Press to change the external source between the following modes: • "DISC" (Font player) • "Rear-DISC" (Rear player)
5	Press to input the selected control icon.
6	Press to display the setting screen. $(\rightarrow P.272)$
7	Press to adjust the volume. This function is only available when sound is being output from the speakers. (\$\ightarrow\$P.224\$)
8	Press to display the audio/visual source selection screen. (→P.225)
9	Press to select a control icon.
10	Press to change the external source between the following modes:  • "Rear-External"  • "Rear-HDMI"

# TURNING ON/OFF THE REAR ENTERTAINMENT SYSTEM

1 Press the ", "DISC", "INPUT", "SOURCE" or "OPEN/CLOSE" (with overhead display) button.



● To turn off the system, press the button again.

### (INFORMATION)

ullet Turning on/off operations can be performed from the front seat. (ightarrowP.227)



• To turn off the display, press the button again.

#### (INFORMATION)

• When you press the sound will not be turned off.

# OPENING/CLOSING THE DISPLAY (WITH OVERHEAD DISPLAY)

1 Press the "OPEN/CLOSE" button.



• To close the display, press the "OPEN/ CLOSE" button again.

#### (INFORMATION)

- When you press the "OPEN/CLOSE" button, the sound will not be turned off.
- The display can be tilted.  $(\rightarrow P.274)$
- Opening and closing operation can be set to auto. (→P.274)
- The display will stop closing and return to its previous position if something gets in the way of it closing.

4

### INSERTING MEDIA OR CONNECTING A DEVICE TO THE REAR PLAYER

### DISC SLOT

#### ■ LOADING A DISC

1 Insert the disc into the slot with the label side up.



- The "DISC" indicator light turns on when the disc is loaded.
- The player will start to play the disc automatically.

#### **■ EJECTING A DISC**

1 Press the ≜ button and remove the disc.



#### **NOTICE**

 If a disc cannot be ejected, do not forcibly take out the disc. Keep pressing the <u>button</u> for approximately 10 seconds and release it.

#### (INFORMATION)

 If the ejected disc remains in the slot for 15 seconds, the player will automatically reload the disc.

### SD CARD SLOT


#### ■ INSERTING AN SD CARD

- Insert the SD card with the label side up, positioning the cut off corner to the right.
- **2** After inserting the SD card, push it straight in until you hear a click.



### ■ EJECTING AN SD CARD

- 1 Push on the center of the SD card.
- When it is ejected slightly, pull it straight out.

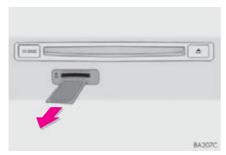


### A/V INPUT PORT

- 1 Open the cover and connect audio/visual equipment to the A/V input port.
- ▶ 5-seat models



▶ 4-seat models

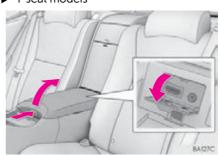


# SELECTING THE SOUND MODE

### **HEADPHONE MODE**

To listen to the rear seat entertainment system, use headphones.

#### ▶ 5-seat models

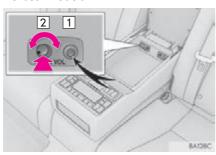

#### ▶ 4-seat models



- 1 Headphones jack
- Connect a pair of headphones to the jack.
- 2 Volume knob
- Push and then turn clockwise/counterclockwise to increase/decrease the volume.

#### **SPEAKER MODE**

Sound from the rear seat entertainment system can be output through the speakers.

- 1 Display the audio control screen. (→P.225)
- 2 Select ◀••••.
- The speaker volume is adjusted using the remote controller. (→P.219)

### SELECTING THE SOURCE

The front and rear audio/visual source can be controlled from the rear seat entertainment system.

1 Press the "SOURCE" button.



2 Select the desired source.

### (INFORMATION)

- The page indicators above the source icons can be selected to change the source icon page.
- If the cursor is on the rightmost source icon, pressing the will change the source icon page.

Audio/visual source	Available front audio/ visual source	Available rear audio/ visual source	Page
AM/FM/SAT	"AM", "FM", "SAT"	_	228
Internet radio	"Apps"	_	—
Audio CD MP3/WMA/AAC disc	"DISC"		229
Video CD	_	"Rear-DISC"	232
DVD	"DISC"		235
Blu-ray Disc™	_		242
USB audio	"USB"	_	250
iPod audio/video	"iPod"	_	253
Bluetooth <sup>®</sup> audio	"Bluetooth*"	_	256
SD audio/video/picture	_	"Rear-SD"	259
AUX, External, HDMI	"AUX", "External"	"Rear-External", "Rear-HDMI"	271


<sup>\*:</sup> Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### (INFORMATION)

• If the selected source is currently being received or played on the front audio/visual system, the same content will be output by the rear seat entertainment system.

### OPERATING REAR SEAT ENTERTAINMENT SYSTEM FROM THE FRONT SEATS

- 1 Display the audio control screen.  $(\rightarrow P.143)$
- 2 Select "Source".
- 3 Select "Rear".
- 4 Select the desired button.

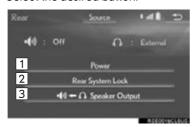

No.	Function
1	Select to turn the rear seat entertainment system on/off.
2	Select to lock the system so passengers in the rear seats cannot operate the rear seat entertainment system.
3	Select to play the rear seat entertainment system over the speakers in the vehicle.

### 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


### 1. AM/FM/SAT RADIO

### OVERVIEW

The radio operation screen can be reached by the following method:

Press the "SOURCE" button, and select "AM", "FM" or "SAT" (The XM Satellite radio).

### ■ REMOTE CONTROLLER

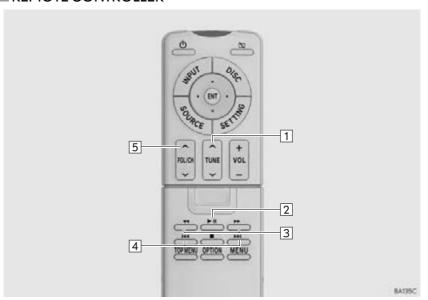

No.	Function
1	AM/FM Radio: Press to adjust the frequency. SAT Radio: Press to select a channel. Press and hold until you hear a beep to seek for receivable stations/channels.
2	Cache radio only: Press to play/pause.
3	Cache radio only: Press to skip forward/rewind 2 minutes. Cache radio only: Press and hold to fast forward/rewind continuously.
4	Press to select a preset station/channel. Press and hold until you hear a beep to seek for receivable stations/channels.
5	AM/FM Radio: Press to select a preset station/channel. SAT Radio: Press to select a program type/channel category.

### (INFORMATION)

• To return to the live radio broadcast, select "Live".

228

### OVERVIEW

Audio CD and MP3/WMA/AAC discs can be played on this system.

The disc operation screen can be reached by the following methods:

Press the "SOURCE" button, and select "DISC" or "Rear-DISC".


► Inserting a disc

The front player:  $\rightarrow$  P.144 The rear player:  $\rightarrow$  P.222

► Selecting a disc to play (disc in the front player or rear player)


Press the "DISC" button.

### **■ CONTROL SCREEN**

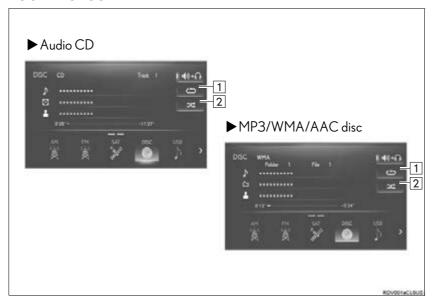

4

### ■ REMOTE CONTROLLER

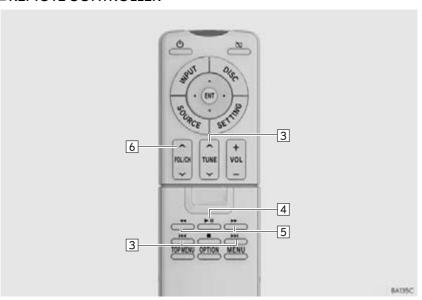

No.	Function
1	Select to set repeat playback. ( $\rightarrow$ P.231)
2	Select to set random playback. ( $\rightarrow$ P.231)
3	Press to select a track/file. Press and hold to fast forward/rewind.
4	Press to play/pause.
5	Press and hold to fast forward/rewind.
6	MP3/WMA/AAC disc: Press to select a folder. Press and hold the "V" button to select the top file stored in the top folder in the disc.

#### **REPEATING**

The track/file or folder currently being listened to can be repeated.

- 1 Select .
- Each time is selected, the mode changes as follows:
- ► Audio CD
- track repeat  $\rightarrow$  off
- ►MP3/WMA/AAC disc
  - file repeat  $\rightarrow$  folder repeat  $\rightarrow$  off\*<sup>1</sup>
  - file repeat  $\rightarrow$  off\*<sup>2</sup>
- \*1: When random playback is off
- \*2: When random playback is on

### RANDOM ORDER

Tracks/files or folders can be automatically and randomly selected.

- 1 Select
- Each time is selected, the mode changes as follows:
- ► Audio CD
  - random (1 disc random)  $\rightarrow$  off
- ►MP3/WMA/AAC disc
  - random (1 folder random)  $\rightarrow$  folder random (1 disc random)  $\rightarrow$  off

### 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


### 3. VIDEO CD

### OVERVIEW

The disc operation screen can be reached by the following methods: Press the "SOURCE" button, and select "Rear-DISC".

► Inserting a disc ( $\rightarrow$ P.222)

### ■ REMOTE CONTROLLER

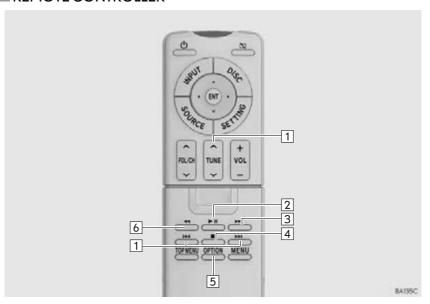


No.	Function
1	<ul><li>Press to select a track.</li><li>Press and hold to fast forward/rewind.</li></ul>
2	Press to play/pause.
3	<ul><li>During playback: Press and hold to fast forward.</li><li>During a pause: Press and hold to slow forward.</li></ul>
4	Press to stop.
5	Press to display the option screen. ( $\rightarrow$ P.233)
6	Press and hold to fast rewind.

232

### VIDEO CD OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.



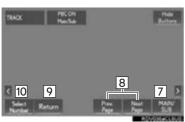

No.	Function
1	Select to turn off the option screen.
2	Select to display the next or previous page.
3	<ul> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>
4	Select to play/pause.
5	Select to stop.
6	Select and hold to rewind.
7	Select to change the audio channel. (→P.234)
8	Select to change the page.
9	Select to return to a predetermined scene.
10	Select to select the desired content using numbers. $(\rightarrow P.234)$

## CHANGING THE AUDIO CHANNEL

The audio channel can be changed for discs with multiple audio channels.

- 1 Select "MAIN/SUB".
- 2 Each time "MAIN/SUB" is selected, the mode changes in the following order:

"Main": Main audio channel

"Sub": Sub audio channel

"Main/Sub": Both the main and sub audio channels

## SELECT THE DESIRED CONTENT USING NUMBERS

- 1 Select "Select Number".
- 2 Enter the title number and select "OK".
- The player starts playing video for that title number.

### 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

### 4. DVD (DVD VIDEO AND AVCHD<sub>TM</sub> DISC)

### OVERVIEW

The disc operation screen can be reached by the following methods: Press the "SOURCE" button, and select "DISC" or "Rear-DISC".

► Inserting a disc

The front player:  $\rightarrow$  P.144 The rear player:  $\rightarrow$  P.222


► Selecting a disc to play (disc in the front player or rear player)

Press the "DISC" button.

,

AUDIO/VISUAL SYSTEN

### ■ REMOTE CONTROLLER

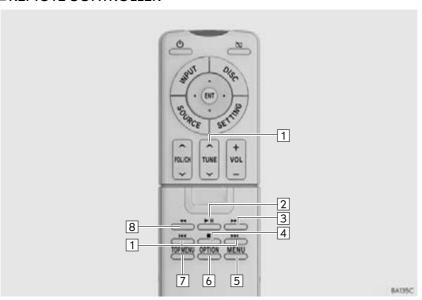

No.	Function
1	Press to select a chapter. Press and hold to fast forward/rewind.
2	Press to play/pause.
3	<ul><li>During playback: Press and hold to fast forward.</li><li>During a pause: Press and hold to slow forward.</li></ul>
4	Press to stop.
5	DVD video only: Press to display the menu screen.
6	Press to display the option screen. ( $\rightarrow$ P.237, 241)
7	Press to display the top menu screen.
8	Press and hold to fast rewind.

### DVD VIDEO OPTIONS

- 1 Press the "OPTION" button.
- **2** Check that the following screen is displayed.





No.	Function	Page
1	Select to display the initial setup screen.	238
2	Select to turn off the option screen.	_
3	Select to display the next or previous page.	_
4	<ul> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>	_
5	Select to play/pause.	_
6	Select to stop.	_
7	Select and hold to rewind.	_
8	Select to display the menu screen.	_
9	Select to display the top menu screen.	_
10	Select to change the angle.	240
11	Select to change the subti- tle language.	240
12	Select to change the audio language.	240
13	Select to return to a predetermined scene.	_
14	Select to search for a title.	240

#### 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

### **INITIAL SETUP**

- 1 Select "Setup".
- 2 Select the items to be set.
- ► When "DISC" is selected






► When "Rear-DISC" is selected





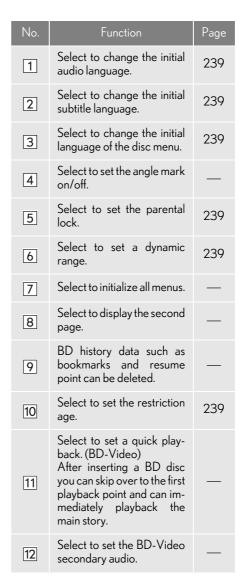

3 Select "OK".

#### ■ AUDIO LANGUAGE

- 1 Select "Audio Language".
- 2 Select the desired language to be heard.
- If the desired language to be heard cannot be found on this screen, select "Other" and enter a language code. (→P.290)

#### **■ SUBTITLE LANGUAGE**

- 1 Select "Subtitle Language".
- 2 Select the desired language to be read.
- If the desired language to be read cannot be found on this screen, select "Other" and enter a language code. (

  P.290)

#### ■ MENU LANGUAGE

- 1 Select "Menu Language".
- 2 Select the desired language to be read.
- If the desired language to be read cannot be found on this screen, select "Other" and enter a language code. (→P.290)

#### **■ PARENTAL LOCK**

- 1 Select "Parental Lock".
- 2 Enter the 4-digit personal code.
- 3 Select a parental level (1-8).

#### ■ DYNAMIC RANGE

The difference between the lowest and highest sound volumes can be adjusted.

- 1 Select "Dynamic Range".
- 2 Each time "Dynamic Range" is selected, the setting changes in the following order:

"MAX": Maximum dynamic range

"STD": Standard dynamic range

"MIN": Minimum dynamic range

"AUTO": Automatic adjust (Dolby TrueHD only)

#### (INFORMATION)

- "AUTO" is available for BD-Video only.
- "MIN" is not available for BD-Video.

#### ■ BD PARENTAL LOCK

- 1 Select "BD Parental Lock".
- **2** Enter the 4-digit personal code.
- 3 Enter the age on the "Enter restriction age" screen.

#### **CHANGING THE ANGLE**

The angle can be selected for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select "Angle".
- 2 Each time "Angle" is selected, the angle is changed.
- The angles available are restricted to those available on the DVD disc.

## CHANGING THE SUBTITLE LANGUAGE

The subtitle language can be changed for discs with multiple subtitle languages.

- Select "Subtitle".
- 2 Each time "Subtitle" is selected, another language available on the disc is selected.
- The languages available are restricted to those available on the DVD disc.
- When "Hide" is selected, the subtitles can be hidden.

## CHANGING THE AUDIO LANGUAGE

The audio language can be changed for discs with multiple audio languages.

- 1 Select "Audio".
- 2 Each time "Audio" is selected, another language available on the disc is selected
- The languages available are restricted to those available on the DVD disc.

## SEARCHING FOR A TITLE OR CHAPTER

- ► DVD video
- 1 Select "Search".
- ► AVCHD<sub>TM</sub> video
- 1 Select "Title Search" or "Chapter Search".
- 2 Enter the title number or chapter number, and select "OK".
- The player starts playing video for that title or chapter number.

### AVCHD™ VIDEO OPTIONS

- 1 Press the "OPTION" button.
- **2** Check that the following screen is displayed.





No.	Function	Page
1	DVD only: Select to display the initial setup screen.	238
2	Select to turn off the option screen.	_
3	Select to display the next or previous page.	_
4	<ul> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>	_
5	Select to play/pause.	_
6	Select to stop.	_
7	Select and hold to rewind.	_
8	Select to display the top menu screen.	_
9	Select to change the subtitle language.	240
10	Select to change the audio language.	240
11	Select to return to a predetermined scene.	_
12	Select to search for a chapter.	240
13	Select to search for a title.	240

### 5. Blu-ray Disc™ (BD-Video AND BDAV)

### **OVERVIEW**

This system can play Blu-ray  $Disc^{TM}$  (BD) videos with digital sound.


In addition to commercial BD titles, BDAV videos can be played on this system, therefore digital TV recorded by home digital video recorders can also be played on this system.

The disc operation screen can be reached by the following methods:

Press the "SOURCE" button and select "Rear-DISC".

► Inserting a disc ( $\rightarrow$ P.222)

#### ■ REMOTE CONTROLLER

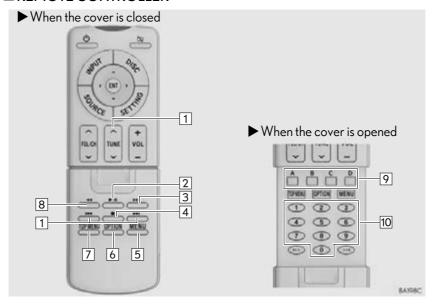

No.	Function
1	Press to select a chapter. BD-Video only: Press and hold to fast forward/rewind. BDAV only: Press and hold to select a program/playlist.
2	Press to play/pause.
3	<ul><li>During playback: Press and hold to fast forward.</li><li>During a pause: Press and hold to slow forward.</li></ul>
4	Press to stop.
5	BD-Video only: Press to display the pop-up menu screen.
6	Press to display the option screen. ( $\rightarrow$ P.244, 248)
7	BD-Video only: Press to display the top menu screen.
8	Press and hold to fast rewind.
9	BD-Video only: Color buttons
10	BD-Video only: 10 key buttons

#### (INFORMATION)

- Some BD-Video discs have a local storage feature which allows the disc's additional information, such as resume information, to be stored. This additional information can be utilized when BD-Video is being played. Refer to the manual that came with the BD-Video disc to see whether it has a local storage feature. If it does, the local storage feature can be enabled by inserting an SD card into this system.
- If an SD card with existing data, is inserted, BD-Video disc information will not be stored on the SD card in order to protect the data on the SD card. To enable the local storage feature, use an SD card that does not have any data on it.

### **BD-VIDEO OPTIONS**

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.







No.	Function	Page
1	Select to display the initial setup screen.	238
2	Select to turn off the option screen.	_
3	Select to display the next or previous page.	_
4	<ul> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>	_
5	Select to play/pause.	_
6	Select to stop.	_
7	Select and hold to rewind.	_
8	Select to display the pop- up menu.	245
9	Select to display the top menu screen.	_
10	Select to change the angle.	245
11	Select to change the subtitle language.	246
12	Select to change the audio language.	246
13	Select to return to a predetermined scene.	_
14	Select to search for a chapter.	246
15	Select to search for a title.	246
16	Select to change the secondary audio.	246
17	Select to display the secondary video (Picture-in-	247

No.	Function	Page
18	Select to display the 10 key pad.	247
19	Select to display the color key buttons.	247

## DISPLAYING THE POP-UP MENU

Some BD-Video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

- 1 Select "Pop-up Menu".
- 2 Select the menu item using the ▲, ▼, ◀ or ▶ on the "ENT" button, and press the "ENT" button.

### **CHANGING THE ANGLE**

The angle can be changed for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select "Angle".
- 2 Each time "Angle" is selected, the angle changes.
- The angles available are restricted to those available on the BD disc.

## CHANGING THE SUBTITLE LANGUAGE

The subtitle language can be changed for discs with multiple subtitle languages.

- 1 Select "Subtitle".
- 2 Each time "Subtitle" is selected, another language available on the disc is selected

"Hide": Subtitle can be hidden

"Style": Subtitle style can be changed.

## CHANGING THE AUDIO LANGUAGE

The audio language can be changed for discs with multiple audio languages.

- 1 Select "Audio".
- 2 Each time "Audio" is selected, another language available on the disc is selected.

## SEARCHING FOR A TITLE OR CHAPTER

- 1 Select "Title Search" or "Chapter Search".
- 2 Input the title number or chapter number, and select "OK".
- The player starts playing video for that title or chapter number.

## CHANGING THE SECONDARY AUDIO

The secondary audio that for the secondary video can be changed.

- 1 Select "PinP Audio".
- 2 Each time "PinP Audio" is selected, another secondary audio stored on the disc is selected.

"OFF": Select to turn the secondary audio off

#### DISPLAYING THE SECONDARY VIDEO (PICTURE-IN-PICTURE)

Picture-in-picture is a secondary video that plays embedded in the primary video. The secondary video can be played from a disc compatible with the picture-in-picture function.

- 1 Select "PinP".
- 2 The secondary video is displayed on the screen.

Each time "PinP" is selected, another secondary video available on the disc is selected.

"Hide": Secondary video can be hidden.

#### DISPLAYING THE 10 KEY PAD

The 10 key pad is used when inputting numbers according to directions of contents.

- 1 Select "Key Pad".
- 2 Select the number button. You can also press the 10 key buttons (1-0).

## DISPLAYING THE COLOR KEY BUTTONS

The color button is used for various uses according to directions of contents.

- 1 Select "Color Keys".
- 2 Select the color button. You can also press the color buttons (A-D).

### BDAV OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.





No.	Function	Page
1	Select to display the initial setup screen.	238
2	Select to turn off the option screen.	_
3	Select to display the next or previous page.	_
4	<ul> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>	_
5	Select to play/pause.	_
6	Select to stop.	_
7	Select and hold to rewind.	_
8	Select to change the audio channel.	249
9	Select to change the angle.	245
10	Select to change the audio language.	246
11	Select to change the play- back mode.	249
12	Select to search for a chapter.	246
13	Select to search for a title.	246

### (INFORMATION)

• Depending on the disc, some buttons may not be displayed on the screen.

#### **CHANGING THE AUDIO CHANNEL**

The audio channel can be changed for discs with multiple audio channels.

- 1 Select "MAIN/SUB".
- 2 Each time "MAIN/SUB" is selected, the mode changes in the following order:

"Main": Main audio channel

"Sub": Sub audio channel

"Main/Sub": Both the main and sub audio channels

#### CHANGING THE PLAYBACK **MODE**

The playback mode can be changed to program mode or playlist mode. Playlist mode cannot be selected if a playlist is not stored on the disc.

- 1 Select "Playback Mode".
- 2 Each time "Playback Mode" is selected, the mode changes.

"Program": Playback the disc in order of program number

"Playlist": Playback the disc in order of playlist number

### 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

### **6. USB MEMORY**


### OVERVIEW

USB audio can be played on this system.


The USB memory operation screen can be reached by the following methods: Press the "SOURCE" button, and select "USB".

ightharpoonup Connecting a USB memory (ightharpoonup P.145)

### **■ CONTROL SCREEN**

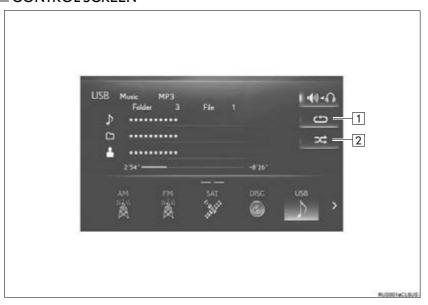

### ■ REMOTE CONTROLLER

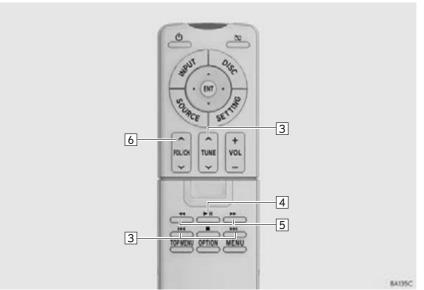

No.	Function
1	Select to set repeat playback. ( $\rightarrow$ P.252)
2	Select to set random playback. $(\rightarrow P.252)$
3	Press to select a file/track. Press and hold to fast forward/rewind.
4	Press to play/pause.
5	Press and hold to fast forward/rewind.
6	Press to select a folder/album.

#### **REPEATING**

The file/track or folder/album currently being listened to can be repeated.

- 1 Select 🗢 .
- Each time is selected, the mode changes as follows:
- ► When random playback is off
  - file/track repeat  $\rightarrow$  folder/album repeat  $\rightarrow$  off
- ► When random playback is on
  - file/track repeat → off

### **RANDOM ORDER**

Files/tracks or folders/albums can be automatically and randomly selected.

- 1 Select
- Each time is selected, the mode changes as follows:
  - random (1 folder/album random)  $\rightarrow$  folder/album random (all folder/album random)  $\rightarrow$  off

# 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

# 7. iPod

# **OVERVIEW**

iPod audio and iPod video can be played on this system.


For viewing videos from an iPod, it is necessary to set the front audio/visual system's "Video Sound Input" to "A/V".  $(\rightarrow$ P.200)

The iPod operation screen can be reached by the following methods:


Press the "SOURCE" button, and select "iPod".

ightharpoonup Connecting an iPod (ightharpoonup P.145)

### **■ CONTROL SCREEN**

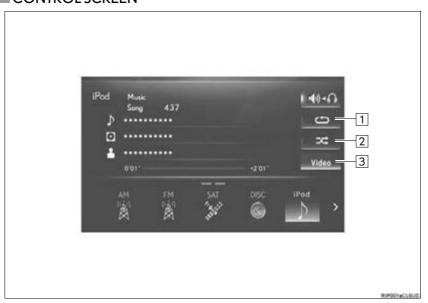

# ■ REMOTE CONTROLLER

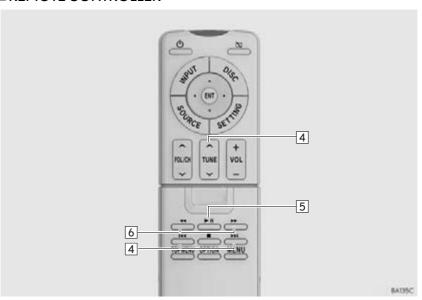

No.	Function			
1	Select to set repeat playback. $(\rightarrow P.255)$			
2	Select to set random playback. ( $\rightarrow$ P.255)			
3	Select to display the video screen. To return to the audio screen, press the "SOURCE" button and select "Music".			
4	Press to select a track/file. Press and hold to fast forward/rewind.			
5	Press to play/pause.			
6	Press and hold to fast forward/rewind.			

# **REPEATING**

The track currently being listened to can be repeated.

- 1 Select
- Each time is selected, the mode changes as follows:
  - track repeat → off

### RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

- 1 Select
- Each time is selected, the mode changes as follows:
  - track shuffle  $\rightarrow$  album shuffle  $\rightarrow$  off

1

# 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION


# 8. Bluetooth® AUDIO

# OVERVIEW

The Bluetooth  $^{\circledR}$  audio operation screen can be reached by the following method: Press the "SOURCE" button and select "Bluetooth\*".


► Connecting a Bluetooth<sup>®</sup> audio device (→P.188)

# ■ CONTROL SCREEN

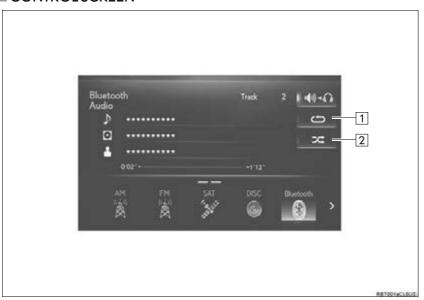

<sup>\*:</sup> Bluetooth is a registered trademark of Bluetooth SIG, Inc.

# ■ REMOTE CONTROLLER

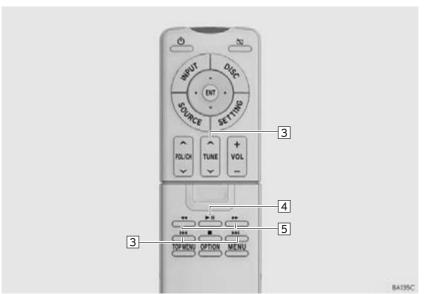

No.	Function		
1	Select to set repeat playback. ( $\rightarrow$ P.258)		
2	Select to set random playback. ( $\rightarrow$ P.258)		
3	Press to select a track. Press and hold to fast forward/rewind.		
4	Press to play/pause.		
5	Press and hold to fast forward/rewind.		

# Bluetooth® AUDIO

# **REPEATING**

The track or album currently being listened to can be repeated.

- 1 Select .
- Each time is selected, the mode changes as follows:
  - track repeat  $\rightarrow$  album repeat  $\rightarrow$  off

### RANDOM ORDER

Tracks or albums can be automatically and randomly selected.

- 1 Select
- Each time is selected, the mode changes as follows:
  - album random  $\rightarrow$  all track random  $\rightarrow$  off

# 9. SD CARD

This system can play still pictures, music and movies (SD video, AVCHD<sub>TM</sub> video, etc.) that are stored on an SD card.

The SD operation screen can be reached by the following method:

Press the **"SOURCE"** button and select **"Rear-SD"**.

► Inserting an SD card ( $\rightarrow$ P.223)

# **SELECTING THE SD MODE**

- 1 Press the "SOURCE" button and select "Rear-SD".
- 2 Select "SD Menu".

3 Select the desired mode.



No.	Function	Page	
1	Select to format the SD card. If the SD card is formatted, all data on the card will be erased.	_	
2	Select to delete stored BD- Video data from the SD card.	_	i d
3	Select to play music.	260	-
4	Select to play still pictures.	263	
5	Select to play SD video.	266	
6	Select to play AVCHD $_{\text{TM}}$ Video.	269	
7	Select to play a movie.	266	

4 AUDIO/VISUAL SYSTEM


# MUSIC

# **OVERVIEW**


MP3/WMA/AAC files stored on an SD card can be played.

The SD music operation screen can be reached by the following methods:  $\rightarrow$  P.259

# **■ CONTROL SCREEN**

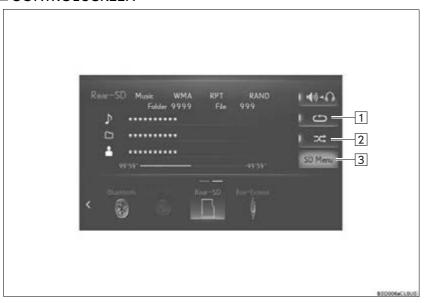

# ■ REMOTE CONTROLLER

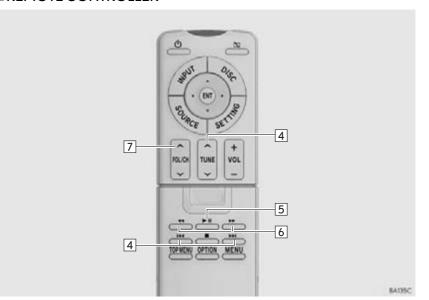

No.	Function		
1	Select to set repeat playback. ( $\rightarrow$ P.262)		
2	Select to set random playback. ( $\rightarrow$ P.262)		
3	Select to display the SD menu screen. ( $\rightarrow$ P.259)		
4	Press to select a file. Press and hold to fast forward/rewind.		
5	Press to play/pause.		
6	Press and hold to fast forward/rewind.		
7	Press to select a folder. Press and hold "V", the top file stored in the top folder in the SD card will be selected.		

### **SD MUSIC**

# **■ REPEATING**

The file or folder currently being listened to can be repeated.

- 1 Select 🗢.
- Each time is selected, the mode changes as follows:
- ► When random playback is off
  - file repeat  $\rightarrow$  folder repeat  $\rightarrow$  off
- ► When random playback is on
  - file repeat  $\rightarrow$  off

### ■ RANDOM ORDER

Files or folders can be automatically and randomly selected.


- 1 Select
- Each time is selected, the mode changes as follows:
  - random (1 folder random)  $\rightarrow$  folder random (1 disc random)  $\rightarrow$  off

# PICTURE


# **OVERVIEW**

Image files stored on an SD card can be displayed individually or in a slideshow. The SD picture operation screen can be reached by the following methods:  $\rightarrow$ P.259

# **■** CONTROL SCREEN

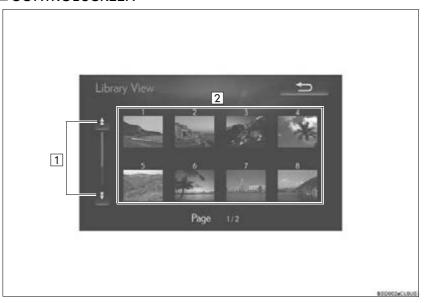

# ■ REMOTE CONTROLLER

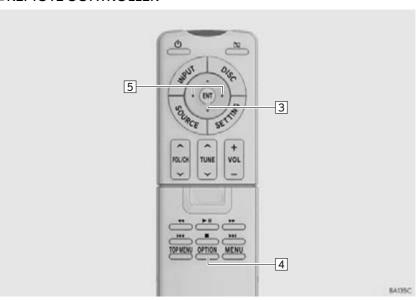

No.	Function
1	Select to display the next/previous page.
2	Select to display the desired still picture.
3	<ul> <li>When the picture thumbnail list is displayed: Press to display the selected picture in full screen.</li> <li>When a full screen picture is displayed: Press to display the picture thumbnail list.</li> </ul>
4	When a full screen picture is displayed, press to display the option screen. ( $\rightarrow$ P.265)
5	When a full screen picture is displayed, press to change the displayed picture.

- 1 Press the "OPTION" button.
- ${f 2}$  Check that the following screen is displayed.



No.	Function	
1	Select to turn off the option screen.	
2	Select to start the slide show settings. $(\rightarrow P.265)$	
3	Select to display the picture list screen.	
4	Select to start a slideshow. To end the slideshow, press the "OPTION" or "ENT" button.	
5	Select to display the current still picture information.	
6	Select to rotate the still picture.	
7	Select to zoom on the still picture.	

- 1 Select "Setup".
- 2 Select the items to be set.



No.	Function	
1	Select to set slideshow interval time. "5s" $\rightarrow$ "10s" $\rightarrow$ "15s" $\rightarrow$ "30s" $\rightarrow$ "60s"	
2	Select to set slideshow effect. "Fade" $\rightarrow$ "Slide" $\rightarrow$ "Wipe1" $\rightarrow$ "Wipe2" $\rightarrow$ "Dissolve" $\rightarrow$ "Zoom" $\rightarrow$ "OFF"	
3	Select to set repeat of the slideshow on/off.	
4	Select to restore the default settings.	

3 Select "OK".


# VIDEO/MOVIE

# **OVERVIEW**

SD videos/movies stored on an SD card can be played.

The SD video/movie operation screen can be reached by the following methods:  $\rightarrow\!P.259$ 

### ■ REMOTE CONTROLLER

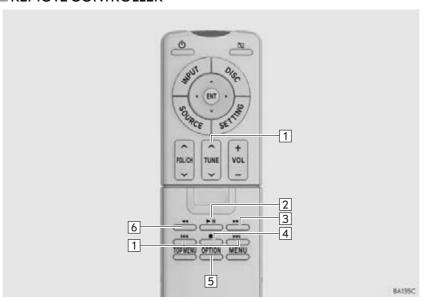


No.	Function		
1	Press to select a file/chapter. Press and hold to fast forward/rewind.		
2	Press to play/pause.		
3	<ul><li>During playback: Press and hold to fast forward.</li><li>During a pause: Press and hold to slow forward.</li></ul>		
4	Press to stop.		
5	Press to display the option screen. ( $\rightarrow$ P.267)  Press and hold to fast rewind.		
6			

266

# VIDEO/MOVIE OPTIONS

- 1 Press the "OPTION" button.
- 2 Check that the following screen is displayed.



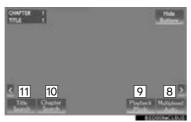

No.	Function	Page
1	Select to turn off the option screen.	_
2*	Select to display the next or previous page.	_
3	<ul> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>	_
4	Select to play/pause.	_
5	Select to stop.	_
6	Select and hold to rewind.	_
7	Select to display the file information.	_
8*	Select to change the audio channel.	268
9*	Select to change the play- back mode.	268
10*	Select to search for a chapter.	268
11 *	Select to search for a title.	268

<sup>\*:</sup> SD Video only

### (INFORMATION)

 Depending on the data stored on the SD card, some buttons may not be displayed on the screen.

### ■ CHANGING THE AUDIO CHAN-NFI

The audio channel can be changed for videos with multiple audio channels.

- 1 Select "Multiplexed Audio".
- 2 Each time "Audio" is selected, the mode changes in the following order:

"Main": Main audio channel

"Sub": Sub audio channel

"Main/Sub": Both the main and sub audio channels

# ■CHANGING THE PLAYBACK MODE

The playback mode can be changed to program mode or playlist mode. Playlist mode cannot be selected if a playlist is not stored on the disc.

- 1 Select "Playback Mode".
- 2 Each time "Playback Mode" is selected, the mode changes.

"Program": Playback the disc in order of program number

"Playlist": Playback the disc in order of playlist number

# ■ SEARCHING FOR A TITLE OR CHAPTER

- 1 Select "Title Search" or "Chapter Search".
- 2 Enter the title or chapter number and select "OK".
- The player starts playing video for that title or chapter number.


# VIDEO (SD AVCHD<sub>TM</sub>)

# **OVERVIEW**

SD Videos (AVCHD™ videos) stored on an SD card can be played.

The SD video (AVCHD $_{\text{TM}})$  operation screen can be reached by the following methods:  $\rightarrow\!P.259$ 

### ■ REMOTE CONTROLLER

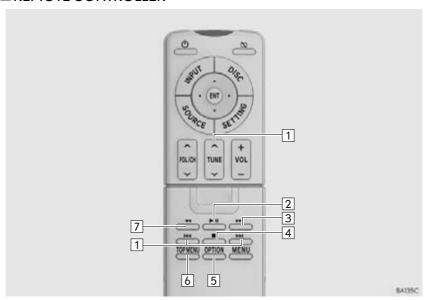

# 8. REAR SEAT ENTERTAINMENT SYSTEM OPERATION

No.	Function		
1	Press to select a chapter. Press and hold to fast forward/rewind.		
2	Press to play/pause.		
3	<ul><li>During playback: Press and hold to fast forward.</li><li>During a pause: Press and hold to slow forward.</li></ul>		
4	Press to stop.		
5	Press to display the option screen. ( $\rightarrow$ P.241)		
6	Press to display the top menu screen.		
7	Press and hold to fast rewind.		

# **10. EXTERNAL DEVICES**

# **OVERVIEW**

The rear seat entertainment system plays videos and sound when audio/visual equipment is connected to the A/V input port.

The external devices operation screen can be reached by the following methods:

Press the "SOURCE" button, and select "AUX", "External", "Rear-External" or "Rear-HDMI".

► Connecting a external device

The front player:  $\rightarrow$  P.145 The rear player:  $\rightarrow$  P.223

► Selecting a input port to use (VTR input port or HDMI input port)

Press the "INPUT" button.

# 9. SETUP FOR REAR SEAT ENTERTAINMENT SYSTEM

# 1. REAR SEAT ENTERTAINMENT SYSTEM SETTINGS

# DISPLAYING THE SETTING SCREEN

1 Press the "SETTING" button.



2 Select the tab to be set.



No.	Function	Page
1	Select to adjust the screen.	272
2	Select to change the screen size.	274
3*	Select to tilt the display.	274

<sup>\*:</sup> With overhead display

### **ADJUSTING THE SCREEN**

The screen image quality, such as the brightness and contrast levels, can be adjusted. Adjustable items depend on the selected input source.

- 1 Display the settings screen.  $(\rightarrow P.272)$
- 2 Select the "Display" tab.

# 3 Select the item to be set.



	No.	Function	
	1	"Brightness" "-"	Select to darken the screen.
		"Brightness" "+"	Select to brighten the screen.
		"Contrast" "-"	Select to weak- en the contrast.
	2	"Contrast" "+"	Select to strengthen the contrast.
		"Color" "R"	Select to strengthen the red color.
	3	"Color" "G"	Select to strengthen the green color.
		"Tone" "-"	Select to weak- en the tone.
	4	"Tone" "+"	Select to Strengthen the tone.
	5	Select to turn on/off the "LCD Al". The "LCD Al" automatically determines the tone of the video imag	

and sets the contrast to an optimum level, displaying a sharp image.

Select to turn the display off (with rear console display).
To turn it on, press the "DISC", "SETTING", "SOURCE" or "IN-PUT" button.

No.	Function
7	Select to switch between NTSC/ PAL input format. (PAL: indicator on, NTSC: indicator off)

6

# CHANGING THE SCREEN SIZE

The screen size can be changed for each input mode individually.

Depending on the audio source, some functions may not be available.


- 1 Display the settings screen. ( $\rightarrow$ P.272)
- 2 Select the "Screen Size" tab.
- **3** Select the desired screen size.



No.	Function
1	Select to display the screen at the original ratio.
2	Select to widen the 4:3 aspect screen horizontally to fill the screen.

# TILTING THE DISPLAY (WITH OVERHEAD DISPLAY)

- 1 Display the settings screen.  $(\rightarrow P.272)$
- 2 Select the "Tilt" tab.
- 3 Select the item to be set.

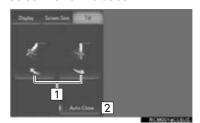

No.	Function
1	Select to adjust the display angle. The display angle is memorized and will be recalled when the engine <power>switch is turned to ACCESSORY or IGNITION ON <on>mode.</on></power>
2	Select to turn automatic closing of the display on/off.  If "Auto Close" is on, the display will automatically close when the engine <power's <on's="" <power's="" accessory="" again.<="" automatically="" display="" engine="" ignition="" is="" mode="" off.="" on="" open="" or="" switch="" th="" the="" to="" turned="" when="" will=""></power's>

# 1. OPERATING INFORMATION

# **CAUTION**

- When the rear seat entertainment system is not used (with overhead display): Keep the display closed. In the event of an accident or sudden braking, the opened display may hit an occupant's body, resulting in injury.
- To prevent accidents and electric shock: Do not disassemble or modify the remote
- When the remote controller is not used: Stow the remote controller. Injuries may result in the event of an accident or sudden braking.
- Closing the display (with overhead display): Never use any part of your body to intentionally activate the jam protection
- Removed battery and other parts: These parts are small and if swallowed by a child they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

### NOTICE

- Cleaning the display: Wipe the display with a dry soft cloth. If the screen is wiped with a rough cloth, the surface of the screen may be scratched.
- To prevent damage to the remote controller:
  - · Keep the remote controller away from direct sunlight, heat and high humidity.
  - · Do not drop or strike the remote controller against hard objects.
  - · Do not sit on or place heavy objects on the remote controller.
- BD/DVD/CD player: Never try to disassemble or oil any part of the BD/DVD/ CD player. Do not insert anything other than a disc into the slot.
- Closing the display (with overhead display): Do not close the display using your hand. Doing so may result in a malfunc-
- For normal operation after replacing the battery: Observe the following precautions to prevent accidents.
- · Always work with dry hands. Moisture may cause the battery to rust.
- · Do not touch or move any other components inside the remote controller.
- · Do not bend either of the battery termi-

# **CAUTION SCREEN**

A caution screen appears for a few seconds when the rear display turns on.


During this time, only the "OPEN/CLOSE" button can be operated (with overhead display).

# WHEN **S** APPEARS ON THE SCREEN

indicates that the selected icon cannot be used at this time.

### THE REMOTE CONTROLLER

- ■BEFORE USING THE REMOTE CONTROLLER (FOR NEW VEHICLE OWNERS)
- 1 Remove the insulating sheet before using the remote controller.

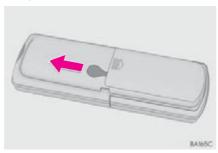


# (INFORMATION)


 An insulating sheet is set to prevent the batteries from being depleted.

### ■ WHEN THE REMOTE CONTROL-LER BATTERIES ARE FULLY DE-PLETED

1 Remove the cover.

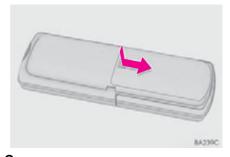

2 Remove the depleted batteries and install new batteries.

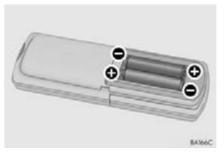

# ■ IF THE REMOTE CONTROLLER BATTERIES ARE DISCHARGED

The following symptoms may occur.

- The remote controller will not function properly.
- The operational range is reduced.

### **■ USE TWO AA BATTERIES**

- Batteries can be purchased at Lexus dealer, electric appliance shop, or camera stores.
- Replace only with the same or equivalent type recommended by Lexus dealer.
- Dispose of used batteries according to the local laws.

276

# **HEADPHONES**

Infrared wireless headphones can also be used. However, with some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Contact your Lexus dealer.

# **VOLUME**

- Adjust the volume when you connect the headphone to the jack. Loud sounds may have a significant impact on the human body.
- Conversational speech on some BD/ DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the BD/DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.

# COPYRIGHTS AND TRADEMARKS

 Blu-ray Disc<sup>™</sup>, Blu-ray<sup>™</sup>, BD-Live<sup>™</sup>, BDXL<sup>™</sup>, and the logos are trademarks of the Blu-ray Disc Association.



• Java is a registered trademark of Oracle and/or its affiliates.



• "AVCHD", "AVCHD Progressive" and the "AVCHD Progressive" logo are trademarks of Panasonic Corporation and Sony Corporation.



• "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.







• SDXC Logo is a trademark of SD-3C, LLC.



 Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



278

• For DTS patents, see <a href="http://patents.dts.com">http://patents.dts.com</a>. Manufactured under license from DTS Licensing Limited. DTS, DTS-HD, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS-HD Master Audio | Essential is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



 The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.



- This product is licensed under the MPEG-4 patent portfolio license, AVC patent portfolio license and VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to
  - (i) encode video in compliance with the MPEG-4 Visual Standard, AVC Standard and VC-1 Standard ("MPEG-4/AVC/VC-1 Video") and/or
  - (ii) decode MPÈG-4/AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide MPEG-4/AVC/VC-1 Video.

No license is granted or shall be implied for any other use.

Additional information may be obtained from MPEG LA, L.L.C. See <a href="http://www.mpegla.com">http://www.mpegla.com</a>.

### Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <a href="http://www.cinavia.com">http://www.cinavia.com</a>. To request additional information about Cinavia by mail, send a <a href="postcard with your mailing">postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.</a>

- This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2014 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.
- WMA (Windows Media Audio), Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.
   This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.
- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

• This product incorporates the following software:

(1) the software developed independently by or for Panasonic Corporation,

(2) the software owned by third party and licensed to Panasonic Corporation, (3) the software licensed under the GNU General Public License, Version 2 (GPL V2), (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL v2.1) and/or,

(5) open sourced software other than the software licensed under the GPL v2 and/or LGPL v2.1

For the software categorized as (3) and (4), please refer to the terms and conditions of GPL v2 and LGPL v2.1, as the case may be at

http://www.gnu.org/licenses/old-licenses/gpl-2.0.html and

http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html.
In addition, the software categorized as (3) and (4) are copyrighted by several individuals. Please refer to the copyright notice of those individuals at

http://car.panasonic.jp/oss/44bu9ph2/

The GPL/LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

At least three (3) years from delivery of products, we will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL v2/LGPL v2.1.

[Contact address]

Engineering Administration Group Manager Panasonic Corporation 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama City 224-8520, Japan

Source code is also freely available to you and any other member of the public via our website bellow.

http://car.panasonic.jp/oss/44bu9ph2/

For the software categorized as (5) includes as follows.

1. This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)

2. This product includes software developed by the University of California, Berkeley and its contributors.

3. Free Type code.

4. The Independent JPEG Group's JPEG software.

5. Vera Fonts. (http://www.gnome.org/fonts/)

# CD/DVD/Blu-ray Disc™ PLAYER AND DISCS

### **CAUTION:**

THIS PRODUCT IS A CLASS 1 LASER PRODUCT. USE OF CONTROL OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



























The following discs cannot be used on this system:

- BDXL™ disc
- BD-RE with the cartridge
- HD DVD
- DVD-Audio
- SACD

### **DISCS THAT CAN BE USED**



BD/DVD video precaution: Conversational speech on some BDs/DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the BD/DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source. Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.



### **NOTICE**

- Player precautions: Failure to follow the precautions below may result in damage to the discs or the player itself.
  - Do not insert anything other than discs into the disc slot.
  - Do not apply oil to the player.
  - Store discs away from direct sunlight.
  - Never try to disassemble any part of the player.




### **NOTICE**

- Discs and adapters that cannot be used: Do not use the following types of discs. Also, do not use 3 in. (8 cm) disc adapters, Dual Discs or printable discs. Doing so may damage the player and/or disc insert/eject function.
  - Discs that have a diameter that is not 4.7 in (12 cm)



• Low-quality or deformed discs

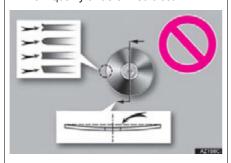

### **NOTICE**

• Discs with a transparent or translucent recording area



 Discs that have tape, stickers or CD-R labels attached to them, or that have had the label peeled off



### ABOUT MP3/WMA/AAC FILES AND COMPATIBILITY

MP3 (MPEG Audio LAYER3), WMA (Windows Media Audio) and AAC (Advanced Audio Coding) is a standard audio compression format.

There is a limit to the MP3, WMA and AAC file standards and to the media/formats recorded by them that can be used.

### **■ MP3 FILE COMPATIBILITY**

Compatible standards	MP3 (MPEG1LAYER3, MPEG2 LSF LAYER3)
Compatible sampling frequencies	MPEG1 LAYER3: 32, 44.1, 48 (kHz) MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
Compatible bit rates	MPEG1LAYER3: 32-320 (kbps) MPEG2 LSF LAYER3: 8-160 (kbps) (compatible with VBR)
Compatible channel modes	stereo, joint stereo, dual channel and mono
ID3 tags	ID3 Ver. 1.0, 1.1, 2.3 and Ver. 2.4 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

### **■ WMA FILE COMPATIBILITY**

Compatible standards	WMA Ver. 7, 8, 9 (9.1/9.2)
Compatible sampling frequencies	8, 11.025, 16, 22.05, 32, 44.1, 48 (kHz)
Compatible bit rates	Ver. 7, 8, 9 (9.1/9.2): CBR 5-320 (kbps) (only compatible with 2-channel playback)

# ■ AAC FILE COMPATIBILITY

Compatible standards	MPEG2/AAC-LC, MPEG4/AAC-LC (ADIF is not supported)
Compatible sampling frequencies	ADTS (MPEG2 AAC): 16, 22.05, 24, 32, 44.1, 48 (kHz) MP4 (MPEG4 AAC): 16, 22.05, 24, 32, 44.1, 48 (kHz)
Compatible bit rates	ADTS (MPEG2 AAC): 8-384 (kbps) MP4 (MPEG4 AAC): 8-384 (kbps)
Compatible channel mode	ADTS (MPEG2 AAC): 1/0, 2/0, 3/0, 2/1, 2/2, 3/1, 3/2.1 MP4 (MPEG4 AAC): 1/0, 2/0, 3/0, 2/1, 2/2, 3/1, 3/2.1

# ■ COMPATIBLE MEDIA AND DISC FORMATS

Compatible media	CD-ROM/R/RW DVD-ROM/R/RW
Disc formats	CD-ROM Mode 1, CD-ROM XA Mode 2 Form 1
File formats	ISO9660 Level 1, 2 (Romeo, Joliet, RockRidge), UDF (1.02, 1.50, 2.00, 2.01)
Maximum directory hierarchy	8 levels
Maximum length of folder names/file names	The number of the maximum indication letters by design specifications of the indication machine side (support proportional font, and there are distinction of the half size and full size)
Maximum number of folders	255 (including the root)
Maximum number of files per disc	512

### **■ FILE NAMES**

The only files that can be recognized as MP3/WMA/AAC and played are those with the extension .mp3, .wma or .m4a.

### **MULTI-SESSIONS**

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3, WMA and AAC files.

### ■ MP3, WMA AND AAC PLAYBACK

- When a disc containing MP3, WMA or AAC files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3, WMA or AAC file is played. To make the file check finish more quickly, we recommend you do not write inany files other than MP3, WMA or AAC files or create any unnecessary folders. If the discs contain a mixture of music data and MP3, WMA or AAC format data, only music data can be played.
- To play MP3 files with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- Playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3, WMA or AAC files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3, WMA or AAC files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.

### **EXTENSIONS**

If the file extensions .mp3, .wma and .m4a are used for files other than MP3, WMA and AAC files, they will be mistakenly recognized and played as MP3, WMA and AAC files. This may result in large amounts of interference and damage to the speakers.

### **DYNAMIC RANGE**

"Dynamic Range" can be set only when Dolby Digital or Dolby TrueHD is selected. When Dolby TrueHD is selected, the dynamic range is the same as "MAX" even when set to "MIN". (→P.239)

### BD-Video SECONDARY AUDIO

If BD-Video secondary audio is set to on, secondary audio is output during sections that have secondary audio recorded. During these sections, HD sound, such as 7.1 ch audio, will not be output.

However, if you are playing sections that meet all of the following conditions, HD sound can be output:

- There is no interactive audio
- There is no secondary audio
- There are no BD-J titles

If BD-Video secondary audio is set to off, HD sound can be output. However, for sections that have secondary audio recorded, secondary audio will not be output.

### **BD/DVD VIDEO DISCS**

### **■ COMPATIBLE MEDIA**

Media that can be used for playback are BD-ROMs, BD-Rs, BD-REs, DVD-ROMs, DVD-Rs and DVD-RWs.

### **■ COMPATIBLE DISC FORMATS**

Disc formats that can be used for playback are BD-Video formats, BDAV formats, AVCHD $_{\text{TM}}$  formats, and DVD video formats.

### (INFORMATION)

- When storing content on BD-R, BD-RE, DVD-R or DVD-RW discs, they must be finalized using a recorder. Discs that are not finalized cannot be played by this system
- Discs that are recorded with multi session cannot be played by this system.
- BD-Live<sup>™</sup> is not supported.

### ■ THE COLOR TV FORMATS

This player conforms to NTSC/PAL color TV formats.

### ■ REGION CODES

Some BD/DVD video discs have a region code indicating the region in which you can use the BD/DVD video disc.

If the BD-Video disc is not labeled "A" or "ABC" or if the DVD video disc is not labeled "1" or "ALL", you cannot use it on this player.

Depending on the disc production company, some Blu-ray  $Disc^{TM}$  may be designed to not be able to be played in some countries and regions.

If you attempt to play BD/DVD video discs with incompatible region codes on this player, an error message appears on the screen. Even if the BD/DVD video disc does not have a region code, in some cases it cannot be used.

# ■MARKS SHOWN ON BD/DVD VIDEO DISCS

Mark	Meaning
PAL/NTSC	Indicates compatibility with PAL/NTSC format color TVs
2))	Indicates the number of audio tracks
2	Indicates the num- ber of language sub- titles
<u>∞</u> 3 1	Indicates the number of angles
16:9 LB 4:3	Indicates the screen display ratios avail- able Wide screen: 16:9 Standard: 4:3
	Indicates the disc's region code  • BD-Video  "ABC": all regions

Alphabet: region

"ALL": all regions

Number: region

code

code

• DVD video

# BD/DVD VIDEO DISC INFORMATION

### ■ PARENTAL CONTROLS

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the BD/DVD video disc. Some BD/DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

### ▶ DVD VIDEO

Level 1	DVD video discs for children can be played.
Level 2 - 7	DVD video discs for children and G-rated movies can be played.
Level 8	All types of DVD video discs can be played.

### ▶BD-VIDEO

Parental controls of BD-Videos can be set up by inputting an age. If the target age of BD-Video exceeds the age restriction that was set up, then playback will not be possible.

### **■ MULTI-ANGLE FEATURE**

You can enjoy the same scene from different angles.

### **■ MULTI-LANGUAGE OPTION**

You can select the subtitle and audio languages.

#### ■ REGION CODES

The region codes are provided on BD/DVD players and BD/DVD discs. If the BD/DVD disc does not have the same region code as the BD/DVD player, you cannot play the disc on the player.

### ■ TITLE AND CHAPTER

Video and audio stored on BD/DVD video discs are divided into parts by title and chapter.

Title: The largest portion of the video and audio stored on BD/DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

Chapter: A title comprises of one or more chapters.

#### ■ AVCHD<sub>TM</sub>

 $AVCHD_{TM}$  is a new format (standard) for high definition video cameras that can record and play high-resolution HD images.

DVDs and SD cards with videos recorded in AVCHD $_{\text{TM}}$  format can be used on this system.

### ■ BDAV (Blu-ray Disc™ AUDIO/VI-SUAL)

BDAV is one of the audio/visual recording formats for Blu-ray Disc™, has been made primarily for the purpose of broadcasting the recording.

It is used when recording to BD-R and BD-RE by Blu-ray  $Disc^{TM}$  recorder.

#### ■ BD-J

Some BD-Video discs contain Java applications, and these applications are called BD-J. You can enjoy various interactive features in addition to playing normal video.

#### **■ POP-UP MENU**

Some BD-Video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

### **■ PICTURE-IN-PICTURE**

This is a function of BD-Video that plays the primary video and secondary video simultaneously. For instance, the function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.

### ■ DUBA (DISC UNBOUND BD·J AP-PLICATION)

For BD-Videos that come as a 2 disc set or more, after finishing and ejecting one of the discs, continuation of the video can be seen shortly after replacing the disc with the proper disc.

### ■ PLAYLIST (BDAV ONLY)

A playlist of favorite scenes by Blu-ray Disc<sup>™</sup> recorder can be created and the scenes can playback via playlist.

### AUDIO

This player can play Linear PCM, Dolby Digital, DTS and MPEG audio format. Other decoded types cannot be played.

### LANGUAGE CODES LIST

Code	Language	Code	Language	Code	Language	Code	Language
0514	English	0515	Esperanto	1214	Lingala	1913	Samoan
1001	Japanese	0520	Estonian	1215	Laotian	1914	Shona
0618	618 French 0521 Basque		Basque	1220	Lithuanian	1915	Somali
0405	German	0601	Persian	1222	Latvian, Lettish	1917	Albanian
0920	Italian	0609	Finnish	1307	Malagasy	1918	Serbian
0519	Spanish	0610	Fiji	1309	Maori	1919	Siswati
2608	Chinese	0615	Faroese	1311	Macedonian	1920	Sesotho
1412	Dutch	0625	Frisian	1312	Malayalam	1921	Sundanese
1620	Portuguese	0701	lrish	1314	Mongolian	1923	Swahili
1922	Swedish	0704	Scottish-Gaelic	1315	Moldavian	2001	Tamil
1821	Russian	0712	Galician	1318	Marathi	2005	Telugu
1115	Korean	0714	Guarani	1319	Malay	2007	Tajik
0512	Greek	0721	Gujarati	1320	Maltese	2008	Thai
0101	Afar	0801	Hausa	1325	Burmese	2009	Tigrinya
0102	Abkhazian	0809	Hindi	1401	Nauru	2011	Turkmen
0106	Afrikaans	0818	Croatian	1405	Nepali	2012	Tagalog
0113	Amharic	0821	Hungarian	1415	Norwegian	2014	Setswana
0118	Arabic	0825	Armenian	1503	Occitan	2015	Tongan
0119	Assamese	0901	Interlingua	1513	(Afan) Oromo	2018	Turkish
0125	Aymara	0905	Interlingue	1518	Oriya	2019	Tsonga
0126	Azerbaijani	0911	Inupiak	1601	Punjabi	2020	Tatar
0201	Bashkir	0914	Indonesian	1612	Polish	2023	Twi
0205	Byelorussian	0919	Icelandic	1619	Pashto, Pushto	2111	Ukrainian
0207	Bulgarian	0923	Hebrew	1721	Quechua	2118	Urdu
0208	Bihari	1009	Yiddish	1813	Rhaeto-Romance	2126	Uzbek
0209	Bislama	1023	Javanese	1814	Kirundi	2209	Vietnamese
0214	Bengali, Bangla	1101	Georgian	1815	Romanian	2215	Volapük
0215	Tibetan	1111	Kazakh	1823	Kinyarwanda	2315	Wolof
0218	Breton	1112	Greenlandic	1901	Sanskrit	2408	Xhosa
0301	Catalan	1113	Cambodian	1904	Sindhi	2515	Yoruba
0315	Corsican	1114	Kannada	1907	Sango	2621	Zulu
0319	Czech	1119	Kashmiri	1908	Serbo-Croatian		
0325	Welsh	1121	Kurdish	1909	Sinhalese		
0401	Danish	1125	Kirghiz	1911	Slovak		
0426	Bhutani	1201	Latin	1912	Slovenian		

290

### **SD CARD**

### SD CARDS THAT CAN BE **USED**

 Memory cards are restricted to the following sizes based on SD standards.

SD	From 512 MB to 2 GB
SDHC	From 4 GB to 32 GB
SDXC	From 48 GB to 256 GB

- Mini SD cards and Micro SD cards can be used, but must be used with an adaptor card.
- MultiMedia Card (MMC) cannot be used.



### **CAUTION**

SD cards: Keep away from children. These are small and if swallowed by a child they can cause choking.

#### NOTICE

- SD card precaution: Failure to follow the precautions below may result in damage to the SD cards or the SD card slot.
  - Do not insert anything other than an SD card into the SD card slot.
  - · Do not stick labels or stickers on SD card. There is a possibility that it may become impossible to eject the SD card from inside the slot.
  - Do not handle an SD card with wet hands. Doing so may cause electric shock or a malfunction.
  - Do not allow hands or metal objects to contact the interface pins of SD cards.
  - · Do not place SD cards on the instrument panel, on any place with direct sunlight or in areas with a lot of mois-
  - Do not use SD cards in any place where static electricity or electric noise adversely affects SD cards. This may cause data corruption or data loss.
  - Always place the SD card in its storage case when not in use.

### **SD CARD FUNCTIONS**

### ● Local storage

- Some BD videos have a feature to memorize disc information, such as a resume point, in a local storage. The rear seat entertainment system uses an SD card as a local storage device. To use this function, insert an SD card into the SD card slot.
- The SD card memory function may differ depending on the BD videos played.
- When an SD card that contains any kind of data is inserted, BD video disc information will not be stored into the SD card to protect the existing data in the card. To use an SD card as a local storage, use another SD card that does not contain any data.

### COMPATIBILITY

### **■** COMPATIBLE FILES

Music file format	MP3/WMA/AAC file types: →P.284
Video file format	MPEG-4 Video, H.264/AVC Video (.mp4/.m4v), MPEG-2 Video (.mpg), Windows Media Video (.wmv), AVI container (.avi)
Photo file format	JPEG (Gray scale JPEG and Motion JPEG are not supported.)
Pixel size (photo)	Between 1 x 1 and 8192 x 8192 pixels

### ■MPEG-4

Profile	Simple Profile, Advanced Simple Profile		
Video codec	MPEG-4 Video		
Audio codec	MPEG-4 AAC-LC (AAC Low Complexity)		
Resolution (pixel)	Maximum 1920 x 1080		
Bit rate	Maximum 6Mbps		
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps		

### ■H.264/AVC

Profile	Baseline Profile, Main Profile, High Profile		
Video codec	H.264/AVC Video		
Audio codec	MPEG-4 AAC-LC (AAC Low Complexity)		
Resolution (pixel)	Maximum 1920 x 1080		
Bit rate	Maximum 20Mbps		
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps		

### ■MPEG-2

Profile	MP@HL, MP@ML	
Video codec	MPEG-2 PS (Program Stream)	
Audio codec	MPEG-1 Audio Layer 2, Dolby Digital	
Resolution (pixel)	Maximum 1920 x 1080	
Bit rate	Maximum 12Mbps	
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps	

### ■ WINDOWS MEDIA VIDEO (WMV)

Profile	Simple Profile, Main Profile, Advanced Profile		
Video codec	WMV (VC-1)		
Audio codec	WMA (WMA Professional and Lossless are not supported.)		
Resolution (pixel)	Maximum 1920 x 1080		
Bit rate	Simple and Main Profile: Maximum 15Mbps Advanced Profile: Maximum 20Mbps		
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps		

### ■ AVI CONTAINER

Profile	Refer to other tables in this section for compatible MPEG-4, H.264/AVC and WMV profiles.	
	Video: H.264/AVC Video Audio: MPEG-4 AAC-LC, MP3	
To be played back video and audio codec	Video: MPEG-4 Video Audio: MPEG-4 AAC-LC, MP3	
	Video: WMV (VC-1) Audio: MP3	
Resolution (pixel)	Maximum 1920 x 1080	;
Bit rate	Refer to other tables in this section for compatible MPEG-4, H.264/AVC and WMV profiles.	
Frame rate	Interlaced video: Maximum 60 fps Progressive video: Maximum 30 fps	i
		(

### ■ SD-VIDEO H.264 MOBILE VIDEO PROFILE

Profile	Baseline Profile		
Video codec	H.264/AVC Video		
Audio codec	MPEG-4 AAC		
Resolution (pixel)	640 x 480 and 640 x 360		
Bit rate	Video: Maximum 1.5Mbps, Audio: Maximum 128kbps		
Frame rate	30 fps		

### (INFORMATION)

• For information on how to create a video file, refer to the manual that comes with the encoder software to be used. Depending on the encoder software used, some video files may not be played back.

### **SD CARDS**

- An SD card is not provided with the rear seat entertainment system and needs to be purchased separately.
- Compatible formats: This system is compatible with SD memory cards that meet SD card specifications FAT16 formats, SDHC memory cards in FAT32 format, and SDXC memory cards in exFAT format.
- Panasonic SD memory card format software version 4.0 or higher is recommended.
- Data stored on an SD card may be lost. Before playing back pictures and videos stored on an SD card, make certain to back up the data.
- Before an SD card that contains any kind of data is played, slide the lock switch on the SD card to "LOCK" in order to prevent any data from being accidentally deleted or overwritten.
- When discarding or transferring ownership of an SD card: When using format or delete functions on this system or a personal computer, file management data changes but the data on the SD card is not completely erased. Destroying the body of the SD card or using commercial computer software that erases data is recommended when discarding or transferring ownership of an SD card to completely erase the data stored on the card. The management of data stored on an SD card is the customer's responsibility.

### A/V INPUT PORT

# OPERATING AUDIO/VISUAL EQUIPMENT CONNECTED TO THE SYSTEM

The volume can be adjusted using the vehicle's audio controls. All other operations must be made on the audio/visual equipment itself.

For details about operation of audio/visual equipment, refer to the manufacturer's instructions.



#### NOTICE

When the A/V input port is not in use: Keep the A/V input port cover closed. Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

#### (INFORMATION)

- HDMI compatible format
  - Compatible video signal: 480p, 576p,VGA
  - Compatible sound signal: LPCM 2ch

### **VOICE COMI**

5			
M	A۱	I ND SYSTEM	
	1	VOICE COMMAND SYSTEM OPERATION	
	1.	VOICE COMMAND SYSTEM 298 USING THE VOICE COMMAND	
		SYSTEM	5
	2.	CASUAL SPEECH RECOGNIZATION305	
	3.	COMMAND LIST 306	
	2	MOBILE ASSISTANT OPERATION	
	1.	MOBILE ASSISTANT 311	

297

### 1. VOICE COMMAND SYSTEM OPERATION

### 1. VOICE COMMAND SYSTEM

The voice command system enables the audio/visual, hands-free systems, etc. to be operated using voice commands.

Refer to the command list for samples of voice commands.  $(\rightarrow P. 306)$ 


### USING THE VOICE COMMAND SYSTEM

### STEERING SWITCH



- 1 Talk switch
- Press the talk switch to start the voice command system.
- To cancel voice recognition, press and hold the talk switch.
- 2 Back switch
- Press the back switch to return to the previous screen.

### **MICROPHONE**

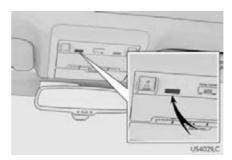

 It is unnecessary to speak directly into the microphone when giving a command.

### (INFORMATION)

- Wait for the confirmation beep before speaking a command.
- Voice commands may not be recognized if:
  - · Spoken too quickly.
  - Spoken at a low or high volume.
  - The roof or windows are open.
  - Passengers are talking while voice commands are spoken.
  - The air conditioning speed is set high.
  - The air conditioning vents are turned towards the microphone.
- In the following conditions, the system may not recognize the command properly and using voice commands may not be possible:
  - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
  - There is excessive background noise, such as wind noise.
- This system may not operate immediately after the engine <power> switch is turned to ACCESSORY or IGNITION ON <ON> mode.

298

### VOICE COMMAND SYSTEM OPERATION

The voice command system is operated by speaking commands corresponding to each function. Commands can be confirmed on the screen. The voice command system can be operated from either the main menu screen or shortcut menu screen.

### OPERATION FROM THE MAIN MENU

- 1 Press the talk switch.
- If the shortcut menu screen is displayed, say "Main menu" or select "Main menu" to display the main menu screen.
- Voice guidance for the voice command system can be skipped by pressing the talk switch.
- **2** Say the desired category name.
- All shortcut commands can be recognized on this screens.
- To display the shortcut menu screen, say "Shortcut menu" or select "Shortcut menu".
- Saying "Help" or selecting "?" prompts voice guidance to offer examples of commands and operation methods.
- 3 Say or select the desired command on the screen.

### OPERATION FROM THE SHORTCUTS

- 1 Press the talk switch.
- If the main menu screen is displayed, say "Shortcut menu" or select "Shortcut menu" to display the shortcut menu screen.
- Voice guidance for the voice command system can be skipped by pressing the talk switch.
- 2 Say the tab selection command or select the desired tab.
- All commands, including those which are not displayed on the screen, can be recognized.
- Commands related to each function are displayed on the screen of each function tab. Some commonly used commands are displayed on the shortcut tab screen. Say "More Hints" to display more commonly used commands.
- To display the main menu screen, say "Main menu" or select "Main menu".
- Saying "Help" prompts voice guidance to offer examples of commands and operation methods.

- 3 Say the desired command.
- Registered POIs, registered names in the contacts list etc., can be said in the place of the "<>" next to the commands. (→P. 306)
   For example: Say "Find nearby dining", "Call John Smith" etc.
- If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:
  - · Say "Go back".
  - Select "Go Back".
  - Press the back switch on the steering wheel.
- To cancel voice recognition, select or press and hold the talk switch.

#### (INFORMATION)

- If the system does not respond or the confirmation screen does not disappear, press the talk switch and try again.
- If a voice command cannot be recognized, follow the voice guidance and say the voice command again.
- If a voice command cannot be recognized 5 times consecutively, voice recognition will be canceled.
  - Press the talk switch to restart the voice command system.
- "Display Voice Confirmations" can be set on/off on the "Voice Settings" screen. (→P.63)
- When "Display Voice Confirmations" is set to on, voice recognition prompts will be displayed for some voice commands when recognized. If the recognized command is correct, say "Yes" or select "Yes". (Saying "No" or selecting "No" will display the previous screen.)
- When "Display Voice Confirmations" is set to off, voice recognition prompts will only be displayed for important voice commands.
- If "Display Voice Confirmations" is set to on and commands are generally recognized correctly, a confirmation screen may be displayed asking if you would wish to set "Display Voice Confirmations" to off. To set to off, say "Yes" or select "Yes".
- "Voice Recognition Prompts" can be set to on or off on the "Voice Settings" screen. (→P. 63)
- Voice guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing the talk switch and hearing a beep.
- The "Side Display" cannot be operated during voice recognition.

### ■ DISPLAYING THE "Voice Settings" SCREENS

- 1 Select ≡
- The "Voice Settings" screen will be displayed. (→P. 63)

# INCREASING THE VOICE RECOGNITION PERFORMANCE

- 1 Press the "MENU" button on the Remote Touch.
- 2 Select "Setup".
- 3 Select "Voice".
- 4 Select "Train Voice Recognition".
- The user will be asked to say sample phrases. This will help the voice command system adapt to the user's accent.

### VOICE COMMAND EXAMPLE: LAUNCH LEXUS App Suite APPLICATION\*

- 1 Press the talk switch.
- 2 Say "Launch <application name>".
- LEXUS App Suite application screen is displayed.

### VOICE COMMAND EXAMPLE: PERFORMING A DESTINATION SEARCH BY ADDRESS (ENGLISH AND FRENCH ONLY)\*

- 1 Press the talk switch.
- 2 Say "Enter an address".
- 3 Say "<house number, street name, city name, State>" in succession.
- As voice commands spoken in French are only available for addresses in Quebec, Canada, it is not necessary to say "<State>" in French.

\*: With navigation function

301

- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<number>" or select the number.
- Some areas cannot be recognized by the voice recognition system.
- If voice commands cannot be recognized repeatedly, a confirmation screen may be displayed asking if you would wish to call a "Destination Assist" operator for help. (→P. 400) To call an operator, say "Yes" or select "Yes". (Saying "No" or selecting "No" will display the previous screen.)
- For information regarding the state/ province setting to perform a destination search by address: →P. 90
- 4 If the recognized address is correct, say "Yes" or select "Yes".
- To correct the city name, street name, or house number, say "Change city", "Change street", or "Change house number". (Saying "No" or "Go Back", or selecting "No" or "Go Back" will display the previous screen.)
- 5 Say "Go directly" or select "Go Directly".
- After this, follow the voice guidance and search for a destination route by voice command operation.

### (INFORMATION)

• The voice command recognition is designed to recognize the main body of the official street name.

For example: if the official street name is "East Main Street", the voice command recognition will recognize "Main".

Say the desired number, cardinal direction etc. in the place of the "<>".

For example: Say "West 555".

- Inputting the house number can be skipped.
- Even if the state set using voice recognition is different from the set state in the "Address" screen (which was set when a destination was set manually), the set state in the "Address" screen will not change. (→P. 91)
- The house number voice recognition conditions are outlined below:
  - Numerals: 10 digits or less
  - Numerals and cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say "and".)
  - Cardinal direction or a hyphen and numerals: A total of 9 digits or less (Do not say "and".)
  - Numerals are recognized as single digits only.
  - The cardinal direction and hyphens are only recognized once.
  - The following cardinal directions can be recognized: North, East, West and South.

### VOICE COMMAND EXAMPLE: SEARCH FOR A SONG

- 1 Press the talk switch.
- 2 Say "Play song <name>".
- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<number>" or select the number.
- The system starts playing music and the song lists are displayed.

#### (INFORMATION)

- The Gracenote database is only compatible with the USB or iPod mode.
- The list screens can be operated by selecting using the Remote Touch as well as by recognizing the voice commands.
- A USB memory or iPod must be connected to enable track searching and playback. (→P. 176, 180)
- When a USB memory or iPod is connected, recognition data is created so tracks can be searched using voice commands.
- Recognition data is updated under the following conditions:
  - When the USB memory or iPod data has changed.
  - When the voice recognition language is changed. (→P. 56)
- While the recognition data is being created or being updated, a track search cannot be performed using a voice command.
- When the "Music" tab is disappeared on the shortcut menu screen, it is not possible to search for a track using a voice command.

### VOICE COMMAND EXAMPLE: CALL NAME

- 1 Press the talk switch.
- 2 Say "Call <contacts> <phone types>".
- A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed. Say "<number>" or select the number.

#### (INFORMATION)

- In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "Call a contact" say the name, or the name and type of phone, of a contact.
  - For example: "Call a contact", "John Smith" or "Call a contact", "Mary Davis", "Mobile"
- There are 4 types of phones: Home, Mobile, Office and Other.
- Short or abbreviated names in the contacts list may not be recognized. Change names in the contacts list to full names.
- Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say "Yes" or "No".
- When the system recognizes multiple names from the contacts list, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say or select the number of the name from the candidate list to select a name from the candidate list.
- When a contact has multiple phone numbers registered in the contacts list, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say or select the number of the desired phone number from the candidate list to select a phone number from the candidate list.

### VOICE COMMAND EXAMPLE: DIAL NUMBER

- 1 Press the talk switch.
- 2 Say the phone number.
- In the same manner as it is displayed on the screen, "Dial <number>", after saying "Dial a number" say the phone number.
- Say the phone number one digit at a time.
   For example, if the phone number is 2345678:
  - Say "two three four five six seven eight"
- 3 Say "Call" or press the switch on the steering wheel.
- When the confirmation screen appears, say "Yes" or select "Yes" or press the switch on the steering wheel.
- When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen. Pressing the switch on the steering wheel makes a call to the top entry on the list. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list to select a phone number from the candidate list.

### 2. CASUAL SPEECH RECOGNIZATION

1. VOICE COMMAND SYSTEM OPERATION

Due to natural language speech recognition technology, this system enables recognition of a command when spoken naturally. However, the system cannot recognize every variation of each command. In some situations, it is possible to omit the command for the procedure and directly state the desired operation. Not all voice commands are displayed in the short cut menu.

#### (INFORMATION)

If the command cannot be recognized completely, the command input screen will be displayed. (Search results will be shown based on the part of the command that was recognized.)

### **EXPRESSIONEXAMPLESFOR EACH FUNCTION**

Command	Expression examples
"Go Home"	Navigate to my house. Take me home.
"Enter an Address"	I need a route to a street address. Give me a street.
"Find <poi category="">"</poi>	Search for a <restau- rants&gt; around here. I need a route to a near- by <restaurants>.</restaurants></restau- 
"Call <name> <type>"</type></name>	Get me <robert brown="">. Contact the <robert brown=""> phone of <work>.</work></robert></robert>
"Dial <number>"</number>	Can you get me <3334445555>. Ring <3334445555>.
"Play Artist <name>"</name>	Play the artist <name>. I want to hear the band <name>.</name></name>
"Play Album <name>"</name>	Switch to the album <name>.</name>

### 1. VOICE COMMAND SYSTEM OPERATION

### 3. COMMAND LIST

Recognizable voice commands and their actions are shown below.

- Frequently used commands are listed in the following tables.
- For devices that are not installed in the vehicle, the related commands will not be displayed in the screen. Also, according to conditions, other commands may not be displayed in the screen.
- The functions available may vary according to the system installed.
- Voice recognition language can be changed.  $(\rightarrow P. 56)$

### **▶** Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"</tab>	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

### ► Apps\*

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"</apps>	Activates the LEXUS App Suite application

<sup>\*:</sup> With navigation function

### ► Navi\*1

Command	Action
"Find <poi category="">"</poi>	Displays a list of $\langle POI \text{ category}^{\star 2} \rangle$ near the current position $^{\star 3}$
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <poi> icons"</poi>	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

### **▶** Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number="">"</phone>	Places a call to the said phone number
"Call <contacts> <phonetypes>"</phonetypes></contacts>	Place a call to the said phone type of the contact from the phone book

<sup>\*1.</sup> With navigation function
\*2: For example; "Gas stations", "Restaurants", etc.
\*3: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite. (→P. 394)

### **►** Radio

Command	Action
"Tune to <frequency> AM"</frequency>	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"</frequency>	Changes the radio to the specified FM frequency
"Play <genre> station"</genre>	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"</number></frequency>	Changes the radio to the specified HD radio station
"Tune to preset <number>"</number>	Changes the radio to the specified preset radio station
"Tune to <name>"</name>	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"</number>	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"</genre>	Changes the radio to a satellite radio channel of the specified genre
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode

### ► Audio

Command	Action
"Play Playlist <name>"</name>	Plays tracks from the selected playlist
"Play Artist <name>"</name>	Plays tracks from the selected artist
"Play Song <name>"</name>	Plays the selected track
"Play Album <name>"</name>	Plays tracks from the selected album
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* Audio"	Selects Bluetooth $^{\circledR}$ audio mode
"External"	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

<sup>\*:</sup> Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### ►Info\*

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"	Displays the Lexus insider list

<sup>\*:</sup> With navigation function

### **▶** Climate

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees*

<sup>\*:</sup> Only within the possible temperature range of the air conditioning system

### (INFORMATION)

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on.

### 1. MOBILE ASSISTANT

The Mobile Assistant feature will activate Apple's  $Siri^{\mathbb{R}}$  Eyes Free mode via the steering wheel switches. To operate the Mobile Assistant, a compatible cellular phone must be registered and connected to this system via Bluetooth<sup>®</sup>. ( $\rightarrow$ P.39.)

1 Press and hold this switch until you hear the beeps.



- The Mobile Assistant can be used only when the "Mobile Assistant" screen is displayed.
- To cancel the Mobile Assistant, select "Cancel", or press and hold the a on the steering wheel.
- To restart the Mobile Assistant for additional commands, press the and on the steering wheel.
  - Mobile Assistant can only be restarted after the system responds to a voice command.
  - After some phone and music commands, the Mobile Assistant feature will automatically end to complete the requested action.

 The volume of the Mobile Assistant can be adjusted using the "PWR·VOL" knob or steering wheel volume control switches. The Mobile Assistant and phone call volumes are synchronized.

### (INFORMATION)

- The available features and functions may vary based on the iOS version installed on the connected device.
- Some Siri features are limited in Eyes Free mode. If you attempt to use an unavailable function, Siri will inform you that the function is not available.
- If Siri is not enabled on the cellular phone connected via Bluetooth<sup>®</sup>, an error message will be displayed on the screen.
- While a phone call is active, the Mobile Assistant cannot be used.
- If using the navigation feature of the cellular phone, ensure the active audio source is Bluetooth<sup>®</sup> audio or iPod in order to hear turn by turn direction prompts.

### **MICROPHONE**

It is not necessary to speak directly into the microphone when using the Mobile Assistant. (Microphone location: →P.298.)

### (INFORMATION)

- Wait for the listening beeps before using the Mobile Assistant.
- The Mobile Assistant may not recognize commands in the following situations:
  - Spoken too quickly.
  - Spoken at a low or high volume.
  - The roof or windows are open.
  - Passengers are talking while the Mobile Assistant is being used.
  - The air conditioning speed is set high.
  - The air conditioning vents are turned toward the microphone.

# 6 INFORMATION\*

2

### 1 INFORMATION DISPLAY

2

DISPLAYING DOPPLER
WEATHER INFORMATION.......314

,

4

g

9

0

\*: This function is not made available on some models.

313

### 1. INFORMATION DISPLAY

### 1. RECEIVING DOPPLER WEATHER INFORMATION

Doppler weather radar information can be received via HD Radio broadcast or by the LEXUS App Suite application on a Bluetooth<sup>®</sup> phone. For details about the LEXUS App Suite application: →P. 387

### DISPLAYING DOPPLER WEATHER INFORMATION

1 Press the "MENU" button on the Remote Touch.



- 2 Select "Info".
- 3 Select "Weather".

4 Check that the "Weather" screen is displayed.



No.	Function					
1	Select to display the weather of the current location. ( $\rightarrow$ P. 315)					
2	Select to display the weather of a desired location in the recently checked locations list.					
3	Select to display the weather of a desired location in the national cities list.					
4	Select to display the weather of a desired location in the other local cities list.					
5*	Select to display Doppler weather radar information over the map.					

\*: With navigation function

### DISPLAYING THE WEATHER OF THE CURRENT LOCATION

- 1 Display the "Weather" screen.  $(\rightarrow P$ . 314)
- 2 Select "Current Weather".
- **3** Select the desired tab to be displayed.
- When the "3 Day" tab is selected: When a specific day is selected, weather informa-tion for that day will be displayed.

### 2. DATA SERVICES SETTINGS

### SETTING DOWNLOAD METHODS

Data service information, which is comprised of traffic information and weather information, can be received via HD Radio broadcast and by the LEXUS App Suite application on a Bluetooth<sup>®</sup> phone. The receiving method can be set to both or only via HD Radio broadcast. For details about the LEXUS App Suite application: →P. 387

1 Press the "MENU" button on the Remote Touch.



2 Select "Setup".

- 3 Select "Data Services".
- 4 Select the desired item to be set.



• Select a checkbox on the right to set.

No.	Function			
1	Select to receive data service information via both HD Radio broadcast and the LEXUS App Suite application on a Bluetooth <sup>®</sup> phone. When both methods are available, HD Radio broadcast will be selected.			
2	Select to receive data only via HD Radio broadcast.			

## 7

### PERIPHERAL MONITORING SYSTEM

1	LEXUS PARKING ASSIST MONITOR		2	INTUITIVE PARKING ASSIST	
1.	LEXUS PARKING ASSIST MONITOR		1.	TYPES OF SENSORSINTUITIVE PARKING ASSIST	
	DRIVING PRECAUTIONSSCREEN DISPLAYUSING THE SYSTEM	320		SWITCH  DISPLAY  THE DISTANCE DISPLAY AND	
2.	ESTIMATED COURSE LINE DISPLAY MODE			BUZZER DETECTION RANGE OF THE SENSORS.	
	SCREEN DESCRIPTION			SENSOR DETECTION INFORMATION	7
3.	PARKING ASSIST GUIDE LINE DISPLAY MODESCREEN DESCRIPTIONPARKING	325		INTUITIVE PARKING ASSIST-SENSOR FAILURE WARNING CERTIFICATION	
4.	LEXUS PARKING ASSIST MONITOR PRECAUTIONS AREA DISPLAYED ON SCREEN		2.	INTUITIVE PARKING ASSIST SETTINGSETTING AN ALERT VOLUMESETTING A PARKING SONAR	
	THE CAMERA  DIFFERENCES BETWEEN  THE SCREEN AND  THE ACTUAL ROAD			DISPLAYSETTING A DISPLAY AND TONE INDICATION	
5.	WHEN APPROACHING THREE-DIMENSIONAL OBJECTS THINGS YOU SHOULD				
	IF YOU NOTICE ANY SYMPTOMS				

### 1. LEXUS PARKING ASSIST MONITOR

The parking assist monitor assists the driver by displaying an image of the view behind the vehicle while backing up, for example while parking.

### (INFORMATION)

 The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

### **DRIVING PRECAUTIONS**

The parking assist monitor is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Pay attention to the following precautions when using the parking assist monitor.

### **A** CAUTION

- Never depend on the parking assist monitor entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state.
  - Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- If you seem likely to hit nearby vehicles, obstacles, people or mount the shoulder, depress the brake pedal to stop the vehi-
- The instructions given are only guidelines. When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the parking assist system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.




### **A** CAUTION

- Do not use the parking assist monitor system in the following cases:
  - On icy or slick road surfaces, or in snow
  - When using tire chains or emergency
  - · When the trunk is not closed completely
  - · On roads that are not flat or straight, such as curves or slopes
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to visually check all around the vehicle both directly and using the mirrors before proceeding.
- If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances.  $(\rightarrow P. 329)$

### SCREEN DISPLAY

The parking assist monitor screen will be displayed if the shift lever is shifted to the "R" position while the engine <power> switch is in IGNITION ON <ON> mode.

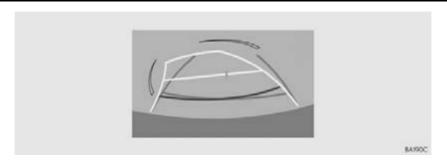

### CANCELING LEXUS PARKING ASSIST MONITOR


The parking assist monitor is canceled when the shift lever is shifted into any position other than the "R" position.

Use any of the following modes.



► Estimated course line display mode (→P. 323)

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

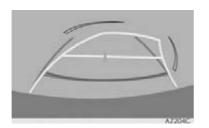


Parking assist guide line display mode (→P. 325)

The steering wheel return points (parking assist guide lines) are displayed.



► Distance guide line display mode

Distance guide lines only are displayed.

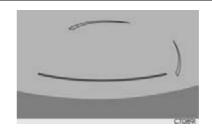

7

### SWITCHING THE DISPLAY MODE

When the shift lever is in any position other than the "R" position, the display mode can be changed in the following procedure.


- 1 Press the "MENU" button on the Remote Touch.
- 2 Select "Setup".
- 3 Select "Vehicle".
- 4 Select "Backup Camera Guide Line Settings".

**5** Select the display mode.



No.	Name	Page/Detail
1	Estimated course line display mode	323
2	Parking assist guide line display mode	325
3	Distance guide line display mode	Distance guide lines only are displayed.

### SCREEN DESCRIPTION

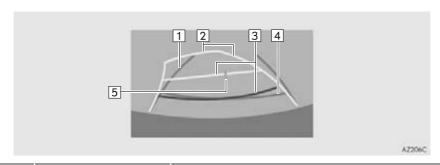

No.	Display	Function
1	Vehicle width guide line	Displays a guide path when the vehicle is being backed straight up.  • The displayed width is wider than the actual vehicle width.  • These guide lines align with the estimated course lines when the vehicle is going straight ahead.
2	Estimated course lines	Shows an estimated course when the steering wheel is turned.
3	Distance guide lines	<ul> <li>Shows distance behind the vehicle when the steering wheel is turned.</li> <li>The guide lines move in conjunction with the estimated course lines.</li> <li>The guide lines display points approximately 1.5 ft. (0.5 m) (red) and approximately 3 ft. (1 m) (yellow) from the center of the edge of the bumper.</li> </ul>
4	Distance guide line	Shows distance behind the vehicle.  • Displays a point approximately 1.5 ft. (0.5 m) (blue) from the edge of the bumper.
5	Vehicle center guide line	The line indicates the estimated vehicle center on the ground.

### **A** CAUTION


If the steering wheel is straight and the vehicle width guide lines and the estimated course lines are not in alignment, have the vehicle inspected by your Lexus dealer.

PERIPHERAL MONITORING SYSTEM

### **PARKING**


When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.

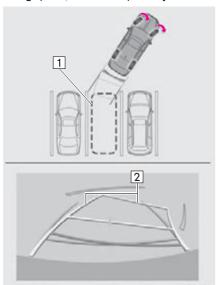

▶ 1 Parking space2 Estimated course lines


3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width guide lines are within the left and right dividing lines of the parking space.

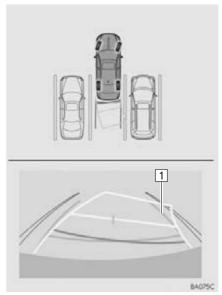

- ▶ 1 Vehicle width guide line
- 4 Once the vehicle width guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

### 3. PARKING ASSIST GUIDE LINE DISPLAY MODE

## SCREEN DESCRIPTION

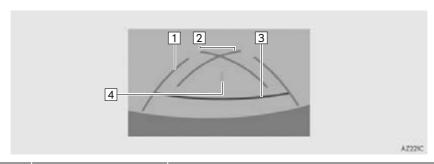



No.	Display	Function
1	Vehicle width guide line	Displays a guide path when the vehicle is being backed straight up.  • The displayed width is wider than the actual vehicle width.
2	Parking assist guide lines	Shows the path of the smallest turn possible behind the vehicle.  • Shows the approximate position of the steering wheel when parking.
3	Distance guide line	Shows distance behind the vehicle.  • Display points approximately 1.5 ft. (0.5 m) (red) from the edge of the bumper.
4	Vehicle center guide line	The line indicates the estimated vehicle center on the ground.

### **PARKING**

When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

- 1 Shift the shift lever to the "R" position.
- 2 Back up until the parking assist guide line meets the edge of the left-hand dividing line of the parking space.

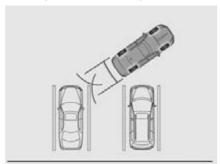

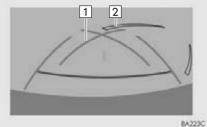


- ▶ 1 Parking assist guide line
  - 2 Parking space dividing line

- 3 Turn the steering wheel all the way to the right, and back up slowly.
- 4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

#### AREA DISPLAYED ON **SCREEN**

The parking assist monitor displays an image of the view from the bumper of the rear area of the vehicle.

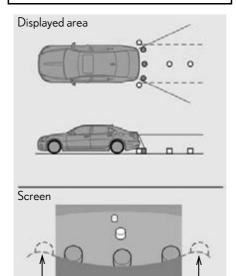


• The image adjustment procedure for the parking assist monitor screen is the same as the procedure for adjusting the screen.  $(\to P.37)$ 

Corners of bumper

- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be displayed.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed on the monitor.

#### **THE CAMERA**

The camera for the parking assist monitor is located as shown in the illustration.

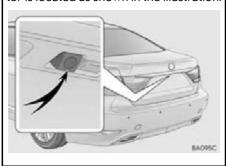

#### **USING THE CAMERA**

If dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera, it cannot transmit a clear image. In this case, flush it with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.

#### **NOTICE**


- The parking assist monitor may not operate properly in the following cases.
  - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
- As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
- When cleaning the camera lens, flush the camera with a large quantity of water and wipe it with a soft and wet cloth. Strongly rubbing the camera lens may cause the camera lens to be scratched and unable to transmit a clear image.
- Do not allow organic solvent, car wax, window cleaner or a glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.
- If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
- When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by your Lexus dealer as soon as possible.

# **DIFFERENCES BETWEEN THE** SCREEN AND THE ACTUAL

- The distance guide lines and the vehicle width guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.
- The distances between the vehicle width guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.
- The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

#### WHENTHE GROUND BEHIND THE VEHICLE SLOPES UP **SHARPLY**

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.

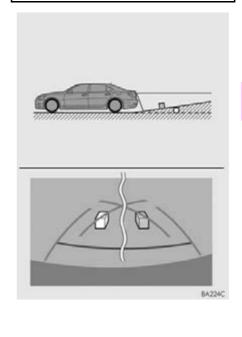


# WHEN THE GROUND BEHIND THE VEHICLE SLOPES DOWN SHARPLY

The distance guide lines will appear to be farther from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guide lines and the actual distance/course on the road.



# WHEN ANY PART OF THE VEHICLE SAGS

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

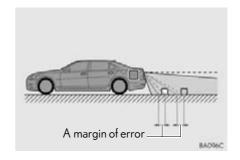


# WHEN APPROACHING THREE-DIMENSIONAL OBJECTS

The estimated course lines target flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.

#### **ESTIMATED COURSE LINES**


Visually check the surroundings and the area behind the vehicle. In the case shown below, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

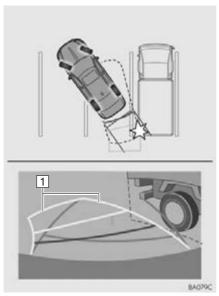


▶ 1 Estimated course lines

#### **DISTANCE GUIDE LINES**

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point B. However, in reality if you back up to point A, you will hit the truck. On the screen, it appears that A is closest and C is farthest away. However, in reality, the distance to A and C is the same, and B is farther than A and C.

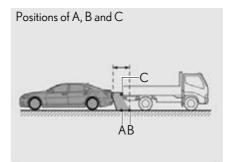

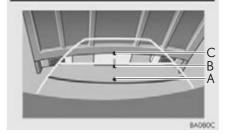

### 5. THINGS YOU SHOULD KNOW

## IF YOU NOTICE ANY SYMPTOMS

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by your Lexus dealer.

Symptom	Likely cause	Solution	
The image is difficult to see	<ul> <li>The vehicle is in a dark area</li> <li>The temperature around the lens is either high or low</li> <li>The outside temperature is low</li> <li>There are water droplets on the camera</li> <li>It is raining or humid</li> <li>Foreign matter (mud etc.) is adhering to the camera</li> <li>Sunlight or headlights are shining directly into the camera</li> <li>The vehicle is under fluorescent lights, sodium lights, mercury lights etc.</li> </ul>	ing the vehicle's surroundings. (Use the monitor again once conditions have been improved.)  The procedure for adjusting the picture quality of the parking assist monitor is the same as the procedure for adjusting the screen. (→P. 37)  is under fluos, sodium lights,	
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.	Flush the camera with a large quantity of water and wipe the camera lens clean with a soft and wet cloth.	
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by your Lexus dealer.	
The guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by your Lexus dealer.	
	<ul> <li>The vehicle is tilted. (There is a heavy load on the vehicle, tire pressure is low due to a tire puncture, etc.)</li> <li>The vehicle is used on an incline.</li> </ul>	If this happens due to these causes, it does not indicate a malfunction. Back up while visually check- ing the vehicle's surroundings.	
The estimated course lines move even though the steering wheel is straight	There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by your Lexus dealer.	


Symptom	Likely cause	Solution
Guide lines are not displayed	The trunk is open.	Close the trunk. If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer.
The estimated course lines are not displayed	<ul> <li>12-volt battery has been reinstalled.</li> <li>The steering wheel has been moved while the 12-volt battery was being reinstalled.</li> <li>12-volt battery power is low.</li> <li>The steering sensor has been reinstalled.</li> <li>There is a malfunction in the signals being output by the steering sensor.</li> </ul>	Stop the vehicle, and turn the steering wheel as far as it will go to the left and right. If this does not resolve the symptom, have the vehicle inspected by your Lexus dealer.

#### 2. INTUITIVE PARKING ASSIST

### 1. INTUITIVE PARKING ASSIST

The distance to obstacles measured by the sensors is communicated via the display and a buzzer when parallel parking or maneuvering into a garage. Always check the surrounding area when using this system.


#### **TYPES OF SENSORS**

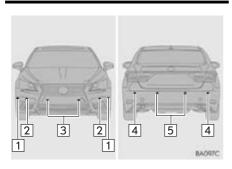

- 1 Front side sensors
- 2 Front corner sensors
- 3 Front center sensors
- 4 Rear corner sensors
- 5 Rear center sensors

# INTUITIVE PARKING ASSIST SWITCH

1 Turn the intuitive parking assist on/off.

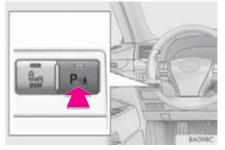


 When on, the indicator light comes on to inform the driver that the system is operational.

### DISPLAY

When the sensors detect an obstacle, the graphic is shown on the multi-information display and screen display according to position and distance to the obstacle.

#### ■ MULTI-INFORMATION DISPLAY

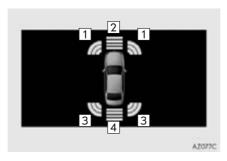

- 1 Front side and front corner sensors operation
- 2 Front center sensors operation
- 3 Rear corner sensors operation
- 4 Rear center sensors operation

#### **■ SCREEN DISPLAY**



- : Select to mute the buzzer sounds. This function is available when the vehicle is moving forward.
- The graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 341)

# THE DISTANCE DISPLAY AND BUZZER

When a sensor detects an obstacle, the direction of and the approximate distance to the obstacle are displayed and the buzzer sounds.

#### ■ CORNER SENSORS AND SIDE SENSORS

Level	1	2	3	4
Display example	_	(B)	(B)	[8]
Buzzer	_	Medium	Fast	Continuous

#### **■ CENTER SENSORS**

Level	1	1 2		4	
Display example		1001	HQHD1	i (iii)	
Buzzer	Slow	Medium	Fast	Continuous	


# ■ DETECTION LEVEL AND APPROXIMATE DISTANCE TO AN OBSTACLE

Level	1	2	3	4
Front side sensors	_	1.6 to 1.2 ft. (50 to 37.5 cm)	1.2 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Front corner sensors	_	2.0 to 1.2 ft. (60 to 37.5 cm)	1.2 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Front center sensors	3.3 to 1.6 ft. (100 to 50 cm)	1.6 to 1.2 ft. (50 to 37.5 cm)	1.2 to 1.0 ft. (37.5 to 30 cm)	1.0 ft. (30 cm) or less
Rear corner sensors	_	2.0 to 1.2 ft. (60 to 37.5 cm)	1.2 to 0.8 ft. (37.5 to 25 cm)	0.8 ft. (25 cm) or less
Rear center sensors	4.9 to 2.0 ft. (150 to 60 cm)	2.0 to 1.5 ft. (60 to 45 cm)	1.5 to 1.1 ft. (45 to 35 cm)	1.1 ft. (35 cm) or less

#### (INFORMATION)

• Settings (e.g. buzzer volume) can be changed.  $(\rightarrow P. 341)$ 

# DETECTION RANGE OF THE SENSORS

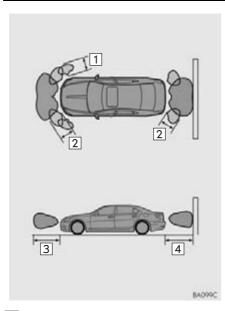

- 1 Approximately 1.6 ft. (50 cm)
- 2 Approximately 2.0 ft. (60 cm)
- 3 Approximately 3.3 ft. (100 cm)
- 4 Approximately 4.9 ft. (150 cm)
- The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.
- The range of the sensors may change depending on the shape of the object etc.

# SENSOR DETECTION INFORMATION

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect an obstacle. Particular instances where this may occur are listed below.

- There is dirt, snow or ice on a sensor.
- A sensor is frozen.
- A sensor is covered in any way.
- The vehicle is leaning considerably to one side.
- On an extremely bumpy road, on an incline, on gravel, or on grass
- The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
- There is another vehicle equipped with parking assist-sensors in the vicinity.
- A sensor is coated with a sheet of spray or heavy rain.
- The vehicle is equipped with a fender pole or radio antenna.
- Towing eyelets are installed.
- A bumper or sensor receives a strong impact.

- The vehicle is approaching a tall or rightangled curb.
- In harsh sunlight or intense cold weather.
- A non-genuine Lexus suspension (lowered suspension etc.) is installed.
- In addition to the examples above, there are instances in which, because of their shapes, signs and other objects may be judged by a sensor to be closer than they
- The shape of the obstacle may prevent a sensor from detecting it. Pay particular attention to the following obstacles:
  - · Wires, fences, ropes, etc.
  - · Cotton, snow and other materials that absorb sound waves
  - Sharply-angled objects
  - Low obstacles
  - Tall obstacles with upper sections projecting outwards in the direction of your vehi-

### **A** CAUTION

- Caution when using the intuitive parking assist-sensor
  - Observe the following precautions. Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.
  - · Do not use the sensor at speeds in excess of 6 mph (10 km/h).
  - Do not attach any accessories within the sensor range.
- Even though sensors which are functioning properly continue to detect obstacles, never use the intuitive parking assist if one more sensor(s) may be malfunction-

### <u>^</u>

#### NOTICE

- Notes when washing the vehicle
  - Do not apply intensive bursts of water or steam to the sensor area. Doing so may result in the sensor malfunctioning.
- As the intuitive parking assist-sensor might be malfunctioning in the following cases, have it checked by your Lexus dealer.
- The graphic which indicates that an obstacle has been detected does not come on and a beep does not sound even when the intuitive parking assist mode is turned on.
- The graphic which indicates that an obstacle has been detected comes on despite no obstacle around the vehicle.
- If your vehicle has been involved in an accident.
- If the graphic which indicates that an obstacles has been detected remains on without a beeping sound.

#### INTUITIVE PARKING ASSIST-SENSOR FAILURE WARNING

If an error is detected when the intuitive parking assist-sensor is turned on, the vehicle symbol comes on or flashes with beeping sounds.

#### (INFORMATION)

- The intuitive parking assist-sensor failure warning display is not given in either of the following operations:
  - · Changing to another screen
  - Turning off the main switch for the intuitive parking assist-sensor

# IF THE FAILURE WARNING APPEARS

This symbol indicates that a sensor is covered with foreign matter such as snow or mud. Remove the foreign matter from the sensor.

If the failure warning does not go off even after the foreign matter is removed, the intuitive parking assist-sensor may be malfunctioning. Have your vehicle inspected by your Lexus dealer.

This symbol indicates that the intuitive parking assist-sensor is malfunctioning. Have your vehicle inspected by your Lexus dealer.


#### **CERTIFICATION**

- ► For vehicles sold in Canada.
- This ISM device complies with Canadian ICES-001.
- Cet appareil ISM est conforme a la norme NMB-001 du Canada.

## 2. INTUITIVE PARKING ASSIST SETTING

The volume of the beeps, turning on or off of the display, etc. can be set.

Press the "MENU" button on the Remote Touch.

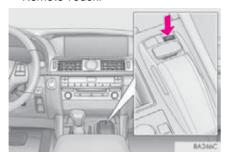

- 2 Select "Setup".
- 3 Select "Vehicle".
- 4 Select "LEXUS Park Assist".
- **5** Select the desired button.

#### SETTING AN ALERT VOLUME

The alert volume can be adjusted.

- Display the "LEXUS Park Assist Settings" screen. ( $\rightarrow$ P. 341)
- **2** Select the desired screen button.



• The volume has 5 levels, increasing with higher value.

#### **SETTING A PARKING SONAR DISPLAY**

Parking sonar display can be set to on or off.

- Display the "LEXUS Park Assist Settings" screen. ( $\rightarrow$ P. 341)
- 2 Select "Display Off" to turn off the parking sonar display.

PERIPHERAL MONITORING SYSTEM

# SETTING A DISPLAY AND TONE INDICATION

Front and back sensors display and tone indication can be set.

- 1 Display the "LEXUS Park Assist Settings" screen. (→P. 341)
- 2 Select "Front" or "Rear".
- Selecting "Front" or "Rear" to switch the distance for the front or back sensors display and tone indication, from long distance to short distance, or from short distance to long distance.

		8	3			
		PHO	INC	• E		
1	PHONE OPERATION (HAN FREE SYSTEM FOR CELLUL PHONES)		5.	TALKING ON THE Bluetooth® PHONEINCOMING CALL WAITING		
1.	QUICK REFERENCE	344	6.	Bluetooth® PHONE MESSAGE FUNCTION	359	
2.	SOME BASICSREGISTERING/CONNECTING			RECEIVING A MESSAGECHECKING MESSAGES		
	A Bluetooth <sup>®</sup> PHONEUSING THE PHONE SWITCH/MICROPHONE			REPLYING TO A MESSAGE (QUICK REPLY)CALLING THE MESSAGE SENDER		
	VOICE COMMAND SYSTEMABOUT THE CONTACTS IN THE CONTACT LIST		2	SETUP		
	WHEN SELLING OR DISPOSING OF THE VEHICLE	348	1.	PHONE SETTINGS"Sounds" SCREEN		8
3.	CALLING ON THE Bluetooth® PHONE BY FAVORITES LIST	350		"Contacts/Call History" SCREEN"  "Messaging" SCREEN"  "Notifications" SCREEN	373	
	BY CALL HISTORY	351	3	WHAT TO DO IF	275	
4.	RECEIVING ON THE Bluetooth® PHONE	355	1.	TROUBLESHOOTING	3/5	

### 1. PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

### 1. QUICK REFERENCE

The phone top screen can be reached by the following methods:

Using the steering wheel.

Press the **s** switch on the steering wheel.

► From the "Menu" screen

Press the "MENU" button on the Remote Touch, then select "Phone".



Function		
	Registering/connecting Bluetooth® device	39
Dhanaanatian	Calling on the Bluetooth <sup>®</sup> phone	349
Phone operation	Receiving on the Bluetooth $^{\circledR}$ phone	355
	Talking on the Bluetooth $^{\circledR}$ phone	356
Message function	Using the Bluetooth $^{\circledR}$ phone message function	359
С.ш	Phone settings	364
Setting up a phone	$Bluetooth^{ exttt{@}}$ settings	45

#### 2. SOME BASICS

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth® Bluetooth<sup>®</sup> is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.



#### **CAUTION**

- While driving, do not use a cellular phone or connect the Bluetooth® phone.
- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

#### NOTICE

Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

- ●If your cellular phone does not support Bluetooth<sup>®</sup>, this system cannot function.
- In the following conditions, the system may not function:
  - The cellular phone is turned off.
  - The current position is outside the communication area.
  - The cellular phone is not connected.
  - The cellular phone has a low battery.
- ●When using Bluetooth<sup>®</sup> audio and hands-free system at the same time, the following problems may occur:
  - $\bullet$  The Bluetooth  $^{\circledR}$  connection may be cut.
- Noise may be heard on the Bluetooth<sup>®</sup> audio playback.

#### REGISTERING/ CONNECTING A Bluetooth® PHONE

To use the hands-free system for cellular phones, it is necessary to register a cellular phone with the system.  $(\rightarrow P. 39)$ 


#### Bluetooth® PHONE CONDITION DISPLAY

The condition of the Bluetooth<sup>®</sup> phone appears on the upper right side of the screen.  $(\rightarrow P. 16)$ 

#### USING THE PHONE SWITCH/ MICROPHONE


► Steering switch

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.

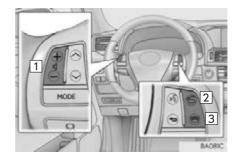

- 1 Volume control switch
- Press the "+" side to increase the volume.
- Press the "-" side to decrease the volume.
- 2 Off hook switch
- 3 On hook switch

The microphone is used when talking on the phone.

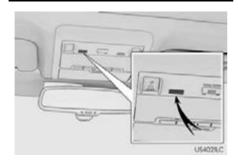

#### VOICE COMMAND SYSTEM

Press this switch to operate the voice command system.



 The voice command system and its list of commands can be operated. (→P. 298)

#### (INFORMATION)

- The other party's voice will be heard from the front speakers. The audio/visual system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)
- Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When talking on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
  - Driving on an unpaved road. (Making excessive traffic noise.)
  - Driving at high speeds.
  - The roof or windows are open.
  - The air conditioning vents are pointed towards the microphone.
  - The sound of the air conditioning fan is loud.
  - There is a negative effect on sound quality due to the phone and/or network being used.

2

PHONE

# ABOUT THE CONTACTS IN THE CONTACT LIST

- The following data is stored for every registered phone. When another phone is connected, the following registered data cannot be read:
  - Contact data
  - · Call history data
  - Favorites data
  - Image data
  - · All phone settings
  - Message settings

#### (INFORMATION)

 When a phone's registration is deleted, the above-mentioned data is also deleted.

# WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. ( $\rightarrow$ P. 61)

- The following data in the system can be initialized:
  - Contact data
  - · Call history data
  - Favorites data
  - Image data
  - All phone settings
  - Message settings


#### (INFORMATION)

 Once initialized, the data and settings will be erased. Pay much attention when initializing the data.

# 3. CALLING ON THE Bluetooth® PHONE

After a Bluetooth® phone has been registered, a call can be made using the hands-free system. There are several methods by which a call can be made, as described below.

Press the "MENU" button on the Remote Touch.

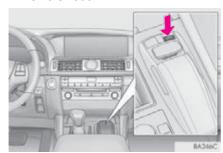

2 Select "Phone".

- 3 Select the desired tab to call from.
- The phone top screen can be displayed by pressing the **s** switch on the steering wheel.

How to make a call list	Page
By favorites list	350
By call history	350
By contacts list*1	351
By dial pad* <sup>1</sup>	353
By e-mail/SMS/MMS	363
By POI call	83
By off hook switch	354
By LEXUS App Suite*2	399
By voice command system	303
By quick dial	414

<sup>\*1:</sup> The operation cannot be performed while driving.
\*2: With navigation function

### BY FAVORITES LIST

Calls can be made using registered contacts which can be selected from a contact list.  $(\rightarrow P.371)$ 

- Display the phone top screen.
   (→P. 349)
- 2 Select the "Favorites" tab and select the desired contact.
- **3** Select the desired number.
- 4 Check that the "Call" screen is displayed.

### **BY CALL HISTORY**

Up to 30 of the latest call history items (missed, incoming and outgoing) can be selected from the "Call History" tab.

- Display the phone top screen. (→P. 349)
- 2 Select the "Call History" tab and select
  - or the desired contact.
- The icons of call type are displayed.
- $\mathcal{K}$ : Missed call
- : Incoming call
- : Outgoing call
- ► When is selected
- 3 Check that the "Call" screen is displayed.
- ► When the desired contact is selected
- 3 Select the desired number.
- 4 Check that the "Call" screen is displayed.

#### (INFORMATION)

- When making a call to the same number continuously, only the most recent call is listed in call history.
- When a phone number registered in the contact list is received, the name is displayed.
- Number-withheld calls are also memorized in the system.
- International phone calls may not be made depending on the type of cellular phone you have.
- The list should group together consecutive entries with the same phone number and same call type. For example, two calls from John's mobile would be displayed as follows: John (2)
- By pressing the switch on the steering wheel, a call to the latest history item can be made.

#### **BY CONTACTS LIST**

Calls can be made by using contact data which is transferred from a registered cellular phone.  $(\rightarrow P. 352)$ 

Up to 2500 contacts (maximum of 4 phone numbers and e-mail addresses per contact) can be registered in the contact list.

- Display the phone top screen.
   (→P. 349)
- 2 Select the "Contacts" tab and select the desired contact.
- 3 Select the desired number.
- 4 Check that the "Call" screen is displayed.

# WHEN THE CONTACT IS EMPTY

- FOR PBAP COMPATIBLE Bluetooth® PHONES
- ► When "Automatic Transfer" is set to on  $(\rightarrow P. 366)$
- Contacts are transferred automatically.
- ► When "Automatic Transfer" is set to off (→P. 366)
- 1 Select the desired item.



No.	Function
1	Select to always transfer all the contacts from a connected cellular phone automatically.
2	Select to transfer all the contacts from a connected cellular phone only once.
3	Select to cancel transferring.

2 Check that a confirmation screen is displayed when the operation is complete.

#### ■ FOR PBAP INCOMPATIBLE BUT OPP COMPATIBLE Bluetooth® PHONES

1 Select the desired item.



No.	Function
1	Select to transfer the contacts from the connected cellular phone.
2	Select to add a new contact manually.
3	Select to cancel transferring.

- 2 Follow the steps in "►When the contact is not registered" from "STEP 2". (→P. 368)
- ► When "Add" is selected
- 2 Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACTS LIST" from "STEP 2". (→P. 370)

#### (INFORMATION)

- If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.
- Depending on the type of Bluetooth<sup>®</sup> phone:
  - It may be necessary to perform additional steps on the phone when transferring contact data.
  - The registered image in the contact list may not transfer depending on the type of Bluetooth<sup>®</sup> phone connected.

#### **BY DIAL PAD**

- Display the phone top screen.
   (→P. 349)
- 2 Select the "Dial Pad" tab and enter the phone number.
- 3 Select or press the switch on the steering wheel.
- 4 Check that the "Call" screen is displayed.

#### (INFORMATION)

Depending on the type of Bluetooth<sup>®</sup> phone being connected, it may be necessary to perform additional steps on the phone.

## BY OFF HOOK SWITCH

Calls can be made using the latest call history item.


- 1 Press the switch on the steering wheel to display the phone top screen.
- 2 Press the switch on the steering wheel to display the "Call History" screen.
- 3 Press the switch on the steering wheel to call the latest history item.
- 4 Check that the "Call" screen is displayed.

#### **INCOMING CALLS**

When a call is received, this screen is displayed with a sound.

This screen can also be displayed on the "Side Display".  $(\rightarrow P. 411)$ 

1 Select or press the switch on the steering wheel to talk on the phone.

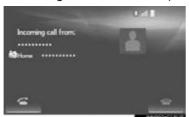

To refuse to receive the call: Select or press the switch on the steering wheel.

To adjust the volume of a received call: Turn the "PWR·VOL" knob, or use the volume control switch on the steering wheel.

- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The ringtone that has been set in the "Sounds" screen sounds when there is an incoming call. Depending on the type of Bluetooth<sup>®</sup> phone, both the system and Bluetooth<sup>®</sup> phone may sound simultaneously when there is an incoming call. (→P. 365)
- The incoming call display mode can be set.  $(\rightarrow P. 374)$

## 5. TALKING ON THE Bluetooth® PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.

This screen can also be displayed on the "Side Display".  $(\rightarrow P. 411)$ 



No.	Function	Page
1	Select to display the dial pad to send tones.	357
2	Select to mute your voice to the other party.	_
3	Select to change handset modes between hands-free and cellular phone.	_
4	Select to adjust your voice volume that the other party hears from their speaker.	358
5	Select to send tones. This button only appears when a number that contains a (w) is dialed in hands-free mode.	357
6	Select to hang up the phone.	_
7	Select "+" or "-" to adjust the volume of the other party's voice.	_
8	Select to start talking with the other party.	358

- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.
- ●This screen can be displayed on the "Main Display" or "Side Display". (→P. 374)

#### **SENDING TONES**

#### ■ BY DIAL PAD

This operation cannot be performed while driving.

- 1 Select "0-9".
- 2 Enter the desired number.
- BY SELECTING "Release Tones"

"Release Tones" appear when a continuous tone signal(s) containing a (w) is registered in the contact list.

1 Select "Release Tones".

- ●A continuous tone signal is a character string that consists of numbers and the characters p or w. (e.g. 056133w0123p#1\*)
- When the "p" pause tone is used, the tone data up until the next pause tone will be automatically sent after 2 seconds have elapsed. When the "w" pause tone is used, the tone data up until the next pause tone will be automatically sent after a user operation is performed.
- Release tones can be used when automated operation of a phone based service such as an answering machine or bank phone service is desired. A phone number with continuous tone signals can be registered in the contact list.
- Tone data after a "w" pause tone can be operated on voice command during a call.

#### TRANSMIT VOLUME SETTING

- 1 Select "Transmit Volume".
- 2 Select the desired level for the transmit volume

"Default": Select to reset the transmit volume.

3 Select "OK".

#### (INFORMATION)

- The sound quality of the voice heard from the other party's speaker may be negatively impacted.
- "Transmit Volume" is dimmed when mute is on.

#### INCOMING CALL WAITING

When a call is interrupted by a third party while talking, the incoming screen is displayed.

The incoming screen can also be displayed on the "Side Display". (→P. 411)

1 Select or press the switch on the steering wheel to start talking with the other party.

To refuse to receive the call: Select or press the switch on the steering wheel.

 Each time is selected or the switch on the steering wheel is pressed during an interrupted call, the party who is on hold will be switched.

- This function may not be available depending on the type of cellular phone.
- This screen can be displayed on the "Main Display" or "Side Display". (→P. 374)


## 6. Bluetooth® PHONE MESSAGE FUNCTION

Received messages can be forwarded from the connected Bluetooth<sup>®</sup> phone, enabling checking and replying using the system.

Depending on the type of Bluetooth<sup>®</sup> phone connected, received messages may not be transferred to the message inbox.

If the phone does not support the message function, this function cannot be used.

1 Press the "MENU" button on the Remote Touch.

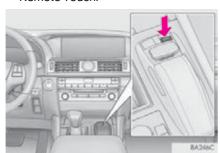

2 Select "Phone".

- 3 Select .
- The phone top screen can be displayed by pressing the switch on the steering wheel.
- 4 Check that the message inbox screen is displayed.
- : Select to change to phone mode.

Function	Page
Receiving a message	360
Checking messages	361
Replying to a message (quick reply)	362
Calling the message sender	363
Message settings	373

Q

PHONE

### **RECEIVING A MESSAGE**

When an e-mail/SMS/MMS is received, the incoming message screen pops up with sound and is ready to be operated on the screen.



No.	Function
1	Select to check the message.
2	Select to not open the message.
3	Select to call the message sender.

#### (INFORMATION)

- Depending on the cellular phone used for receiving messages, or its registration status with the system, some information may not be displayed.
- The pop up screen is separately available for incoming e-mail and SMS/MMS messages under the following conditions:
   E-mail:
  - "E-mail Notification Popup" is set to on. (→P. 374)

#### SMS/MMS:

• "SMS/MMS Notification Popup" is set to on. ( $\rightarrow$ P. 374)

### CHECKING MESSAGES

- 1 Display the message inbox screen. (→P. 359)
- 2 Select the desired message from the list.
- **3** Check that the message is displayed.



No.	Function
1	Select "Mark Unread" or "Mark Read" to mark e-mail unread or read on the message inbox screen. This function is available when "Up- date Message Read Status on Phone" is set to on. (→P. 373)
2	Select to reply the message. $(\rightarrow P. 362)$
3	Select to display the previous or next message.
4	Select to have messages read out. To cancel this function, select "Stop". When "Automatic Message Readout" is set to on, messages will be automatically read out. ( $\rightarrow$ P. 373)
5	Select to make a call to the sender.

### (INFORMATION)

- Depending on the type of Bluetooth<sup>®</sup> phone being connected, it may be necessary to perform additional steps on the phone.
- Messages are displayed in the appropriate connected Bluetooth<sup>®</sup> phone's registered mail address folder. Select the tab of the desired folder to be displayed.
- Only received messages on the connected Bluetooth<sup>®</sup> phone can be displayed.
- The text of the message is not displayed while driving.
- Turn the "PWR-VOL" knob, or use the volume control switch on the steering wheel to adjust the message read out volume.

Q

PHONE

## REPLYING TO A MESSAGE (QUICK REPLY)

#### 15 messages have already been stored.

- 1 Display the message inbox screen. (→P.359)
- 2 Select the desired message from the list.
- 3 Select "Quick Msg".
- 4 Select the desired message.
- 5 Select "Send".

"Cancel": Select to cancel sending the message.

- While the message is being sent, a sending message screen is displayed.
- 6 Check that a confirmation screen is displayed when the operation is complete.
- If an error message is displayed, follow the guidance on the screen to try again.

## ■ EDITING QUICK REPLY MESSAGES

This operation cannot be performed while driving.

- 1 Select "Quick Msg".
- 2 Select corresponding to the desired message to edit.
- 3 Select "OK" when editing is completed.

### (INFORMATION)

- To reset the edited quick reply messages, select "Default".
- "Quick Message 1" ("I am driving and will arrive in approximately [ETA] minutes.")\*:

This message cannot be edited and will automatically fill in [ETA] with the navigation calculated estimated time of arrival on the confirm message screen. If there are waypoints set, [ETA] to the next waypoint will be shown.

If there is no route currently set in the navigation system, "Quick Message 1" cannot be selected.

<sup>\*:</sup> With navigation function

## CALLING THE MESSAGE SENDER

Calls can be made to an e-mail/SMS/MMS message sender's phone number. This operation can be performed while driving.

### ■ CALLING FROM E-MAIL/SMS/ MMS MESSAGE DISPLAY

- 1 Display the message inbox screen. (→P.359)
- 2 Select the desired message.
- 3 Select "Call".
- If there are 2 or more phone numbers, select the desired number.
- 4 Check that the "Call" screen is displayed.

### ■ CALLING FROM A NUMBER WITHIN A MESSAGE

Calls can be made to a number identified in a message's text area.

This operation cannot be performed while driving.

- Display the message inbox screen. (→P. 359)
- 2 Select the desired message.
- 3 Select the text area.



- 4 Select the desired number.
- Identified phone numbers contained in the message are displayed.
- **5** Check that the "Call" screen is displayed.

#### (INFORMATION)

 A series of numbers may be recognized as a phone number. Additionally, some phone numbers may not be recognized, such as those for other countries.

## ■ CALLING FROM THE INCOMING MESSAGE SCREEN

→P.360


8

PHONE

### 2. SETUP


### 1. PHONE SETTINGS

1 Press the "MENU" button on the Remote Touch.

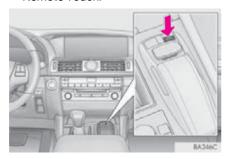

- 2 Select "Setup".
- 3 Select "Phone".

4 Select the item to be set.

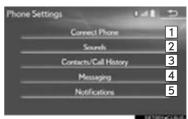

No.	Information	Page
1	Registering/connecting a phone	45
2*	Sound settings	365
3*	Contact/call history set- tings	366
4*	Message settings	373
5*	Notification settings	374

<sup>\*:</sup> This operation cannot be performed while driving.

### DISPLAYING THE PHONE SETTINGS SCREEN IN A DIFFERENT WAY

- 1 Display the phone top screen. (→P. 349)
- 2 Select "Settings".

The call and ringtone volume can be adjusted. A ringtone can be selected.

- 1 Display the "Phone Settings" screen. (→P. 364)
- 2 Select "Sounds".
- 3 Select the desired item to be set.





No.	Function
1	Select to set the desired ringtone.
2	Select "-" or "+" to adjust the ringtone volume.
3	Select "-" or "+" to adjust the default volume of the other party's voice.
4	Select to set the desired incoming SMS/MMS tone.
5	Select "-" or "+" to adjust the incoming SMS/MMS tone volume.
6	Select to set the desired incoming email tone.
7	Select "-" or "+" to adjust the incoming e-mail tone volume.
8	Select "-" or "+" to adjust the message readout volume.
9	Select to reset all setup items.

8

### (INFORMATION)

Depending on the type of phone, certain functions may not be available. PHO

### "Contacts/Call History" SCREEN

The contact can be transferred from a Bluetooth  $^{\circledR}$  phone to the system. If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.

The contact also can be added, edited and deleted.

The call history can be deleted and contact and favorites can be changed.

- 1 Display the "Phone Settings" screen. (→P. 364)
- 2 Select "Contacts/Call History".
- 3 Select the desired item to be set.





No.	Function	Page
1	For PBAP compatible Bluetooth® phones: Select to change the contact/history transfer settings.	367
2	Select to update contacts from the connected phone.	368
3	Select to sort contacts by the first name or last name field.	_
4	Select to add contacts to the favorites list.	371
5	Select to delete contacts from the favorites list.	372
6*	Select to clear contacts from the call history.	_
7*	Select to add new contacts to the contact list.	370
8*	Select to edit contacts in the contact list.	370
9*	Select to delete contacts from the contact list.	371
10	Select to reset all setup items.	_

<sup>\*:</sup> For PBAP compatible Bluetooth<sup>®</sup> phones, this function is available when "Automatic Transfer" is set to off. (→P. 366)

### (INFORMATION)

- Depending on the type of phone, certain functions may not be available.
- Contact data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.

# SETTING AUTOMATIC CONTACT/HISTORY TRANSFER

The automatic contact/history function is available for PBAP compatible Bluetooth<sup>®</sup> phones only.

- 1 Select "Automatic Transfer".
- 2 Select the desired item to be set.



No.	Function
1	Select to set automatic contact/history transfer on/off. When set to on, the phone's contact data and history are automatically transferred.
2	Select to update contacts from the connected phone. ( $\rightarrow$ P. 368)
3	Select to set the transferred contact image display on/off. The contact image cannot be displayed on the "Side Display" when a call is received.
4	Select to reset all setup items.

Q

PHONE

### ■UPDATING CONTACTS FROM PHONE

- 1 Select "Update Now".
- Contacts are transferred automatically.
- 2 Check that a confirmation screen is displayed when the operation is complete.
- This operation may be unnecessary depending on the type of cellular phone.
- Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter "1234" into the Bluetooth<sup>®</sup> phone.
- If another Bluetooth<sup>®</sup> device is connected when transferring contact data, depending on the phone, the connected Bluetooth<sup>®</sup> device may need to be disconnected.
- Depending on the type of Bluetooth<sup>®</sup> phone being connected, it may be necessary to perform additional steps on the phone.

### TRANSFER CONTACTS FROM PHONE

- ► When the contact is not registered
- 1 Select "Transfer Contacts from Phone".
- 2 Transfer the contact data to the system using a Bluetooth<sup>®</sup> phone.
- This operation may be unnecessary depending on the type of cellular phone.
- Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter "1234" into the Bluetooth<sup>®</sup> phone.
- To cancel this function, select "Cancel".
- 3 Check that a confirmation screen is displayed when the operation is complete.

- 1 Select "Transfer Contacts from Phone".
- 2 Select "Replace Contacts" or "Add Contact".
- "Replace Contacts": Select to transfer the contact from the connected cellular phone and replace the current one.
- "Add Contact": Select to transfer the desired contact data from the connected cellular phone to add to the current one.
- 3 Transfer the contact data to the system using a Bluetooth<sup>®</sup> phone.
- This operation may be unnecessary depending on the type of cellular phone.
- Depending on the type of cellular phone, OBEX authentication may be required when transferring contact data. Enter "1234" into the Bluetooth<sup>®</sup> phone.
- To cancel this function, select "Cancel".
- 4 Check that a confirmation screen is displayed when the operation is complete.

- ■UPDATING THE CONTACTS (FROM THE "Call History" SCREEN)\*
- Display the phone top screen.(→P. 349)
- 2 Select the "Call History" tab and select a contact not yet registered in the contact list.
- 3 Select "Update Contact".
- 4 Select the desired contact.
- 5 Select a phone type for the phone number.
- \*: For PBAP compatible Bluetooth<sup>®</sup> phones, this function is available when "Automatic Transfer" is set to off.

  (→P. 366)

Q

PHONE

# REGISTERING A NEW CONTACT TO THE CONTACTS LIST

New contact data can be registered. Up to 4 numbers per person can be registered.

- 1 Select "New Contact".
- 2 Enter the name and select "OK".
- 3 Enter the phone number and select "OK".
- 4 Select the phone type for the phone number.
- 5 To add another number to this contact, select "Yes".
- REGISTERING A NEW CONTACT IN A DIFFERENT WAY (FROM THE "Call History" SCREEN)
- Display the phone top screen.(→P. 349)
- 2 Select the "Call History" tab and select a contact not yet registered in the contact list.
- 3 Select "Add to Contacts".
- **4** Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACTS LIST" from "STEP 2". (→P. 370)

### EDITING THE CONTACT DATA

- 1 Select "Edit Contact".
- 2 Select the desired contact.
- 3 Select the desired name or number.
- For editing the name
- **4** Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACTS LIST" from "STEP 2". (→P. 370)
- ► For editing the number
- **4** Follow the steps in "REGISTERING A NEW CONTACT TO THE CONTACTS LIST" from "STEP 3". (→P. 370)
- EDITING THE CONTACT IN A DIF-FERENT WAY (FROM THE "Contact Details" SCREEN)
- Display the phone top screen.(→P. 349)
- 2 Select the "Contacts", "Call History" or "Favorites" tab and select the desired contact.
- 3 Select "Edit Contact".

**"E-mail Addresses"**: Select to display all registered e-mail addresses for the contact.

4 Follow the steps in "EDITING THE CONTACT DATA" from "STEP 3". (→P. 370)

### DELETING THE CONTACT DATA

- 1 Select "Delete Contacts".
- 2 Select the desired contact and select "Delete".
- 3 Select "Yes" when the confirmation screen appears.

#### (INFORMATION)

- Multiple data can be selected and deleted at the same time.
- DELETING THE CONTACT IN A DIFFERENT WAY (FROM THE "Contact Details" SCREEN)
- Display the phone top screen.
   (→P. 349)
- 2 Select the "Contacts", "Call History" or "Favorites" tab and select the desired contact.
- 3 Select "Delete Contact".
- 4 Select "Yes" when the confirmation screen appears.

#### (INFORMATION)

 When a Bluetooth<sup>®</sup> phone is deleted, the contact data will be deleted at the same time

### **FAVORITES LIST SETTING**

Up to 15 contacts (maximum of 4 numbers per contact) can be registered in the favorites list.

### ■ REGISTERING THE CONTACTS IN THE FAVORITES LIST

- 1 Select "Add Favorite".
- 2 Select the desired contact to add to the favorites list.
- Dimmed contacts are already stored as a favorite.
- 3 Check that a confirmation screen is displayed when the operation is complete.
- ► When 15 contacts have already been registered to the favorites list
- 1 When 15 contacts have already been registered to the favorites list, a registered contact needs to be replaced. Select "Yes" when the confirmation screen appears to replace a contact.
- 2 Select the contact to be replaced.
- 3 Check that a confirmation screen is displayed when the operation is complete.

R

PHONE

- ➤ Registering contacts in the favorites list in a different way (from the "Contacts" screen)
- Display the phone top screen.
   (→P. 349)
- 2 Select the "Contacts" tab.
- 3 Select ☆(grey) at the beginning of the desired contact list name to be registered in the favorites list.



- When selected, ☆(grey) is changed to ★(yellow), and the contact is registered in the favorites list.
- ➤ Registering contacts in the favorites list in a different way (from the "Contact Details" screen)
- Display the phone top screen.(→P. 349)
- 2 Select the "Contacts" or "Call History" tab and select the desired contact.
- 3 Select "Add Favorite".
- 4 Check that a confirmation screen is displayed when the operation is complete.

## ■ DELETING THE CONTACTS IN THE FAVORITES LIST


- 1 Select "Remove Favorite".
- 2 Select the desired contacts and select "Remove".
- 3 Select "Yes" when the confirmation screen appears.
- 4 Check that a confirmation screen is displayed when the operation is complete.
- ► Deleting contacts in the favorites list in a different way (from the "Contacts" screen)
- Display the phone top screen.
   (→P. 349)
- 2 Select the "Contacts" tab.
- 3 Select ★(yellow) at the beginning of the contact list name to be deleted from the favorites list.
- When selected, ★(yellow) is changed to ☆(grey), and the data is deleted from the list.

- ▶ Deleting contacts in the favorites list in a different way (from the "Contact Details" screen)
- Display the phone top screen.(→P. 349)
- 2 Select the "Contacts", "Call History" or "Favorites" tab and select the desired contact to delete.
- 3 Select "Remove Favorite".
- 4 Select "Yes" when the confirmation screen appears.
- 5 Check that a confirmation screen is displayed when the operation is complete.

### "Messaging" SCREEN

- 1 Display the "Phone Settings" screen. (→P. 364)
- 2 Select "Messaging".
- 3 Select the desired item to be set.



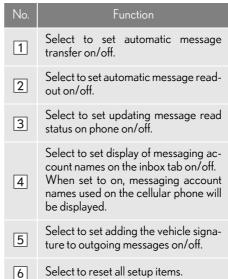

### (INFORMATION)

 Depending on the phone, these functions may not be available. 8

PHONE

### "Notifications" SCREEN

- 1 Display the "Phone Settings" screen. (→P. 364)
- 2 Select "Notifications".
- 3 Select the desired item to be set.





No.	Function
1	Select to change where the screen is displayed between the "Main Display" and "Side Display".  "Main Screen": Select to display and operate the screen on the "Main Display".  "Side Screen": Select to display and operate the screen on the "Side Display". For details of the screen:  →P. 415
2	Select to set the SMS/MMS notification popup on/off.
3	Select to set the e-mail notification popup on/off.
4	Select to change the incoming SMS/MMS display.  "Full Screen": When an SMS/MMS message is received, the incoming SMS/MMS display screen is displayed and can be operated on the screen.  "Drop-Down": When an SMS/MMS message is received, a message is displayed on the upper side of the screen.
5	Select to change the incoming e-mail display.  "Full Screen": When an e-mail is received, the incoming e-mail display screen is the displayed and can be operated on the screen.  "Drop-Down": When an e-mail is received, a message is displayed on the upper side of the screen.
6	Select to set display of the contact/ history transfer completion message on/off.
7	Select to reset all setup items.

### (INFORMATION)

Depending on the phone, these functions may not be available.

### 1. TROUBLESHOOTING

If there is a problem with the hands-free system or a Bluetooth  $^{\circledR}$  device, first check the table below.

lackbox When using the hands-free system with a Bluetooth  $^{\circledR}$  device

Symptom	Likely cause	Solution	Page	
			Cellular phone	This system
The hands-free system or Bluetooth <sup>®</sup> device does not work.	The connected device may not be a compatible Bluetooth® cellular phone.	For a list of specific devices which operation has been confirmed on this system, check with your Lexus dealer or the following website:  http://www.lexus.com/MobileLink	*	_
	The Bluetooth <sup>®</sup> version of the connected cellular phone may be older than the specified version.	Use a cellular phone with Bluetooth® version 2.0 or higher (recommended: Ver. 3.0 +EDR or higher).	*	43

### ► When registering/connecting a cellular phone

	Page		ge	
Symptom	Likely cause	Solution	Cellular phone	This system
	An incorrect pass- code was entered on the cellular phone.	Enter the correct passcode on the cellular phone.	*	_
A cellular phone can- not be registered.	The registration op- eration has not been completed on the cellular phone side.	Complete the registration operation on the cellular phone (approve registration on the phone).	*	_
not be registered.	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	48
	Another Bluetooth <sup>®</sup> device is already connected.	Manually connect the cellular phone you wish to use to this system.	_	48
	Bluetooth <sup>®</sup> function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	_
A Bluetooth <sup>®</sup> connection cannot be made.	Automatic Bluetooth® connection on this system is set to off.	Set automatic Bluetooth® connection on this system to on when the engine <power> switch is in ACCESSORY or IGNITION ON <on> mode.</on></power>	_	53
	Preferred device set-	Set preferred device settings function on this system to off.	_	53
	tings function on this system is set to on.	Set the desired cellular phone to the highest automatic connection priority.	_	53

	Likely cause	Solution	Page	
Symptom			Cellular phone	This system
	Bluetooth <sup>®</sup> function is not enabled on the cellular phone.	Enable the Bluetooth® function on the cellular phone.	*	_
"Unable to dial. Please check your phone." message is displayed.	Old registration information remains on either this system or the cellular phone.	Delete the existing registration information from both this system and the cellular phone, then register the cellular phone you wish to connect to this system.	*	48

### ► When making/receiving a call

			Page	
Symptom	Likely cause	Solution	Cellular phone	This system
A call cannot be made/received.	Your vehicle is in a "No Service" area.	Move to where "No Service" no longer appears on the dis- play.	_	_

### ► When using the phonebook

			Pa	ge
Symptom	Likely cause	Solution	Cellular phone	This system
Phonebook data cannot be transferred manually/automatically.	The profile version of the connected cellu- lar phone may not be compatible with transferring phone- book data.	For a list of specific devices which operation has been confirmed on this system, check with your Lexus dealer or the following website: http://www.lexus.com/MobileLink	*	_
	Automatic contact transfer function on this system is set to off.	Set automatic contact transfer function on this system to on.	_	366
	Passcode has not been entered on the cellular phone.	Enter the passcode on the cellular phone if requested (default passcode: 1234).	*	_
	Transfer operation on the cellular phone has not completed.	Complete transfer operation on the cellular phone (approve transfer operation on the phone).	*	_
Phonebook data cannot be edited.	Automatic contact transfer function on this system is set to on.	Set automatic contact transfer function on this system to off.	_	366

### $\blacktriangleright$ When using the Bluetooth $^{\circledR}$ message function

	Likely cause	Solution	Page	
Symptom			Cellular phone	This system
Messages cannot be viewed.	Message transfer is not enabled on the cellular phone.	Enable message transfer on the cellular phone (approve message transfer on the phone).	*	_
	Automatic transfer function on this system is set to off.	Set automatic transfer function on this system to on.	_	373
New message notifications are not displayed.	Notification of SMS/ MMS/E-mail recep- tion on this system is set to off.	Set notification of SMS/MMS/E-mail reception on this system to on.	*	374
	Automatic message transfer function is not enabled on the cellular phone.	Enable automatic transfer function on the cellular phone.	*	_

### ► In other situations

	Likely cause	Solution	Page	
Symptom			Cellular phone	This system
The Bluetooth <sup>®</sup> connection status is displayed at the top of the screen each time the engine 'power's switch is in ACCES-SORY or IGNI-TION ON 'ON's mode.	Connection confirmation display on this system is set to on.	To turn off the display, set connection confirmation display on this system to off.	_	52

			Page		
Symptom	Likely cause	Solution	Cellular phone	This system	
	The cellular phone is not close enough to this system.	Bring the cellular phone closer to this system.	_	_	
	Radio interference has occurred.	Turn off Wi-Fi <sup>®</sup> devices or other devices that may emit radio waves.	_	_	
	The cellular phone is the most likely cause of the symptom.	Turn the cellular phone off, remove and reinstall the bat- tery pack, and then restart the cellular phone.	*	_	
Even though all con- ceivable measures have been taken, the symptom status does		Enable the cellular phone's Bluetooth® connection.	*	_	
not change.		Disable the Wi-Fi <sup>®</sup> connection of the cellular phone.	*	_	
		Stop the cellular phone's security soft- ware and close all ap- plications.	*	_	
		Before using an application installed on the cellular phone, carefully check its source and how its operation might affect this system.	*	_	

<sup>\*:</sup> For details, refer to the owner's manual that came with the cellular phone.

### LEXUS ENFORM\*

1 LEXUS ENFORM-OVERVIEW	2 LEXUS ENFORM OPERATION	N	
FUNCTIONAL OVERVIEW	LEXUS Enform Remote      LEXUS Enform Service Connect		
TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR	3. LEXUS App Suite		
PHONE	LINKING LEXUS App Suite AND NAVIGATION SYSTEM LOCAL FUNCTION ENTERING KEYWORD	. 398	
387  EXUS App Suite	4. LEXUS Enform Destinations	400	
THE NAVIGATION SYSTEM	Destination AssisteDestination	401	
. TYPE C: FUNCTION ACHIEVED BY USING DCM391	NEW MESSAGE NOTIFICATION VIEWING AND PLAYING RECEIVED Lexus Insider MESSAGES	. 403	1
	3 SETUP		
	LEXUS App Suite SETTINGS  SCREEN FOR LEXUS App Suite SETTINGS		
LEXUS Enform connected services consi  LEXUS Enform Safety Connect  LEXUS Enform Service Connect  LEXUS Enform Remote  LEXUS Enform Destinations  LEXUS Enform App Suite	ists of five products:		

\*: With navigation function

381

### 1. FUNCTIONAL OVERVIEW

Lexus Enform is a service that includes Safety Connect, Service Connect, Remote, Destinations, Insider and App Suite.

- The functions included in Lexus Enform are classified into the following three types.
  - Type A: Function achieved by using a cellular phone
  - Type B: Function achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module) and the navigation system
  - Type C: Function achieved by using DCM

Function	Туре
LEXUS App Suite	Туре А
LEXUS Enform Destinations (Destination Assist, eDestination)	Туре В
Lexus Insider	Туре В
LEXUS Enform Safety Connect	Туре С

- Each function is available in the following areas:
  - LEXUS App Suite is available in the contiguous United States, Washington D.C. and Alaska.
  - LEXUS Enform Destinations is available in the contiguous United States, Washington D.C. and limited areas of Alaska for vehicles that contain the appropriate map data.
  - Lexus Insider is available in the contiguous United States, Washington D.C. and Alaska
  - LEXUS Enform Safety Connect features include: Automatic Collision Notification, Emergency Assistance, Stolen Vehicle Location (available in the contiguous United States, Washington D.C., Hawaii, Alaska, and Canada) and Enhanced Roadside Assistance (available in the contiguous United States, Washington D.C., Alaska, and Canada).

### (INFORMATION)

 Availability of functions of the Lexus Enform service is dependent on network reception level. LEXUS Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <a href="http://www.lexus.com/enform/">http://www.lexus.com/enform/</a>.

- Function of the LEXUS Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).
- Lexus Enform Remote is available in the contiguous United States, Washington D.C. and Alaska.

### LEXUS Enform Service Connect

Lexus Enform Service Connect uses embedded telematics hardware to collect and transmit vehicle data that allows Lexus to provide:

- Vehicle Health Report (VHR)
   (Safety Recalls, Service Campaigns, Current Vehicle Alerts, Required Maintenance, and Vehicle Condition Status)
- Maintenance Notifications
- Vehicle Alert Notifications

For details about this service and how to register, refer to http://www.lexus.com/enform/.

- The Lexus Enform Service Connect is achieved by using a Data Communication Module (DCM) built into the vehicle.
- Lexus Enform Service Connect is available in the contiguous United States, Washington D.C., Hawaii, Alaska, and Canada.


9

### 1. LEXUS ENFORM-OVERVIEW

### 2. TYPE A: FUNCTION ACHIEVED BY USING A CELLULAR PHONE

Of the functions included with Lexus Enform, the App Suite relies on the use of a cellular phone.

App Suite enables applicable apps installed on a cellular phone to be displayed on and operated from the navigation screen via a Bluetooth<sup>®</sup>. A few settings must be performed before App Suite can be used.  $(\rightarrow P.387)$ 

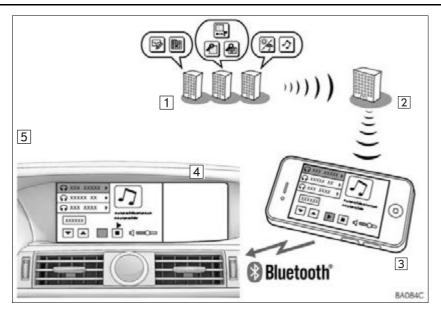

No.	Name	Function
1	Content provider	Provides contents to the navigation system via a cellular phone.
2	Application server	Provides applications to the navigation system via a cellular phone.
3	Cellular phone*	Using the App Suite, communication is relayed between the navigation system, application server and contents provider. The cellular phone cannot be operated while communicating.
4	Applications	Display usable content from the content providers on the screen using the data connection of the connected cellular phone.
5	Navigation system	Content received, via a cellular phone, from content provider servers is displayed on the navigation screen. The navigation system is equipped with an application player to run applications.

 $<sup>\</sup>hbox{\rm *: For known compatible phones, refer to } \underline{\hbox{\rm http://www.lexus.com/MobileLink.}}$ 

## BEFORE USING THE FUNCTION

#### **SUBSCRIPTION**

- User registration is required to start using the App Suite function. (→P. 387)
- App Suite does not require an activation fee or monthly recurring fees.
- Services requiring a separate contract can also be used.\*
- \*: For details, refer to http://www.lexus.com/enform/ or call 1-800-255-3987.

#### **AVAILABILITY OF FUNCTION**

 LEXUS App Suite is available in the contiguous United States, Washington D.C. and Alaska.

### (INFORMATION)

- Data usage fees may apply while using App Suite function. Confirm data usage fees before using this function.
- The required operations to activate applications and connect a cellular phone to the navigation system, and the registration steps for the App Suite are explained in this section. For details regarding operation of the App Suite and the applications, refer to http://www.lexus.com/enform/.
- Availability of functions of the Lexus Enform service is dependent on network reception level.

### INITIALIZING PERSONAL DATA

The personal data used in applications can be reset.  $(\rightarrow P. 61)$ 

- The following personal data can be deleted and returned to their default settings:
  - Downloaded contents
  - Radio stations that were listened to
  - Input history

#### (INFORMATION)

 Once initialized, data will be erased. Pay close attention when initializing data.

### REGISTERING THE LEXUS App Suite APPLICATION

- 1 Download the App Suite application to your cellular phone.
- 2 Run the App Suite application on your cellular phone.
- **3** Enter the information required into the App Suite application. Login to the application.

### (INFORMATION)

- Applications can only be used when the App Suite application has been downloaded to your cellular phone and the application is running.
- App Suite operational procedures can also be confirmed by visiting http://www.lexus.com/enform/.
- In order to use applications, it is necessary to run the App Suite application on your cellular phone.
- If an iPhone is connected via Bluetooth<sup>®</sup> and USB at the same time, system operation may become unstable. For known phone compatibility information, refer to <a href="http://www.lexus.com/enform/">http://www.lexus.com/enform/</a>.
- If a App Suite application is used while iPod audio/video is being played back, system operation may become unstable.

### PREPARATION BEFORE USING LEXUS App Suite

## SETTINGS REQUIRED TO USE LEXUS App Suite

Perform the settings in the following order.

- 1 User registration
- 2 Download the App Suite application to your cellular phone.
- 3 Register the cellular phone with the navigation system.

In order to use App Suite, the following must first be performed:

- User registration with the service (→P. 387)
- Download the App Suite application onto your cellular phone, and login to the application. (→P. 387)
- Register the cellular phone, on which the App Suite application was installed, with the navigation system. (→P. 387)
- Register a Bluetooth<sup>®</sup> phone with the hands-free system. (→P. 39)


### 1. LEXUS ENFORM-OVERVIEW

### 3. TYPE B: FUNCTION ACHIEVED BY USING DCM AND THE NAVIGATION SYSTEM

The functionality of Lexus Enform Safety Connect, Lexus Enform Destinations, and Lexus Insider is made possible through the shared work of the DCM and the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data and embedded cellular technology to provide safety and security as well as convenience features.

These services are available by subscription on select, telematics hardware-equipped vehicles and supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

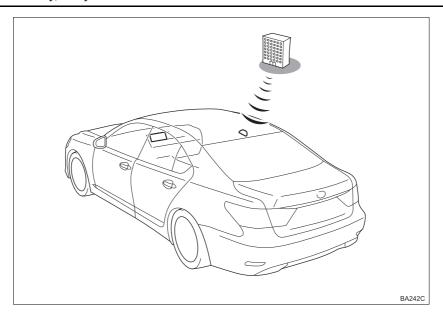

### FCC ID: O6Y-CDMRF101 FCC ID: XOECDMRF101B

**ACTIVATION OF FUNCTION(S)** 

activate all functions.

Connect

• Enrollment in Lexus Enform Safety Connect (via your dealership) is required to

FCC ID: N7NGTM2

### **FCC WARNING**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

### **BEFORE USING THE FUNCTION**

### **SUBSCRIPTION**

• After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987), for further subscription details.  $(\rightarrow P.400)$ 

### **AVAILABILITY OF** FUNCTION(S)

- Destinations is available in the contiguous United States, Washington D.C. and limited areas of Alaska for vehicles that contain the appropriate map data.
- Lexus Insider is available in the contiguous United States, Washington D.C. and Alaska.

#### (INFORMATION)

- Exposure to radio frequency signals: The Lexus Enform system installed in your vehicle includes a low power radio transmitter and receiver. The system receives and also sends out radio frequency (RF) signals.
- In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies.
  - ANSI (American National Standards Institute) C95.1 [1992]
  - NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
  - ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]
- These standards are based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).
- The design of Lexus Enform system complies with the FCC guidelines in addition to those standards.

#### (INFORMATION)

- Contact with the Lexus response center is dependent upon the telematics device being in operative condition, cellular connection availability, navigation map data, and GPS satellite signal reception, which can limit the ability to reach the response center or receive support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms are available; charges vary by subscription term selected.
- The Lexus response center offers support in multiple languages.
- Select Lexus Enform Safety Connectsubscribed vehicles are capable of communicating vehicle information. Please see the terms and conditions for additional details.
- Owners who do not wish to have their vehicle transmit this information can opt out at the time of enrollment or by calling 1-800-255-3987 and following the prompts for Lexus Enform Safety Connect.
- For further details about the service, contact your Lexus dealer.
- Lexus Enform functions are not subject to section 255 of the Telecommunications Act and the system is not TTY compatible

### 1. LEXUS ENFORM-OVERVIEW

### 4. TYPE C: FUNCTION ACHIEVED BY USING DCM

The functionality of Lexus Enform Safety Connect is made possible by the use of a DCM.

For details, refer to "Owner's Manual".

### 2. LEXUS ENFORM OPERATION

### 1. LEXUS Enform Remote

For details about the functions and services provided by this app, refer to http://www.lexus.com/enform/.

### SUBSCRIPTION

- After you sign the Telematics Subscription Service Agreement (see the LEXUS Enform Safety Connect section in "Owner's Manual"), download the LEXUS Enform Remote app from your cellular phone's app store, and register within the app (or enroll and complete registration at the dealer), you can begin using these services.
- A variety of subscription terms are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987) for further subscription details.

#### AVAILABILITY OF FUNCTION

 Lexus Enform Remote is available in the contiguous United States, Washington D.C., and Alaska.

### (INFORMATION)

- Lexus Enform Remote should only be used by authorized users.
- Laws in some communities may require that the vehicle be within view of the user when operating Lexus Enform Remote.
  In some states, use of Lexus Enform Remote may violate state or local laws. Before using Lexus Enform Remote, check your state and local laws.
- Any malfunction of the Lexus should be repaired by your Lexus dealer.
- Lexus Enform Remote is designed to work at temperatures above -22 °F (-30 °C). This specification is related to the Lexus Enform Remote operation, but is dependent on the vehicle's operating temperature range which may be different.
- Content is subject to change without notice.
- Some features of the Lexus Enform Remote may not be available on some models.
- Additional information can be found at www.lexus.com/enform/.

### 2. LEXUS ENFORM OPERATION

For details about this service and how to register, refer to http://www.lexus.com/enform/.

### **AVAILABILITY OF FUNCTION**

• Lexus Enform Service Connect is available in the contiguous United States, Washington D.C., Hawaii, Alaska, and Canada.

### (INFORMATION)

Availability of functions of the Lexus Enform Service Connect is dependent on network reception level.

### 2. LEXUS ENFORM OPERATION


### 3. LEXUS App Suite

### USING LEXUS App Suite

App Suite is a function that enables applicable apps installed on a cellular phone to be displayed on and operated from the navigation screen. Before App Suite can be used, a few settings need to be performed. ( $\rightarrow$ P. 387)

For details about the functions and services provided by each application, refer to http://www.lexus.com/enform/.

1 Press the "MENU" button on the Remote Touch.

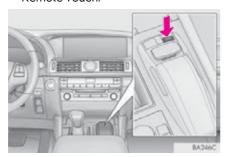

2 Select "LEXUS App Suite".

- 3 Select the desired application screen button.
- : Select to activate an application.

"Update": Select to update the applications.  $(\rightarrow P.395)$ 

"Reorder": Select to change the order of the applications.  $(\rightarrow P. 396)$ 

2: Displays the number of new notifications for the application

When App Suite is activated, an application may need to be updated. By updating the application, it can be kept to the latest version. To update an application, it is necessary to download update data and install it.

**UPDATING AN APPLICATION** 

#### ■ DOWNLOADING UPDATE

If an update is available, "Update" can be selected.

- 1 Select "Update" on the "LEXUS App Suite" screen.  $(\rightarrow P.394)$
- **2** Check that downloading starts.

"Download in Background": Select to operate other functions while downloading.

"Cancel": Select to cancel updating.

**3** Check that downloading is complete.

"Later": Select to install later. When this screen button is selected, the screen will return to the last displayed screen. To install the update data:  $\rightarrow$  P. 396

"See Detail": Select to display detailed information on the update data.

"Install": Select to install the update data. Follow the steps "INSTALLING THE UP-DATE DATA" from "STEP 2".(→P. 396)

### ■ INSTALLING THE UPDATE DATA

After the downloading is complete, "Update" will be changed to "Install".

- 1 Select "Install" on the "LEXUS App Suite" screen. (→P. 394)
- 2 Select "Continue".

"Later": Select to postpone the installation of the update data and go back to the previous screen.

- **3** Check that installing is started.
- "Install in Background": Select to operate other function while installing.
- 4 Select "OK" after the installing is complete.

### (INFORMATION)

 The App Suite function cannot be operated while installing.

### REORDERING THE APPLICATIONS

Order of the applications can be changed.

- 1 Display the "LEXUS App Suite" screen. (→P. 394)
- 2 Select "Reorder".
- 3 Select the desired application to be moved.
- 4 Select "<<" or ">>" to move the application, and select "OK".

### IF A MESSAGE APPEARS ON THE SCREEN

When problems occur with starting the application player, a message will appear on the screen. Referring to the table below, identify the problem and take the suggested corrective action.


Message	Display conditions	Corrective action
"This feature is unavailable during an emergency call."	Safety Connect is being implemented.	After the Safety Connect call is finished, perform the operation again.
"This feature is unavailable while transferring contacts."	Contacts are being transferred manually from the phonebook.	When the transfer of contacts is complete, perform the operation again.
"Unable to connect to a Bluetooth* phone. For trou- bleshooting assistance, please visit the Lexus website or contact your dealer."	The cellular phone cannot be connected.	Refer to <a href="http://www.lexus.com/enform/">http://www.lexus.com/enform/</a> to confirm if the phone is compatible or not.
"This feature is unavailable during a handsfree call."	A hands-free call is in progress.	After the hands-free call is finished, perform the operation.
"To use the services, an active application needs to be running on your phone. For more information, please visit lexus.com."	The LEXUS App Suite application cannot be connected to Bluetooth® SPP.	Refer to <a href="http://www.lexus.com/enform/">http://www.lexus.com/enform/</a> to confirm if the phone is Bluetooth <sup>®</sup> SPP compatible or not, and then activate the App Suite application.
"Communication error. Please try again."	Communication was disconnected.	After a few moments, retry the operation.

<sup>\*:</sup> Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### LINKING LEXUS App Suite AND NAVIGATION SYSTEM LOCAL FUNCTION

The setting a destination and making a hands-free call functions of the navigation system can be performed via App Suite. For details about the functions and services provided by each application, refer to http://www.lexus.com/enform/.

Press the "MAP" button on the Remote Touch.

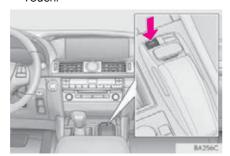

- 2 Select "Dest.".
- 3 Select "Web Search".
- 4 Check that the "Web Search" screen is displayed.

### SETTING A DESTINATION USING LEXUS App Suite

Locations that were searched for using the App Suite can be set as a destination.

- Display the "Web Search" screen.
   (→P. 398)
- 2 Select the desired application screen button to perform search.
- 3 Enter a search term, and select "Go".
- 4 Select "Map".
- 5 Select "Go to @".
- 6 Select "OK" to start guidance.
- For the operation of the route guidance screen and the function of each screen button: →P.101

### MAKING A PHONE CALL USING LEXUS App Suite

Phone calls can be made to locations which were searched for using App Suite.

- Display the "Web Search" screen.
   (→P. 398)
- 2 Select the desired application screen button to perform search.
- 3 Enter a search term, and select "Go".
- 4 Select "Call".
- 5 Select "Yes".

"Cancel": Select to cancel making a phone call

- 6 Check that the "Call" screen is displayed.
- For phone operation and the function of each screen button: →P. 356

## ENTERING KEYWORD OPERATION

A keyword can be entered to an application by the software keyboard or voice recognition function. For details about the functions and services provided by each application, refer to http://www.lexus.com/enform/.

The keyboard layout can be changed. (→P. 56)

# ENTERING A KEYWORD USING THE SOFTWARE KEYBOARD

- Display the "LEXUS App Suite" screen.
   (→P. 394)
- 2 Select the desired application screen button.
- **3** Select the character entering space.
- 4 Enter a search term, and then select "OK".
- 5 Entering characters will be reflected on the character entering space.
- For details on operating the keyboard:
   →P. 34

# ENTERING A KEYWORD USING THE VOICE RECOGNITION FUNCTION

- Display the "LEXUS App Suite" screen.
   (→P. 394)
- 2 Select the desired application screen button.
- **3** Press the talk switch.  $(\rightarrow P. 298)$
- **4** Say the desired keyword.
- Completion of the keyword will be detected automatically.
- 5 Search results will be displayed on the screen.

LEXUS ENFORM

### 4. LEXUS Enform Destinations


### **Destination Assist**

Destinations provide you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other Points of Interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

### MAKE A CALL WITH Destination Assist

1 Press the "MAP" button on the Remote Touch.

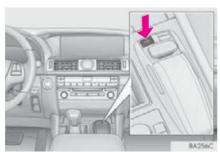

- 2 Select "Dest.".
- 3 Select "Destination Assist".

- 4 When an agent comes on the line, tell the agent the address, business name, or the type of POI or service.
- To adjust the call volume, select "-" or "+", or use the volume switch on the steering wheel during the call.
- To hang up the phone, select "Disconnect" or press the switch on the steering wheel.
- 5 After the agent helps you determine your location of choice, this screen is displayed. Select the screen button of the desired action.



No.	Function
1	Select to register as a memory point.
2	Select to set as a destination.
3	Select to display detailed information.
4	Select to call the registered number.

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system. Up to 200 locations can be stored online and accessed or updated at any time.

• Locations can be organized into up to 20 personalized folders.

### (INFORMATION)

You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

### DOWNLOADING eDestinations

After updating eDestination folders online, it is necessary to download the updated data to the vehicle.

1 Press the "MAP" button on the Remote Touch.



- 2 Select "Dest.".
- 3 Slect "Point of Interest".
- 4 Select "eDestination".
- 5 Select "Download".
- **6** Select "Yes" when the confirmation screen appears.
- 7 Check that downloading starts.
- The most recent Destinations data will be loaded to the navigation system.

### **SEARCHING eDestinations**

1 Press the "MAP" button on the Remote Touch.



- 2 Select "Dest.".
- 3 Select "Point of Interest".
- 4 Select "eDestination".
- 5 Select the desired eDestination category.
- 6 Select the desired location.

7 Select the screen button of the desired action.



No.	Function
1	Select to register as a memory point.
2	Select to set as a destination.
3	Select to call the registered number.

### DISPLAYING eDestination ICONS

- 1 Select on the map screen. (→P. 72)
- 2 Select "Map Information".
- 3 Select "eDestination".

Lexus Insider is an optional function that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

### NEW MESSAGE NOTIFICATION

When the vehicle is first powered on and a new Lexus Insider article is available, a notification will appear on the navigation screen. The notice will appear for only approximately 6 seconds unless one of the options listed is selected.


When the new message notification appears, any of the following options can be selected.

"Listen Now": Select to play newly received Lexus Insider article(s).

"Listen Later": Select to close the notification screen without playing articles. The notification screen will be displayed again when the engine 
power> switch is turned to ACCESSORY or IGNITION ON <ON> mode.

### VIEWING AND PLAYING RECEIVED Lexus Insider MESSAGES

1 Press the "MENU" button on the Remote Touch.

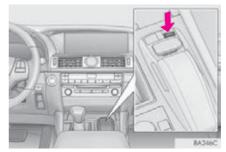

- 2 Select "Info".
- 3 Select "Lexus Insider".
- 4 Select the desired article title.

"Read All": Select to listen to all stored Lexus Insider broadcasts.

 To disrupt the audio read of Lexus Insider, press the "MODE" switch on the steering wheel, or press the "RADIO" or "MEDIA" button on the audio system.

9

LEXUS ENFORT

### **MESSAGEICONS**

Icons appear at the left of the Lexus Insider story titles and indicate the following.

lcon	Article
$\square$	Unread article
	Previously read article
<b>\(\rightarrow\)</b>	Unread article with downloadable Point of Interest (POI)
	Previously read article with downloadable Point of Interest (POI)

### LISTENING TO ANOTHER ARTICLE

- 1 Display the "LEXUS Insider" screen. (→P. 403)
- 2 Select the desired article.
- 3 Select "Next" or "Previous" to listen to another article.
- ullet The " $_{\Lambda}$ " or " $_{V}$ " switch on the steering wheel can be used to move to the previous or next article.
- To stop listening to the broadcast, select "Stop" or press the "PWR·VOL" knob of the audio system.

### ARTICLE

1 Display the "LEXUS Insider" screen. (→P. 403)

- 2 Select "Delete".
- 3 Select the item to be deleted and select "Delete".

**DELETING Lexus Insider** 

4 Select "Yes" when the confirmation screen appears.

### **DOWNLOADING A POI**

Some Lexus Insider articles will contain a downloadable POI relevant to the content.

- Display the "LEXUS Insider" screen. (→P. 403)
- 2 Select the desired article.
- 3 Select "Enter o".
- If a POI is contained, "Enter o" can be selected to download a POI to the navigation system.
- 4 Select "Go" to set the POI as a destination with route directions.

### 3. SETUP

### 1. LEXUS App Suite SETTINGS

The settings of App Suite can be changed.

1 Press the "MENU" button on the Remote Touch.



- 2 Select "Setup".
- 3 Select "LEXUS App Suite".
- 4 Select the items to be set.

# SCREEN FOR LEXUS App Suite SETTINGS



No.	Information	Page
1	Select to set the voice guidance volume.	_
2	Select to set the pop up reminder for cellular phone data usage.	407
3	Select to set Lexus Insider settings.	407
4	Select to reset all setup items.	_

### PHONE DATA PLAN POP-UP SETTINGS

The phone data plan pop-up can be set when a paid application is downloaded.

- **1** Display the "LEXUS App Suite Settings" screen. (→P. 406)
- 2 Select "Mobile Data Usage Notification".
- 3 Check the desired function to be operated.

### Lexus Insider SETTINGS

Lexus Insider settings, notification, and opt in or out of article receipt can be changed.

- **1** Display the "LEXUS App Suite Settings" screen. (→P. 406)
- 2 Select "LEXUS Insider".
- 3 Select the items to be set.



No.	Function
1	Select to set the receiving of Lexus Insider articles yes/no.
2	Select to set the new message notification on/off.
3	Select to reset all setup items.

٥

LEXUSENFORI

# 10

### 12.3-INCH DISPLAY

1	12.3-INCH DISPLAY OPERATION

SPLIT-SCREEN DISPLAY......410

 2. USING "Side Display"
 412

 BASIC SCREENS
 412

 INTERRUPTION SCREENS
 414

9

10

### 1. 12.3-INCH DISPLAY-OVERVIEW

### FULL SCREEN DISPLAY


The following functions can be displayed full screen:

Function	Page
Initial screen	30
"Menu" screen	14
Map screen*	72

<sup>\*:</sup> With navigation function

### SPLIT-SCREEN DISPLAY

Different information can be displayed on the left and right of the screen. For example, audio screen can be displayed and operated while the map screen is being displayed. The large screen on the left of the display is called the "Main Display", and the small screen to the right is called the "Side Display".

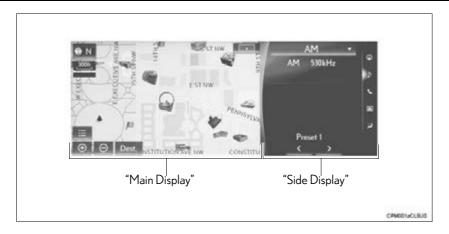

### "Main Display"

For details about the functions and operation of the "Main Display", refer to the respective section.

### "Side Display"

The following functions can be displayed and operated on the "Side Display".

### ► Basic screens

Function	Page
Navigation system	412
Audio	413
Phone	414
Vehicle information	"Owner's Manual"
Air conditioning	"Owner's Manual"

### ► Interrupt screens

Function	Page
Intuitive parking assist	335
Phone	415
Destination Assist*	400
Driving mode	"Owner's Manual"
Lexus night view	"Owner's Manual"

<sup>\*:</sup> With navigation function

### OPERATING CHARACTERISTICS OF THE SPLIT-SCREEN DISPLAY

When the split-screen is displayed, it is necessary to select the screen you wish to operate ("Main Display" or "Side Display").

- ► When selecting the "Main Display"
- 1 Move the Remote Touch knob to the left.
- ► When selecting the "Side Display"
- 1 Move the Remote Touch knob to the right.

### 2. USING "Side Display"

### **BASIC SCREENS**

To change the screen displayed on the "Side Display", use the screen buttons on the right side of the display.

### SWITCHING THE BASIC SCREEN

1 Select the desired button.



No.	Function
1	Select to display the navigation screen.
2	Select to display the audio control screen.
3	Select to display the phone screen.
4	Select to display the vehicle information screen.
5	Select to display the air conditioning control screen.

### **NAVIGATION SYSTEM**

A map\* or a compass with information about the current position can be displayed.

The orientation can be changed between 2D north-up, 2D heading-up and 3D heading-up by selecting the orientation symbol.  $(\rightarrow P.77)$ 

\*: With navigation function

10

### **AUDIO/VIDEO SYSTEM**

### ■ SELECTING AN AUDIO SOURCE

**1** Select "∇".



2 Select the desired source.

### ■ RADIO OPERATION

On the "Side Display", preset stations can be selected.



"<", ">": Select to tune in to the desired preset station/channel.

### **■ MEDIA OPERATION**

Operations such as selecting a chapter, file or track are carried out on the screen.



No.	Function
1	<ul><li>Select to select a chapter/track/ file.</li><li>Select and hold to rewind.</li></ul>
2	Select to stop the video screen.
3	Select to play/pause.
4	<ul> <li>Select to select a chapter/track/file.</li> <li>During playback: Select and hold to fast forward.</li> <li>During a pause: Select and hold to slow forward.</li> </ul>

### (INFORMATION)

Depending on the audio source, some functions may not be available.

### HANDS-FREE SYSTEM (FOR CELLULAR PHONE)

When hands-free mode is selected, it is possible to make call on the "Side Display" if the desired contact is registered on the 5 displayed buttons.

1 Select the desired contact.



2 Check that the "Call" screen is displayed.

### ■ REGISTERING A NEW CONTACT

A contact can be selected from the favorites list.  $(\rightarrow P.371)$ 

- 1 Select "Add From Favorites".
- 2 Select the desired contact.
- 3 Select the desired number.

### ■ DELETING THE CONTACT

- 1 Select and hold the screen button to change the contact.
- 2 Select "Yes" when the confirmation screen appears.

### **INTERRUPTION SCREENS**

Intuitive parking assist screen, phone screen, etc. are displayed automatically in accordance with conditions.

### SWITCHING THE INTERRUPTION SCREEN

When multiple interruption screens have been opened, the hidden screens can be brought forward and displayed once again. (The driving mode screen cannot be displayed again.)

1 Select "<" or ">" to select the desired display.



### HANDS-FREE SYSTEM (FOR CELLULAR PHONE)

The following functions can also be displayed and operated on the "Side Display".

For details about these functions, refer to the respective section.



- ► Calling on the Bluetooth<sup>®</sup> phone
- →P.349
- ► Incoming calls
- →P.355
- ► Incoming call waiting
- →P.358
- ► Talking on the Bluetooth<sup>®</sup> phone
- →P.356

### (INFORMATION)

•If "Side Display" is selected for any of the functions above and the function is activated, the status bar will be displayed on the "Side Display". For details about the status bar: →P.16

### ■ DISPLAYING ON THE "Main Display"

The screen can be displayed on the "Main Display" when carrying out an operation that cannot be conducted on the "Side Display".


1 Select



### (INFORMATION)

Operation is still possible using the steering phone switch even if the phone screen is hidden behind another interruption screen. If the operation is conducted using a steering switch, the phone screen will automatically be brought to the front. For details on operating the steering phone switch and the "Main Display": →P.344

### 1.12.3-INCH DISPLAY OPERATION

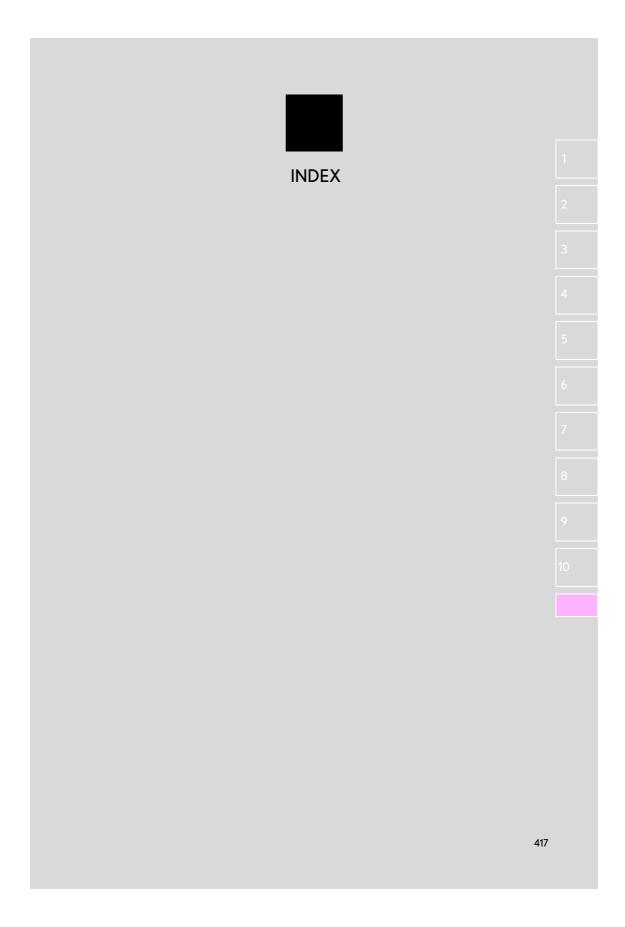

Numerics		
12.3-inch displayFull screen display		
Split-screen display	410	
Α		
AAC	. 168, 211, 213	
Adding destinations	112	
"Address"	91	
"Address Book"	96, 120	
Adjacent road	115	
AM	151	
Angle	128	
Applications	382, 394	
Area to avoid	123	
Arrival time	105	
Audio	140	
Audio screen adjustment	148	
Basic operation	142	
Disc slot	144	
Selecting an audio source	143	
"Sound Settings" screen		
System on/off	142	
USB/AUX port		
Voice command system		
Audio settings		
Auto avoid traffic		
Auto hide map buttons	126	
AUX		
Control screen/panel	189	
External options		
AUX port	145, 189	

В	
Bluetooth <sup>®</sup> 39	)
Profiles43	,
Registering a Bluetooth® audio player 41	l
Registering a Bluetooth® phone	,
Bluetooth <sup>®</sup> audio184	+
Connecting 188	
Control screen/panel 184	
Listening188	
Bluetooth <sup>®</sup> phone344	
Basic operation345	
Phone switch/microphone	
Phonebook	5
Selling or disposing of the vehicle 348	6
Voice command system 347	
Bluetooth <sup>®</sup> settings 45	)
Bluetooth® setup screen 45	
Connecting a Bluetooth® device	6
Deleting a Bluetooth <sup>®</sup> device	5
Detailed Bluetooth® settings 52	,
Editing the Bluetooth®	
device information50	
Registering a Bluetooth $^{\mathbb{R}}$ device	,

С
Caching a radio program
Calibration
Call history
Calling on the Bluetooth® phone
Call history
Dial pad
Favorites lists
Off hook switch
Phonebook
Camera
Camera display 37, 320, 327
Casual speech recognization
CD168
Control screen/panel168
Clock setting
Command list
Connecting a Bluetooth® device
Contacts
"Coordinates"
Current position

D	
Data services settings	316
Day mode	37
DCM	388, 391
Dealer setting	67
Deleting destinations	113
Deleting personal data	61
Deleting previous destinations	125
Destination Assist	96, 400
Destination search operation	88
"Address"	
"Address Book"	96
"Coordinates"	99
"Destination Assist"	96
"Emergency"	97
Home	90
"Intersection & Freeway"	97
"Map"	
"Point of Interest"	92
Preset destinations	90
"Previous Destinations"	96
Search area	90
Detailed navigation settings	126
Detour	114
Dial pad	353
Disc slot	144
Doppler weather	314
DSP	148
DVD	171
Control screen/panel	171
DVD options	174
DVD player and disc	205

E	
e-mail	359
eDestination	401
Downloading	401
lcons	402
Searching	
Editing route	112
Adding destinations	112
Adjacent road	115
Deleting destinations	113
Detour	114
Reordering destinations	112
Route preference	113
Route type	113
"Emergency"	97

F	
Favorites lists	350
File (audio)	211
FM	
Foot print map	76
Freeway	107
Function index	26
G	
General settingsGPS (Global Positioning System) Guiding the route	132
Н	
Heading-up	77
Home	

I	
Icon information	83
Incoming call waiting	358
Incoming calls	355
"Information" screen	20
Initial screen	30
Internet radio	167
Intersection	109
"Intersection & Freeway"	97
Intuitive parking assist	334
Detection range	338
Display	335
Distance display and buzzer	336
Failure warning	340
Information	338
Sensors	334
Switch	334
Intuitive parking assist setting	341
Alert volume	341
Display and tone indication	342
Parking sonar display	341
iPod	180, 210
Control screen/panel	180
Music	183
Video	183
K	
Keyboard	34

L	
LEXUS App Suite	387, 394
Entering keyword	399
Using	394
Web search	398
LEXUS App Suite settings	406
LEXUS Enform	382
Before using the function	386
LEXUS App Suite	387
LEXUS Enform Destinations	400
LEXUS Enform Remote	383, 392
LEXUS Enform Service Connect	383, 393
Lexus Insider	403
Viewing and playing	403
Lexus parking assist monitor	318
Area displayed on screen	327
Camera	328
Driving precautions	318
Screen display	320
List screen	35
Low fuel warning	128

M		
Maintenance	66	
"Map"	99	
Map database	135	
microSD card	135	
Map icons	84	
Map screen	72, 75	
Adjusting location	79	
Current position	75	
Map mode	78	
Map scale	76	
Orientation	77	
Scrolling the map	78	
Map screen information	80	
Icon information	83	
Map icons	84	
Route trace	82	

MEDIA button	143
Memory point	96,120
Memory points settings	116
"Address Book"	120
Area to avoid	123
Deleting previous destinations.	125
Home	117
"Preset Destinations"	118
"Menu" screen	14
Status display	16
Message	359
Calling the message sender	363
Checking	361
Receiving	360
Replying	362
microSD card	135
Microphone	298
MMS	359
Mobile Assistant	311
MP3	168 211 213

N	
Navigation	72
Navigation options	
North-up	77
0	
Off hook switch	
Online search	92,398
Operating information	204
DVD player and disc	205
Error messages	215
File (audio)	211
iPod	
Radio	204
Torms	213

Р	
Phonebook	348, 351
Phone switch/microphone	346
Phone settings	364
"Contacts/Call History"	366
"Messaging"	373
"Notifications"	374
"Sounds"	365
POI category	80, 92, 127
"Point of Interest"	92
Predictive traffic data	
Preset destinations	90
"Previous Destinations"	96
Profiles	43
PRST-TRACK button	140
PWR·VOL knob	31.142

R	
Radio	151, 204
Caching a radio program	155
Control screen/panel	151
Preset button screen	154
Presetting a station	154
Radio broadcast data system	157
Selecting a station from the list	155
Troubleshooting guide	160
Using HD Radio $^{\text{TM}}$ technology	158
RADIO button	143
Radio ID	165
Rear seat audio controls	196
Rear seat entertainment system	
Receiving on the Bluetooth $^{\circledR}$ phone	
Incoming calls	
Registering home	
Registering preset destinations	
Remote Touch	,
Reordering destinations	
Restarting the system	
Road preference	
Route guidance	
Route guidance screen	
Arrow screen	
Freeway	
Intersection	
Route overview	
Turn list screen	
Route information bar	
Route overview	
Route preferences	
Route trace	

S	
Safety Connect	391
Scale	76
Screen adjustment	37
Screen change button	72, 75
Camera display	37
Screen off	37
Screen off image	59
Screen size	148
Scrolling the map	78
Search area	90
Search engine	92, 398
Sending tones	356
Sensors	334
'Setup" screen	18
Side display	412
Basic screens	412
Interruption screens	414
Single map	78
SMS	359
'Sound Settings" screen	146
Startup image	59
Status display	16
Staaring switches	103 208

Talking on the Bluetooth® phone	356		
Incoming call waiting3	358		
Time zone	58		
Traffic information	85		
Show traffic event information	85		
Show traffic information	86		
Traffic settings	130		
Auto avoid traffic	13		
Transmit volume3	356		
Travel time	105		
TUNE-SCROLL knob	14C		
Turn list	110		
Turn list screen	110		
U			
USB memory  Control screen/panel	176		

V	
"Vehicle"	65
Dealer setting	
Maintenance	
Voice command system20	98, 347
Casual speech recognization	305
Command list	306
Operation	299
Steering switches	298
Voice guidance prompts	
Voice settings	
, o.ec sexgs	
W	
Weather	314
Web search	398
WMA 168,	
100,	211, 210
X	
XM Satellite Radio	161
Control screen/panel	161
How to subscribe to an	
XM Satellite Radio	163
If the satellite radio tuner malfunctions	166
Radio ID	
Selecting a channel from the list	

### Map database information and updates

This system uses the maps of DENSO.

#### **END USER LICENSE AGREEMENT**

PLEASE READ THIS AGREEMENT CAREFULLY BEFORE USING THE NAVIGATION SYSTEM

THIS IS A LICENSE AGREEMENT FOR YOUR COPY OF THE SPATIAL MAP DATABASE, INCLUDING LOCATION

CODES AND RELATED PRODUCTS (COLLECTIVELY, THE "DATABASE"), USED IN THE NAVIGATION SYSTEM.

BY USING THE NAVIGATION SYSTEM AND THE DATABASE, YOU ACCEPT AND AGREE TO BE BOUND BY ALL

TERMS AND CONDITIONS SET FORTH BELOW.

#### LICENSE GRANT

DENSO CORPORATION ("DENSO"), as a licensed distributor of the DATABASE, grants to you a non-exclusive, non-perpetual license to use your copy of the DATABASE for your personal use or for your use in your business' internal operations and not for any other purpose. This license does not include the right to grant sub-licenses.

#### **OWNERSHIP**

The DATABASE and the copyrights and intellectual property and neighboring rights therein are owned by TomTom North America, Inc. ("TomTom") and its licensors. This Agreement does not transfer any title or interest in the DATABASE, except for the license to use the DATABASE according and subject to the terms and conditions of this Agreement. You shall not alter, obscure or remove any copyright notices, trademark notices or other restrictive legends relating to the DATABASE

The DATABASE comprises confidential and proprietary information and materials of TomTom. Accordingly, you shall hold the DATABASE in confidence and trust. You shall take reasonable steps to protect the DATABASE from misappropriation or misuse. You shall not extract stand-alone data from or publish any part of the DATABASE without the prior written consent of TomTom and its licensors.

### LIMITATIONS ON USE

The DATABASE is restricted for use in the specific system for which it was created. Except to the extent explicitly permitted by mandatory laws, you may not extract or reutilize any portion of the contents of the DATABASE, nor reproduce, copy, duplicate, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the DATABASE.

#### **TRANSFER**

You many not transfer the DATABASE to third parties, except together with the system for which it was created, provided that you do not retain any copy of the DATABASE, and provided that the transferee agrees to all terms and conditions of this AGREEMENT.

#### DISCLAIMER OF WARRANTY

THE LICENSED PRODUCTS ARE PROVIDED ON AN "AS IS" AND "WITH ALL FAULTS BASIS" AND TOMTOM AND ITS SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, SATISFACTORY QUALITY, ACCURACY, TITLE AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL OR WRITTEN ADVICE OR INFORMATION PROVIDED BY TOMTOM OR ANY OF ITS AGENTS, EMPLOYEES OR THIRD PARTY

PROVIDERS SHALL CREATE A WARRANTY, AND LICENSEE IS NOT ENTITLED TO RELY ON ANY SUCH ADVICE OR INFORMATION. THIS DISCLAIMER OF WARRANTIES IS AN ESSENTIAL CONDITION OF THE AGREEMENT.

#### LIMITATION OF LIABILITY

NEITHER TOMTOM NOR ITS SUPPLIERS SHALL BE LIABLE TO THE UNDERSIGNED FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT OR EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT, INCLUDING LOST PROFITS OR COSTS OF COVER, LOSS OF USE OR BUSINESS INTERRUPTION OR THE LIKE, REGARDLESS OF WHETHER THE PARTY WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

NOTWITHSTANDING ANYTHING TO THE CONTRARY CONTAINED HEREIN, TOMTOM SHALL HAVE NO MONETARY LIABILITY TO THE UNDERSIGNED FOR ANY CAUSE (REGARDLESS OF THE FORM OF ACTION) UNDER OR RELATING TO THIS AGREEMENT.

#### WARNINGS

The DATABASE comprises facts and information from government and other sources reflecting circumstances in existence before you received the DATABASE, which may contain errors and omissions. Accordingly, the DATABASE may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The DATABASE does not include or reflect information relating to, among other things, neighborhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.

End Users shall acknowledge that the use of the Licensed Products with a non-TomTom map may result in increased variance between the location displayed on the map and ground truth location.

The covenants and obligations undertaken by the End User herein are intended for the direct benefit of TomTom and may be enforced by TomTom directly against the End User.

#### U.S. GOVERNMENT RIGHTS

U.S. GOVERNMENT RIGHTS. If End User is an agency, department, or other entity of the United States Government, or funded in whole or in part by the United States Government, then use, duplication, reproduction, release, modification, disclosure or transfer of this commercial product and accompanying documentation, is restricted in accordance with the LIMITED or RESTRICTED rights as described in any applicable DFARS or FAR. In case of conflict between any of the FAR and/or DFARS that may apply to the Licensed Product, the construction that provides greater limitations on the Government's rights shall control. Contractor/manufacturer is TomTom North America, Inc., 11 Lafayette Street, Lebanon, NH 03766-1445. Phone: 603.643. 0330. The Licensed Products are © 2006-Present by TomTom. ALL RIGHTS RESERVED. For purpose of any public disclosure provision under any federal, state or local law, it is agreed that the Licensed Products are a trade secret and a proprietary commercial product and not subject to disclosure.

If End User is an agency, department, or other entity of any State government, the United States Government or any other public entity or funded in whole or in part by the United States Government, then End User hereby agrees to protect the Licensed Products from public disclosure and to consider the Licensed Products exempt from any statute, law,

regulation, or code, including any Sunshine Act, Public Records Act, Freedom of Information Act, or equivalent, which permits public access and/or reproduction or use of the Licensed Products. In the event that such exemption is challenged under any such laws, this EULA shall be considered breached and any and all right to retain any copies or to use of the Licensed Products shall be terminated and considered immediately null and void. Any copies of the Licensed Products held by Licensee shall immediately be destroyed. If any court of competent jurisdiction considers this clause void and unenforceable, in whole or in part, for any reason, this EULA shall be considered terminated and null and void, in its entirety, and any and all copies of the Licensed Products shall immediately be destroyed.

#### **END-USER TERMS**

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and DENSO CORPORATION ("DENSO") and its licensors (including their licensors and suppliers) on the other hand.

© 2014 HERE. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: ©
Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®,
©Department of Natural Resources Canada. All rights reserved.

HERE holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2014. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4.

The Data for Mexico includes certain data from Instituto Nacional de Estadística y Geografía.

#### Terms and Conditions

<u>Personal Use Only.</u> You agree to use this Data together with the vehicle navigation system for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Notwithstanding the foregoing, You may use the Data for purposes of Your business operations. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

Restrictions. Except where you have been specifically licensed to do so by DENSO, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

<u>Warning</u>. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

<u>No Warranty</u>. This Data is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY

WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: DENSO AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You shall not export from anywhere any part of the Data or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce. To the extent that any such export laws, rules or regulations prohibit HERE from complying with any of its obligations hereunder to deliver or distribute Data, such failure shall be excused and shall not constitute a breach of this Agreement.

Entire Agreement. These terms and conditions constitute the entire agreement between DENSO (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of The State of Illinois, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of The State of Illinois for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, the Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with the End-User Terms, and each copy of the Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

#### NOTICE OF USE

CONTRACTOR (MANUFACTURER/ SUPPLIER) NAME: HERE

CONTRACTOR (MANUFACTURER/SUPPLIER) ADDRESS:

c/o Nokia 425 West Randolph Street, Chicago, Illinois 60606

This Data is a commercial item as defined in FAR 2.101 and is subject to the End-User Terms under which this Data was provided.

© 2014 HERE – All rights reserved.

If the Contracting Officer, federal government agency, or any federal official refuses to use the legend provided herein, the Contracting Officer, federal government agency, or any federal official must notify HERE prior to seeking additional or alternative rights in the Data

#### **END USER NOTICE**

PLEASE READ THIS NOTICE CAREFULLY BEFORE USING THIS NAVIGATION SYSTEM

The Point Of Interest Data ("POI" Data) in the navigation system is in part provided by Infogroup Inc. ("Infogroup"). By using the POI Data, you accept and agree to all terms and conditions set forth below.

#### 1. Ownership

All rights, title and interest to the Infogroup POI Data shall be retained by Infogroup.

### 2. Limitations on use

Except to the extent explicitly permitted by mandatory laws, you may not extract or re-utilize any portion of the contents of the POI Data, nor reproduce, copy, modify, adapt, translate, disassemble, decompile, or reverse engineer any portion of the POI Data.

#### 3. Transfer

You may not transfer the POI Data to third parties, except together with the system for which it was created, provided that you do not retain any copy of the POI Data.

### 4. Disclaimer of warranty

EXCEPT AS STATED HEREIN, INFOGROUP MAKES NO EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR WARRANTY OF MERCHANTABILITY.

### 5. Limitation of Liability

EITHER INFOGROUP OR SUPPLIER OF POI DATA SHALL NOT BE LIABLE FOR ANY INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES MADE OR ALLEGED IN CONNECTION WITH YOUR USE OF THE POI DATA.

#### **END USER LICENSE AGREEMENT**

Personal Use Only. You agree to use this information for solely personal, non-commercial purposes, and not for service bureau, time-sharing or other similar purposes. You may not modify the information or remove any copyright notices that appear on the information in any way. You may not decompile, disassemble or reverse engineer any portion of this information, and may not transfer or distribute it in any form, for any purpose. Without limiting the foregoing, you may not use this information with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications.

No Warranty. This information is provided to you "as is," and you agree to use it at your own risk. DENSO and its licensors (and their licensors and suppliers, collectively "DENSO") make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, and DENSO expressly disclaims any warranties regarding content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, non-infringement, usefulness, use or results to be obtained from this information, or that the information or server will be uninterrupted or error-free. Some states, territories and countries do not allow certain warranty exclusions, so to that extent, the above exclusion may not apply to you.

Disclaimer of Liability: DENSO SHALL NOT BE LIABLE TO YOU FOR ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF ITS NATURE, ALLEGING ANY LOSS, INJURY OR DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING ANY LOSS OF PROFIT, REVENUE OR CONTRACTS ARISING OUT OF YOUR POSSESSION, USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF DENSO OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states, territories and countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Indemnity. You agree to indemnify, defend and hold DENSO and its licensors (including their respective licensors, suppliers, assignees, subsidiaries, affiliated companies, and the respective officers, directors, employees, shareholders, agents and representatives of each of them) free and harmless from and against any liability, loss, injury (including injuries resulting in death), demand, action, cost, expense, or claim of any kind or character, including but not limited to attorney's fees, arising out of or in connection with any use or possession by you of this information.

#### **END USER NOTICE**

The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

End User's use of the Brand Icon Licensed Product and any portion thereof, is limited to use solely for the purpose of enhancing the value and/or use of the spatial vector data furnished or made by TomTom. Notwithstanding anything to the contrary herein, or in any attachment or exhibit hereto, in no event shall End User use the Brand Icon Licensed Product or any portion thereof in connection with or in conjunction with spatial street vector data furnished or made by a party other than TomTom. End User may only use the icons, brand names, logos, trademarks or other features within (and not separate from) the map data in any collateral, marketing and product packaging. In addition, End shall not modify or alter the color, shape, size, and orientation of the Brand Icon Licensed Product as provided to End User without TomTom's prior written approval.

Licensee agrees that the use of Brand Icon Licensed Product subject to the terms and conditions set forth in this Agreement and that there may be additional third party terms, conditions and restrictions to which the use of the Brand Icon Licensed Product will be subject provided to the End User from time to time by TomTom in the Release Notes applicable to the Licensed Products.

### Certification

### ►U.S.A.

### ● FCC ID: AJDK086

- This device complies with Part 15 of FCC Rules and Industry Canada ilcence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.
- Information to User Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.
- Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

### **▶** Canada

### ● IC:775E-K086

• This device complies with Part 15 of FCC Rules and Industry Canada ilcence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Le présent appareil est conforme aux la partie 15 des règles de la FCC et CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

 Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID, Playlist Plus and MediaVOCS are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries



#### Gracenote® End User License Agreement - Music

This application or device contains software from Gracenote. Inc. of Emeryville. California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist track and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions of this application or device.

This application or device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc., may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© 2013 Gracenote, Inc. All rights reserved.

#### I. Clear Channel Disclaimers

"Total Traffic Network, a division of Clear Channel Broadcasting, Inc., owns or holds the rights to the traffic, news, sports, weather, stocks and other data (the "TOTAL TRAFFIC-HD+ Data") and TOTAL TRAFFIC-HD+ network through which it is delivered, together the "TTN Service". Use of the TTN Service is subject to the terms of these Device End User Terms

"The TTN Service is informational only. User assumes all risk of use. Total Traffic Network and its suppliers and licensors make no representations about the accuracy or timeliness of any of the TOTAL TRAFFIC-HD+ Data, including traffic and road conditions, route usability, or speed."

"TOTAL TRAFFIC-HD+ NETWORK DATA IS PROVIDED "AS IS," AND "WHERE IS". TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS EXPRESSLY DISCLAIM ALL WARRANTIES WITH RESPECT TO THE DATA (INCLUDING, WITHOUT LIMITATION, THAT THE DATA WILL BE ERROR-FREE, RESPECT TO THE DATA (INCLUDING, WITHOUT LIMITATION, THAT THE DATA WILL BE ERROR-FREE, WILL OPERATE WITHOUT INTERRUPTION OR THAT THE DATA WILL BE ACCURATE), EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING FROM A COURSE OF DEALING OR USAGE OF TRADE."

'TOTAL TRAFFIC NETWORK AND ITS SUPPLIERS AND LICENSORS WILL NOT BE LIABLE TO YOU FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, EXEMPLARY, OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOST REVENUES, ANTICIPATED REVENUES, OR PROFITS RELATING TO THE SAME) ARISING FROM ANY CLAIM RELATING DIRECTLY OR INDIRECTLY TO USE OF THE DATA, WHETHER A CLAIM FOR SUCH DAMAGES IS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE OR STRICT LIABILITY) OR ANY OTHER LEGAL THEORY

#### II. The Weather Channel's (TWC's) Disclaimers

THE FOLLOWING TERMS APPLY TO THE USE OF ANY MATERIAL, DATA OR INFORMATION PROVIDED BY THE WEATHER CHANNEL, LLC ("THE WEATHER CHANNEL"), INCLUDING WEATHER-RELATED INFORMATION AND REPORTS, OBTAINED BY YOU OR OTHERS THROUGH THE TTN SERVICE ("THE WC

#### DISCLAIMER OF WARRANTIES.

YOUR USE OF THE WC DATA IS AT YOUR SOLE RISK. THE WC DATA IS PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. THE WEATHER CHANNEL EXPRESSLY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES. OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT.

THE WEATHER CHANNEL MAKES NO REPRESENTATION OR WARRANTY THAT (I) THE WC DATA WILL MEET YOUR REQUIREMENTS, (II) THE WC DATA WILL BE UNINTERRUPTED, TIMELY, SECURE, OR ERROR-FREE, (III) THE RESULTS THAT MAY BE OBTAINED FROM THE USE OF THE WC DATA WILL BE ACCURATE OR RELIABLE, OR (iv) ANY ERRORS OR BUGS IN THE WC DATA WILL BE CORRECTED. ACCORDINGLY, THE WEATHER CHANNEL SHALL NOT BE RESPONSIBLE OR LIABLE FOR THE ACCURACY, USEFULNESS OR AVAILABILITY OF THE WC DATA.

#### LIMITATION OF LIABILITY.

LIMITATION OF LIABILITY.

YOU EXPRESSLY UNDERSTAND AND AGREE THAT THE WEATHER CHANNEL, ITS SUPPLIERS, ITS LICENSORS AND ITS AFFILIATE COMPANIES SHALL NOT BE LIABLE, UNDER ANY LEGAL THEORY, INCLUDING CONTRACT, TORT, NEGLIGENCE OR STRICT LIABILITY, FOR ANY DIRECT, INCIDENTAL, SPECIAL, PUNITIVE, CONSEQUENTIAL OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, GOODWILL, USE, DATA OR OTHER INTANGIBLE LOSSES (EVEN IF THE WEATHER CHANNEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES), RESULTING FROM OR ARISING OUT OF YOUR USE OF, OR YOUR INABILITY TO USE, THE WC DATA. THIS AGREEMENT, OR ANY OTHER MATTER RELATING TO THE WC DATA. YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY DISPUTE WITH THE WEATHER CHANNEL RELATED TO THE WC DATA

OR CONTENT SHALL BE CANCELLATION OF RECEIPT OF THE WC DATA.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN WARRANTIES OR THE
LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

ACCORDINGLY, SOME OF THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.