

Update your status and upload pictures via the Social Networks feature on Cosmos 2! Stay in touch with friends and family, and keep everyone updated on events as they happen!



Update Status

1. With the QWERTY keyboard open and from the Quick Menu, select **Social Networks**.
2. Highlight a social network and press **OK**.
3. Press **1!** **Status Update**, enter a message with the QWERTY keyboard, and press **OK** to send your update.*

Upload a Picture

1. With the QWERTY keyboard open and from the Quick Menu, select **Social Networks**.
2. Highlight a social network and press **OK**.
3. Press **2** **Picture Upload**, highlight the image you wish to upload, and press **OK**.*



*If this is the first time you have updated your status or uploaded a picture, you will then receive a text message with instructions on how to link your phone to your social network for future updates and uploads.

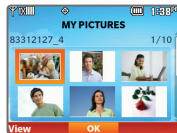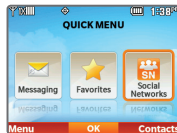

Adding Favorite Contacts

Cosmos 2 features a handy Favorites function. Add up to 10 groups or individual contacts as favorites for quick and easy messaging.

1. With the QWERTY keyboard open and from the Quick Menu, select **Favorites**.
2. Press **OK** to select **Add**.
3. Press **OK** to select **Contacts**.
4. Press **OK** to mark a highlighted contact.
5. Press the **Left Soft Key** for **Done**.

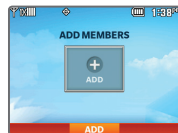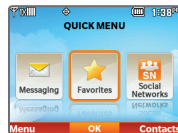



Cosmos 2 features a built-in music player that supports MP3, WMA, and other popular file formats—and with a microSD™ memory card slot with support for up to 32GB of storage, you'll have plenty of room for all your favorite songs.

Transfer Music

1. With a microSD card inserted in the phone, connect your phone to your PC with a USB cable.
2. Your phone will appear as a removable disk on your PC. Choose to view files through Windows Explorer.
3. Drag and drop music files onto your microSD card.



Play Music

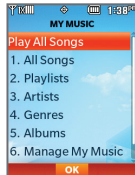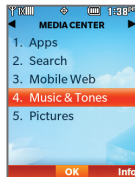1. With a microSD card with music inserted in the phone, press **OK Menu**.
2. Select **5** **Media Center** and then choose **4** **Music & Tones**.
3. Select **2** **My Music** and choose **OK Play All Songs**.






Bluetooth® Pairing

Enjoy the convenience of hands-free communication with *Bluetooth* wireless technology on your Cosmos 2!

1. Before you begin, place the *Bluetooth* device into pairing mode.* From standby mode and with the QWERTY keyboard closed, press **OK Menu**.
2. Select  **Settings & Tools**.
3. Press  **Bluetooth Menu**.
4. Press **OK** to select **Add New Device**.
5. Press **OK** to search for the device.
6. Select your device from the results by highlighting it and pressing **OK**.
7. Press **OK Yes** or enter the passkey to connect to the device.

*Refer to your *Bluetooth* accessory's user guide for information about initiating pairing mode and the passkey if asked (typically "0000").

Note: *Bluetooth* accessories sold separately.

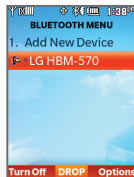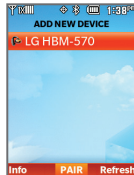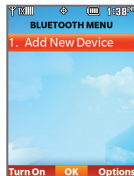

COSMOS™ 2



QWERTY Keyboard



Accessing and Using
the Quick Menu



Sending a Text Message



Using Social Networks



Adding Favorite Contacts



Using the Music Player



Bluetooth® Pairing



LG

Life's Good

Getting to Know Your Phone



1. Earpiece
2. Left Soft Key
3. Speakerphone Key
4. Send Key
5. Voicemail Key
6. Shift Key
7. Microphone
8. Vibrate Mode Key

9. Power/End Key
10. Clear & Back/Voice Commands/Voice Recording Key
11. Right Soft Key
12. Directional Key*
13. Menu/OK Key
14. 3.5mm Headset Jack

15. Camera Key
16. Speaker
17. Accessory/Charger Port
18. Volume Keys
19. Camera Lens
20. Hand Strap Notch

*Customizable


QWERTY Keyboard






- | | | |
|-------------------------------|---------------------------------|----------------------|
| 1. Right Soft Key | 5. Vibrate Mode Key | 9. Directional Keys |
| 2. Left Soft Key | 6. Voice Commands Key | 10. Menu/OK Key |
| 3. Function/
Favorites Key | 7. Space/Social
Networks Key | 11. Enter Key |
| 4. Text Message/Shift Key | 8. Speakerphone Key | 12. Clear & Back Key |

Accessing and Using the Quick Menu

By default, when you open the QWERTY keyboard on your LG Cosmos 2, the Quick Menu appears. This menu gives you access to text messaging, your favorites, and social networking.



   
1. Open the QWERTY keyboard on your Cosmos 2. The Quick Menu should appear.*
 - Select **Messaging** to begin a new text message or to access your voicemail, mobile IM, email, and more.
 - Select **Favorites** to access your favorites or to add a new favorite. For more information on adding a favorite, see the **Adding Favorite Contacts** panel in this Quick Start Guide.
 - Select **Social Networks** to access various social networks, such as Facebook®, MySpace™ and Twitter®. You may also add additional social networks by pressing the  **Left Soft Key** for **New**.

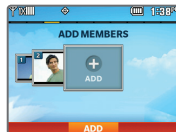
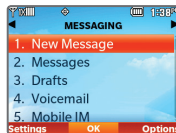
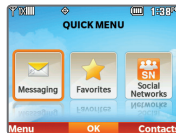
*You may enable or disable this menu under  **Menu** >  **Settings & Tools** >  **Phone Settings** >  **Set Shortcuts Keys** >  **Set Slide Open View**.



Sending a Text Message

When you need to communicate privately and quickly, use text messaging. You can send text messages to other wireless phones and email addresses.

1. With the QWERTY keyboard open, press  **Text Message/Shift Key**.
2. Enter the recipient's number or email address, or press the  **Right Soft Key** to access your contact list.
3. Press  to move to the **Text field**.
4. Enter your message and press  to send it.

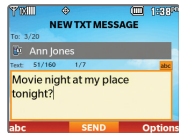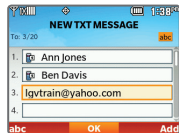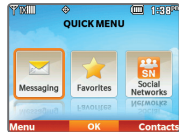



Extended Battery (1,800 mAh)



Bluetooth Headset HBM-230



Maximize your phone with cutting-edge accessories at
LGusa.com/cosmos2

All materials in this guide including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. Copyright © 2011 LG Electronics, Inc. ALL RIGHTS RESERVED. LG and the LG logo are registered trademarks of LG Electronics, Inc. Cosmos™ is a trademark of Verizon Wireless. The Bluetooth® word mark, and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics MobileComm, U.S.A., Inc. is under license. microSD™ is a trademark of SanDisk. Other trademarks and trade names are those of their respective owners. Unless otherwise specified herein, all accessories referenced herein are sold separately. All features, functionality, and other product specifications are subject to change. Screen shots are simulated and subject to change.

