

PM325



Slide. Click. Send the pic...

PM325

Headset Jack



Integrated VGA Camera

Self-Portrait Mirror

Voice Dial & Voice Memo

Volume Up/Down

Ear Piece

Bluetooth® is a radio technology that delivers short-range wireless connectivity for up to 30 feet. It enables fast, secure transmission of both voice and data without wires between mobile phones and headsets, laptops or PDAs in close proximity.

2	Bluetooth
2	Taking Pictures
3	Camera Settings
3	Saving, Assigning & Sending Pictures
4	Downloading Content
4	Web Access
4	Text Messaging
5	Sound Settings
5	Display Settings
5	Notable Settings
6	Personal Info Tools
6	Phone Book
6	Call Options
	Phone Menu (back)

TABLE OF CONTENTS



BLUETOOTH WIRELESS TECHNOLOGY

USING YOUR HANDSET FOR DIAL-UP NETWORKING (DUN)

Connect a Bluetooth capable PC or handheld device wirelessly to the Internet with the PM325. Additional service required for dial-up networking.



Pairing the Devices

1. From the **Bluetooth (7)** menu, select **Enable Bluetooth** and press **OK**.
2. Select **Enable Bluetooth** again and press **OK**.
3. Select **Add New** and press **OK**.
4. Select **Waiting for Pairing** and press **OK**.
5. You will be prompted for a PIN code, which is user definable. Enter the PIN code and press **OK**.

The PIN code provides for secure pairing between the handset and the other Bluetooth device. Consult the instructions for the Bluetooth device to locate, establish pairings and establish connections.

 
USING YOUR HANDSET FOR HANDS-FREE CONVERSATION

The PM325 is compatible with devices that support the Bluetooth headset and/or hands-free profile(s). You may create and store 20 pairings within the PM325 and connect to one at a time.



Pairing the Devices

1. From the **Bluetooth (7)** menu, select **Add New** and press **OK**.
2. Select **Searching for Pairing** and press **OK**.
3. Consult the Bluetooth device instructions to set the device to pairing mode.
4. The device will appear in the **Add New** screen once it has been located. Highlight the device and press **OK**.
5. The handset will prompt you for the PIN code. Consult the Bluetooth device instructions for the appropriate PIN code. Enter the PIN code and press **OK**.
6. Select **Connect** and press **OK**.
7. Once pairing is completed, you will see the device listed in the Bluetooth menu.

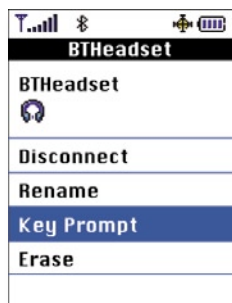

Customizing the Headset Profile

Some Bluetooth headsets utilize the Bluetooth hands-free profile, which may support redialing, voice dialing and call pick up for incoming calls through the multi-function button. Additional hands-free profile features supported may include digit and speed dialing from a hands-free device. Consult your headset instructions for the default action of the multi-function button.

For headsets utilizing the Bluetooth headset profile exclusively, the PM325 offers customizable options for your headset's multi-function button.

1. To distinguish if your headset supports the Bluetooth headset profile exclusively, select the paired device from the **Bluetooth (7)** menu and press **OK**.
2. If **Key Prompt** is listed, the headset utilizes the headset profile. Select **Key Prompt** and press **OK**.
3. Select **Recent Calls**, **Voice Dials** or **None** and press **OK**.

 


BUILT-IN DIGITAL CMOS CAMERA

Taking a Picture

1. Press the **OK/Camera Key**.
2. Press the **OK/Camera Key** a second time to enable the camera viewfinder.
3. Press the **OK/Camera Key** a third time—or press the **Left Soft Key** for **Capture**—to take the picture.

Pictures are automatically saved in the **My Pictures > In Camera** menu. Use the mirror on the back of the handset as a viewfinder for self-portraits.

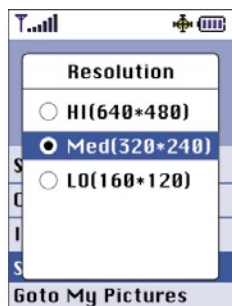

CUSTOMIZING CAMERA SETTINGS

The PM325 hosts an array of camera features for taking VGA-quality photographs for viewing, storing or sharing wirelessly.

Changing the Resolution

 
The PM325 can store up to 20 high (VGA), 42 medium (QVGA) or 100 low (QQVGA) images.

1. Press the **OK/Camera Key** or select **Pictures (1)** from the main menu.
2. Select **Camera** to initiate the camera mode.
3. While in camera mode, select the **Right Soft Key** for **Options**.
4. Select **Settings** and press **OK**.
5. Select **Resolution** and press **OK**.
6. Select **HI** (640x480 pixels), **Med** (320x240 pixels) or **LO** (160x120 pixels) and press **OK**.

Digital Zooming

1. Press the **OK/Camera Key**, select **Camera** and press **OK**.
2. To zoom in, press the left arrow on the Navigation Key. To zoom out, press the right arrow on the Navigation Key.

You can digitally zoom up to 2x in high, 4x in medium and 8x in low resolution. The magnification setting is indicated in the upper left-hand corner of the camera mode screen.

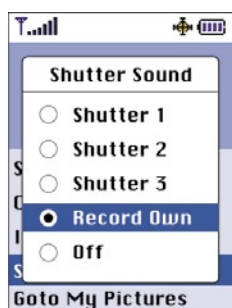

Customizing Shutter Sounds

1. While in camera mode, select the **Right Soft Key** for **Options**.
2. Select **Settings** and press **OK**.
3. Select **Shutter Sound** and press **OK**.
4. Select from the three available shutter sound options or select **Record Own** and press **OK**.



SAVING AND ASSIGNING PICTURES

Assigning a Picture ID or Screen Saver

Assigning a picture ID or screen saver from pictures in the **In Camera** folder creates a QVGA copy in the **Saved to Phone** folder. The **Saved to Phone** folder can contain up to 50 pictures.

1. Press the **OK/Camera Key**, select **My Pictures** and press **OK**.
2. Select **In Camera** and press **OK**.
3. Highlight the picture you wish to assign and press **OK** to select.
4. Press the **Right Soft Key** for **Options**:

To set a picture ID...

1. Select **Assign Picture ID** and press **OK**.
2. Select **New Entry** to create a new contact entry or **Find Entry** for an existing contact entry and press **OK**.
3. For a new entry, enter the contact info and press the **Left Soft Key** for **Done** to assign.
For an existing contact, scroll to the desired entry and press **OK** to assign.

To set a screen saver...

1. Select **Assign Screen Saver** and press **OK**.



Sending Pictures to an Online Album

1. Press the **OK/Camera Key**, select **My Pictures** and press **OK**.
2. Select **In Camera** and press **OK**.
3. Select the images you wish to upload by highlighting and pressing **OK** for each image.
4. Press the **Right Soft Key** for **Options**.
5. Select **Upload to Albums** and press **OK**.
6. Select **Upload Selection** and press **OK**.
7. Select **My Uploads** and press **OK**. The handset will then initiate a browser session.

 


SENDING PICTURES VIA PICTURE MAILSM

Select **In Camera** pictures and send to e-mail address, phone book contact, other mobile number or other service. Record a 10-second voice memo, add a text message, and send up to 10 pictures per Picture Mail.

1. From the **Messaging (2)** menu, select **Picture Mail** and press **OK**.
2. Select **Send Picture** and press **OK**.
3. Choose either **From My Pictures** or **Take New Picture** and press **OK**.
4. Highlight the pictures you want to send, press **OK** to select each image, then press the **Left Soft Key** for **Next**.
5. Choose **Mobile**, **Email**, **Contact(s)** or **Other Service** and press **OK**.
6. Enter the mobile number or e-mail address, or select the contact(s) or service to which you would like to send the message. Press the **Left Soft Key** for **OK**. Enter additional recipients at this time as well.
7. Press the **Left Soft Key** for **Next** to launch a web session to connect to the Picture Mail server.
 - Select the voice memo icon to record a voice memo and press the **Right Soft Key** for **Record**.
 - Select the text message icon to write a text message and press the **Right Soft Key** for **Add**.
8. Press the **Left Soft Key** for **Send**.

Shortcut: Press the up arrow on the Navigation Key to quickly access the Messaging menu.

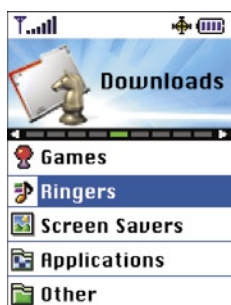

CONNECTIVITY FEATURES

DOWNLOADING SPRINT PCS VISIONSM CONTENT

The PM325 can store up to 1,024 kilobytes of downloaded content from PCS Vision.

Downloading New Content from PCS Vision (Games, Ringers, Screen Savers, etc.)

1. From the **Downloads (8)** menu, select the desired content classification (**Games**, **Ringers**, **Screen Savers**, **Applications** or **Other**) and press **OK**.
2. Select **Get New** and press **OK** to initiate a web session displaying PCS Vision content for the chosen classification.
3. Select the desired content and follow PCS Vision prompts to complete the purchase and download (extra fees may apply on some services).

Accessing Downloaded Content

1. From the **Downloads (8)** menu, select the content classification, then press **OK**.

Shortcut: Press the down arrow on the Navigation Key to quickly access the Downloads menu.



ACCESSING THE WEB

The PM325 features PCS Vision and Openwave 6.2.3 browser to access web and PCS Vision content.

1. Select **Web (3)** from the main menu.
2. Press the **END Key** to exit or end your browsing session.

Shortcut: From standby mode with the slide open, press the **Right Soft Key** for **Web**.

TEXT MESSAGING

Sending an SMS Message

1. From the **Messaging (2)** menu, select **Send Message**, then choose **Text Message**.
2. Enter the ten-digit telephone number, select a name from your contact list or enter an e-mail address into the appropriate field and press **OK**.
3. Enter additional addresses (up to a total of ten recipients per message).
4. Press the **Left Soft Key** for **Next**.
5. Select **Message** and press **OK**.
6. Enter a message up to 160 characters and press **OK**.
7. Press the **Left Soft Key** for **Send**.



CUSTOMIZABLE FEATURES

CHANGING THE SOUND SETTINGS



Selecting a Ringer

1. From the **Settings (9)** menu, select **Sounds** and press **OK**.
2. Select **Ringers** and press **OK**.
3. Select **Caller ID**, **No Caller ID** or **Roaming** and press **OK**.
4. Choose from the list of 30 available default ringers and press **OK** or select the list of downloaded or voice memo ringers by selecting the **Right Soft Key** for **More**.

 
Adjusting Volume Settings

1. From the **Settings (9)** menu, select **Sounds** and press **OK**.
2. Select **Volume** and press **OK**.
3. Select **Ringer**, **Earpiece**, **Key Beep**, **Application** or **Power On/Off** and press **OK**.
4. Press the Navigation Key up for louder and down for softer. Press **OK** at the desired volume level.

Ringer Volume Shortcut: While in standby mode, press the volume keys on the side of the handset to adjust the ringer volume.

Earpiece Volume Shortcut: During a conversation, press the volume keys on the side of the handset to adjust the earpiece volume.

Silent Mode Shortcut: While in standby mode, press and *hold* the *lower* volume key on the side of the handset to mute all sounds.

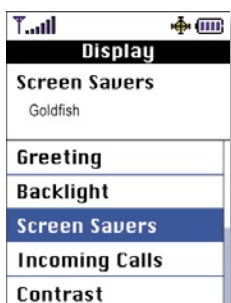

CHANGING THE DISPLAY SETTINGS

Changing the Screen Saver Image

1. From the **Settings (9)** menu, select **Display** and press **OK**.
2. Select **Screen Savers** and press **OK**.
3. Select from the list of eleven default images or select the **Right Soft Key** for **More** to view the list of downloaded images and **In Camera** pictures.
4. Press **OK** to preview the screen saver or picture, and press **OK** again to **Save**.

Changing the Theme Skin

1. From the **Settings (9)** menu, select **Display** and press **OK**.
2. Scroll down to **Theme Skins** and press **OK**.
3. Select from the list of four available theme skins and press **OK**.



OTHER NOTABLE SETTINGS

Locking the Handset

 
This helps protect the phone from unauthorized use. Once the phone is locked, the phone is restricted from making calls until the lock code is entered. However, you are able to make emergency calls and calls to up to ten stored security phone numbers, as well as receive any incoming calls while in the locked mode.

1. From the **Settings (9)** menu, select **Security**.
2. Enter your lock code (commonly the last four digits of your mobile phone number).
3. Choose **Lock Phone**, select **Lock now** or **On power up**, and press **OK**. The On power up function will lock the handset when the phone is power cycled.

Programming Navigation Key Shortcuts

1. From the **Settings (9)** menu, scroll down to **Setup/Others** and press **OK**.
2. Select **Shortcuts** and press **OK**. Press **OK** again after reading the directions.
3. Choose **Left Navigation**, **Right Navigation**, **Up Navigation** or **Down Navigation** and press **OK**.
4. Select the desired function from the list provided and press **OK**.

Pressing a direction on the Navigation Key in standby mode will now quickly access the set function(s).

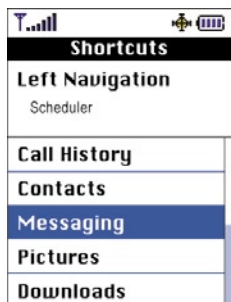



PERSONAL INFORMATION TOOLS

Scheduling an Event

1. From the **Tools (4)** menu, select **Scheduler** and press **OK**.
2. Highlight the event date using your Navigation Key and press **OK**.
3. Select **Add Events** to create a new event and press **OK**.
4. Set the appropriate start and end times, title, recurrence (if any), alarm and ringer by scrolling to the corresponding field, entering the desired information, and pressing **OK**.
5. Select **Left Soft Key** for **Save**.

Shortcut: Press the left arrow on the Navigation Key to quickly access the Scheduler menu.

Scheduling an Alarm

1. From the **Tools (4)** menu, select **Alarm Clock** and press **OK**.
2. Select **Alarm 1**, **Alarm 2**, **Alarm 3** or **Quick Alarm** and press **OK**.
3. Set the appropriate time, recurrence (if any) and ringer by scrolling to the corresponding field and entering the desired information.
4. Select the **Left Soft Key** for **Save**.

Recording a Voice Memo

Record up to 30 voice memos (three minutes total). Voice memos may also be assigned as Call ID ringers.

1. From standby mode or during a call, press and hold the **Voice Memo Key** on the left side of the handset, above the volume up/down side keys. (During a call, only the other party will be recorded.)
2. Start recording at the tone. To stop recording, press **OK**.

Note: Recorded voice memos can be found in the Tools menu under Voice Memo.

PHONE BOOK

The internal phone book is capable of storing up to 200 entries with up to 5 numbers per entry.

Adding a New Phone Book Entry

1. From the **Contacts (6)** menu, select **Find/New Entry** and press **OK**.
2. Select **New Entry** and press **OK**.
3. Enter the name and number into the appropriate fields and press **OK**.
4. Select a label (**Mobile**, **Home**, **Office**, **Fax** or **Pager**) and press **OK**.
5. To set the speed dial or voice dial, highlight the number and press the **Right Soft Key** for **Options**.
 - Select **Set Speed Dial** and press **OK**. Enter the speed dial number (2-99) and press **OK** twice to set.
 - Select **Set Voice Dial** and press **OK**. Select **OK** to record the voice dial.

Tip: You may also create additional entries, or save numbers to the phone book, by accessing the Call History/standby screen and selecting **Save**. Follow the on-screen prompts.

Shortcut: Press the right arrow on the Navigation Key to quickly access the Find/Add Entry screen.

CALL OPTIONS

MAKING A CALL

Voice Dialing

Up to 30 three-second voice dials may be created to quickly access numbers within your phone book.

1. From standby mode, press and release the **Voice Dial Key**, above the volume up/down side keys.
2. Repeat the name that you have recorded as the voice tag (step 5 above) for the desired number.

Monitor Mode

1. During a call, scroll to **Monitor On** and press **OK** to amplify the phone's audio for hands-free listening. While the monitor function is enabled, the microphone will be muted.

Warning! Due to higher volume levels, don't place the phone near your ear while monitor mode is enabled.



Pictures (1)

- 1 Camera (Options)**
 - Self Timer
 - Color Tone
 - Normal
 - Sepia
 - Black & White
 - Negative
 - Image Controls
 - Brightness
 - White Balance
 - Settings
 - Resolution
 - Quality
 - Shutter Sound
 - Auto-Erase
 - Status Bar
- Goto My Pictures
- 2 My Pictures**
 - In Camera
 - Saved to Phone
- 3 Online Albums**
 - View Albums
 - Upload Pictures
- 4 Account Info**



Messaging (2)

- 1 Send Message**
 - Text Message
 - Picture Mail
- 2 Picture Mail**
 - Inbox
 - Send Picture
- 3 Text Message**
 - Inbox
 - Outbox
 - Draft
 - Edit Folder
 - Send Message
- 4 Instant Msg**
- 5 E-mail**
- 6 Voicemail**



Web (3)



Tools (4)

- 1 Scheduler**
- 2 Alarm Clock**
 - Alarm 1
 - Alarm 2
 - Alarm 3
 - Quick Alarm
- 3 Voice Memo**
 - Record New
 - Erase All
 - Memory Info
- 4 Notepad**
- 5 Ez Tip Calc**
- 6 Calculator**
- 7 World Clock**



Call History (5)

- 1 Outgoing Calls**
- 2 Incoming Calls**
- 3 Missed Calls**
- 4 Erase Calls**
 - Outgoing Calls
 - Incoming Calls
 - Missed Calls
 - All Calls



Contacts (6)

- 1 Find/Add Entry**
- 2 Groups**
 - Add Group
 - No Group
 - Family
 - Friends
 - Colleagues
 - Business
 - School
- 3 Speed Dials**
- 4 Voice Dials**
- 5 My Phone Number**
- 6 Services**
 - Customer Service
 - Dir Assistance
 - Account Info
 - Sprint Operator
 - Voice Command



Bluetooth (7)

- 1 Enable/Disable Bluetooth**
- 2 Add New**
 - Searching for Pairing
 - Waiting for Pairing



Downloads (8)

- 1 Games**
 - Get New
 - My Content Manager
 - Photo Puzzle
 - Ms. Pac-Man Demo
 - Solitaire D. Demo
 - Tetris Deluxe Demo
- 2 Ringers**
 - Get New
 - My Content Manager
- 3 Screen Savers**
 - Get New
 - My Content Manager
- 4 Applications**
 - Get New
 - My Content Manager
 - Demo ESPN Bottomline
 - MobiTV Trial
 - The Weather Channel
 - Real - rTV Trial
- 5 Other**
 - Get New
 - My Content Manager
- 6 Memory Status**



Settings (9)

- 1 Sounds**
 - Ringers
 - Key Tones
 - Volume
 - Alerts

2 Display

- Greeting
- Backlight
- Screen Savers
- Incoming Calls
- Contrast
- Menu Style
- Theme Skins
- Clock
- Font Size
- Power Save Mode

3 PCS Vision

- Enable/Disable
- Net Guard
- Update Vision Profile

4 Roaming

- Set Mode
- Call Guard

5 Location

6 Messaging

- Notification
- Callback Number
- Signature
- Pre-Set Message

7 Bluetooth

- My Bluetooth Name
- Visibility
- My Bluetooth Address

8 Security

9 Voice Dial

- Voice Dial
- Train Words

10 Setup/Others

- Shortcuts
- Call Setup
- Auto-Answer
- Dialing Match
- Language
- TTY Mode
- Airplane Mode
- Update Phone SW

11 Phone Info

