



ENGLISH  
ESPAÑOL

OWNER'S MANUAL **LG wine III**



OWNER'S MANUAL  
**LG wine III**

**LG Electronics**

Printed in China

MFL67894101 (1.0)



[www.lg.com](http://www.lg.com)

*Copyright ©2013 LG Electronics, Inc. **All rights reserved.**  
LG and the LG logo are registered trademarks of LG Group and its related  
entities. All other trademarks are the property of their respective owners.*

*Copyright ©2013 LG Electronics, Inc. **Todos los derechos reservados.**  
LG y el logotipo de LG son marcas registradas de LG Group y sus  
entidades relacionadas. Todas las demás marcas son propiedad de sus  
respectivos titulares.*

# Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

**WARNING!** Violation of the instructions may cause serious injury or death.



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than -4°F or greater than 122°F.
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.

6. Do not use a hand-held phone while driving.



7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

8. Do not use your device for long periods of time while a part of your body is making direct contact with it. The temperature of the product may increase during normal operation and this may result in harming or burning your skin.

## Important Safety Precautions



9. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



10. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.

11. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

12. Do not use your phone in high explosive areas as the phone may generate sparks.



13. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



14. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.



15. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



16. Do not disassemble the phone.

17. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.



18. Do not hold or let the antenna come in contact with your body during a call.

## Important Safety Precautions



19. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.

20. Store the battery out of reach of children.



21. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



22. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.

23. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.



24. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



25. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

# Table of Contents

---

<b>Important Safety Precautions</b>	<b>1</b>
-------------------------------------	----------

---

<b>Table of Contents</b>	<b>4</b>
--------------------------	----------

---

<b>Welcome</b>	<b>9</b>
----------------	----------

---

<b>Technical Details</b>	<b>10</b>
--------------------------	-----------

Technical Details.....	10
------------------------	----

---

<b>Phone Overview</b>	<b>11</b>
-----------------------	-----------

---

<b>Menus Overview</b>	<b>13</b>
-----------------------	-----------

Menu Access.....	13
------------------	----

---

<b>Getting Started with Your Phone</b>	<b>16</b>
--	-----------

Step 1. Remove the Back Cover .....	16
-------------------------------------	----

Step 2. Insert the Battery.....	16
---------------------------------	----

Step 3. Replace the Back Cover.....	16
-------------------------------------	----

Step 4. Charge the Phone .....	16
--------------------------------	----

Removing the Battery .....	17
----------------------------	----

Charging with USB .....	17
-------------------------	----

Battery Temperature Protection .....	17
--------------------------------------	----

Battery Charge Level.....	17
---------------------------	----

Signal Strength .....	17
-----------------------	----

Turning the Phone On and Off .....	18
------------------------------------	----

Turning the Phone On.....	18
---------------------------	----

Turning the Phone Off.....	18
----------------------------	----

---

Making Calls.....	18
-------------------	----

Correcting Dialing Mistakes .....	18
-----------------------------------	----

Redialing Calls.....	18
----------------------	----

Receiving Calls.....	18
----------------------	----

Screen Icons .....	19
--------------------	----

---

<b>Quick Access to Convenient Features</b>	<b>20</b>
--	-----------

Vibrate Mode .....	20
--------------------	----

Sounds Off.....	20
-----------------	----

Mute Function.....	20
--------------------	----

Quick Volume Adjustment .....	20
-------------------------------	----

Quick Font Resize.....	20
------------------------	----

3-way call .....	20
------------------	----

Caller ID.....	21
----------------	----

Voice Commands.....	21
---------------------	----

---

<b>Entering and Editing Information</b>	<b>23</b>
---	-----------

Text Input .....	23
------------------	----

Text Input Modes .....	23
------------------------	----

---

<b>Contacts in Your Phone's Memory</b>	<b>24</b>
--	-----------

Storing Basics.....	24
---------------------	----

Customizing Individual Entries.....	24
-------------------------------------	----

Speed Dial.....	24
-----------------	----

Storing a Number with Pauses .....	25
------------------------------------	----

---

# Table of Contents

Adding a Pause to an Existing Contact Entry .....	25	Multimedia Message Using Options.....	34
Adding Another Phone Number... 26		<b>2. Messages.....</b>	<b>35</b>
From standby mode.....	26	Viewing Your Inbox.....	35
From the Contact List Screen.....	26	Message Icon Reference .....	36
Changing Saved Information.....	26	<b>3. Drafts .....</b>	<b>37</b>
Changing the Default Number .....	26	Message Icon Reference .....	37
Deleting .....	27	<b>4. Voicemail .....</b>	<b>37</b>
Deleting a Contact Entry .....	27	<b>5. Templates.....</b>	<b>38</b>
Removing a Speed Dial .....	27	<b>6. Settings.....</b>	<b>38</b>
Speed Dialing .....	27	Message Settings Sub-Menu Descriptions.....	38
Single Digit Speed Dials.....	27	<b>7. Erase All .....</b>	<b>40</b>
Multiple Digit Speed Dials.....	28		
<hr/>		<hr/>	
<b>Contacts</b>	<b>29</b>	<b>Call History</b>	<b>41</b>
1. New Contact.....	29	1. Missed Calls .....	41
2. Contact List.....	29	2. Received Calls.....	41
3. Favorites.....	30	3. Dialed Calls .....	42
4. Groups .....	30	4. All Calls.....	42
Adding Contacts to a Group.....	31	5. Call Timer .....	43
5. Speed Dials .....	31	6. Data Counter.....	43
6. My vCard.....	31		
<hr/>		<hr/>	
<b>Messaging</b>	<b>33</b>	<b>Multimedia</b>	<b>44</b>
New Message Alert.....	33	1. Take Picture .....	44
1. New Message .....	33	2. Record Video.....	44
The Basics of Sending a Text Message.....	33	3. Record Voice .....	45
Select Recipient(s) Using Add .....	34	How to record a new sound.....	45
		4. Pictures.....	45

# Table of Contents

5. Videos .....	46	5. Stopwatch.....	57
6. Ringtones .....	47	6. World Clock.....	57
7. Music .....	48	7. Notepad.....	58
<hr/>		8. Unit Converter.....	58
<b>easyedge<sup>SM</sup></b>	<b>49</b>	9. USB Mass Storage .....	58
1. easyedge <sup>SM</sup> Apps.....	49	<hr/>	
<b>My Schedule</b>	<b>50</b>	<b>Settings</b>	<b>59</b>
1. Calendar .....	50	1. Sounds Settings .....	59
2. Alarm Clock.....	50	1.1 Master Volume .....	59
<hr/>		1.2 Call Sounds .....	59
<b>Browser</b>	<b>52</b>	1.2.1 Call Ringtone.....	59
1. Start Browser .....	52	1.2.2 Call Vibrate .....	59
<hr/>		1.2.3 Caller ID Readout .....	60
<b>Tools</b>	<b>54</b>	1.3 Alert Sounds .....	60
1. Voice Commands.....	54	1.4 Keypad Volume .....	60
Access and Options.....	54	1.5 Digit Dial Readout.....	60
Call <Name or Number> .....	55	1.6 Service Alerts.....	61
Send Msg to <Name or Number or Group> .....	55	1.7 Power On/Off .....	61
Go to <Menu> .....	55	1.8 Hearing Assist.....	61
Check <Item>.....	55	<b>2. Display Settings.....</b>	<b>62</b>
Contacts <Name>.....	55	2.1 Banner.....	62
Redial.....	55	2.2 Backlight .....	62
Play.....	56	2.3 Brightness.....	62
Help.....	56	2.4 Wallpaper .....	63
2. Calculator .....	56	2.5 Display Themes.....	63
3. Ez Tip Calculator.....	56	2.6 Menu Style.....	63
4. Info Search .....	57	2.7 Font Type.....	64



# Table of Contents

2.8 Font Size.....	64	4.5 Voice Privacy.....	73
2.9 Clock Format.....	64	4.6 DTMF Tones.....	73
2.10 External Display.....	65	<b>5. Web Access Prompt.....</b>	<b>73</b>
2.11 Name Match for Dialing.....	65	<b>6. USB Mode.....</b>	<b>73</b>
<b>3. Phone Settings.....</b>	<b>65</b>	<b>7. Memory.....</b>	<b>74</b>
3.1 Airplane Mode.....	65	7.1 Save Options.....	74
3.2 Set Shortcut Keys.....	65	7.2. Phone Memory.....	74
3.2.1 Set My Shortcuts.....	65	7.3 Card Memory.....	74
3.2.2 Set Directional Keys.....	66	<b>8. Phone Info.....</b>	<b>75</b>
3.3 Voice Commands.....	66	8.1 My Number.....	75
3.4 Language.....	66	8.2 ESN/MEID.....	75
3.5 Location.....	67	8.3 Icon Glossary.....	75
3.6 Security.....	67	8.4 SW/HW Version.....	75
3.6.1 Edit Codes.....	67	8.5 Software Update.....	75
3.6.2 Restrictions.....	68	8.6 Front Display Patterns.....	76
3.6.3 Emergency #S.....	68	<b>9. Accessibility.....</b>	<b>77</b>
3.6.4 Phone Lock Setting.....	69	9.1 Menu Readout Mode.....	77
3.6.5 Lock Phone Now.....	69	9.2 Large Text.....	77
3.6.6 Reset Default.....	69	9.3 Turn off All Sound.....	77
3.7 System Select.....	70		
3.8 NAM Select.....	70	<hr/>	
<b>4. Call Settings.....</b>	<b>70</b>	<b>Tone Room Deluxe.....</b>	<b>78</b>
4.1 Answer Options.....	70		
4.2 Auto Retry.....	71	<hr/>	
4.3 TTY Mode.....	71	<b>Bluetooth® Menu.....</b>	<b>78</b>
Connecting TTY Equipment and a Terminal.....	72	Turn On Bluetooth.....	78
4.4 One Touch Dial.....	72	Add New Device.....	78
		For pairing with a new Bluetooth® device.....	78

# Table of Contents

Icon References When a Bluetooth® Wireless Connection is Searched (neither connected nor paired).....	79
My Phone Info .....	80
Discovery Mode .....	81
Supported Profiles .....	81

---

## **UNO** **81**

---

## **Safety** **82**

<b>TIA Safety Information.....</b>	<b>82</b>
Exposure to Radio Frequency Signal.....	82
Antenna Care.....	82
Phone Operation.....	82
Tips on Efficient Operation .....	83
For your phone to operate most efficiently:.....	83
Driving .....	83
Electronic Devices.....	83
Pacemakers .....	83
Persons with pacemakers:.....	83
Hearing Aids.....	84
Other Medical Devices .....	84
Health Care Facilities.....	84
Vehicles .....	84
Posted Facilities .....	84
Aircraft.....	84
Blasting Areas .....	84
Potentially Explosive Atmosphere...	85

For Vehicles Equipped with an Air Bag .....	85
--	----

## **Safety Information.....85**

Charger and Adapter Safety .....	86
Battery Information and Care.....	86
Explosion, Shock, and Fire Hazards.....	87
General Notice .....	88

## **Warning! Important safety information.....89**

Avoiding hearing damage.....	89
Using your phone safely .....	89

## **FDA Consumer Update.....90**

## **10 Driver Safety Tips.....98**

## **Consumer Information on SAR ....100**

## **FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices .103**

---

## **Accessories** **106**

---

## **Limited Warranty Statement 107**

---

## **Index** **110**

---

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

Thank you for choosing the **Wine III**, designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, this compact phone offers:

- Significantly enhanced voice clarity.
  - Slim and sleek design with internal antenna.
  - Large, easy-to-read, backlit LCD with status icons.
  - Messaging, voicemail, and caller ID capabilities.
  - 24-key keypad.
  - Speakerphone feature.
  - Menu-driven interface with prompts for easy operation and configuration.
  - Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
  - Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

#### NOTE

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

# Technical Details

## Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

## Technical Details

The **wine III** is a trimode phone that operates on among (Code Division Multiple Access CDMA) frequencies: cellular services at 800 MHz, (Personal Communication Services PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft/softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.


# Phone Overview



- 1. Earpiece** Lets you hear the caller and automated prompts.
- 2. LCD Screen** Displays messages, indicator icons and active functions.
- 3. OK Key/Directional Key** Use the OK Key to select options and menus. Use the Directional Key to scroll through the menu items and highlight a specific field or object.
- 4. Left Soft Key** Performs functions identified on the bottom-left corner of the screen.
- 5. Speakerphone Key** Use to change to speakerphone mode.
- 6. Audio Jack** Allows you to plug in an optional 3.5mm headset for convenient, hands-free conversations.
- 7. Volume Keys** Use to adjust the Master Volume in standby mode\* and the Earpiece Volume during a call. Use to adjust font sizes when viewing messages, entering phone numbers (in standby mode) or browsing menus (except for the Main menu).
- 8. Send Key** Use to make and answer calls. Press from standby mode to access the All Calls list.
- 9. Vibrate Mode Key** Use to set Vibrate mode (from standby mode press and hold for about 3 seconds).
- 10. Right Soft Key** Performs functions identified on the bottom-right corner of the screen.
- 11. Voice Commands** Use for quick access to Voice Commands from standby mode.
- 12. Power/End Key** Use to turn the power on/off and to end a call. Also exits menus and returns to standby mode.
- 13. Camera Key** Briefly press the Camera Key to access camera mode to take pictures. Press and hold the Camera Key to access video mode to record videos.
- 14. Clear** Deletes single spaces or characters with a quick press, or press and hold to delete entire words in text entry screens.
- 15. Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
- 16. Call Key** Use to make and answer calls. Press from standby mode to access the All Calls list.
- 17. Camera Lens** Use to take pictures and record videos.

## Phone Overview

16. **Lock Key** Use to lock the phone (from standby mode press and hold for about 3 seconds).

**NOTE** To unlock the phone, press the Right Soft Key  and enter the last four digits of your phone number (default lock code).

17. **Microphone** Allows other callers to hear you clearly when you are speaking to them.

\* Standby mode is when the phone is waiting for input from you. No menu is displayed and the phone isn't performing any action. It's the starting point for all of the instruction steps.



18. **Camera Lens** Use to take photos. Keep it clean for optimal photo quality.
19. **Accessory/Charger Port** Connects the phone to the Wall/USB charger, or other compatible accessories.



### NOTE

The antenna is located inside your phone.

### Tip


If you hold the phone enclosing the lower edge, you may interfere with the antenna's ability to receive a clear signal which affects call quality for voice or data transfer.





### NOTE

- It's important to fully charge the battery before using the phone for the first time.
- Battery life and signal strength are significant factors (among others) that affect your phone's ability to send/receive calls or data transfer.

## Menu Access

While in the home screen, press  [MENU] to access the phone's main menu. There are two methods of accessing menus and submenus:

- Use the Directional Key  to highlight a menu/option and press  to select it.
- Press the number key on the keypad that to activate the corresponding menu/option.

### Contacts

1. New Contact
2. Contact List
3. Favorites
4. Groups
5. Speed Dials
6. My vCard

### Messaging

1. New Message
2. Messages
3. Drafts
4. Voicemail
5. Templates
6. Settings
  1. Inbox View
  2. Entry Mode
  3. Auto Save Sent

4. Auto Erase Inbox
5. Messaging Font Size
6. TXT Auto View
7. TXT Instant Reply
8. TXT Auto Scroll
9. Multimedia Auto Receive
10. CMAS Alert
11. Voicemail #
12. Callback #
13. Signature
14. TXT-Media Msg Notification
7. Erase All
  1. Erase Sent/Received
  2. Erase Drafts
  3. Erase All Messages

### Call History

1. Missed Calls
2. Received Calls
3. Dialed Calls
4. All Calls
5. Call Timer
6. Data Counter

### Multimedia

1. Take Picture
2. Record Video
3. Record Voice
4. Pictures
5. Videos
6. Ringtones
7. Music

# Menus Overview

---

## easysedge

---

---

## My Schedule

1. Calendar
  2. Alarm Clock
- 

---

## Browser

---

---

## Tools

1. Voice Command
    1. Call <Name or Number>
    2. Send Msg to <Name or Number or Group>
    3. Go to <Menu>
    4. Check <Item>
    5. Contacts <Name>
    6. Redial
    7. Play
    8. Help
  2. Calculator
  3. Ez Tip Calculator
  4. Info Search
  5. Stopwatch
- 

6. World Clock
  7. Notepad
  8. Unit Converter
    1. Currency
    2. Area
    3. Length
    4. Mass
    5. Temperature
    6. Volume
    7. Velocity
  9. USB Mass Storage
- 

---

## Settings

1. Sounds Settings
    1. Master Volume
    2. Call Sounds
      1. Call Ringtone
      2. Call Vibrate
    3. Caller ID Readout
  3. Alert Sounds
    1. TXT Message
    2. Multimedia Message
  3. Voicemail
  4. Emergency Tone
- 

5. Missed Call
  4. Keypad Volume
  5. Digit Dial Readout
  6. Service Alerts
    1. Minute Beep
    2. Call Connect
    3. Call Disconnect
    4. Charge Complete
    5. Software Update
  7. Power On/Off
    1. Power On
    2. Power Off
  8. Hearing Assist
  2. Display Settings
    1. Banner
    2. Backlight
      1. Display Backlight
      2. Keypad Backlight
    3. Brightness
    4. Wallpaper
      1. My Pictures
      2. Slide Show
    5. Display Themes
    6. Menu Style
-



## Menus Overview

- 7. Font Type
- 8. Font Size
- 9. Clock Format
- 10. External Display
- 11. Name Match for Dialing
- 3. Phone Settings
  - 1. Airplane Mode
  - 2. Set Shortcut Keys
    - 1. Set My Shortcuts
    - 2. Set Directional Keys
  - 3. Voice Commands
    - 1. Confirm Choices
    - 2. Sensitivity
    - 3. Adapt Voice
    - 4. Prompts
  - 4. Language
  - 5. Location
  - 6. Security
  - 7. System Select
  - 8. NAM Select
- 4. Call Settings
  - 1. Answer Options
  - 2. Auto Retry
  - 3. TTY Mode
  - 4. One Touch Dial

- 5. Voice Privacy
- 6. DTMF Tones
- 5. Web Access Prompt
- 6. USB Mode
- 7. Memory
  - 1. Save Options
    - 1. Pictures
    - 2. Videos
    - 3. Sounds
  - 2. Phone Memory
    - 1. Memory Usage
    - 2. My Pictures
    - 3. My Videos
    - 4. My Music
    - 5. My Sounds
    - 6. My Contacts
    - 7. Move All To Card
  - 3. Card Memory
- 8. Phone Info
  - 1. My Number
  - 2. ESN/MEID
  - 3. Icon Glossary
    - 1. Status
    - 2. Home Screen
    - 3. Multimedia
    - 4. Messaging
    - 5. Contacts

- 6. Recent Calls
- 7. Settings & Tools
- 4. SW/HW Version
- 5. Software Update
  - 1. Status
  - 2. Check for Update
- 6. Front Display Patterns
- 9. Accessibility
  - 1. Menu Readout Mode
  - 2. Large Text
  - 3. Turn Off All Sound

---

### Tone Room Deluxe

---

### Bluetooth

- 1. Bluetooth Menu
  - 1. Add New Device

 
---

### UNO

# Getting Started with Your Phone

## Step 1. Remove the Back Cover

Use the fingertip cutout at the bottom of the phone to pull the back cover off.

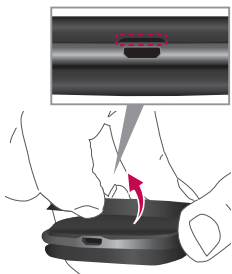

## Step 2. Insert the Battery

Align the battery contacts with the terminals in the battery compartment and push the battery down until it clicks into place.



## Step 3. Replace the Back Cover

 
Place the back cover over the battery compartment, then press it downward until it clicks into place.



## Step 4. Charge the Phone

Your device comes with a Wall/USB charger and a USB cable which connect together to charge your phone.

Before turning on your phone, charge it fully. Be sure to use the charger that came with your phone.

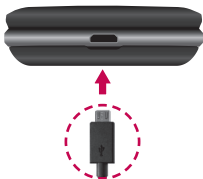

USB cable

# Getting Started with Your Phone

## NOTICE

Please make sure that the '⌋' side faces up before inserting a charger or USB cable into the Accessory/Charger Port of your phone.

## Removing the Battery

1. Turn the phone off.
2. Use the fingertip cutout at the bottom of the phone to pull the back cover off.
3. Use the fingertip opening near the bottom of the battery compartment to lift the battery out.

## Charging with USB

You can use your computer to charge your phone. To be able to charge with the USB cable, you may need to have the necessary USB Driver installed on your PC first. Connect one end of the USB cable to the Accessory/Charger Port on your phone and the other end to the USB port on your PC.


## NOTE

Low-power USB ports are not supported, such as the USB ports on your keyboard or bus-powered USB hub.


## Battery Temperature Protection

If the battery gets overheated, the phone will automatically turn off. When you turn the phone back on, a message pops up alerting you that the phone was powered off for your safety.

## Battery Charge Level

You can find the battery charge level  at the top right corner of the LCD screen. When the charge level becomes low, the battery sensor sounds a warning tone, blinks the battery icon, and/or displays a warning message. As the charge level approaches empty, the phone automatically switches off without saving.


## Signal Strength

Call quality depends on the signal strength in your area. You can tell how much signal strength you have by the number of bars next to the signal strength icon : the more bars, the stronger the signal. If you're having problems with signal quality, move to an open area or, when inside a building, try moving near a window.


## Getting Started with Your Phone

### Turning the Phone On and Off



#### Turning the Phone On

1. Insert the battery and connect the phone to an external power source if the battery level is low.
2. With the flip open, press and hold the **Power/End Key**  until the LCD screen lights up.


#### Turning the Phone Off

With the flip open, press and hold the **Power/End Key**  until the LCD screen turns off.


### Making Calls

1. Open the flip and enter the phone number.
2. Press the **Send Key**  to dial the call.
3. Press the **Power/End Key**  to end the call.


#### NOTE

Your phone has a Voice Commands feature that also lets you make calls by saying a phone number or Contact name. To access it, open the flip and press the **Voice Commands Key**  and say **Call** followed by the name or number.


### Correcting Dialing Mistakes

While entering a phone number, press the **Clear Key**  once to erase the last digit entered, or hold it down for at least two seconds to delete all the digits.

### Redialing Calls





With the flip open, press the **Send Key**  twice to redial the last number dialed.

### Receiving Calls


1. When the phone rings or vibrates, press the **Send Key** . You can also answer the call by simply opening the flip.

#### NOTE

If the 'Flip Open' (MENU > Settings > Call Settings > Answer Options) answer option is NOT MARKED, you can:





- Open the flip and press the **Send Key**  to answer the call.
- Open the flip and press the Left Soft Key  [**Quiet**] to mute the ringing or vibration for that call.
- Open the flip and press the Right Soft Key  [**Ignore**] to end the call or send it directly to Voicemail.
- Open the flip and press  [**TEXT**] to end the call and send a quick text message.

## Getting Started with Your Phone

2. Press the **Power/End Key**  to end the call, or simply close the flip.




### Screen Icons

When the phone is on, the top line of the LCD screen displays phone status icons.

To see the icon glossary, with the flip open, press  [MENU] >  **Settings** >  **Phone Info** >  **Icon Glossary** and select a subcategory.



## Quick Access to Convenient Features

### Vibrate Mode



Sets the phone to vibrate instead of ringing ( is displayed). To set Vibrate Mode, with the flip open, press and hold . To return to Normal Mode, press and hold  again.

### Sounds Off




Quickly deactivate your phone's sounds when you're in a place where phone sounds would be disruptive.

From standby mode with the flip open, press and hold the **Volume Down Key**  for 3 seconds. To return to normal sounds mode, press and hold the **Volume Up Key** .

### Mute Function

The Mute Function prevents the transmission of your voice to the caller. To quickly activate Mute while on a call, press the Left Soft Key  [**Mute**], then to unmute press the Left Soft Key  [**Unmute**] again.


### Quick Volume Adjustment

Quickly adjust ringer and earpiece volumes by pressing the Volume Keys  on the left side of the phone. Press the **Volume Up Key**  to increase and **Volume Down Key**  to decrease the volume.



#### NOTE

The earpiece volume can only be adjusted during a call and Keypad Volume can only be adjusted through the Sounds Settings menu.

### Quick Font Resize

When you view messages, enter phone numbers, or view sub-menus, press the Volume Keys  to quickly adjust the font size.

### Call Waiting





During a call, one beep indicates another incoming call. Press the **Send Key**  to answer it and put the first call on hold. Press the **Send Key**  again to return to the first call.

### 3-way call

You can talk with two people at the same time with a three-way conversation on your wireless phone. Airtime and other

## Quick Access to Convenient Features

charges, which may include toll or long distance charges, will apply for all simultaneous calls until you end one call.


1. While on the first call, dial the 10-digit number of the second person.
2. Press the **Send Key** . The first person is automatically put on hold while the call is made.
3. When the second person answers, press  **[MERGE]** to create a conference call.
4. If the second person does not answer, press the **Send Key**  twice to end the connection and go back to the first person.
5. To end both conversations completely, press the **Power/End Key** .

### Caller ID

Caller ID displays the number and/or name and picture (if applicable) of the person calling when your phone rings.

### Voice Commands

Voice Commands allow you to do things by verbal command (e.g.,

make calls, check Voicemail, etc.). With the flip open, press the **Voice Commands Key**  on the keypad.

1. **Call** Say "Call" and then call someone simply by saying the name or phone number.
2. **Send Msg to** Say "Send Message" and the command will prompt you for the type of message.
3. **Go to** This allows you to access a menu within the phone.
4. **Check** This allows you to check out a wide range of items such as **Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume and My Number.**
5. **Contacts** You can look up names in your Contacts as well as manage your Contact List including creating, erasing or modifying.
6. **Redial** Say "Redial" and the phone will redial the last phone number.
7. **Play** Allows you to play music.

## Quick Access to Convenient Features

8. **Help** Provides a general guideline to using Voice Commands.

### **NOTE**







Voice Commands can also be started with the designated key on your Bluetooth® device. Please check the user manual of the Bluetooth® device for further instructions.




# Entering and Editing Information

## Text Input

The following key functions are available to help with text entry:

-  **Left Soft Key:** Press to change the text input mode.
-  **Shift:** Press to change capitalization (initial cap, caps lock, lowercase).
-  **Next:** Press to display other matching words in the database in T9 word mode.
-  **Space:** Press to complete a word and insert a space.
-  **Clear:** Press to delete a single space or character. Hold to delete words.
-  **Punctuation:** Press to insert punctuation symbols.

## Text Input Modes

In a text field, press the Left Soft Key  to select a text input mode:

T9 Word/ Abc/ ABC/ 123/  
T9 Palabra/ Symbols/  
Templates

### NOTE

T9 Palabra is the Spanish counterpart of T9 Word which utilizes accents, tildas, etc. for correct Spanish word spelling.

# Contacts in Your Phone's Memory

## Storing Basics

1. With the flip open, enter a number (max. 48 digits), then press the Left Soft Key **[Save]**.
2. Use the Directional Key **[Up]** to highlight **Add New Contact/Update Existing**, then press **[OK]**.
3. Use the Directional Key **[Down]** to highlight **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press **[OK]**.
4. Enter a name (max. 32 characters), and any additional information, then press **[OK]** **[SAVE]**.

### NOTE

If you selected **Update Existing** after you select the number type, the contact information is automatically updated.

## Customizing Individual Entries

1. With the flip open, press the Right Soft Key **[Contacts]**, then use the Directional Key **[Up]** to highlight an entry.
2. Press the Left Soft Key **[Edit]**.
3. Use the Directional Key **[Down]** to highlight a phone number, then press the Right Soft Key **[Options]**.
4. Use the Directional Key **[Down]** to highlight **Set Speed Dial**, then press **[OK]**.
5. Select a Speed Dial digit.
  - Enter a digit using the keypad, then press **[OK]** **[SET]**.
  - Use the Directional Key **[Down]** to highlight the Speed Dial digit, then press **[OK]** **[SET]**.
3. Use the Directional Key **[Down]** to highlight the information to customize.
4. Change the entry as you want, then press **[OK]** **[SAVE]** to save your changes.

## Speed Dial

Allows you to set up your Speed Dials.

1. With the flip open, press the Right Soft Key **[Contacts]**, then use the Directional Key **[Up]** to highlight an entry.
2. Press the Left Soft Key **[Edit]**.
3. Use the Directional Key **[Down]** to highlight a phone number, then press the Right Soft Key **[Options]**.
4. Use the Directional Key **[Down]** to highlight **Set Speed Dial**, then press **[OK]**.
5. Select a Speed Dial digit.
  - Enter a digit using the keypad, then press **[OK]** **[SET]**.
  - Use the Directional Key **[Down]** to highlight the Speed Dial digit, then press **[OK]** **[SET]**.

## Contacts in Your Phone's Memory

6. Press [Yes] to confirm, then press [SAVE] to update your contact entry.

### Storing a Number with Pauses

Pauses allow you to enter additional series of numbers to access automated systems such as Voicemail or credit billing numbers. Pause types are:

**Wait (W)** The phone stops dialing until you press the Left Soft Key [Release] to advance to the following series of numbers.

**2-Sec Pause (P)** The phone waits two seconds before dialing the next string of digits.

1. With the flip open, enter the phone number, then press the Right Soft Key [Options].
2. Use the Directional Key to highlight **Add 2-Sec Pause** or **Add Wait**, then press .
3. Enter the additional number(s) (e.g., pin number, credit card number, etc.).
4. Press the Left Soft Key [Save].
5. Choose **Add New Contact/ Update Existing**.

6. Choose **Mobile 1/ Home/ Business/ Mobile 2/ Fax**.
7. Continue entering information for the Contact entry as necessary.

#### NOTE

If you selected **Update Existing** after you select the number type, the contact information is automatically updated. You do not have the option to enter additional information.

8. Press [SAVE] to update your contact entry.

### Adding a Pause to an Existing Contact Entry

1. With the flip open, press the Right Soft Key [Contacts].
2. Use the Directional Key to highlight a Contact entry, then press the Left Soft Key [Edit].
3. Use the Directional Key to highlight the number, then press the Right Soft Key [Options].
4. Press **Add 2-Sec Pause** or **Add Wait**.
5. Enter the additional number(s), then press [SAVE] to update your contact entry.

## Contacts in Your Phone's Memory

### Adding Another Phone Number

#### From standby mode

1. With the flip open, enter a phone number, then press the Left Soft Key **[Save]**.
2. Use the Directional Key **[Up]** to highlight **Update Existing**, then press **[OK]**.
3. Use the Directional Key **[Down]** to highlight an existing entry then press **[OK]**.
4. Use the Directional Key **[Up]** to highlight **Mobile 1/ Home/ Business/ Mobile 2/ Fax**, then press **[OK]** to update your contact entry.

#### From the Contact List Screen

1. With the flip open, press the Right Soft Key **[Contacts]**.
2. Use the Directional Key **[Up]** to highlight an entry, then press the Left Soft Key **[Edit]**.
3. Use the Directional Key **[Down]** to highlight the phone number field you wish to add. Then enter the number and press **[OK]** **[SAVE]** to update your contact entry.

### Changing Saved Information

To edit any information you stored, access the Edit Contact screen:














1. With the flip open, press the Right Soft Key **[Contacts]**.
2. Use the Directional Key **[Up]** to highlight a Contact entry, then press the Left Soft Key **[Edit]**.
3. Use the Directional Key **[Down]** to highlight the field you want to change.
4. Make the changes, then press **[OK]** **[SAVE]** to update your contact entry.

### Changing the Default Number

The default number is the phone number you first entered when you created the Contact. However, another number can be saved as the default number.






1. With the flip open, press the Right Soft Key **[Contacts]**.
2. Use the Directional Key **[Up]** to highlight an entry.
3. Press the Left Soft Key **[Edit]**.

## Contacts in Your Phone's Memory

- Use the Directional Key  to highlight a phone number, then press the Right Soft Key  [Options].
- Use the Directional Key  to highlight **Set As Default**, then press .
- Press  [Yes] to confirm the new number as the default. A confirmation message is displayed.
- Press  [SAVE] to update your contact entry.
- Use the Directional Key  to highlight a Contact entry to edit and press  [VIEW].
- Highlight the phone number with the Speed Dial, then press  [EDIT].
- Press the Right Soft Key  [Options].
- Press  **Remove Speed Dial**.
- Press  [Yes] to confirm.
- Press  [SAVE] to update your contact entry.

### Deleting

#### Deleting a Contact Entry

- With the flip open, press the Right Soft Key  [Contacts].
- Use the Directional Key  to highlight an entry.
- Press the Right Soft Key  [Options].
- Press  Erase.
- Press  [Yes] to confirm.

#### Removing a Speed Dial

- With the flip open, press the Right Soft Key  [Contacts].

### Speed Dialing

Allows you to make phone calls quickly and easily to numbers stored in Contacts.

#### NOTE



Speed Dial 1 is reserved for Voicemail.

### Single Digit Speed Dials


Press and hold the Speed Dial digit. Your phone recalls the phone number from your Contacts, displays it, and dials it for you.

## Contacts in Your Phone's Memory

### Multiple Digit Speed Dials

When you press and hold a number key, it signals the phone to call a Speed Dial. To dial Speed Dials with multiple digits, press the first digit(s), then press and hold the last digit. For example, to call Speed Dial 25, press , then press and hold .


#### NOTE

You can also enter the Speed Dial digit(s) and press the **Send Key** .

## Contacts

The Contacts menu allows you to store names, phone numbers and other information in your phone's memory.

### Shortcut






The Right Soft Key  is a shortcut key to the Contact List from standby mode.

### 1. New Contact

Allows you to add a new contact to your Contact List.

### NOTE

Using this submenu, the number is saved as a new Contact, not into an existing Contact.








1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  New Contact.
4. Enter the name and press the Directional Key  downward until the phone number type you want is highlighted.
5. Enter the number and any additional contact information and press  [SAVE] to update your contact entry.

### NOTE

For more detailed information, see Page 24.

### 2. Contact List

Allows you to view your Contact List.

1. Open the flip and press  [MENU].
2. Press  Contacts.
3. Press  Contact List.
4. Use the Directional Key  to scroll through your Contacts alphabetically.
  - Press the Right Soft Key  [Options] to select one of the following:
    - New Contact/ Erase/ New Message/ Call/ Manage Contacts/ Set As Favorite/ Search Entry Mode
  - Press the Left Soft Key  [Edit] to edit.
  - Press  [VIEW] to view the entry details.





### TIP

Use the Go To field, for quick access to an entry without scrolling. For example, to go to "Vet", enter the letter V.

# Contacts




## 3. Favorites

Allows you to add Contact entries or Contact groups to your list of Favorites to easily view, call, or send messages.


1. Open the flip and press  [MENU].
2. Press  **Contacts**.
3. Press  **Favorites**.
4. Press  [ADD].


### TIP

You can add up to 10 Contacts and/or Contact groups as Favorites to easily make calls, send messages, and view messages.

5. Select whether you want to add a favorite from your **Contacts** or **Group**.
6. Use the Directional Key  to scroll through your Contacts or Groups alphabetically and press  [MARK].
7. Press the Left Soft Key  [Done]. Once you have added Contacts to the Favorites list, the following options will become available in the Favorites menu:




Left Soft Key : **View**



OK Key : **New Message/View Messages**

Right Soft Key : **Options**  
**Move Position/ Remove/ Remove All**



## 4. Groups

Allows you to view your grouped Contacts, add a new group, change the name of a group, delete a group, or send a message to everyone in the selected group.

1. Open the flip and press  [MENU].
2. Press  **Contacts**.
3. Press  **Groups**.
4. **View a Group**

Use the Directional Key  to highlight a group, then press  [VIEW].

### Add a New Group

Press the Left Soft Key  [New] to add a new group to the list. Enter a name and picture (if desired) and press  [SAVE].



## Group's options

Press the Right Soft Key **[Options]** to select one of the following:

**New Message/ Edit Group Name & ID/ Edit Members / Erase Group/ Set As Favorite/ Send Name Card/ Search Entry Mode**

## Adding Contacts to a Group

1. From the Groups submenu, press **[VIEW]** and press **[ADD]**.

### OR

If the Group already has members added, highlight the group name and press the Right Soft Key **[Options]**, then press **Edit Members**.

2. Highlight a desired contact and press **[MARK]**.
3. Press the Left Soft Key **[Done]** to add contact to a group.

## 5. Speed Dials

Allows you to view your list of Speed Dials or designate Speed Dials for numbers entered in your Contacts.



1. Open the flip and press **[MENU]**.
2. Press **1 Contacts**.
3. Press **5 Speed Dials**.
4. Use the Directional Key to highlight the Speed Dial position, or enter the Speed Dial digit and press **[SET]**.
5. Use the Directional Key to highlight the Contact then press **[OK]**. (For Contacts with multiple numbers, highlight the number for the Speed Dial, then press **[OK]**.)
6. Press **[Yes]** to confirm. A confirmation message is displayed.

## 6. My vCard


Allows you to create, edit, and view your own personal Contact information including name, phone numbers, and email address in one entry.

1. Open the flip and press **[MENU]**.
2. Press **1 Contacts**.
3. Press **6 My vCard**.
4. Press **[EDIT]** to enter your personal Contact information.

## Contacts


5. Use the Directional Key  to scroll to the information you want to enter.
6. Enter your information as necessary, then press  [SAVE].

### NOTE


Press the Right Soft Key  [Send] to send your name card.

## Messaging

### Shortcut

From standby mode, pressing the Left Soft Key  is a shortcut to Messaging.



Depending on the content and size of your messages, the phone can store up to 790 messages (including a max. of 300 text messages, 100 CMAS messages, 100 multimedia message notifications, and 100 multimedia messages in the Inbox; 100 text messages and 50 multimedia messages in the Sent; 20 text messages and 20 multimedia messages in Drafts). Content stored in the message may be limited by phone model and service capability. Other limits to available characters per message may exist. Please check with your service provider for system features and capabilities.

- When viewing a received message, you can call the sender back by pressing the **Send Key** .

### New Message Alert

Your phone can alert you when you have new messages.




Options include:

1. The phone displays a message on the screen.
2. The message icon () is displayed on the screen. In the case of a high priority message, the icon () will flash.

### 1. New Message

Allows you to send messages (Text, Picture, Video and Voice). Depending on the type of message you choose to send, you can also attach files to your messages including pictures, videos, sounds, record voice and name cards.



### The Basics of Sending a Text Message

1. Open the flip and press  [MENU].
2. Press  **Messaging**.
3. Press  **New Message**.
4. Enter a phone number or a recipient's name in the **To** field.



# Messaging

As you enter the phone number or a recipient's name, matching contacts appear.

You can choose a suggested recipient or continue entering the phone number.

5. Press  to access the text field.
6. Use the keypad to enter your message.
7. Press  [**Send**].

## Select Recipient(s) Using Add

1. With the **To** field highlighted, press the Right Soft Key  [**Add**].
2. Use  to highlight an option and press .

**From Contacts** To select a recipient from your Contact List.








**From Recent Calls** To select a recipient from Recent Calls.

**Favorites** To select a recipient from Favorites.






**Groups** To Select a recipient from your Groups.




















## Multimedia Message Using Options

Allows you send messages with text, picture, video, sound and name card attachments.

1. Open the flip and press  [**MENU**].
2. Press  **Messaging**.
3. Press  **New Message**.
4. Enter a phone number or a recipient's name in the **To** field.
5. Press  to access the text field.
6. Use the keypad to enter your message.
7. Press the Right Soft Key  [**Options**].
8. Use  to highlight an option and press .

### 1. Attach

1. **Picture** Use  to highlight a picture, then press .
2. **Take Picture** Take a picture of the subject and press .
3. **Video** Use  to highlight a video, then press .

4. **Record Video** Record a video and press .
5. **Sound** Use  to highlight a sound, then press .
6. **Record Voice** Press  to start recording and then press  [STOP].
7. **Name Card**
  1. **My vCard** Press  to add My vCard.
  2. **From Contacts** Press  to mark the name cards and press the Left Soft Key  [Done].
2. **Review** Press  to preview the text.
3. **Insert Templates** Use  to highlight the template and press .
4. **Save As Drafts** Press  to save as draft.
5. **Copy Text** Use  to highlight the text and press  to copy it.
6. **Paste** Press  to paste the text.
7. **Add Slide** Press  to add slide.
8. **Priority Level** Choose from **High** or **Normal** and  to set.
9. **Remove Slide** Press  to remove slide.
10. **Cancel Message** Press **Yes** to save message in drafts or press **No** to cancel message without saving message in drafts.
9. Use the keypad to enter your subject in the subject field.
10. Press  [Send].

## 2. Messages

The phone alerts you in up to 3 ways when you receive a new message:




- By displaying a notification message on the screen.
- By sounding a tone or vibration, if set.
- By displaying (The icon will be when you get a high priority message.)

### Viewing Your Inbox

1. Open the flip and press the Left Soft Key  [Message].

# Messaging

2. Highlight a message. The following options are available.

- Press  [OPEN] to view the message.
- Press the Left Soft Key  [Reply] to reply to the message.
- Press the Right Soft Key  [Options] to access the following options:

**Erase** Allows you to erase the message.

**Add To Contacts** Stores the callback number, email address, and numbers from the address of the received message into your Contacts.






















**Manage Messages** Allows you to Erase, Lock, and Unlock messages.

**Sort Alphabetically** Allows you to sort your messages in alphabetical order.

**Messaging Menu** Takes you to the Messaging menu.

**Settings** Allows you to change various Messaging settings.







## Message Icon Reference

-  New TXT Message
-  Read TXT Message
-  New Media Message Received
-  Unread Multimedia Message
-  Read Multimedia Message
-  Message Delivered
-  Message Failed
-  Pending Message
-  Message Sent
-  Webmail Read
-  Multiple Messages Delivered
-  Multiple Messages Failed
-  Multiple Message Delivery Incomplete
-  Multiple Pending Messages
-  Multiple Messages Sent
-  TXT Message Draft
-  Media Message Draft
-  Namecard
-  High Priority
-  Lock
-  Unlock

- \* Multimedia Message indicates Picture/Video/Voice Message.

## 3. Drafts

Saved message drafts are stored here.

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Drafts.
4. Highlight a message. The following options are available.
  - Press  [EDIT] to continue editing the message.
  - Press the Left Soft Key  [Erase] to erase the message.
  - Press the Right Soft Key  [Options] for the following options.

**Send** Sends the selected message.

**Add To Contacts** Stores the number, email address, and numbers from the address included in the message into your Contacts.

**Manage Drafts** Allows you to manage (erase or lock) messages.








## Message Icon Reference

-  Draft Text Message
-  Draft Multimedia Message

## 4. Voicemail

Allows you to view the number of new voice messages recorded in the Voicemail box. Once you exceed the storage limit, old messages are overwritten. When you have a new voice message, your phone will alert you.

### Checking Your Voicemail Box

1. Open the flip and press  [MENU].
2. Press  Messaging.
3. Press  Voicemail.
4. The following options are available.
  - Press the Left Soft Key  [Clear] to clear the Voicemail Counter, then then press  [Yes].
  - Press the **Send Key**  or  [CALL] to listen to the message(s).

## 5. Templates

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

1. Open the flip and press **OK** [MENU].
2. Press **2-abc** Messaging.
3. Press **5-III** Templates.
4. Press the Right Soft Key **⌋** [Options], then press **1-New** New to create a new template.
5. Enter text and press **OK** [SAVE] to save the template.
6. Use **⬅** to highlight a template and press **OK** [EDIT] to edit a template. You can press the Left Soft Key **⌋** [Erase] to erase a template.

## 6. Settings

Allows you to configure settings for your messages.

1. With the flip open, press **OK** [MENU].
2. Press **2-abc** Messaging.
3. Press **6-mno** Settings

4. Use the Directional Key **⬅** to highlight one of the settings and press **OK** to select it.

## Message Settings Sub-Menu Descriptions

### 1. Inbox View

Select **Time** to display messages chronologically in Inbox and Sent folders. Select **Contact** to sort all messages alphabetically by Contact in one message folder.

#### NOTE

By default, Contact is set as the Inbox View setting. If changed to Time, the Messaging menu will appear differently.

### 2. Entry Mode

Select **T9 Word**, **Abc**, **ABC**, **123** or **T9 Palabra** to be your default input method.

### 3. Auto Save Sent

Select **On** to automatically save your Sent messages. Select **Off** if you don't want to save automatically. Select **Prompt** to be asked to save.



## 4. Auto Erase Inbox

Select **On** to automatically delete read messages when you exceed the storage limit. Or, select **Off**.

## 5. Messaging Font Size

Select **Small**, **Normal** or **Large** for the size of the Messaging characters.

## 6. TXT Auto View

Select **On** to automatically display message content on the screen. Select **On + Readout** to automatically display content and read it aloud. Select **Off** for more security and privacy by requiring the message to be opened to view it.

## 7. TXT Instant Reply

Select **On** to text a reply instantly. Or, select **Off**.


## 8. TXT Auto Scroll

Select **On** to automatically scroll text down while viewing messages. Or, select **Off**.

## 9. Multimedia Auto Receive

Select **On** to allow automatic download of content when multimedia msg is received.

## 10. CMAS Alert

Use to highlight the alert categories below and press .

### 1. Receive Alerts

**Presidential Alert** This setting allows presidential alert to be always presented. This setting is mandatory so that you can not UNMARK.

**Extreme Alert** Checkmark this setting so that you will always be notified of an Extreme alert.

**Severe Alert** Checkmark this setting so that you will always be notified of a Severe alert.

**AMBER Alert** Checkmark this setting so that you will always be notified of an AMBER Alert.

2. **Alert Reminder** Set how often you want to be reminded when notified of an alarm. Choose from **Once**, **Every 2 Minutes**, **Every 15 Minutes**, or **Off**.

# Messaging

3. **Alert Tone** Choose from **On** or **Off**.
4. **Alert Vibrate** Choose from **On** or **Off**.

## 11. Voicemail #

Allows you to manually enter the access number for Voicemail Service. This number should be only used when a VMS (Voicemail Service) access number is not provided by the network.

## 12. Callback #

Select **On** to automatically send a designated callback number with your messages. Or, select **Off**.

## 13. Signature

Select **Custom** to create/edit a signature to automatically send with your messages. Select **None** for no signature.

## 14. TXT-Media Msg Notification

Displays pop-up notification of switching message type between text and media.

## 7. Erase All

You can erase messages stored in your Inbox, Sent, or Drafts folders. You can also erase all messages at the same time.

1. Open the flip and press **OK** [MENU].
2. Press **2 abc** **Messaging**.
3. Press **7 msg** **Erase All** then select one of the following:  
**Erase Sent/Received/ Erase Drafts/ Erase All Messages**
4. Press **OK** [Yes] to confirm the deletion or select which messages you want to delete.  
A confirmation message is displayed.

## Call History

The Call History menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, or missed. It's continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

### 1. Missed Calls

Allows you to view the list of missed calls; up to 90 entries.

1. Open the flip and press **OK** [MENU].
2. Press **DEF** Call History.
3. Press **1 DEF** Missed Calls.
4. Use the Directional Key **UP** to highlight an entry, then
  - Press **OK** [OPEN] to open the entry.
  - Press the **Send Key** **SEND** to place a call to the number.
  - Press the Right Soft Key **RIGHT** [Options] to select:  
Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/

Erase All/ Call Timer/ Data Counter

- Press the Left Soft Key **LEFT** [Message] to send a message to the number.

### 2. Received Calls









Allows you to view the list of incoming calls; up to 90 entries.

1. Open the flip and press **OK** [MENU].
2. Press **DEF** Call History.
3. Press **2 DEF** Received Calls.
4. Use the Directional Key **UP** to highlight an entry, then
  - Press **OK** [OPEN] to open the entry.
  - Press the **Send Key** **SEND** to place a call to the number.
  - Press the Right Soft Key **RIGHT** [Options] to select:  
Save To Contacts (Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ Call Timer/ Data Counter
  - Press the Left Soft Key **LEFT** [Message] send a message to the number.

# Call History









## 3. Dialed Calls

Allows you to view the list of outgoing calls; up to 90 entries.


1. Open the flip and press  [MENU].
2. Press  Call History.
3. Press  Dialed Calls.
4. Use the Directional Key  to highlight an entry, then
  - Press  [OPEN] to open the entry.
  - Press the Send Key  to place a call to the number.
  - Press the Right Soft Key  [Options] to select:  
Save to Contacts(Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ Call Timer/ Data Counter
  - Press the Left Soft Key  [Message] to send a message to the number.

## 4. All Calls

Allows you to view the list of all calls; up to 270 entries.





1. Open the flip and press  [MENU].
2. Press  Call History.
3. Press  All Calls.
4. Use the Directional Key  to highlight an entry, then
  - Press  [OPEN] to open the entry.
  - Press the Send Key  to place a call to the number.
  - Press the Right Soft Key  [Options] to select:  
Save to Contacts(Contact Info)/ Erase/ Lock(Unlock)/ Erase All/ Call Timer/ Data Counter
  - Press the Left Soft Key  [Message] to send a message to the number.

### Shortcut


To view a quick list of all your recent calls, press the Send Key  from standby mode.

## 5. Call Timer

Allows you to view the duration of selected call types.

1. Open the flip and press  [MENU].
2. Press  Call History.
3. Press  Call Timer.
4. Use the Directional Key  to highlight a call list.

Last Call/ All Calls/ Received Calls/ Dialed Calls/ Roaming Calls/ Last Reset/ Lifetime Calls



5. Press the Left Soft Key  [Reset] to reset the highlighted timer.
6. Reset all the recorded timers by pressing the Right Soft Key  [Reset All].



### NOTE

Lifetime Calls cannot be reset.


## 6. Data Counter

Allows you to view the data usage.

1. Open the flip and press  [MENU].
2. Press  Call History.

3. Press  Data Counter.
4. Use the Directional Key  to highlight a data list.

Transmit Data/ Received Data/ Total Data

5. Press the Left Soft Key  [Reset] to reset the highlighted data.

### NOTE

Total Data cannot be reset.


## Multimedia







Allows you to access your multimedia files and features.

### 1. Take Picture

Lets you to take digital pictures.

#### Shortcut

Press the Camera Key  to open the camera function.

1. Open the flip and press  [MENU].
2. Press  **Multimedia**.
3. Press  **Take Picture**.
4. Set the brightness by pressing the Directional Key  up and down, zoom by pressing the Directional Key  left and right, and press the Right Soft Key  [Options] to change other settings.

#### NOTE

Zooming is not available on the highest resolution.

- Select the option(s) to customize.

**RESOLUTION** 1600X1200/  
1280X960/ 640X480/ 320X240

**SELF TIMER** Off/ 3 Seconds/  
5 Seconds/ 10 Seconds

**WHITE BALANCE** Auto/  
Sunny/ Cloudy/ Fluorescent/  
Glow

**SHUTTER SOUND** Shutter/  
No Sound/ Say "Cheese"/  
Ready! 1 2 3

**COLOR EFFECTS** Normal/  
Negative/ Aqua/ Sepia/  
Black&White




**NIGHT MODE** On/ Off

**AUTO SAVE** On/ Off

**SAVE OPTION** Internal/  
External

**PREVIEW** Actual view/ Full  
screen


**CAPTURE** Camera / Video

5. Take a picture by pressing  [TAKE].
- Press the Left Soft Key  [Save]. The picture is stored in My Pictures.
  - Press the Right Soft Key  [Erase].

### 2. Record Video

Lets you to record videos.

#### Shortcut

Press and hold the Camera Key  to open the video recording function.

1. Open the flip and press **[MENU]**.
  2. Press **4** **Multimedia**.
  3. Press **2** **Record Video**.
  4. Set the brightness by pressing the Directional Key **↑** up and down, zoom by pressing the Directional Key **←** left and right, and press the Right Soft Key **[Options]** to change other settings.
- Select the option(s) to customize.

**RECORDING TIME** For Send /  
For Save

**RESOLUTION** 320x240 /  
176x144

**WHITE BALANCE** Auto/  
Sunny/ Cloudy/ Fluorescent/  
Glow

**COLOR EFFECTS** Normal/  
Negative/ Aqua/ Sepia/  
Black&White

**AUTO SAVE** On/ Off

**SAVE OPTION** Internal/  
External

**CAPTURE** Camera/ Video

5. Record a video by pressing **[RECORD]**.

6. Press **[STOP]** to stop recording.
- Press the Left Soft Key **[Save]**. The video is stored in Videos.
  - Press the Right Soft Key **[Erase]**.

### 3. Record Voice

Allows you to record a new sound or select a desired sound.

#### How to record a new sound

1. Open the flip and press **[MENU]**.
2. Press **4** **Multimedia**.
3. Press **3** **Record Voice**.
4. Press **[OK]** to start recording, then press **[STOP]** to end recording.

### 4. Pictures

Allows you to view and manage the pictures stored in your phone.

You can also take new photos and download new pictures.

1. Open the flip and press **[MENU]**.
2. Press **4** **Multimedia**.

## Multimedia

3. Press **4 (M)** **Pictures**.
4. Press **1 (D)** **My Pictures**.  
Or press **2 (ABC)** **Default Pictures** to view default pictures. To set a picture as a wallpaper, press the Right Soft Key **[-]** **[Options]**, then press **1 (D)** **Wallpaper**.

5. Highlight a picture with the Directional Key **⬇️**.

The following options are available:

- Press **OK** **[VIEW]** to view it.
- Press the Left Soft Key **[-]** **[Erase]** to delete it.
- Press the Right Soft Key **[-]** **[Options]** to select one of the following options:

1. **Send New Message/ To Online Album/ Via Bluetooth**
2. **Set As Wallpaper/ Picture ID**
3. **Take Picture** Opens the camera so you can take a picture.
4. **Slide Show** Plays all pictures as a slide show.

5. **Manage Pictures** Allows you to manage multiple pictures.

**Erase/ Lock/ Unlock/ Move To Phone/ Move to Card/ Send**




6. **Rename** Allows you to change the file name.
7. **Lock (Unlock)** Allows you to lock or unlock. Locked files can't be erased accidentally.
8. **File Info** Allows you to view information about the file.

## 5. Videos


Allows you to view and manage videos stored in the phone.

1. Open the flip and press **OK** **[MENU]**.
2. Press **4 (M)** **Multimedia**.
3. Press **5 (V)** **Videos**.
4. Highlight a video with the Directional Key **⬇️**.
  - Press **OK** **[PLAY]** to play it.
  - Press the Left Soft Key **[-]** **[Erase]** to delete it.






- Press the Right Soft Key  [Options] to select one of the following options:
  1. **Send** New Message/ Via Bluetooth
  2. **Record Video** Turn on the video recorder function.
  3. **Manage Videos** Allows you to manage multiple videos.  
**Erase/ Lock/ Unlock/ Move To Phone/ Move to Card**
  4. **Rename** Allows you to change the file name.
  5. **Lock (Unlock)** Allows you to lock or unlock. Locked files can't be erased accidentally.
  6. **File Info** Allows you to view information about the file.
- 5. Select **Record New** and press  to start recording, then press  [STOP] to end recording.

### How to select a sound

Use the Directional Key  to scroll and highlight a preloaded sound.





Options with a sound file highlighted:

- Press the Left Soft Key  [Set As] to set it as the **Ringtone**, **Contact ID** or **Alert Sounds**.
  1. **Ringtone**: Sets the ringtone for your incoming calls.
  2. **Contact ID**: Highlight and select the Contact to be identified by the ringtone you selected.
  3. **Alert Sounds**: Press the corresponding number key to set the ringtone for one of the following:
    - All Messages/ TXT
    - Message/ Multimedia
    - Message/ Voicemail
- Press  [PLAY].
- Press the Right Soft Key  [Options] to select:

## 6. Ringtones

Allows you to record a new sound or select a desired sound.

### How to record a new sound

1. Open the flip and press  [MENU].
2. Press  Multimedia.
3. Press  Ringtones.
4. Press  My Sounds.

Send/ Send Via Bluetooth/  
Rename/ Move/ Lock/ Erase/  
Erase All/ File Info

## 7. Music

Allows you to listen to desired music. Supported formats are MP3 and WMA.

1. Open the flip and press **OK** [MENU].
2. Press **4** **Multimedia**.
3. Press **7** **Music**.
4. Select from the following sub-menus:

All Songs/ Playlists/ Artists/  
Genres/ Albums

5. Select the name of the song you want to hear to start the music player.

### Play your Music

It is easy to find and play the music you've stored in your phone and memory card.

- **All Songs** Allows you to view all of your songs alphabetically.
- **Playlists** Allows you to view and play your songs by playlists.

- **Artists** Allows you to view and play your songs grouped by artist.
- **Genres** Allows you to view and play songs grouped by genre.
- **Albums** Allows you to view and Play songs grouped by albums.
- **Manage My Music** Allows you to manage your music files. (Erase/ Lock/ Unlock/ Move to card/ Move to phone/ Send via Bluetooth)
- **Music Settings** Allows you to set playback options. (Repeat/ Shuffle/ Music Only Mode)

## easyedge<sup>SM</sup>

easyedge<sup>SM</sup> allows you to do more than just talk on your phone. easyedge<sup>SM</sup> is a technology and service that allows you to download and use applications on your phone. With easyedge<sup>SM</sup>, it is quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. From ringtones and wallpapers to games and productivity tools, you can be assured you will find something useful, practical, or downright entertaining. There are new applications constantly available for your use.



### Downloading Applications

You can download applications and use easyedge<sup>SM</sup> where service is available.


### Incoming Calls

When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.

## 1. easyedge<sup>SM</sup> Apps

1. Open the flip and press  [MENU].
2. Press  easyedge.
3. Select **easyedge Shop**.

#### Shortcut












From the Home screen, press  to start easyedge<sup>SM</sup>.

4. Search for apps and follow the on-screen steps to download them.

## My Schedule

### 1. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone can (depending on your settings) alert you with a reminder.






1. Open the flip and press  [MENU].
2. Press  My Schedule.
3. Press  Calendar.
4. Use  to highlight a day.
  -  Moves to the previous day.
  -  Moves to the next day.
  -  Moves to the previous week.
  -  Moves to the next week.
5. Press the Left Soft Key  [Add].
6. Use  to highlight the field you wish to edit, then press the Left Soft Key  [Set] to edit the following schedule information:
  - Subject
  - Start Date


- Start Time
- End Date
- End Time
- Repeat
- Until
- Alerts
- Tones
- Vibrate






7. Press  [Save].

### 2. Alarm Clock

Allows you to set up to ten alarms. At the alarm time, any set alarm can sound (depending on your Master Volume settings) the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Open the flip and press  [MENU].
2. Press  My Schedule.
3. Press  Alarm Clock.
4. Press the Left Soft Key  [Add].
5. Highlight **Turn On/Off** and select from **On** or **Off**.
6. Highlight **Set Time** and press the Left Soft Key  [Set] to

set an alarm time. Once you set the desired time, press .



7. Use  to highlight **Repeat** (recurrence setting).
8. Press the Left Soft Key  [**Set**] to select one of the following.  
**Once/ Daily/ Mon - Fri/ Weekends/ Select Days**
9. Use  to highlight **Ringtone**, press the Left Soft Key  [**Set**] and browse for a ringtone.
10. Press  [**Save**].

## Browser


The Browser feature allows you to view Internet content. Accessibility and selections within this feature are dependent upon your service provider. For specific information on the Web, contact your service provider.

### 1. Start Browser


Allows you to initiate a Web session.


1. Open the flip and press  [MENU].
2. Press  **Browser**.
3. Your default home page will load.













### Ending a Web Session

End a Web session by pressing .

### Browser Menu

The Browser Menu provides various useful options. To access the Browser Menu, press the Right Soft Key  [Menu].

- **Home**  Returns you to the Homepage.

- **Back**  To go back to the previous page.
- **Forward**  If available, takes you back to the next page.
- **Bookmarks**  Takes you to the Bookmarks menu where you can add, edit, and delete your bookmarks.
- **Go to URL**  Allows you to enter a Web address to visit.
- **Refresh**  Allows you to reload the current Web page.
- **History**  Displays a list of visited web pages.
- **Clear Memory**  Allows you to clear the memory.
- **Search**  Directs you to the Google search engine.
- **Send Link**  Allows you to send the link of the current page via a text message.
- **Show URL**  Shows you the current URL.
- **Save Items**  Allows you to save items from the web page.
- **Settings**  Allows you to configure the following Browser settings:

**Homepage** Allows you to set your Homepage.

**Downloads** Allows you to configure whether you want to enable or disable image, background, and object downloads.



**Restart Browser** Allows you to restart the Browser.

**Scroll Mode** Allows you to customize the scrolling settings.

**Send Referrer** Allows you to turn the HTTP Send Referrer Header on or off.

**Key Press Timeout** Set the key press timeout.

**Connection Timeout** Set the connection timeout.

- **Advanced**  Shows you the information of the Browser, including the version and license information.
- **Exit**  Allows you to exit the Browser.

## Tools

Your phone's tools include: Voice Commands, Calculator, Ez Tip Calculator, Info Search, World Clock, Stopwatch, and Unit Converter.

### 1. Voice Commands

This feature provides you with the following options equipped with AVR (Advanced Voice Recognition) technology. Each option has its detailed information on the phone and you can check it out by pressing the Left Soft Key **[Info]**.

1. Open the flip and press **[MENU]**.
2. Press **[Tools]**.
3. Press **[Voice Commands]**.

### Access and Options

#### SHORTCUT

With the flip open, press the Voice Commands Key **[D]** on the keypad.

The Voice Commands feature has several settings which allow you to customize how you want to use it. Access Voice

Commands, then press the Right Soft Key **[Settings]**.

**Confirm Choices** Automatic/ Always Confirm/ Never Confirm

**Sensitivity** Set the sensitivity as More Sensitive/ Automatic/ Less Sensitive.

**Adapt Voice** If the phone often asks you to repeat voice command, train the phone to recognize your voice patterns. Train Words/ Train Digits

**Prompts Mode/ Audio Playback/ Timeout**

- For Mode, set Prompts/ Readout + Alerts/ Readout/ Tones Only.
- For Audio Playback, set Speakerphone or Earpiece.
- For Timeout, set 5 Seconds or 10 Seconds.



### **Call <Name or Number>**

Say "Call" and then call someone simply by saying the name or phone number. Please speak clearly and say the name or number exactly as it is entered in your Contact List. When you have more than one contact number, you can state the name and number type of the contact (for example, 'Call John Work').

### **Send Msg to <Name or Number or Group>**

To create a message, say 'Send message' and the command system will prompt you for the contact name, number, or group. It will automatically start a message. If you say a full-sentence command, such as 'Send Message to Bob', it will automatically start a text message. When using 'Send Message' command, speak clearly and say the name, number or group exactly as it is entered in your Contact List.

### **Go to <Menu>**

The 'Go to' command allows you to access a menu within the phone (for example, 'Go to Calendar').

If no menu option is stated, a list of options will be provided.

### **Check <Item>**

The 'Check' command allows you to check out a wide range of items such as **Phone Status, Voicemail, Messages, Missed Calls, Time, Signal Strength, Battery Level, Volume, and My Number.**

### **Contacts <Name>**

You can look up names in your Contacts (for example, 'Contacts John') as well as manage your Contact List including creating, erasing or modifying.

### **Call/ Read out/ Create New/ Modify/ Erase**

### **Redial**

Say "Redial" and the phone will redial the last phone number.

## Tools

### Play








State the playlist that you want to listen to and the phone will find it out.

### Help



Provides a general guideline to using Voice Commands.





## 2. Calculator

Allows you to perform simple mathematical calculations.

1. Open the flip and press  [MENU].
2. Press  **Tools**.
3. Press  **Calculator**.
4. Enter the numbers to get the value you want. To clear entered items, press the Left Soft Key  [Clear].
5. Use the Right Soft Key  [Operators] to add other operators.
6. Use the Directional Key  to enter an operation between numbers and press  [=] for the result.





#### NOTE

To insert a decimal, press . To insert + and -, press .

- Press the Up Directional Key  for + (addition).
- Press the Down Directional Key  for - (subtraction).
- Press the Left Directional Key  for ÷ (division).
- Press the Right Directional Key  for x (multiplication).

## 3. Ez Tip Calculator

Allows you to quickly and easily calculate bill amounts using the bill total, tip % and number of people as variables.

1. Open the flip and press  [MENU].
2. Press  **Tools**.
3. Press  **Ez Tip Calculator**.
4. Enter the variable fields (**Bill**, **Tip (%)**, **Split**) and the corresponding calculation fields (**Tip (\$)** and **Total**) appear automatically.
5. Press the Left Soft Key  [Reset] for another calculation.

## 4. Info Search

Allows you to search information stored on the phone.

1. Open the flip and press **OK** [MENU].
2. Press **Tools**.
3. Press **Info search**.
4. Enter information you want to search on the phone in the text field.
5. Highlight the **Categories** field and press the Left Soft Key **[Set]** to set the search categories.
6. Press **SEARCH** to search the information.

## 5. Stopwatch

Allows you to use your phone as a typical stopwatch.

1. Open the flip and press **OK** [MENU].
2. Press **Tools**.
3. Press **Stopwatch**.
4. Press **START**.
5. While measuring time, press the Left Soft Key **[Lap]** to record a lap.

6. Pressing **STOP** will stop or resume Stopwatch time.
7. After time has stopped, press the Right Soft Key **[Reset]**.

## 6. World Clock

Allows you to determine the current time in another time zone or country.

1. Open the flip and press **OK** [MENU].
2. Press **Tools**.
3. Press **World Clock**.
4. Press the Right Soft Key **[Cities]** for a list of available cities.
5. Highlight a city from the list, then press **OK**.
6. The screen will zoom in on the city and display its date and time information.

### NOTE

Press the Left Soft Key **[Set DST]** to set daylight saving time. Highlight **Yes** and press **OK** to set DST.

## 7. Notepad

Allows you to add, read, edit, and erase notes to yourself.

1. Open the flip and press [MENU].
2. Press **Tools**.
3. Press **Notepad**.
4. Press the Left Soft Key [Add] to write a new note.
5. Press the Left Soft Key [Change] to change the entry mode. Or press the Right Soft Key [Options] to copy and paste text or to cancel the notepad entry.
6. Press **[SAVE]** to save the note.

## 8. Unit Converter

Allows you to convert units of Currency, Area, Length, Mass, Temperature, Volume and Velocity.

1. Open the flip and press **[MENU]**.
2. Press **Tools**.
3. Press **Unit Converter**.
4. Select a unit type.

5. Use **[Arrow]** to select the known unit type then enter the unit amount. The conversions will be calculated automatically.

## 9. USB Mass Storage

Allows you to access content in the SD card.

1. Connect the phone to your computer.
2. Open the flip and press **[MENU]**.
3. Press **Tools**.
4. Press **USB Mass Storage**.
5. To cancel USB Mass Storage mode, press **[EXIT]**.





 

## Settings

### 1. Sounds Settings

Allows you to customize your phone's sounds.





#### 1.1 Master Volume

Allows you to set the Master Volume settings.













1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Master Volume.
5. Adjust the volume with the Directional Key  and press  [SET] to save the setting.

#### 1.2 Call Sounds


Allows you to set how the phone alerts you for types of incoming calls.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Call Sounds.






#### 1.2.1 Call Ringtone

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Call Ringtone.
6. Press  My Sounds and  Record New. Press  to start recording and press  [STOP] to end recording.  
Or press  Default Ringtones. Use the Directional Key  to highlight a ringtone then press  [SET] to save the sound.



#### TIP

To hear a ringtone before you set it, press the Left Soft Key  [Play].








#### 1.2.2 Call Vibrate

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Call Vibrate.

# Settings





6. Use the Directional Key  to highlight a setting, then press  [SET].

## 1.2.3 Caller ID Readout

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Call Sounds.
5. Press  Caller ID Readout.
6. Use the Directional Key  to highlight a setting, then press  [SET].

## 1.3 Alert Sounds

Allows you to select the alert type sounds.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Alert Sounds.
5. Select TXT Message/  
Multimedia Message/  
Voicemail/ Emergency Tone/  
Missed Call
6. The Alert Sounds menu has these options:







## Tone/Vibrate/Reminder

The exception for this is the Emergency Tone menu. This menu has these options:

Vibrate Only/ Alert & Vibrate







## 1.4 Keypad Volume

Allows you to set the keypad volume.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Keypad Volume.
5. Adjust the volume with the Directional Key  and press  [SET] to save the setting.





## 1.5 Digit Dial Readout

Allows you to set the phone to read out the digits entered in the dialing screen.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Digit Dial Readout.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## 1.6 Service Alerts

Allows you to set any of the five Alert options to either On or Off.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Service Alerts.
5. Select an alert option.



**Minute Beep** Alerts you 10 seconds before the end of every minute during a call.

**Call Connect** Alerts you when the call is connected.


**Call Disconnect** Alerts you when the call ends.

**Charge Complete** Alerts you when the battery is completely charged.

**Software Update** Alerts you of an Over-the-Air (OTA) software update to the device.








6. Use the Directional Key  to highlight a setting, then press  [SET].

### NOTE

When highlighting On, you can play the alert option by pressing the Left Soft Key  [Play].

## 1.7 Power On/Off

Allows you to set the phone to sound a tone when the phone is powered on/off.




1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.
4. Press  Power On/ Off.
5. Highlight **Power On** or **Power Off** and press .
6. Use the Directional Key  to highlight a setting, then press  [SET].

## 1.8 Hearing Assist

Allows you to set the phone to automatically adapt to noisy environments by adjusting the listening level and improving speech intelligibility.

### NOTE

The Hearing Assist feature is automatically disabled when you use the speakerphone or the hands-free devices.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Sounds Settings.

# Settings

4. Press **[Hearing Assist]**.
5. Use the Directional Key **[D]** to highlight a setting, then press **[OK]** [SET].

## 2. Display Settings

Provides options to customize the phone's display screen.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[Display Settings]**.

### 2.1 Banner

Allows you to enter a string of up to 18 characters which displays on the LCD screen.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[Display Settings]**.
4. Press **[Banner]**.

#### NOTE

Use the Directional Key **[D]** to select the color you want.

5. Press **[OK]** [SET].

### 2.2 Backlight

Allows you to set the duration for illuminating the backlight for the main display, front display, and keypad. Each is set separately.



1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[Display Settings]**.
4. Press **[Backlight]**.
5. Highlight a Backlight submenu and press **[OK]**.
  - **Display Backlight:**  
7 Seconds/ 15 Seconds/  
30 Seconds/ Always Off
  - **Keypad Backlight:**  
7 Seconds/ 15 Seconds/  
30 Seconds/ Always Off

### 2.3 Brightness

Allows you to set the backlight levels.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[Display Settings]**.
4. Press **[Brightness]**.









- Use the Directional Key  to highlight a setting, then press  [SET].

**NOTE**

Brightness level can be 1 to 7.




## 2.4 Wallpaper

Allows you to choose the kind of background to be displayed on the phone's LCD in standby mode.



- Open the flip and press  [MENU].
- Press  Settings.
- Press  Display Settings.
- Press  Wallpaper.
- Highlight a Wallpaper submenu and press .
- Highlight a wallpaper and press  [SET].

## 2.5 Display Themes


Allows you to choose between the different themes for the phone's menus.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Display Settings.

- Press  Display Themes.







- Use the Directional Key  to highlight a setting, then press  [SET].

**NOTE**


Press the Left Soft Key  [Preview] to preview the selected display theme. Default setting is White.

## 2.6 Menu Style

Allows you to choose how the Main Menu displays for menu selection.

- Open the flip and press  [MENU].
- Press  Settings.
- Press  Display Settings.
- Press  Menu Style.
- Use the Directional Key  to highlight a setting, then press  [SET].







**NOTE**

Press the Left Soft Key  [Preview] to preview the selected menu setting.

# Settings

## 2.7 Font Type


Allows you to set the font type.





1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Font Type.
5. Use the Directional Key  to highlight a setting, then press  [SET].




### NOTE

Press the Left Soft Key  [Preview] to preview the selected font type.

## 2.8 Font Size

Allows you to set the font size for Dial Digits, Menu & List and Message. Plus, the Volume Key Resize setting allows you to use the side Volume Keys  to instantly scale screen fonts. This setting is helpful for those who need the text to display a little bit larger.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Font Size.


5. Use the Directional Key  to highlight Dial Digits/ Menu & List/ Message.
6. Use the Directional Key  to highlight a setting, then press  [SET].

**Dial Digits:** Resizable/ Small/ Normal/ Large

**Menu & Lists:** Resizable/ Small/ Normal/ Large







**Message:** Resizable/ Small/ Normal/ Large

### NOTE


Press the Left Soft Key  [Preview] to preview the selected font size.

## 2.9 Clock Format

Allows you to choose the kind of clock to be displayed on the front and main LCD screens.






1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Press  Clock Format.
5. Use the Directional Key  to highlight a setting, then press  [SET].

### NOTE

Press the Left Soft Key  [Preview] to preview the selected clock format.




## 2.10 External Display



Allows you to choose the kind of sub LED screen to be displayed on the front screen.

1. Open the flip and press  [MENU].
  2. Press  Settings.
  3. Press  Display Settings.
  4. Select **External Display**.
  5. Use the Directional Key  to highlight a setting, then press  [SET].
- Select **Show Clock + Notification** to show all notifications on the front display of your phone.
  - Select **Show Clock Only** to show clock only on the front display of your phone.

## 2.11 Name Match for Dialing

Allows you to match the name when you dial the number.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Display Settings.
4. Select **Name Match for Dialing**.







5. Use the Directional Key  to highlight a setting, then press  [SET].

## 3. Phone Settings

The Phone Settings menu allows you to designate specific settings to customize how you use your phone.

### 3.1 Airplane Mode

Turning on Airplane Mode will disable all wireless communications.


1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Airplane Mode.
5. Use the Directional Key  to highlight a setting, then press  [SET].

### 3.2 Set Shortcut Keys

Allows you to set shortcuts to phone menus using the up, left and right Directional Keys.

#### 3.2.1 Set My Shortcuts

##### NOTE

To access these shortcuts, press the Right Directional Key  from standby mode (by default) to display My Shortcuts.

# Settings

1. Open the flip and press [MENU].
2. Press Settings.
3. Press Phone Settings.
4. Press Set Shortcut Keys
5. Press Set My Shortcuts.
6. Use the Directional Key to highlight a shortcut key you want to set.

Shortcut 1/Shortcut 2/  
Shortcut 3/Shortcut 4

7. Press [SET] to display the available shortcuts. Use the Directional Key to highlight one, then press [SET].

## 3.2.2 Set Directional Keys

### NOTE

To access these shortcuts open the flip, then press the Directional Key in the direction (up, left, right) set from standby mode for the Shortcut you want to access.

1. Open the flip and press [MENU].
2. Press Settings & Tools.
3. Press Phone Settings.
4. Press Set Shortcut Keys

5. Press Set Directional Keys.
6. Use the Directional Key to highlight a shortcut key you want to set.
7. Press [SET] to display the available shortcuts. Use the Directional Key to highlight one, then press [SET].

## 3.3 Voice Commands

Please refer to Page 54 for details.







## 3.4 Language

Allows you to set the Multi-language (English, Spanish) feature according to your preference.

1. Open the flip and press [MENU].
2. Press Settings.
3. Press Phone Settings.
4. Press Language.
5. Use the Directional Key to highlight a setting, then press [SET].

### 3.5 Location

Allows you to set GPS (Global Positioning System: Satellite assisted location information system) mode.





1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Location.
5. Use the Directional Key  to highlight a setting, then press  [SET].

#### NOTE

- GPS satellite signals are not always received by the phone, especially under bad atmospheric and environmental conditions, indoors, etc.
- When a Location Setting Restriction is activated in the Security Menu, the lock code is required when you enter location menu. The lock code is the same 4 digits you use as your device lock code; initially the last 4 digits of your phone number.
- When in Airplane Mode, services supporting Location On functionality will be suspended.

### 3.6 Security






The Security menu allows you to secure the phone electronically.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.

The lock code is the last 4 digits of your mobile phone number if it is set. The lock code is the last 4 digits of your MEID if your mobile phone number is not set.

#### 3.6.1 Edit Codes

Allows you to enter a new four-digit lock code.









1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Settings.
4. Press  Security.
5. Enter the four-digit lock code.
6. Press  Edit Codes.
7. Select Phone Only or Calls & Services.

# Settings

8. Enter your new four-digit lock code.
9. For confirmation, it will ask you to enter the new lock code again.

## 3.6.2 Restrictions

Allows you to set separate restrictions for Location Setting, Calls and Messages.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Restrictions**.
7. Enter the four-digit service code.
8. Select a Restrictions menu then press .
9. Use the Directional Key  to highlight the restriction then press .

**Calls: Incoming Calls** Allow All/ Contacts Only/ Block All

**Calls: Outgoing Calls** Allow All/ Contacts Only/ Block All

**Text Msgs: Incoming Messages** Allow All/ Contacts Only/ Block All

**Text Msgs: Outgoing Messages** Allow All/ Contacts Only/ Block All







**Multimedia Msgs: Incoming Messages** Allow All/ Contacts Only / Block All

**Multimedia Msgs: Outgoing Messages** Allow All/ Contacts Only / Block All

**Data:** Allow All/ Block All

## 3.6.3 Emergency #S

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **Security**.
5. Enter the four-digit lock code.
6. Press  **Emergency #S**.
7. Highlight one of the 3 options, then press  to edit the emergency numbers.

- When you are finished editing the number, press **OK** [SAVE] to save the emergency number or the Right Soft Key **☐** [Options] and press **1** [Cancel] to cancel editing.

### 3.6.4 Phone Lock Setting

Keeps your phone from unauthorized use. Once the phone is locked, it's in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code using Edit Codes submenu within the Security menu.

- Open the flip and press **OK** [MENU].
- Press **9** [Settings].
- Press **3** [def] Phone Settings.
- Press **6** [min] Security.
- Enter the four-digit lock code.
- Press **4** [ph] Phone Lock Setting.
- Highlight an option and press **OK** [SET].

**Unlocked** The phone remains unlocked, by default.

**On Power Up** The phone is locked when it is turned on.

### 3.6.5 Lock Phone Now

Locks your phone immediately.

- Open the flip and press **OK** [MENU].
- Press **9** [Settings].
- Press **3** [def] Phone Settings.
- Press **6** [min] Security.
- Enter the four-digit lock code.
- Press **5** [kl] Lock Phone Now.

#### NOTE



To unlock the phone from standby mode, press the Right Soft Key **☐** [Unlock] and enter the four-digit lock code.

### 3.6.6 Reset Default

Allows you to reset your phone to the factory default settings.







- Open the flip and press **OK** [MENU].
- Press **9** [Settings].
- Press **3** [def] Phone Settings.
- Press **6** [min] Security.
- Enter the four-digit lock code.
- Press **6** [min] Reset Default.

# Settings

7. Press  after reading the warning message.
8. Highlight **Revert** and press .  
A confirmation message is displayed briefly before the phone resets itself.


## 3.7 System Select






Allows you to set up the phone management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **System Select**.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## 3.8 NAM Select

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Open the flip and press  [MENU].








2. Press  **Settings**.
3. Press  **Phone Settings**.
4. Press  **NAM Select**.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## 4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

### 4.1 Answer Options

Allows you to determine how the phone will answer an incoming call.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Call Settings**.
4. Press  **Answer Options**.
5. Use the Directional Key  to select the setting(s) you want to use, then press  [MARK].
6. Press the Left Soft Key  [Done] when you have marked the setting(s) you want.









**NOTE**

Auto with Handsfree is available when any external device is connected to your phone or speaker is set to on.








## 4.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  Auto Retry.
5. Use the Directional Key  to highlight a setting, then press  [SET].

## 4.3 TTY Mode

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Call Settings.
4. Press  TTY Mode.
5. An explanation message is displayed.
6. Press  to continue.
7. Use the Directional Key  to highlight a setting, then press  [SET].

**TTY Full:** Users who cannot talk or hear send and receive a text message through TTY equipment.

**TTY + Talk:** Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

**TTY + Hear:** Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

**TTY Off:** Users send and receive without TTY equipment.


# Settings

## Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to TTY connection on the terminal (TTY connection location is the same as a headset jack).
2. Enter the phone menu and set the desired TTY mode.
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end displays on the TTY equipment display.

## 4.4 One Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Open the flip and press  [MENU].

## TTY Mode (Tele Type writer)

Menu	Usera	Menu	Transmission/ Receiving Mode	When making communications with a non-TTY terminal
TTY Full	For hearing-/ verbally- impaired		Text message transmission, text message receiving	Operator required
TTY + Talk	For hearing- impaired	Able to talk	Voice transmission, text message receiving	Operator required
TTY + Hear	For verbally- impaired	Audible	Text message transmission, voice receiving	Operator required
TTY Off			Voice transmission, voice receiving	

2. Press **[Settings]**.
3. Press **[4gh]** Call Settings.
4. Press **[4gh]** One Touch Dial.
5. Use the Directional Key **[D]** to highlight a setting, then press **[OK]** [SET].

### 4.5 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls. CDMA offers inherent voice privacy. Check with your service provider for availability.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[4gh]** Call Settings.
4. Press **[5jh]** Voice Privacy.
5. Use the Directional Key **[D]** to highlight a setting, then press **[OK]** [SET].

### 4.6 DTMF Tones

Allows you to set the DTMF tone length.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[4gh]** Call Settings.
4. Press **[6mno]** DTMF Tones.

5. Use the Directional Key **[D]** to highlight a setting, then press **[OK]** [SET].

## 5. Web Access Prompt

Allows you to choose if you want the device to display a prompt when accessing the web.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[5jh]** Web Access Prompt.
4. Use the Directional Key **[D]** to highlight a setting, then press **[OK]** [SET].

## 6. USB Mode






Allows you to set USB mode type.

1. Open the flip and press **[OK]** [MENU].
2. Press **[Settings]**.
3. Press **[6mno]** USB Mode.
4. Use the Directional Key **[D]** to select USB mode type, then press **[OK]** [SET].

# Settings





## 7. Memory

Allows you to check your phone's internal memory. Shows the memory information saved in your phone.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Memory**.
4. Use the Directional Key  to select file storage type in the phone, then press  to view the memory used.





### 7.1 Save Options

Allows you to select which memory (phone or memory card) to use to save your files.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Memory**, then press  **Save Options**.
4. Choose **Pictures/ Videos/ Sounds**
5. Choose **Phone Memory/ Card Memory**.





## 7.2. Phone Memory

Shows the memory usage information for the phone and lists the files, by type.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Memory**, then press  **Phone Memory**.
4. Choose **Memory Usage/ My Pictures/ My Videos/ My Music/ My Sounds/ My Contacts/ Move All To Card**.




### 7.3 Card Memory

Shows the memory usage information for the memory card and lists the files, by type.

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Memory**, then press  **Card Memory**.
4. Choose **Memory Usage/ My Pictures/ My Videos/ My Music/ My Sounds/ My Contacts/ Move All To Phone**.





## 8. Phone Info

Allows you to view the information specific to your phone and software.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Info.





### 8.1 My Number

Allows you to view your phone number.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Info.
4. Press  My Number.





### 8.2 ESN/MEID

This feature shows ESN/MEID of your phone.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Info.
4. Press  ESN/MEID.





## 8.3 Icon Glossary

Allows you to view all the icons and their meanings.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Info.
4. Press  Icon Glossary.
5. Select a subcategory to view the icons.

## 8.4 SW/HW Version

Allows you to view the versions of various applications such as SW, PRL, Browser, easyedge, AVR, MMS, Bluetooth®, OTADM Version, HW Version and Operating System.

1. Open the flip and press  [MENU].
2. Press  Settings.
3. Press  Phone Info.
4. Press  SW/HW Version.


## 8.5 Software Update

This feature gives your phone the ability to upgrade to the latest software and keeps your phone operating with the latest features for the upgrade. You can either

# Settings

be notified automatically that there is an updated version of software available for your phone, or you can manually check to see if there are any updates available for you to download.





## Automatic Update

Your phone will receive a notification that there is an updated version of software available to be downloaded. You can press  when notified that a download is available or it can happen automatically. Once the download is complete you may, depending on the nature of the update, have three options available: Accept the update, Defer the update, or Reject the update.


### NOTE



During the update you cannot make or receive phone calls, including 911 calls, or text messages.

## Manual Update

1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Info**.
4. Press  **Software Update**.





The two options shown will be **Status** and **Check for Update**.


Press  **Status** to see the status of a download or update and see information on the last successful update. If updates have not yet been performed, status information will be unavailable.

Press  **Check for Update** to check if any new software updates are available to download. If a newer software version is available, it will automatically begin downloading after 30 seconds or you can begin the download immediately by pressing .

## 8.6 Front Display Patterns

Allows you to view patterns for notifications on the front display of your phone.







1. Open the flip and press  [MENU].
2. Press  **Settings**.
3. Press  **Phone Info**.
4. Press  **Front Display Patterns**.

- Use the Directional Key  to scroll through the available patterns.

## 9. Accessibility

### 9.1 Menu Readout Mode





Allows you to change your phone setting to **Readout + Alerts** in **Prompts (Voice Commands > Settings)**, **Caller ID + Ring** in **Caller ID Readout (Settings > Sounds Settings > Call Sounds)**, and **On + Readout** in **TXT Auto View (Messaging > Settings)** all at once.

- Open the flip and press  [MENU].
- Press  **Settings**.
- Press  **Accessibility**.
- Press  **Menu Readout Mode**.
- Use the Directional Key  to highlight a setting, then press  [SET].

### 9.2 Large Text







Allows you to view larger text.

- Open the flip and press  [MENU].
- Press  **Settings**.

- Press  **Accessibility**.
- Press  **Large Text**.
- Use the Directional Key  to highlight a setting, then press  [SET].



### 9.3 Turn off All Sound

Allows you to turn off all sounds.

- Open the flip and press  [MENU].
- Press  **Settings**.
- Press  **Accessibility**.
- Press  **Turn off All Sound**.
- Use the Directional Key  to highlight a setting, then press  [SET].

## Tone Room Deluxe

The Tone Room Deluxe application allows you to browse and download ringtones.

1. Open the flip and press  [MENU].
2. Press  **Tone Room Deluxe**.
3. Browse for ringtones and download the desired ones.

## Bluetooth® Menu

The phone is compatible with devices that support the Headset, Handsfree, Stereo, Phonebook Access, Object Push and File Transfer.\*

You may create and store 20 pairings within the phone and connect to one device.

The approximate communication range for Bluetooth® wireless technology is up to 30 feet (10 meters).

### NOTE





Read the user guide of each Bluetooth® accessory that you are trying to pair with your phone because the instructions may be different.

### NOTE

Your phone is based on the Bluetooth® specification, but it is not guaranteed to work with all devices enabled with Bluetooth® wireless technology.

## Turn On Bluetooth

Allows you to turn Bluetooth on or off and connect to other Bluetooth devices.

1. Open the flip and press  [MENU].
2. Press  **Bluetooth**.
3. Press  **Bluetooth Menu**.
4. Press the Left Soft Key  [Turn On].

### NOTE

By default, your device's Bluetooth® functionality is turned off.

## Add New Device








Pairing is the process that allows the handset to locate, establish, and register 1-to-1 connection with the target device.

## For pairing with a new Bluetooth® device

1. Follow the Bluetooth® accessory instructions to set the device to pairing mode.









## Tone Room Deluxe/ Bluetooth/ UNO

- Open the flip and press  [MENU].
- Press  Bluetooth.
- Press  Bluetooth Menu.
- Press  Add New Device.
- Set the desired device to discovery mode.
- The device will appear in Add New Device menu once it has been located. Highlight the device and press  [PAIR].
- The handset will prompt you for the passcode. Consult the Bluetooth® accessory instructions for the appropriate passcode (typically “0000” - 4 zeroes). Enter the passcode and press . When Auto Pair Handsfree is set to On, the device will try to autopair for headsets.
- When pairing with the PC or PDA is successful, highlight either **Always Ask** or **Always Connect** and press  to connect with the device.
- Once connected, you will see the device listed in the Bluetooth® Menu and when the pair is transferring information the Bluetooth®

indicator will show up on your screen.

### Icon References When a Bluetooth® Wireless Connection is Searched (neither connected nor paired)



	When a carkit device is found by your device
	When an audio device is found by your device
	When a PC is found by your device
	When a PDA is found by your device
	When another phone device is found by your device
	When other undefined devices are found by your device

## Tone Room Deluxe/ Bluetooth/ UNO

The following options are available in the paired device.

1. **Remove Device:** You can remove the device from the pairing list.
2. **Rename Device:** You can rename the paired device.
3. **Incoming Security:** Allows you to set permission before connecting an incoming device.
4. **Service Discovery:** Allows you to search for the services that the selected device supports.
5. **Device Info:** Shows the device information.

### NOTE


While in the Bluetooth Menu, you can turn the Bluetooth functionality off by pressing the Left Soft Key  [Turn Off]. You can turn it on by pressing the Left Soft Key  [Turn On] again.

When connected with a phone or PC supporting OPP, the following menus are possible:

- **Send Name Card:** Allows my contact data to send other device up to 1000 Contacts.
- **Get Name Card:** Allows you to pull name card of other device.
- **Exchange Name Card:** Allows you to exchange the handset's name card with other device.
- **Send Calendar Event:** Allows you to send Calendar events to other devices.
- **Send Picture:** Allows you to send pictures.
- **Send Video:** Allows you to send videos.
- **Send Sound:** Allows you to send sounds.
- **Send Music:** Allows you to send music.

### My Phone Info

Allows you to view and/or edit the name of the Bluetooth® device.

1. Open the flip and press  [MENU].

## Tone Room Deluxe/ Bluetooth/ UNO

2. Press **[ENT]** Bluetooth.
3. Press **[1st]** Bluetooth Menu.
4. Press the Right Soft Key **[Options]**.
5. Press **[1st]** My Phone Info.
6. Press **[CLR]** to clear the existing name.
7. Use the keypad to enter a new custom name.
8. Press **[OK]** [SET] to save and exit.

### Discovery Mode

Allows you to set whether your device is able to be discovered/ found by other Bluetooth® devices in the area.

1. Open the flip and press **[OK]** [MENU].
2. Press **[ENT]** Bluetooth.
3. Press **[1st]** Bluetooth Menu.
4. Press the Right Soft Key **[Options]**.
5. Press **[2nd]** Discovery Mode.
6. Use the Directional Key **[V]** to highlight a setting, then press **[OK]** [SET].

#### NOTE

If you choose On for Discovery Mode, your device is able to be searched by other in-range Bluetooth® devices.

### Supported Profiles

Allows you to see profiles that your phone can support.

1. Open the flip and press **[OK]** [MENU].
2. Press **[ENT]** Bluetooth.
3. Press **[1st]** Bluetooth Menu.
4. Press the Right Soft Key **[Options]**.
5. Press **[DEF]** Supported Profiles. Select an option to view a brief description.

### UNO

Allows you to use the preloaded UNO application. User charges may apply.

1. Open the flip and press **[OK]** [MENU].
2. Press **[#]** UNO.
3. Follow the on-screen instructions to start playing UNO.

# Safety

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

***Wash hands after handling.***

## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna

pointed up and over your shoulder.

## Tips on Efficient Operation

### For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

## Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

### Persons with pacemakers:

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;

## Safety

- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

### Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

### Aircraft

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

### Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

## For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in

the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

**Cation!** Violation of the instructions may cause minor or serious damage to the product.

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.

## Safety

- Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user

suspects damage, take it to a service center for inspection.

- Improper battery use may result in a fire, explosion or other hazard.
- The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.

### Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.
- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

### Battery Information and Care

- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.



- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

### **Explosion, Shock, and Fire Hazards**

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

## Safety

- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

### General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures could also be deleted.)
- The manufacturer is not liable for damage due to the loss of data.

- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

### **Warning! Important safety information**

#### **Avoiding hearing damage**

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing

experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

#### **Using your phone safely**

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

### FDA Consumer Update



The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

#### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research.

In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

#### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF) energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration

- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### 3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### 4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human

health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

### **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years.

However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

### **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators

around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is

conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### **7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and



the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers.

The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

### **9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?**

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you

are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

### **10. What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no

evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

## **11. What about wireless phone interference with medical equipment?**

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac

pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## **12. Where can I find additional information?**

For additional information, please refer to the following resources:

## Safety

FDA web page on wireless phones

(<http://www.fda.gov/>. Click on 'C' in the index and select Cell Phones.)

Federal Communications Commission (FCC) RF Safety Program

(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection

(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project

(<http://www.who.int/emf>)

National Radiological Protection Board (UK)

(<http://www.hpa.org.uk/radiation/>)

### 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When

using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing

your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.

4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip – dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations – with your phone at your side,

## Safety

help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a

broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

### **Consumer Information on SAR**

(Specific Absorption Rate)

**This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.** Your wireless phone is a radio transmitter and receiver. It is designed and manufactured

not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure Limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/

kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and



## Safety

locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.59 inches (1.5 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.59 inches (1.5 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.59 inches (1.5 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in

compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 0.43 W/kg and when worn on the body, as described in this user's manual, is 1.23 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID ZNFVN360.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical



or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

### **FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices**

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require

digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone

 
## Safety

successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

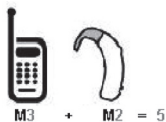

In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT

marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth components must be disabled during a call. See Page 78 for instructions to disable these components.

**For information about hearing aids and digital wireless phones**

**FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

**Gallaudet University, RERC**

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

**Hearing Loss Association of America [HLAA]**

<http://www.hearingloss.org/learn/cellphonetech.asp>

**The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)



## Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

---

### Battery Charger



---

### Battery



---

### USB Cable



---

### Ear-mic



# Limited Warranty Statement

## **1. WHAT THIS WARRANTY COVERS:**

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## **2. WHAT THIS WARRANTY DOES NOT COVER:**

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized

## Limited Warranty Statement

repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.

(8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

(9) Products operated outside published maximum ratings.

(10) Products used or obtained in a rental program.

(11) Consumables (such as fuses).

### **3. WHAT LG WILL DO:**

“LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

## Limited Warranty Statement

### **4. STATE LAW RIGHTS:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you

may also have other rights which vary from state to state.

### **5. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>. Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.** Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

# Index

---

## Numbers

---

- 3-way call 20
- 10 Driver Safety Tips 98

---

## A

---

- Accessibility 77
- Adding Another Phone Number 26
- Add New Device 78
- Airplane Mode 65
- Alarm Clock 50
- Alert Sounds 60
- All Calls 42
- Answer Options 70
- Auto Retry 71

---

## B

---

- Backlight 62
- Banner 62
- Battery Charge Level 17
- Battery Temperature Protection 17
- Bluetooth® Menu 78
- Brightness 62
- Browser 52

---

## C

---

- Calculator 56
- Calendar 50
- Caller ID 21

- Call History 41
- Call Settings 70
- Call Sounds 59
- Call Timer 43
- Call Waiting 20
- Card Memory 74
- Changing Saved Information 26
- Changing the Default Number 26
- Charge the Phone 16
- Charging with USB 17
- Clock Format 64
- Consumer Information on SAR 100
- Contact List 29
- Contacts 29
- Customizing Individual Entries 24

---

## D

---

- Data Counter 43
- Deleting 27
- Dialed Calls 42
- Digit Dial Readout 60
- Discovery Mode 81
- Display Settings 62
- Display Themes 63
- Drafts 37
- DTMF Tones 73

---

## E

---

- easyedgeSM 49



easyedgeSM Apps 49  
Erase All 40  
ESN/MEID 75  
External Display 65  
Ez Tip Calculator 56

---

## F

---

Favorites 30  
FCC Hearing-Aid Compatibility  
(HAC) Regulations for Wireless  
Devices 103  
FDA Consumer Update 90  
Font Size 64  
Font Type 64  
Front Display Patterns 76

---

## G

---

Groups 30

---

## H

---

Hearing Assist 61

---

## I

---

Icon Glossary 75  
Important Safety Precautions 1  
Index 110  
Info Search 57  
Insert the Battery 16

---

## K

---

Keypad Volume 60

---

## L

---

Language 66  
Large Text 77  
Location 67

---

## M

---

Making Calls 18  
Master Volume 59  
Memory 74  
Menu Access 13  
Menu Readout Mode 77  
Menu Style 63  
Messages 35  
Messaging 33  
Missed Calls 41  
Multimedia 44  
Music 48  
Mute Function 20  
My Number 75  
My Phone Info 80  
My Schedule 50  
My vCard 31

---

## N

---

Name Match for Dialing 65

# Index

NAM Select 70  
New Contact 29  
New Message 33  
Notepad 58

---

## O

---

One Touch Dial 72

---

## P

---

Phone Info 75  
Phone Memory 74  
Phone Settings 65  
Pictures 45  
Power On/Off 61

---

## Q

---

Quick Font Resize 20  
Quick Volume Adjustment 20

---

## R

---

Received Calls 41  
Receiving Calls 18  
Record Video 44  
Record Voice 45  
Redialing Calls 18  
Remove the Back Cover 16  
Removing the Battery 17  
Replace the Back Cover 16

---

Ringtones 47

---

## S

---

Safety 82  
Safety Information 85  
Save Options 74  
Screen Icons 19  
Security 67  
Service Alerts 61  
Set Shortcut Keys 65  
Settings 38, 59  
Signal Strength 17  
Software Update 75  
Sounds Off 20  
Sounds Settings 59  
Speed Dial 24  
Speed Dialing 27  
Speed Dials 31  
Start Browser 52  
Stopwatch 57  
Storing a Number with Pauses 25  
Storing Basics 24  
Supported Profiles 81  
SW/HW Version 75  
System Select 70

---

## T

---

Take Picture 44  
Technical Details 10

Templates 38  
Text Input 23  
TIA Safety Information 82  
Tone Room Deluxe 78  
Tools 54  
TTY Mode 71  
Turning the Phone On and Off 18  
Turn off All Sound 77

---

## U

---

Unit Converter 58  
UNO 81  
USB Mass Storage 58  
USB Mode 73

---

## V

---

Vibrate Mode 20  
Videos 46  
Voice Commands 21, 54, 66  
Voicemail 37  
Voice Privacy 73

---

## W

---

Wallpaper 63  
Warning! Important safety  
information 89  
Web Access Prompt 73  
World Clock 57