

# VX6100



Perfection Redefined.

# VX6100

Volume Up/Down

Headset Jack

Camera with Digital Zoom

Flash

Camera Key

External Caller-ID/ Camera Display

Ear Piece

Driving Mode/Voice Memo/Flash

Charging Port  
(Charging time: up to 3.5 hours)

Navigation Key  
Scrolls through menus and displays the next or previous message, entry or item

Left Soft Key

Recent Calls

Send Key

Clear Key

Voice Mail

Manner Mode

Microphone

Confirmation Key

Speakerphone

Right Soft Key

easyedge<sup>SM</sup>

Messages

END/PWR Key  
Powers the phone on or off, ends a call or returns you to the main menu

Camera Key

Lock Mode



 
## CAMERA FEATURES

### USING THE CAMERA

#### Taking and Sending a Photo

You can save up to 60 photos, regardless of resolution, in the gallery.

1. Press the **Camera Key**. Press left or right on the Navigation Key to zoom.
2. Press **OK** to take the picture.
3. When finished, press **Left Soft Key** for **Save** to keep the photo in the gallery, or press **OK** to send.
4. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)** or **Recent Call (2)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
5. Scroll down using the Navigation Key to enter the **Subject**, **Text** and **Sound** you wish to add to the message and press **Left Soft Key** for **Send**.

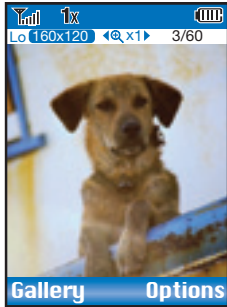

#### Taking a Photo with the Handset Closed

The VX6100 by LG enables you to access the camera feature with the flip closed.

1. Press the **Camera Key** on the right side of the phone for 3 seconds.
2. Use the external LCD as a viewfinder and press the **Camera Key** to take the photo.
3. When finished, the photo is automatically saved to the gallery.

 
#### Setting the Self Timer

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Self Timer (1)**.
4. Use the Navigation Key to select from **5 sec** or **10 sec** and press **OK**.
5. Press **Left Soft Key** for **Start**.



#### Changing the Resolution

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Resolution (2)**.
4. Use the Navigation Key to select from **Hi(640x480)**, **Med(320x240)** or **Lo(160x120)** and press **OK**.

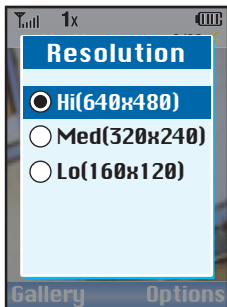

#### Changing the Brightness

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Brightness (3)**.
4. Use the Navigation Key to change the brightness and press **OK** for **Done**.

 
#### Using the Flash

1. Press the **Camera Key**.
2. Press **Right Soft Key** for **Options**.
3. Select **Flash (9)**.
4. Use the Navigation Key to select **On** and press **OK**.


**Shortcut:** Press the flash button on the left side of the phone after step 1 to turn the flash on or off.

#### Sending a Photo from the Gallery

1. Press the **Camera Key**.
2. Press **Left Soft Key** for **Gallery**.
3. Use the Navigation Key to select a photo and press **OK**.
4. Press **Right Soft Key** for **Options**.
5. Select **Send (1)**.
6. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)** or **Recent Call (2)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
7. Scroll down using the Navigation Key to enter the **Subject**, **Text** and **Sound** you wish to add to the message and press **Left Soft Key** for **Send**.

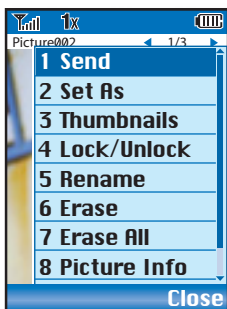

## VOICE COMMAND FEATURES

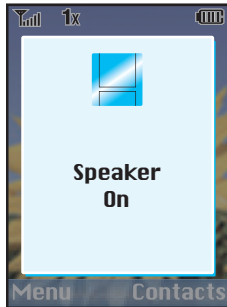 

The VX6100 by LG is enabled with speaker-independent voice recognition. This technology makes it possible for any user to dial a number by speaking the name of a contact entered in the phone book or by speaking the digits of a phone number. Voice command also provides quick and easy access to other essential features and when coupled with speakerphone and driving mode, offers true hands-free usage without additional equipment.

### Activating Speakerphone


1. From main screen, press the **speakerphone** icon (up) on the Navigation Key and "**Speaker On**" will appear on the screen. To deactivate, press the key again and "**Speaker Off**" will appear on the screen.

## VOICE SETTINGS

### Commands Prompt

Allows you to select how voice recognition is activated.

1. From the **Settings (8)** menu, select **Voice Services (7)**.
2. Select **Commands Prompt (1)**.
3. Use the Navigation Key to select from **Flip Open** or **Side Key Only** and press **OK**.

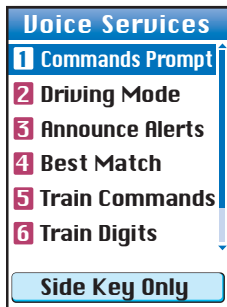

## CONNECTIVITY FEATURES

### DOWNLOADING easyedge<sup>SM</sup> CONTENT

The new VX6100 by LG can store downloaded content from **easyedge<sup>SM</sup>**, a technology and service that allows you to download and use applications, games, ringtones and more on your phone.

### Downloading New Content From easyedge<sup>SM</sup>

1. From main screen, press the **easyedge<sup>SM</sup>** icon (right) on the Navigation Key.
2. Select a category from the **easyedge<sup>SM</sup>** Shop and press **OK**.

 
## MESSAGING

### Sending a Text Message


1. Press the **Messages** icon (down) on the Navigation Key and select **New Text Msg (2)**.
2. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)** or **Recent Call (2)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
3. Select **Message** and press **OK**.
4. Enter the message (up to 160 characters) using the keypad, and press **OK** when done.
5. Press **Left Soft Key** for **Send**.

### Sending a Photo Message

1. Press the **Messages** icon (down) on the Navigation Key and select **New Photo Msg (3)**.
2. Press **Left Soft Key** for **Contacts** to enter a recipient from the **Contacts (1)** or **Recent Call (2)** menu, or use the key pad to enter a new e-mail address or phone number. Up to 10 recipients can be added.
3. Scroll down using the Navigation Key to enter the **Subject**, **Text**, **Picture** and **Sound** you wish to add to the message.
4. Press **Right Soft Key** for **Options** and select **Send (2)**.

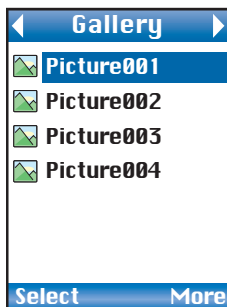

## CUSTOMIZABLE FEATURES

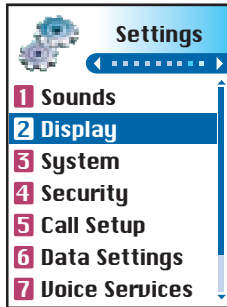 


### Changing the Wallpaper Image

1. From the **Settings (8)** menu, select **Display (2)**.
2. Select **Screens (3)**.
3. Select **Wallpaper (1)**.
4. Press left or right on the Navigation Key to select the desired image from **Default, Images, Message Pictures** or **Gallery** and press **OK**.

### Changing the Call Ringer

 1. From the **Settings (8)** menu, select **Sounds (1)**.
2. Select **Ringers (1)**.
3. Select either **Caller ID (1), No Caller ID (2)** or **Restricted Calls (3)**.
4. Choose from the list of available default ringers and press **OK**.

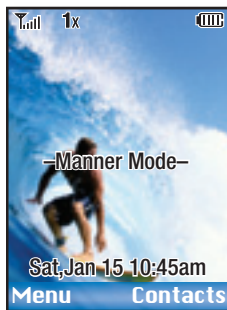

## OTHER NOTABLE SETTINGS

### Manner Mode

Use Manner Mode in a public place to disable the ringer and activate Vibrate Mode.

1. From the main screen, activate Manner Mode by pressing the **Manner Mode Key** (for 3 seconds) - the phone will vibrate when activated.
2. When set, “**-Manner Mode- Activated**” will appear on the screen.
3. To release Manner Mode, press the **Manner Mode Key** until “**-Normal Mode- Activated**” is displayed.

## PERSONAL INFORMATION TOOLS

### THE SCHEDULER

The Tools menu allows you to view the calendar, schedule an event, program your handset's alarm clock and view and compose memos on the notepad.

 
#### Scheduling an Event

1. From the **Tools (7)** menu, select **Schedule (2)**.
2. Highlight the event date using your Navigation Key and press **Left Soft Key** for **Add**.
3. You may set the appropriate start and end times, contents, voice memo, recurrence (if any), alarm & ringer by scrolling to the corresponding field and entering the desired information and pressing **OK**.
4. Press **Left Soft Key** for **Save**.

#### Making a Call From Recent Calls

1. Press the **SEND Key** to view your most recent 30 dialed, received, and missed calls.
2. Place a call by selecting the desired entry and press **SEND** to connect.

**Shortcut:** From main screen, press the **Recent Calls** icon (left) on the Navigation Key to quickly access the Recent Calls menu.

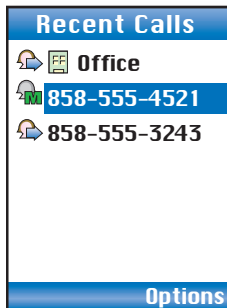



## CONTACTS

The internal phone book is capable of storing up to 499 contacts with up to 5 numbers and 3 e-mail addresses per entry.

### Adding a New Contact Entry

  1. From the **Contacts (2)** menu, select **New Number (2)**.
2. Enter the telephone number and press **OK**.
3. Select a label (**Home, Home2, Office, Office2, Mobile, Mobile2, Pager, Fax, Fax2** or **None**) and press **OK**.
4. Enter a name for the entry and press **OK**.
5. Add more phone numbers, e-mail addresses or picture caller-ID, or press **Left Soft Key** for **Done**.

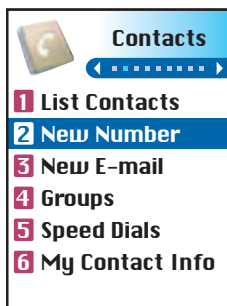

 **Camera (1)**

1. Take Photo
2. Gallery

 **Contacts (2)**

1. List Contacts
2. New Number
3. New E-mail
4. Groups
5. Speed Dials
6. My Contact Info

 **Recent Calls (3)**

1. Dialed Calls
2. Received Calls
3. Missed Calls
4. Erase Calls
  1. Dialed Calls
  2. Received Calls
  3. Missed Calls
  4. All Calls

**5. Call Timer**

1. Last Call
2. Home Calls
3. Roam Calls
4. All Calls

**6. KB Counter**

 **Messages (4)**

1. Voice Mail
2. New Text Msg
3. New Photo Msg
4. Inbox
5. Outbox
6. Saved

**7. Msg Settings**

1. Auto Save
2. Auto Erase
3. Text-Auto View
4. Photo-Auto Receive
5. Text-Callback #
6. Voice Mail #
7. Entry Mode
8. Quick-Text
9. Text-Auto Play
0. Text-Signature

**8. Erase All**


1. Inbox
2. Outbox
3. Saved
4. All

 **easyedge<sup>SM</sup> (5)**

1. easyedge
2. Help

 **Media (6)**

1. Images
2. Sounds

 **Tools (7)**

1. Voice Commands
2. Schedule
3. Alarm Clock
  1. Alarm 1
  2. Alarm 2
  3. Alarm 3
  4. Quick Alarm
4. Voice Memo
5. Notepad

**6. EZ Tip Calc**

**7. Calculator**

**8. World Clock**

 **Settings (8)**

**1. Sounds**

1. Ringers
2. DTMF Length
3. Volume
4. Message Alerts
5. Service Alerts
6. Power On/Off Tone

**2. Display**

1. Banner
2. Backlight
3. Screens
4. Menu Style
5. Clocks
6. Theme Colors
7. Contrast-Front
8. Fonts
9. Language

**3. System**

1. Select System
2. Set NAM
3. Auto NAM
4. Serving System

**4. Security**

1. Lock Phone
2. Restrict Calls
3. Emergency #s
4. Change Lock
5. Erase Contacts
6. Reset Default

**5. Call Setup**

1. Auto Retry
2. Answer Call
3. Auto Answer
4. One-Touch Dial
5. Voice Privacy
6. Auto Volume
7. TTY Mode


**6. Data Settings**

**7. Voice Services**

1. Commands Prompt
2. Driving Mode
3. Announce Alerts
4. Best Match
5. Train Commands
6. Train Digits
7. Help

**8. Location**

1. Location On
2. E911 Only

 **Phone Info (9)**

**1. My Phone Number**

**2. S/W Version**

**3. Icon Glossary**

**4. Shortcut Help**

