

Left arrow:

2)Press for previous music.

waiting for pair mode.

In Bluetooth mode, long press for

disconnecting with current device, back to

1)Long press for decreasing volume, short

---- ×--

NOTICE

- 1.Please use theitem in normal temperature.
- 2.Please do not put the item in rain or wet environment, do not put it into any liquid.
- 3.Please do not throw the item to prevent damage from dropping.
- 4.Please do not cover the holes on the unit, do not insert anything into the holes on the unit.
- 5. Please do not put the item close to any heat-source.
- 6.If the connecting cable not match the item, please contact
- 7. Users should not disassemble, repair, modify the item by their own
- 8. Please charge the item with charger not exceed 5V.
- 9.Long time use with high-volume may damage your hearing. Pls use the item with lower volume.
- 10.User's disassembling will make the item out of warranty.
- 11. When the battery is running out, please do not turn to the biggest volume when charging, suggest turn to the middle volume.

Specification

Bluetooth Version: Bluetooth 3.0 Output power: 1.8W*1 MINI USB charging: DC 5V---500mA Battery capacity:300mah Service time:2.5hat medium volume Unit Weight: 0.178kg
Unit demention: 70(L)*70(D)*86 (H) mm This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reason able protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

- . Connect the equipment into an outlet on a circuit different from that to
- . which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

LED indicator

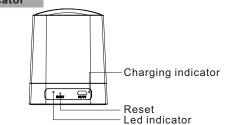

LED indicator fast flashing in blue, waiting for pair. After pair with other device, LED indicator will slow flashing.

Waiting for pair: Fast flashing in blue.

Paired:

Slow flashing in blue.

Charging: Charging indicator keeplighting in red, and turn offwhen full charged.

Reset:

If the unitwas freeze, press reset to shutdown unit, and Press power buttonfor restart.

Bluetooth pairing instruction:

Default setting as un-paired (LED indicator fast flashing in blue), while unit paired, indicator will turn to slow flashing in blue. For quit from paired mode, long pressing M button(about 4 seconds), the LED indicator will change to fast flashing in blue. User can Search on other Bluetooth devices for the unit named "Proscan PSP483" for pairing. Indicator will change to slow flashing in blue while paired success.

Common problems

Item	How to solve
Unable to pair	Shut down unit and restart If a code was required, pls input 0000
With breaks during music play	Please check if your are over working distance or any obstacle between paired devices.
No sound while music play	Check the volume setting on item, and increase volume Check if it was paused
Unable to poweron	Please charge the item
Unable to operate	Press reset and restart the item



If at any time in the future you should need to dispose of this product pleasenote that waste electrical products should not be disposed of with householdwaste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic equipmentDirective)

* Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.

保修卡: 240*160mm, 红色线不需印 80G书纸,正反面印刷(英文一面,法文一面) 先横向二折再竖向对折 (英文封面在最上面)