
Operating Guidelines for MAHB Series Handheld Portable Transmitters

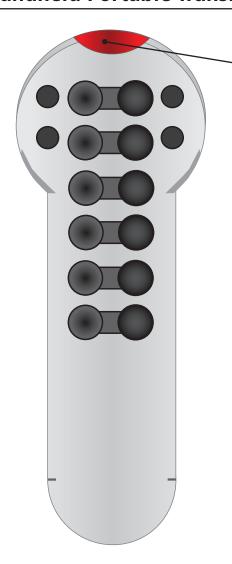

- Button Press LED Window should light when a button is pressed. If it does not, you may need new batteries.
- 3 AAA batteries are required to operate the device. See back of remote.
- If range of transmission decreases, replace batteries.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- » Reorient or relocate the receiving antenna.
- » Increase the separation between the equipment and receiver.
- >> Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/ TV technician for help.

This Class [[1]] digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe [1] est conforme à la norme NMB-003 du Canada.



such replacement/repair.