 


# Relay™ TBP12

## Pilot's Guide Manuel de pilotage Pilotenhandbuch Pilotenhandboek Manual del Piloto

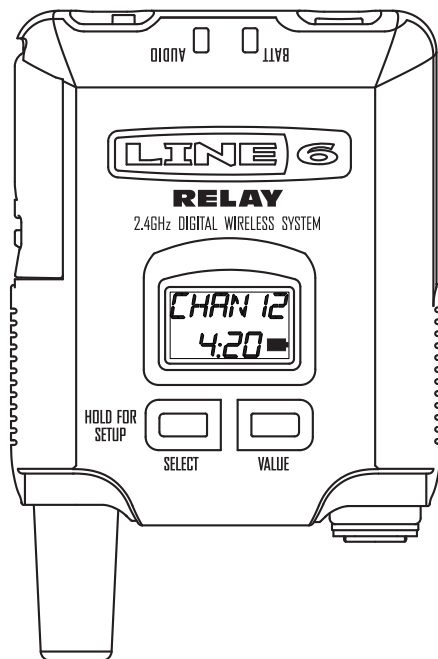

10-00-0235 ElectroPhonic Limited Edition available @ [www.line6.com/manuals](http://www.line6.com/manuals) Rev A

 


### Battery Installation


Open the side door to access the battery compartment.

The inside of the battery compartment door indicates the correct battery direction.

Only use non-rechargeable alkaline batteries.

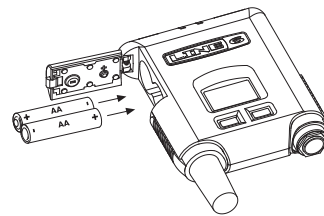


### Transmitter Hook Up, Power On & Mute

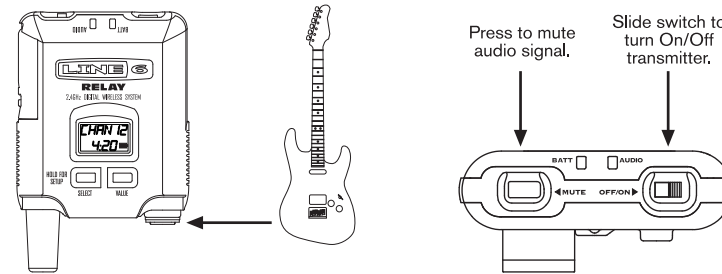 

### Changing Channels

 
**Transmitter**  
• Press and hold Select button for 2 seconds for entering Setup Mode to change channels.  
• Once in Setup Mode press the Value button to select from 12 available channels.

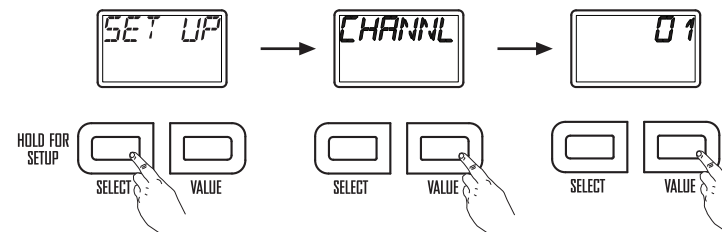

**NOTE** - The following instructions will scroll across screen upon entering Set Up Mode:  
"SETUP MODE - PRESS SETUP TO SELECT ITEMS - PRESS CHAN TO CHANGE VALUE - HOLD SELECT TO EXIT SETUP MODE"

### Locking & Unlocking

 - To lock the transmitter controls, press and hold "Select" & "Value" buttons at once for 2 seconds. This prevents accidentally entering Set Up mode or changing channels during a performance.
- A Lock icon will appear in the lower left corner of the LCD display to show the system is locked.
- To un-lock the transmitter to enter Set Up mode and edit preferences, repeat the process of pressing and holding "Select" & "Value" buttons again for 2 seconds. The Lock icon will then be turned off in the LCD display.

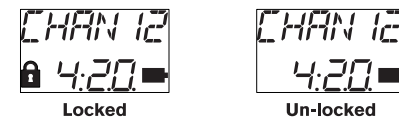


**NOTE:** Other advanced lock options are available in the Relay™ Transmitter. Please consult the advanced user guide at [www.line6.com/manuals](http://www.line6.com/manuals) for more details.

### LED Indicators

 **Battery LED:**  
• Green LED = Full  
• Solid Red LED = Low  
• Flashing Red LED = Very Low

**Audio LED:**  
• Green LED = Audio signal

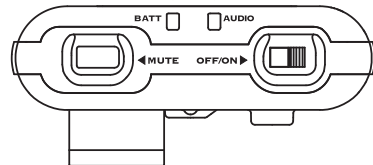

### Register and Get Free Stuff

Included with the Relay™ is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to us in the mail, or register online at [www.line6.com/register](http://www.line6.com/register). That gets you all set up for warranty service in case you should ever have a warranty issue with your product. Registering also qualifies you for contests, special offers and more.

### [www.line6.com/manuals](http://www.line6.com/manuals)

 
Select Relay™ in our online manual archive to download our online companion manual describing details of the features in your Relay™.

### Battery Installation


Open the side door to access the battery compartment.

The inside of the battery compartment door indicates the correct battery direction.

Only use non-rechargeable alkaline batteries.

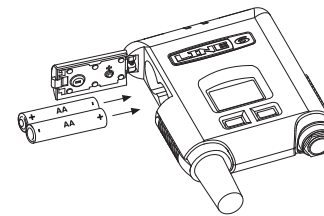


### Transmitter Hook Up, Power On & Mute

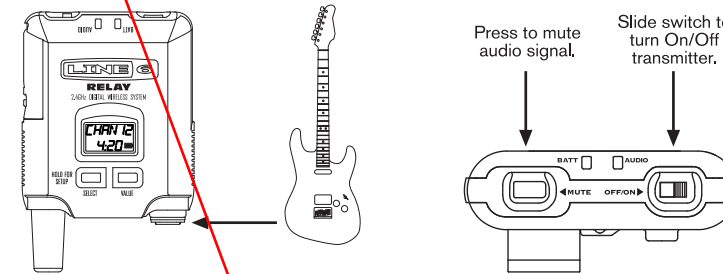 

### Changing Channels

 
**Transmitter**  
• Press and hold Select button for 2 seconds for entering Setup Mode to change channels.  
• Once in Setup Mode press the Value button to select from 12 available channels.

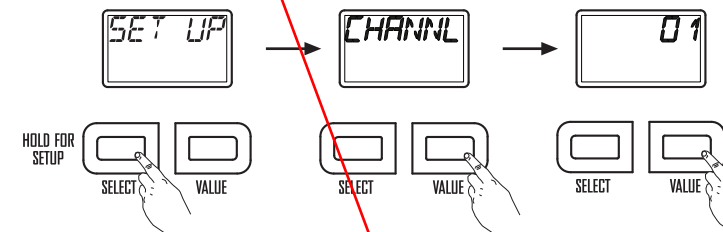

**NOTE** - The following instructions will scroll across screen upon entering Set Up Mode:  
"SETUP MODE - PRESS SETUP TO SELECT ITEMS - PRESS CHAN TO CHANGE VALUE - HOLD SELECT TO EXIT SETUP MODE"

### Locking & Unlocking

 - To lock the transmitter controls, press and hold "Select" & "Value" buttons at once for 2 seconds. This prevents accidentally entering Set Up mode or changing channels during a performance.
- A Lock icon will appear in the lower left corner of the LCD display to show the system is locked.
- To un-lock the transmitter to enter Set Up mode and edit preferences, repeat the process of pressing and holding "Select" & "Value" buttons again for 2 seconds. The Lock icon will then be turned off in the LCD display.

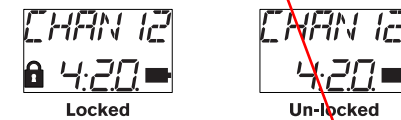


**NOTE:** Other advanced lock options are available in the Relay™ Transmitter. Please consult the advanced user guide at [www.line6.com/manuals](http://www.line6.com/manuals) for more details.

### LED Indicators

 **Battery LED:**  
• Green LED = Full  
• Solid Red LED = Low  
• Flashing Red LED = Very Low

**Audio LED:**  
• Green LED = Audio signal

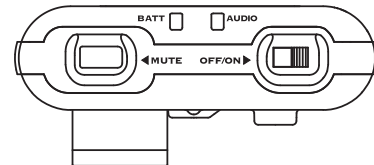

### Register and Get Free Stuff

Included with the Relay™ is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to us in the mail, or register online at [www.line6.com/register](http://www.line6.com/register). That gets you all set up for warranty service in case you should ever have a warranty issue with your product. Registering also qualifies you for contests, special offers and more.

### [www.line6.com/manuals](http://www.line6.com/manuals)

 
Select Relay™ in our online manual archive to download our online companion manual describing details of the features in your Relay™.

### Battery Installation


Open the side door to access the battery compartment.

The inside of the battery compartment door indicates the correct battery direction.

Only use non-rechargeable alkaline batteries.

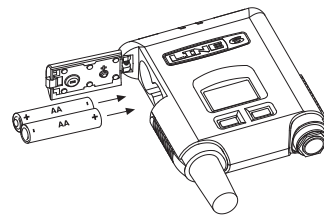


### Transmitter Hook Up, Power On & Mute

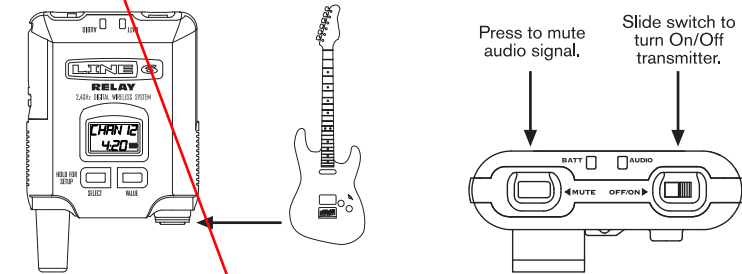 

### Changing Channels

 
**Transmitter**  
• Press and hold Select button for 2 seconds for entering Setup Mode to change channels.  
• Once in Setup Mode press the Value button to select from 12 available channels.

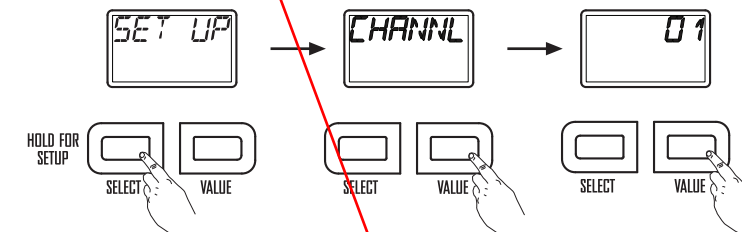

**NOTE** - The following instructions will scroll across screen upon entering Set Up Mode:  
"SETUP MODE - PRESS SETUP TO SELECT ITEMS - PRESS CHAN TO CHANGE VALUE - HOLD SELECT TO EXIT SETUP MODE"

### Locking & Unlocking

 - To lock the transmitter controls, press and hold "Select" & "Value" buttons at once for 2 seconds. This prevents accidentally entering Set Up mode or changing channels during a performance.
- A Lock icon will appear in the lower left corner of the LCD display to show the system is locked.
- To un-lock the transmitter to enter Set Up mode and edit preferences, repeat the process of pressing and holding "Select" & "Value" buttons again for 2 seconds. The Lock icon will then be turned off in the LCD display.

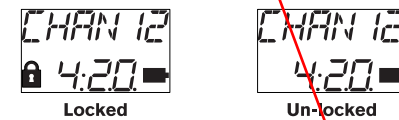


**NOTE:** Other advanced lock options are available in the Relay™ Transmitter. Please consult the advanced user guide at [www.line6.com/manuals](http://www.line6.com/manuals) for more details.

### LED Indicators

 **Battery LED:**  
• Green LED = Full  
• Solid Red LED = Low  
• Flashing Red LED = Very Low

**Audio LED:**  
• Green LED = Audio signal

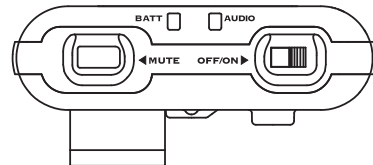

### Register and Get Free Stuff

Included with the Relay™ is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to us in the mail, or register online at [www.line6.com/register](http://www.line6.com/register). That gets you all set up for warranty service in case you should ever have a warranty issue with your product. Registering also qualifies you for contests, special offers and more.

### [www.line6.com/manuals](http://www.line6.com/manuals)

 
Select Relay™ in our online manual archive to download our online companion manual describing details of the features in your Relay™.

## Battery Installation

Open the side door to access the battery compartment.

The inside of the battery compartment door indicates the correct battery direction.

Only use non-rechargeable alkaline batteries.

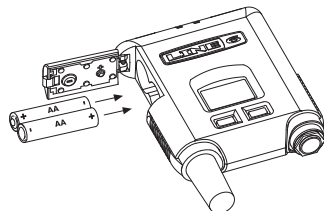


## Battery Installation

Open the side door to access the battery compartment.

The inside of the battery compartment door indicates the correct battery direction.

 Only use non-rechargeable alkaline batteries.

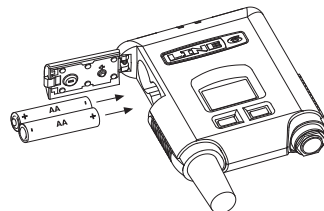


## Battery Installation

Open the side door to access the battery compartment.

The inside of the battery compartment door indicates the correct battery direction.

 Only use non-rechargeable alkaline batteries.

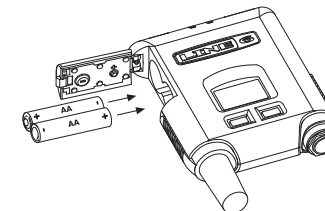

**You should read these Important Safety Instructions. Keep these instructions in a safe place.**

Before using your Relay™ TBP12, carefully read the applicable items of these operating instructions and the safety suggestions.

1. Obey all warnings in the Relay Relay™ TBP12 manual.
2. Only use non-rechargeable alkaline batteries in the transmitter.
3. Do not perform service operations beyond those described in the Relay™ TBP12. Service is required when the apparatus has been damaged in any way, such as:
  - liquid has been spilled or objects have fallen into the apparatus
  - the unit has been exposed to rain or moisture
  - the unit does not operate normally or changes in performance in a significant way
  - the unit is dropped or the enclosure is damaged.
4. Do not place near heat sources, such as radiators, heat registers, or appliances which produce heat.
5. Guard against objects or liquids entering the device. Do not use or place unit near water.
6. Do not step on cords. Do not place items on top of cords so that they are pinched or leaned on. Pay particular attention to the cord at the plug end and the point where it connects to the device.
7. Always switch transmitter off when not in use for extended periods of time for extended battery life.
8. Clean only with a damp cloth.
9. Only use attachments/accessories specified by the manufacturer.
10. Prolonged listening at high volume levels may cause irreparable hearing loss and/or damage. Always be sure to practice "safe listening."

### CERTIFICATION

 
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
• Reorient or relocate the receiving antenna.  
• Increase the separation between the equipment and receiver.  
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.


This Class B digital apparatus complies with Canadian ICES-003.  
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.




## Transmitter Hook Up, Power On & Mute

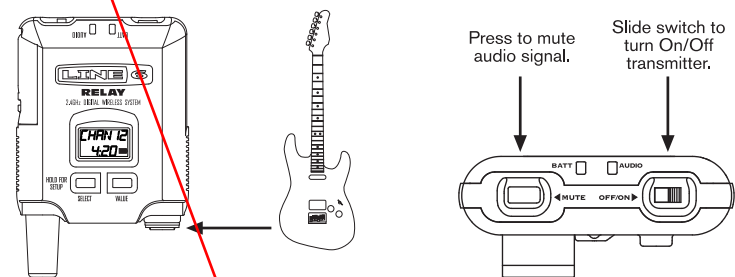

## Transmitter Hook Up, Power On & Mute

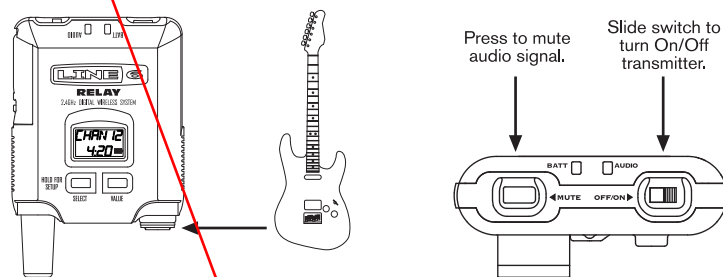 

## Transmitter Hook Up, Power On & Mute

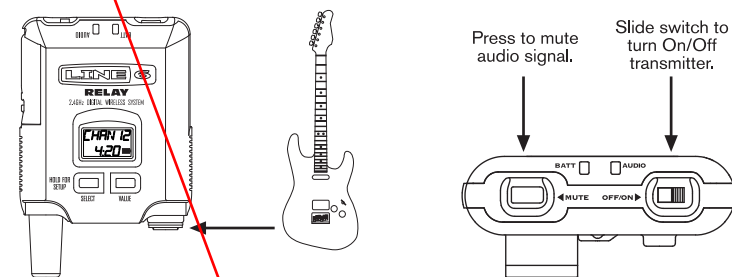 

## Changing Channels

 
 
 
- Transmitter**
- Press and hold Select button for 2 seconds for entering Setup Mode to change channels.
  - Once in Setup Mode press the Value button to select from 12 available channels.

## Changing Channels

- Transmitter**
- Press and hold Select button for 2 seconds for entering Setup Mode to change channels.
  - Once in Setup Mode press the Value button to select from 12 available channels.

## Changing Channels

- Transmitter**
- Press and hold Select button for 2 seconds for entering Setup Mode to change channels.
  - Once in Setup Mode press the Value button to select from 12 available channels.

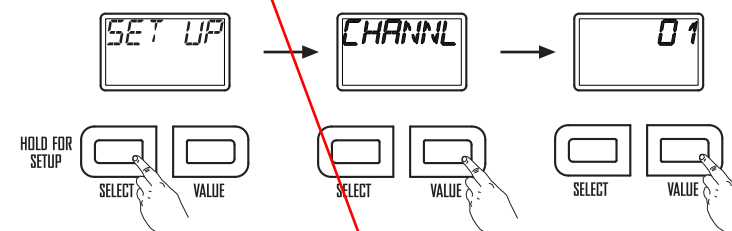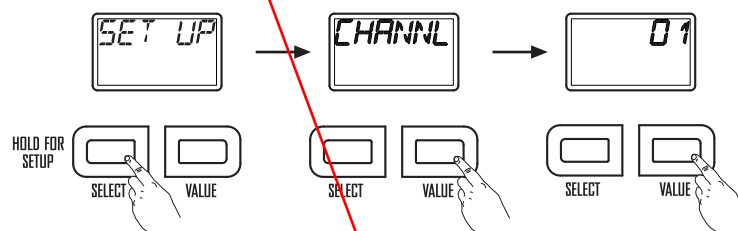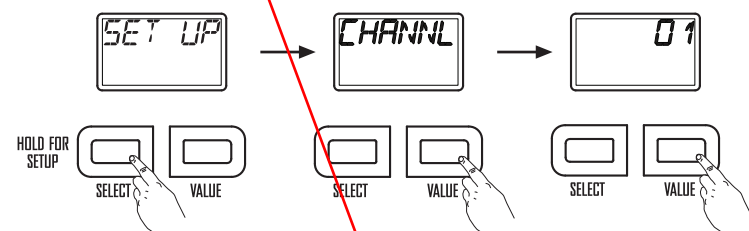

**NOTE** - The following instructions will scroll across screen upon entering Set Up Mode:  
"SETUP MODE - PRESS SELECT TO SELECT ITEMS - PRESS CHAN TO CHANGE VALUE - HOLD SELECT TO EXIT SETUP MODE"

**NOTE** - The following instructions will scroll across screen upon entering Set Up Mode:  
"SETUP MODE - PRESS SELECT TO SELECT ITEMS - PRESS CHAN TO CHANGE VALUE - HOLD SELECT TO EXIT SETUP MODE"

**NOTE** - The following instructions will scroll across screen upon entering Set Up Mode:  
"SETUP MODE - PRESS SELECT TO SELECT ITEMS - PRESS CHAN TO CHANGE VALUE - HOLD SELECT TO EXIT SETUP MODE"

## Locking & Unlocking

 
 
 
- To lock the transmitter controls, press and hold "Select" & "Value" buttons at once for 2 seconds. This prevents accidentally entering Set Up mode or changing channels during a performance.
- A Lock icon will appear in the lower left corner of the LCD display to show the system is locked.
- To un-lock the transmitter to enter Set Up mode and edit preferences, repeat the process of pressing and holding "Select" & "Value" buttons again for 2 seconds. The Lock icon will then be turned off in the LCD display.

## Locking & Unlocking

- To lock the transmitter controls, press and hold "Select" & "Value" buttons at once for 2 seconds. This prevents accidentally entering Set Up mode or changing channels during a performance.
- A Lock icon will appear in the lower left corner of the LCD display to show the system is locked.
- To un-lock the transmitter to enter Set Up mode and edit preferences, repeat the process of pressing and holding "Select" & "Value" buttons again for 2 seconds. The Lock icon will then be turned off in the LCD display.

## Locking & Unlocking

- To lock the transmitter controls, press and hold "Select" & "Value" buttons at once for 2 seconds. This prevents accidentally entering Set Up mode or changing channels during a performance.
- A Lock icon will appear in the lower left corner of the LCD display to show the system is locked.
- To un-lock the transmitter to enter Set Up mode and edit preferences, repeat the process of pressing and holding "Select" & "Value" buttons again for 2 seconds. The Lock icon will then be turned off in the LCD display.



**NOTE:** Other advanced lock options are available in the Relay™ Transmitter. Please consult the advanced user guide at [www.line6.com/manuals](http://www.line6.com/manuals) for more details.

**NOTE:** Other advanced lock options are available in the Relay™ Transmitter. Please consult the advanced user guide at [www.line6.com/manuals](http://www.line6.com/manuals) for more details.

**NOTE:** Other advanced lock options are available in the Relay™ Transmitter. Please consult the advanced user guide at [www.line6.com/manuals](http://www.line6.com/manuals) for more details.

## LED Indicators

 
 
 
- Battery LED:**
- Green LED = Full
  - Solid Red LED = Low
  - Flashing Red LED = Very Low
- Audio LED:**
- Green LED = Audio signal

## LED Indicators

- Battery LED:**
- Green LED = Full
  - Solid Red LED = Low
  - Flashing Red LED = Very Low
- Audio LED:**
- Green LED = Audio signal

## LED Indicators

- Battery LED:**
- Green LED = Full
  - Solid Red LED = Low
  - Flashing Red LED = Very Low
- Audio LED:**
- Green LED = Audio signal

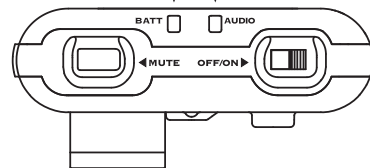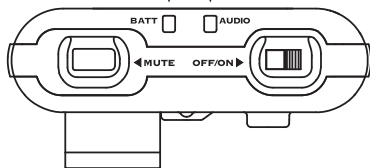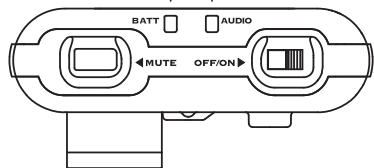

## Register and Get Free Stuff

Included with the Relay™ is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to us in the mail, or register online at [www.line6.com/register](http://www.line6.com/register). That gets you all set up for warranty service in case you should ever have a warranty issue with your product. Registering also qualifies you for contests, special offers and more.

## Register and Get Free Stuff

Included with the Relay™ is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to us in the mail, or register online at [www.line6.com/register](http://www.line6.com/register). That gets you all set up for warranty service in case you should ever have a warranty issue with your product. Registering also qualifies you for contests, special offers and more.

## Register and Get Free Stuff

Included with the Relay™ is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to us in the mail, or register online at [www.line6.com/register](http://www.line6.com/register). That gets you all set up for warranty service in case you should ever have a warranty issue with your product. Registering also qualifies you for contests, special offers and more.

## [www.line6.com/manuals](http://www.line6.com/manuals)

Select Relay™ in our online manual archive to download our online companion manual describing details of the features in your Relay™.

## [www.line6.com/manuals](http://www.line6.com/manuals)

Select Relay™ in our online manual archive to download our online companion manual describing details of the features in your Relay™.

## [www.line6.com/manuals](http://www.line6.com/manuals)

Select Relay™ in our online manual archive to download our online companion manual describing details of the features in your Relay™.