

# IN THE BOX






User Manual





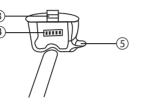

- 1. Smartphone clamp
- 2. Shutter button

SSEMBLING THE MONOPOD (cont

CATION OF CONTROL

- Base screw
- 4. Wheel to tighten screw 5. Knob to adjust clamp
- 6. Micro USB charging port 7. Power ON/OFF switch

8. LED indicator light

# CHARGING THE MONOPO

- 1. Connect the small end of the Micro USB cable to the Micro USB port on the handle of the Monopod.
- 2. Connect the large end of the Micro USB cable to your computer or other charging device.
- 3. The LED indicator light is RED when charging. It will shut off when the Monopod is fully charged.



Make sure you charge the Monopod for at leas hour before using it for the first time.


# PAIRING THE MONOPOD

- 1. Slide the power switch on the handle of the Monopod to the ON position.
- 2. The LED indicator light will flash BLUE.
- 3. Keep the Monopod and Bluetooth enabled device within 3 feet of each other during the pairing process.
- 4. Set your Bluetooth enabled device to search for Bluetooth devices.



## On an iPhone

• Go to SETTINGS > BLUETOOTH (Make sure Bluetooth is turned ON)

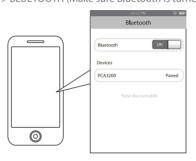

## AIRING THE MONOPOD (cont'd

## On a Blackberry


• Go to SETTINGS/OPTIONS > BLUETOOTH Enable BLUETOOTH



### On an Android Phone

• Go to SETTINGS > BLUETOOTH > MENU > Search for devices

(Make sure Bluetooth is turned ON)

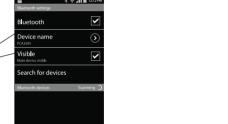

# PAIRING THE MONOPOD (cont

### On other Cell Phones/Devices

• Review the instruction manual that came with your phone/device.



- 5. When the Bluetooth enabled device finds the Monopod, select "PCA3200" from the list of found devices.
- 6. If required, enter the password 0000. Select OK or Yes to pair the two units. 7. After a successful registration, the LED indicator light will slowly flash BLUE.

NOTE: If you would like to connect the Monopod to another device, you must unpair the Monopod from the currently paired device first. On your device's Bluetooth settings, select "PCA3200", then select "unpair". When the Monopod has been unpaired, turn it OFF and then ON again to enter pairing mode again.



This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio

television reception, which can be determined by turning the equipment off and on, the

communications. However, there is no quarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or

# ASSEMBLING THE MONOPO

1. Put your smartphone in the phone clamp. You can adjust the length of the base of the clamp to the size of your phone.






knob to adjust the angle of the smartphone clamp, then tighten it to secure the clamp.




Waming: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. i hist device must accept any interference, and I hist device must accept any interference received, including interference that may cause undesired operation.

FCC Part 16: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:



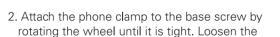

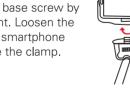

3. Enter the camera app on your smartphone.



4. Extend the Monopod to the desired length.



5. Focus on yourself and press the shutter button on the handle.





- 1. Make sure the Bluetooth Monopod is turned ON before beginning the pairing process.
- 2. Keep your Bluetooth Monopod and Bluetooth enabled device within 3 feet of each other during the pairing process.
- 3. The LED indicator light will flash BLUE.
- 4. Check that YOUR device's Bluetooth feature is turned ON.
- 5. Try repeating the pairing process, see "Pairing the Monopod."

- 1. Make sure the Bluetooth Monopod is turned ON before beginning the pairing process. 2. The LED indicator light will flash BLUE.
- 3. The Monopod is now in pairing mode.

## IABILITY DISCLAIMER

TELECOM PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE

SOUTHERN TELECOM PRODUCT, EVEN IF SOUTHERN TELECOM HAS BEEN ADVISED OF THE

INSIDE OR OUTSIDE THE SOUTHERN TELECOM PRODUCTS, INCLUDING, WITHOUT LIMITATION, LAPTOPS, CELLULAR PHONES, OR OTHER HANDHELD DEVICES, OR ANY LOSS OF DATA

CONTAINED IN THE FOREGOING DEVICES. NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES

(INCLUDING NEGLIGENCE) OR OTHERWISE), THE ENTIRE AGGREGATE LIABILITY OF SOUTHERN

TELECOM AND ANY OF ITS DISTRIBUTORS AND/OR SUPPLIERS SHALL BE LIMITED TO THE

AMOUNT ACTUALLY PAID BY YOU FOR THE SOUTHERN TELECOM PRODUCT GIVING RISE TO

LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR

EXCLUSIONS MAY NOT APPLY TO YOU. THE LIMITATIONS OF LIABILITY SET FORTH ABOVE SHALL

LIABILITY. SOME STATES AND/OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR

APPLY TO THE MAXIMUM EXTENT PERMITTED UNDER APPLICABLE LAW.

REFERENCED HEREIN AND ALL DIRECT OR GENERAL DAMAGES IN CONTRACT TORT

This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty").

In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange. IN NO EVENT, UNDER ANY CAUSE OF ACTION OF THEORY OF LIABILITY, SHALL SOUTHERN TELECOM ITS DISTRIBUTORS OR SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INDIRECT. INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES, OF ANY NATURE WHATSOEVER, ARISING OUT OF THE USE OF OR INABILITY TO USE ANY SOUTH-TO OBTAIN WARRANTY SERVICE: ERNTELECOM PRODUCT, INCLUDING, WITHOUT LIMITATION, PROPERTY DAMAGE, LOSS OF e proof of the date of purchase within the package (Dated bill of VALUE OF THE SOUTHERN TELECOM PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE Prepay all shipping costs to the authorized service center, and USED IN OR WITH THE SOUTHERN TELECOM PRODUCT, OR LOSS OF USE OF THE SOUTHERN

remember to insure your return.

Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.

Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier. POSSIBILITY OF SUCH DAMAGES. WITHOUT LIMITING THE FOREGOING, YOU UNDERSTAND AND AGREE THAT SOUTHERN TELECOM HAS NO LIABILITY FOR ANY DAMAGE OR DESTRUCTION TO CONSUMER ELECTRONICS DEVICES OR OTHER PERSONAL PROPERTY THAT ARE CONTAINED

LIMITED WARRANTY

The shipping address of the authorized service center is:







Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

user is encouraged to try to correct the interference by one or more of the following • Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the • Consult the dealer or an experienced radio/TV technician for help.