 



## BASE UNIT Controls

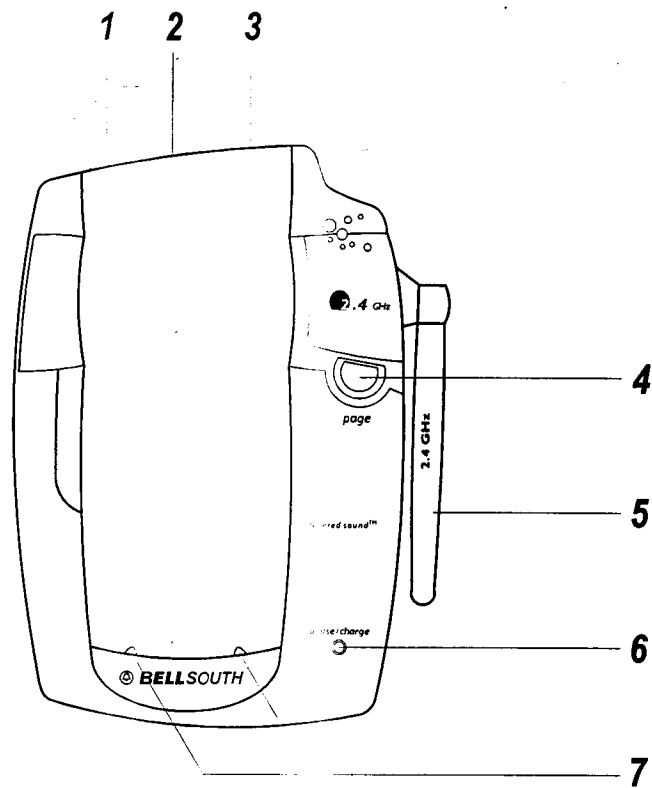

## **BASE UNIT Controls**

1. **TELEPHONE LINE CONNECTION JACK**
2. **POWER-IN CONNECTION JACK**
3. **TONE/PULSE Select Switch**
4. **PAGE**  **Button:** Press to page the **HANDSET**. Press again to stop.
5. **ANTENNA:** Raise or reposition for the best reception.
6. **IN USE/CHARGE LED Indicator:** Lights up when the **HANDSET** is in **TALK** mode or when the **HANDSET** is placed on the **BASE UNIT** for charging.
7. **CHARGE TERMINALS:** For charging the **BATTERY PACK** inside the **HANDSET**. We recommend cleaning the **CHARGE TERMINALS** periodically with a damp cloth.

### **IMPORTANT**

 
Locating your **BASE UNIT** near appliances such as televisions, refrigerators, radios, or microwave ovens may cause interference.

## Getting Started

### Connecting Your Phone


This section is a reference guide to the basic functions and operations of your cordless telephone. For more detailed descriptions of the operations and features of this telephone, refer to the Contents on page 1.

1. Carefully remove your cordless telephone from its shipping carton. If there is any visible damage, do not attempt to operate this equipment. Return it to the place of purchase.
2. Check to be sure you have all items that come with this cordless telephone system. You should have a **HANDSET**, **BASE UNIT**, **AC ADAPTOR**, **MOUNTING BRACKET**, **TELEPHONE LINE CORD**, **SHORT TELEPHONE LINE CORD** and **OWNER'S MANUAL**.

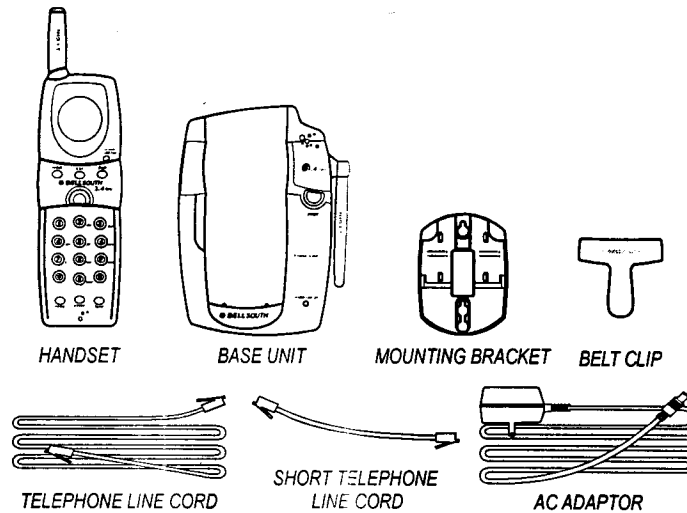


3. Insert the small plug on the end of the AC ADAPTOR into the POWER-IN CONNECTION JACK at the back of the **BASE UNIT**.
4. Plug the AC ADAPTOR into a 120V AC wall outlet.  
**⚠ USE ONLY WITH CLASS 2 POWER SOURCE 9V DC, 300mA.**
5. Insert one plug of the TELEPHONE LINE CORD into the house TELEPHONE JACK and the other end into the TELEPHONE LINE CONNECTION JACK on the back of the **BASE UNIT**. (If you have an older 4-prong TELEPHONE JACK, you will need an RJ-11C TELEPHONE JACK ADAPTOR. This adaptor is available at the same place you purchased your telephone.)
6. Raise or reposition the ANTENNA on the **BASE UNIT** for the best reception.
7. We recommend not placing this unit next to appliances. Doing so may cause interference.



## Getting Started

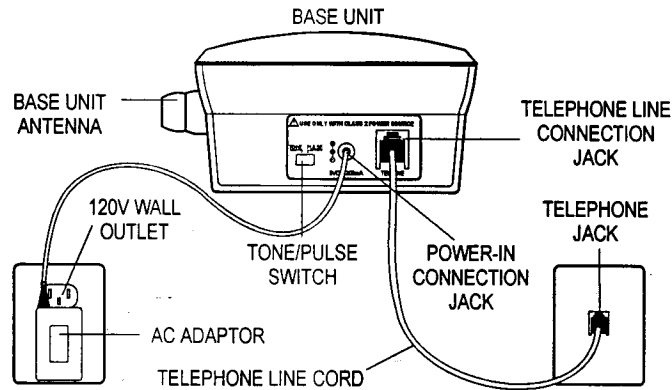 


8. Install the **HANDSET BATTERY PACK** by plugging it into the **BATTERY CONNECTOR** inside the **BATTERY COMPARTMENT**.
9. Place the **BATTERY PACK** inside the **BATTERY COMPARTMENT**.
10. Slide the **HANDSET BATTERY COMPARTMENT COVER** firmly into place in its closed position.
11. **TONE/PULSE Select Switch:**
  - A. If your home is equipped with a tone dialing system, set the **TONE/PULSE Select Switch** to the **TONE** position.
  - B. If you have a rotary dialing system, set the **TONE/PULSE Select Switch** to the **PULSE** position.
  - C. If you are unsure which system you have, set the **TONE/PULSE Select Switch** to the **TONE** position. Press the **talk** button on the **HANDSET** to get a dial tone, and press any button on the **TELEPHONE KEYPAD** except the zero. If the dial tone continues, it means that you do not have tone dialing service. Press the **talk** button on the **HANDSET** to hang up. Set the **TONE/PULSE Select Switch** to the **PULSE** mode and then try again.

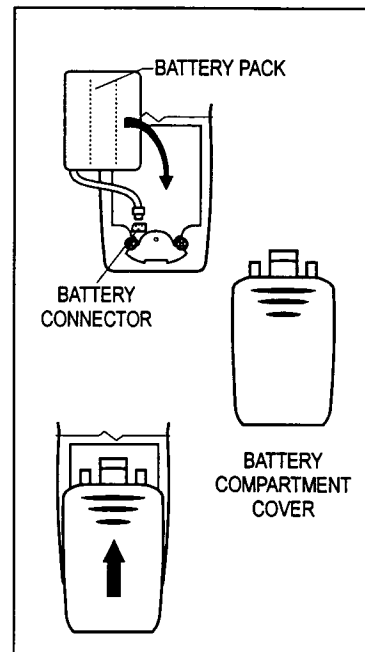 

## Getting Started

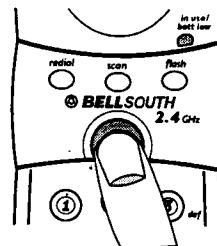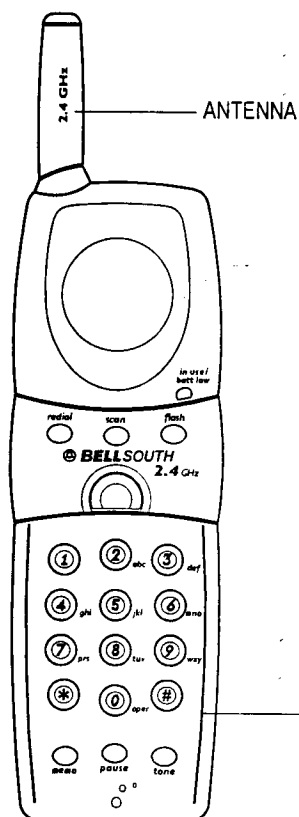  

 Press the **talk** button to confirm that you have a dial tone. If you do not get a dial tone, review steps 3 through 11. If you still do not have a dial tone, refer to the Problem Solving section on page 20.

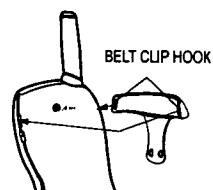

With the back of the **HANDSET** facing up, insert one side of the **BELT CLIP HOOK** into the matching slot at the top side of the **HANDSET**. Press down on the opposite side of the **BELT CLIP** until the other hook locks into the slot on the side of the **HANDSET**.

12. Before initial use, charge the **HANDSET** for 12 hours.

*You are now ready to use your new  
BellSouth Cordless Telephone.*

## Desk Mounting

### Desk Mounting

One of the special features of your equipment is the unique design of the MOUNTING BRACKET which can hold your phone at an angle of 30° when desk mounting. There are two positions to choose from:

1. **NORMAL POSITION** (MOUNTING BRACKET not required):  
For normal position, as shown in Figure 1, place the **BASE UNIT** on any desired but suitable location.

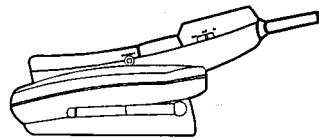 


FIGURE 1

2. **30° POSITION** (See Figure 2):  
With the back of the **BASE UNIT** facing up, insert the hooks of the MOUNTING BRACKET (following the arrow direction for the DESK MOUNT) into the matching slots of the **BASE UNIT** (as shown in Figure 3). Then slide the MOUNTING BRACKET into place as indicated by the arrow.

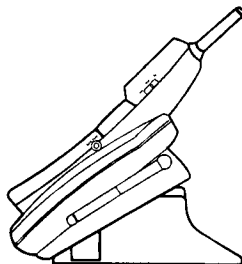 


FIGURE 2

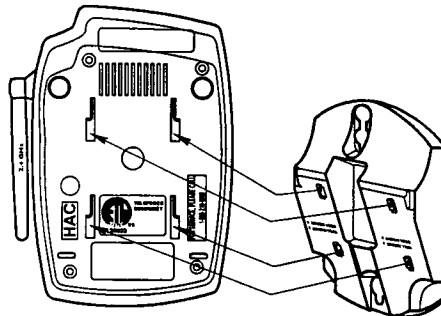 



FIGURE 3

## Wall Mounting
 
### Wall Mounting

You may choose to put the **BASE UNIT** of your cordless telephone on a wall.

1. With the back of the **BASE UNIT** facing up, connect the **SHORT TELEPHONE LINE CORD** to the **TELEPHONE LINE CONNECTION JACK**.
2. Feed the **SHORT TELEPHONE LINE CORD** into the groove on the back of the **BASE UNIT** then insert the free end of the **SHORT TELEPHONE LINE CORD** through the hole of the **MOUNTING BRACKET**.
3. Insert the hooks of the **MOUNTING BRACKET** into the matching slots on the back of the **BASE UNIT** (as shown below). Then slide the **MOUNTING BRACKET** until it locks into place. Plug the free end of the **SHORT TELEPHONE LINE CORD** into the **MODULAR WALL JACK**.
4. Align the upper keyhole of the **MOUNTING BRACKET** with the upper stud of the wall plate, so that the opening end of the **MOUNTING BRACKET** matches the lower stud, then pull the **BASE UNIT** down until it is securely seated.

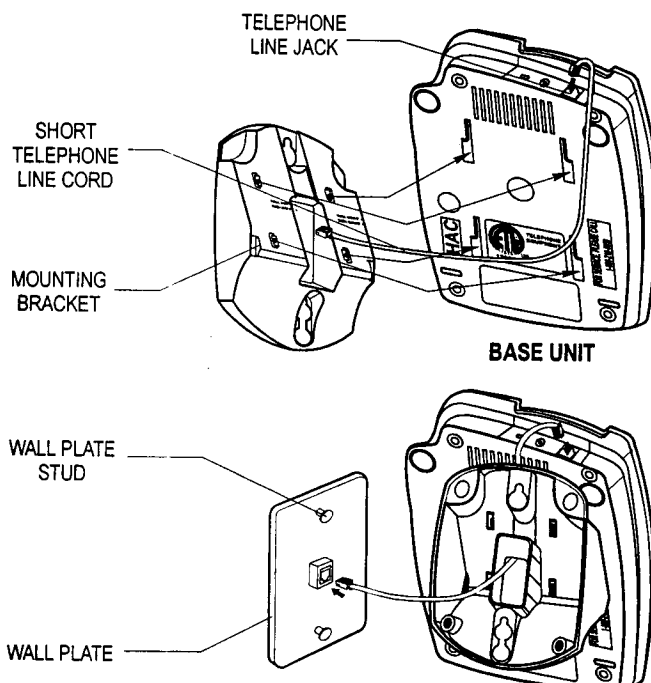

## ***Basic Operation***

### ***Preparing for Use***

Before you can use your cordless telephone, you must charge the **HANDSET** for 12 hours. Failure to do so will require recharging of the **BATTERY PACK** more often.

1. Place the **HANDSET** on the **BASE UNIT** for 12 hours.
2. After 12 hours, remove the **HANDSET** from the **BASE UNIT**.
3. Raise or reposition the **BASE UNIT ANTENNA** for the best reception.

*Before you can use your cordless telephone, you must charge the **HANDSET** for 12 hours. Failure to do so will require more frequent charging of the **BATTERY PACK**. See page 18 for more information on the **BATTERY PACK**.*

#### **NOTE:**

Depending on the frequency of use, once the **HANDSET** is fully charged, it remains functional for approximately 4 hours of continuous use and approximately 5 days when the **HANDSET** is off the **BASE UNIT** in **STANDBY** mode.

### **IMPORTANT**

**The AC ADAPTOR must always be plugged into an electrical outlet.**



 
## Receiving Calls

### Receiving Calls with the HANDSET on the BASE UNIT

1. When the phone rings, lift the **HANDSET**.  
The IN USE LED indicator will light up.

**NOTE:** The **HANDSET** RINGER ON/OFF switch must be in the "RINGER ON" position for ringer to operate.

2. Start your conversation.
3. To end your conversation, either press the **talk** button or place the **HANDSET** on the **BASE UNIT**. If you place the **HANDSET** on the **BASE UNIT** charge cradle, you activate the automatic **STANDBY** feature.

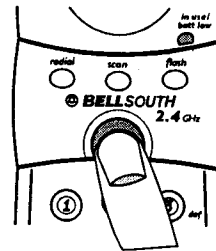

### Receiving Calls with the HANDSET off the BASE UNIT

1. When the phone rings, press the **talk** button. The IN USE LED indicator will light up.
2. Start your conversation.
3. To end your conversation, either press the **talk** button or place the **HANDSET** on the **BASE UNIT**. If you place the **HANDSET** on the **BASE UNIT** charge cradle, you activate the automatic **STANDBY** feature.

**NOTE:** The **BASE UNIT** has no ringer and does not ring when receiving an incoming call.

**NOTE:**

If you are too far away from the **BASE UNIT**, the **HANDSET** emits "beep" sounds to warn you that the background noise level is too high for proper communication between the **HANDSET** and the **BASE UNIT**. When you hear this sound, you should move closer to the **BASE UNIT** to reduce the noise level. Otherwise, the call will automatically cut off.