



 
Multi-HANDSET, Multi-BASE UNIT 2.4GHz Digital Spread Spectrum Technology CORDLESS CALLER ID/CALL WAITING WITH SPEAKERPHONE

77 CHANNEL AUTOHOP

Model GH9742

**OWNER'S MANUAL
INSTALLATION AND
OPERATING INSTRUCTIONS**

***PLEASE READ THIS
MANUAL CAREFULLY
BEFORE USE.
KEEP FOR YOUR
REFERENCE.***

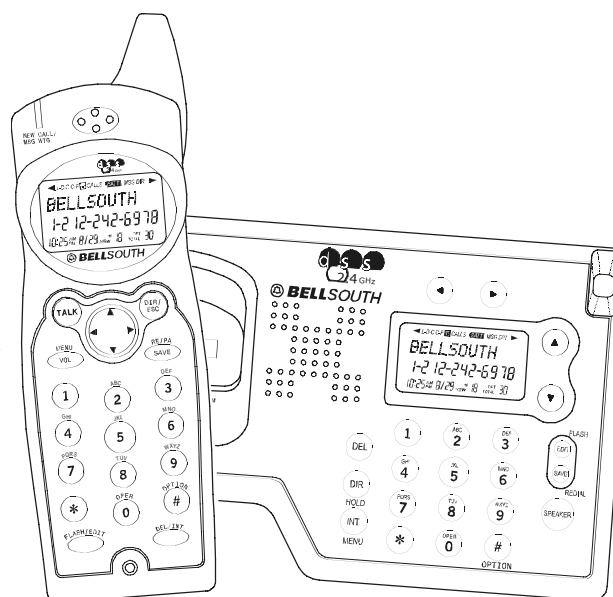

***For installation information,
please see "Getting Started"
instructions on page 6 or your
separate Quick Start guide.***

**Visit Us on the Web:
www.uselectronics.info**

© 2002 BellSouth Corporation

Special Features

Congratulations on your selection of a quality **BellSouth Product**. With proper care and adherence to the set-up and user instructions in this Owner's Manual, this unit will provide you with years of trouble-free service.

BellSouth is committed to providing quality products that fit your needs. We would like to have any comments or suggestions you might have on this product. You may mail your comments to:

U.S. Electronics
105 Madison Avenue
New York, NY 10016

When examining your new **BellSouth** cordless telephone, you will find an array of special features including:

Digital Spread Spectrum Technology - Utilizes a "wider frequency band" for a more secure conversation with a clarity of digital sound, extended range, and minimal interference from other cordless telephone.


77 Channel Auto-hop - When interference is received, the telephone automatically hops to the clearest channel.


Desk or Wall Mount - Use this equipment as a desk phone or as a wall phone.

Tone or Pulse Dialing - Use this phone for either TONE (push-button) or PULSE (rotary) dialing.

Automated Functions - Redial the last number called and automatic STANDBY mode.

Security - Ensures greater privacy because of a built-in security code with 4,000,000 possible combinations that prevents use of your telephone line by another nearby cordless phone.

Special Services - Use the  button to access special services such as Call Waiting supplied by your telephone company or company switchboard.

STANDBY Mode - When in STANDBY mode (ON-HOOK), the phone is capable of receiving a call. When the **HANDSET** is on the **BASE UNIT**, it is automatically in the STANDBY mode (ON-HOOK). When the **HANDSET** is taken off the **BASE UNIT**, it remains in the STANDBY mode until you activate the .

Battery Power Saver - Recharge your BATTERY PACK many times with the built-in CHARGER. Once fully charged, in STANDBY mode, the **HANDSET** can receive/send calls for a maximum of five days without the need for recharging. Length of charge depends on frequency of use.

Luminous LCD Screen - The LCD Screen emits light for 5 seconds everytime you press any of the TELEPHONE KEYPAD button.

HANDSET Ringer Level - Select the ringer sound level (HI, LOW, OFF).

HANDSET Ringer Melody - Select the desired ringer melody from the 10 available melodies.

HANDSET Volume Control - Press the /MENU button and then select the desired receiver volume setting from Low, Medium, High, or Maximum.

Alarm Clock - The telephone emits a distinctive sound when the ALARM CLOCK function is activated (See page 27).

HEADSET JACK - Your telephone can utilize a headset for hands-free communication.

BELT CLIP - Use the BELT CLIP to hang your **HANDSET** on your belt.

Special Features

CALLER ID SYSTEM

Multi-Function Large LCD Screen - Shows the number you are dialing and, with Caller ID service available through subscription from your local telephone company, displays information about the caller before you answer the call.

Name and Number DIRECTORY (PHONE BOOK) - Stores up to 40 names and numbers so that you can call them with a single key stroke.

Caller List - Available with Caller ID service. Stores up to 50 calls to keep track of everyone who called. The name, phone number, time and date of the call are recorded. Allows you to return their calls with a few key strokes.

Outgoing Call Memory - The telephone stores the last 8 OUTGOING CALLS to keep track of the one you called. The name, phone number, time, date, and the duration of the call are recorded. Allows you to call them again with a single key stroke.

Preferred Calls - You can mark the name and number of a welcome caller in the DIRECTORY (PHONE BOOK). When that number calls in, the caller's name will appear on the LCD Screen and a special ring sound or the selected PREFERRED RINGER MELODY will be heard.

Blocked Calls - You can mark the name and number of an unwelcome caller in the DIRECTORY (PHONE BOOK). When that number calls in, the caller's name will appear on the LCD Screen and the ringer will be disabled.

Repeat Call Indicator - Shows if a new incoming call has called more than once.

Out of Area Call Indicator - Advises you that the incoming call is not in a Caller ID service area.


Unavailable Call Indicator - Advises you that the origin of the incoming call does not support the Caller ID system.

Call Waiting Service - Displays the name and number of the second caller, if you have subscribed for Call Waiting service from your local telephone company (see page 14.)

MULTI-HANDSET, MULTI-BASE UNIT SYSTEM

Multi-HANDSET - Registers a total of 9 HANDSETS into the operating system.

Multi-BASE UNIT - The user can have the option to add another BASE UNIT. The system supports 2 BASE UNITS connected to a separate telephone line. Once registered, the HANDSETS can open link to any of the BASE UNITS to make and/or receive a call.

Automatic Linking - All 9 HANDSETS can register to the two BASE UNITS (B1, B2). When the FIRST BASE UNIT (B1) is already engaged, the other HANDSETS can automatically open link to the SECOND BASE UNIT (B2) by pressing the  button.

Intercom Call - A HANDSET can make an INTERCOM call to the other HANDSETS in the system.

Call Transfer - During a telephone conversation, the call can be transferred from one HANDSET to another HANDSET.

Extension Phone Detection - When one HANDSET gets ON-HOOK, the LCD Screen of all the other HANDSETS linked to the same BASE UNIT will display "Ext in use."

 
Special Features

HANDSET



SPEAKERPHONE FEATURE

Speakerphone - This telephone allows you to answer calls using the **BASE UNIT** through the speakerphone function.

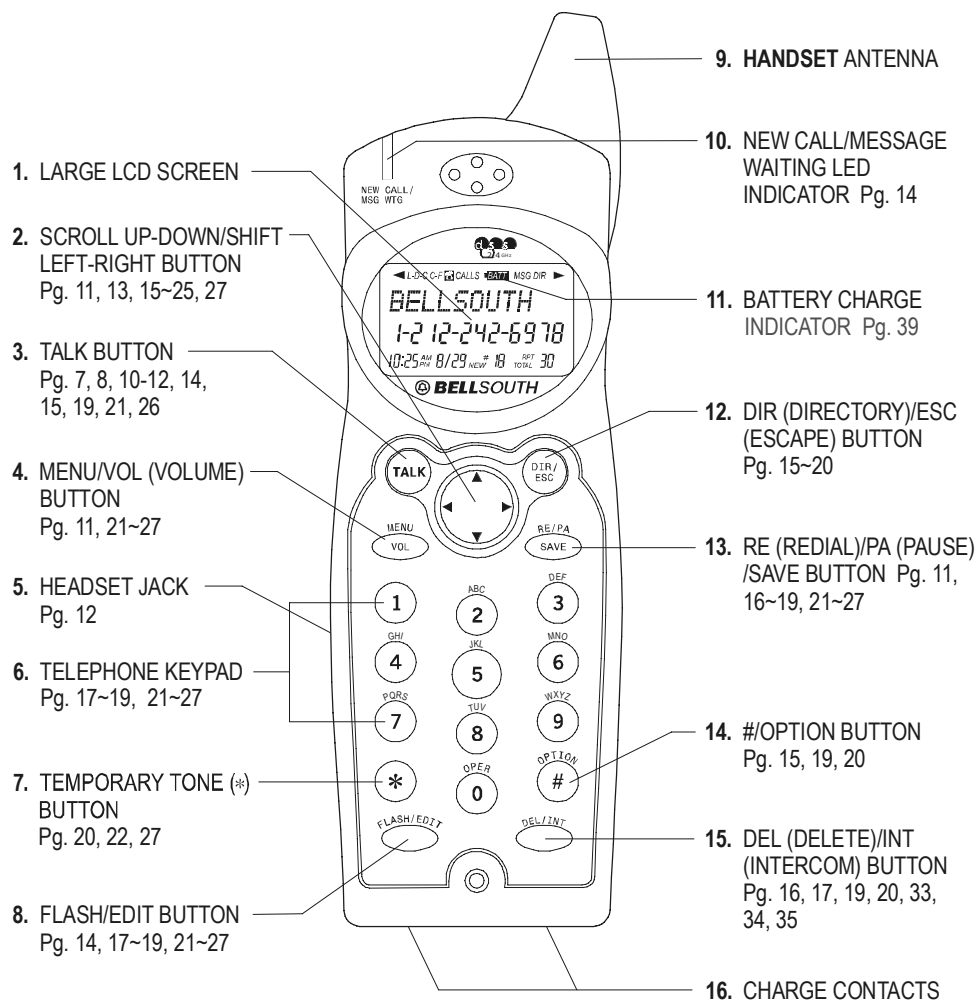HANDSET Controls



 
HANDSET Controls

- 1. Large LCD Screen:** Shows call information, phone status, prompts, and DIRECTORY (PHONE BOOK) items.
- 2. SCROLL UP-DOWN, SHIFT LEFT-RIGHT**  **Button:** Press to move around the large LCD Screen.
- 3.  Button:** Press to answer an incoming call or to place a call. Press to end a call.

HANDSET Controls

4. **VOL /MENU Button:** (VOLUME) During TALK mode, press to adjust the receiver volume to your comfortable listening level. (MENU) Press to access the special functions operation in STANDBY mode. (For special functions see pages 21~27.)
5. **HEADSET JACK:** For connecting your headset plug to enjoy hands-free communication. (See page 12 for detail.)
6. **TELEPHONE KEYPAD 1 to 0 Buttons:** Allows you to make a call depending on pressed button. (For TELEPHONE KEYPAD characters, see page 18.)
7. **TEMPORARY TONE * Button:** Press to temporarily change the DIALING mode from PULSE to TONE for Rotary Service Users. (Press once before entering numbers to access the answering system or electronic banking services, etc.)
8. **FLASH/EDIT Button:** (EDIT) Press to edit listed items. (FLASH) Press to answer a call if you have Call Waiting.
9. **HANDSET ANTENNA**
10. **NEW CALL/MSG WTG (MESSAGE WAITING) LED Indicator:** (NEW CALL) Blinks in RED color to indicate that you have a new Caller ID call stored in memory. (MESSAGE WAITING) Blinks in GREEN color when receiving a Message Waiting signal, if you have subscribed to a Voice Mail message service from your local telephone company. (See page 14.)
11. **BATTERY CHARGE INDICATOR:** Displays the battery charge condition in three status:
 - Battery Full (4 bars shown)
 - Low Battery Level (2 bars blinking), See page 39 for detail.
 - During Charging (4 bars growing)
12. **DIR/ESC DIRECTORY (PHONE BOOK) Button:** Press to access names and numbers stored in the DIRECTORY (PHONE BOOK). (See pages 15 to 20 for details.)
13. **SAVE /RE (REDIAL)/PA (PAUSE) Button:** (SAVE) Press and hold down to save the changes on the listed items. (REDIAL) Press to redial the last number you dialed. (PAUSE) Press to insert a pause while dialing. (You will need the **SAVE /RE/PA** button to dial numbers which use an alternative Long Distance Access Code.)
14. **# /OPTION Button:** (OPTION) Press to change the displayed telephone number to 7, 10, or 11 digit DIALING mode during Caller ID callback.
15. **DEL/INT (DELETE)/INT Button:** (DELETE) - Press and hold down to delete items or individual characters. (INTERCOM) Press to make an INTERCOM CALL to another **HANDSET**.
16. **CHARGE CONTACTS:** For charging the BATTERY PACK inside the **HANDSET**. We recommend cleaning the CHARGE CONTACTS periodically with a damp cloth.

BASE UNIT Controls

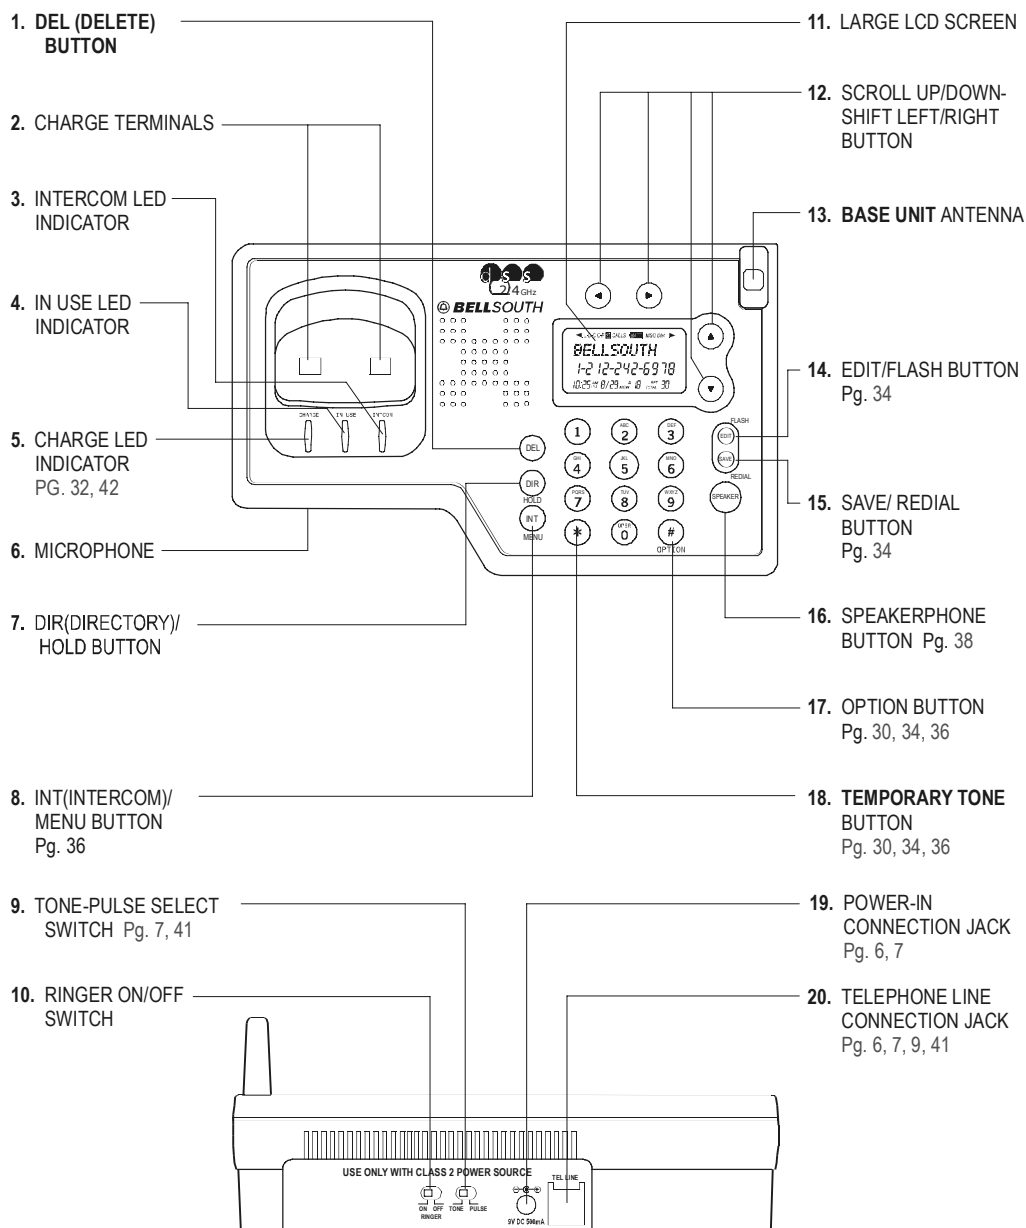

BASE UNIT Controls

1. **DEL DELETE Button:** Press and hold down to delete items or individual characters.
2. **CHARGE TERMINALS:** For charging the HANDSET BATTERY PACK. For best performance, clean the CHARGE TERMINALS periodically with a damp cloth.
3. **INTERCOM LED INDICATOR:** Lights up when the INTERCOM function is activated.
4. **IN USE LED INDICATOR:** Lights up to indicate that the **HANDSET** is in TALK mode or blinks to indicate an extension phone is in use.
15. **CHARGE LED INDICATOR:** Indicates that the **HANDSET** is placed on the **BASE UNIT** for charging.
6. **MICROPHONE**
7. **DIR DIRECTORY/ HOLD Button:** (DIRECTORY) Press to access names and numbers stored in the DIRECTORY (PHONE BOOK). (HOLD) Press to put the call on hold.
8. **INT (INTERCOM)/ MENU Button:** Press to initiate an intercom conversation between the **BASE UNIT** and the **HANDSET**. It is also used to page the **HANDSET** if you misplace the **HANDSET**. (MENU) Press and hold to access the special functions operation in STANDBY mode. (For special functions, see pages 33 to 34)
9. **TONE-PULSE SELECT SWITCH**
10. **RINGER ON/OFF SWITCH:** Set switch to OFF to disengage the ringer on the **BASE UNIT**.
11. **LARGE LCD Screen:** Shows call information, phone, status, prompts and DIRECTORY (PHONE BOOK).
12. **SCROLL UP-DOWN, SHIFT LEFT-RIGHT:** Press to move around the large LCD Screen on the **BASE UNIT**.
13. **BASE UNIT ANTENNA**
14. **EDIT/ FLASH Button:** (EDIT) Press to edit listed items. (FLASH) Press to answer a call if you have a call waiting.
15. **SAVE /REDIAL Button:** (SAVE) Press and hold to save the changes on the listed items. (REDIAL) Press to redial the last number you dialed. (You will need the **SAVE /REDIAL** button to dial numbers which use an alternative Long Distance Access Code.)
16. **SPEAKERPHONE Button:** Press to place a call and receive a call without using the **HANDSET**.
17. **# OPTION Button:** Press to change the displayed telephone number to 7, 10, or 11 digit DIALING mode during Caller ID callback.
18. *** TEMPORARY TONE Button:** Press to temporarily change the DIALING mode from PULSE to TONE for Rotary Service Users. (Press once before entering numbers to access the answering system or electronic banking services, etc.)
19. **POWER-IN CONNECTION JACK**
20. **TELEPHONE LINE CONNECTION JACK**

Contents

Safety Instructions	4
Getting Started.....	6
Desk Mounting	9
Wall Mounting.....	9
Cordless Telephone Operation.....	10
Preparing for Use.....	10
Receiving Calls.....	10
Placing Calls using the HANDSET.....	11
Placing Calls using the BASE UNIT.....	11
HANDSET Volume Control.....	11
Redial Feature using the HANDSET.....	11
Redial Feature using the BASE UNIT.....	12
Extension In Use Indicator.....	12
Using the Headset Feature.....	12
Caller ID System Operation.....	13
Caller ID System.....	13
Viewing Caller Information During Incoming Calls.....	13
Caller ID with Call Waiting.....	14
Message Waiting.....	14
Caller List	14
Viewing the Caller List	15
Placing a Call from the Caller List	15
Storing Caller ID Records into the DIRECTORY (PHONE BOOK).....	16
Deleting a Single Record.....	16
Deleting all Records.....	16
Name and Telephone number DIRECTORY (PHONE BOOK).....	17
Viewing the DIRECTORY (PHONE BOOK).....	17
Storing Phone Numbers.....	17
Telephone Keypad Characters.....	18
Placing Calls from the DIRECTORY (PHONE BOOK).....	19
Editing a Stored Number in the DIRECTORY (PHONE BOOK).....	19
Deleting a Stored Record in the DIRECTORY (PHONE BOOK).....	20



Contents

Preferred Calls	20
Blocked Calls	20
Forwarded Calls.....	20
Long Distance Calls.....	20
Outgoing Calls.....	21
Function Settings for HANDSET.....	21
A. Setting the Ringer Level.....	22
B. Setting the Ringer Melody.....	23
C. Turning the First Ring ON or OFF.....	23
D. Setting the Time and Date.....	23
E. Adjusting the Contrast.....	24
F. Setting the PBX Number.....	24
G. Changing the Language.....	25
H. Changing the User Name.....	25
I. Deleting Message Waiting Indication.....	26
J. Setting the Area Code.....	26
K. Registering the HANDSET/S	27
L. Setting the Alarm Clock.....	27
Function Settings for BASE UNIT.....	28
A. Setting the Ringer Level.....	29
B. Turning the First Ring ON or OFF.....	29
C. Setting the Time and Date.....	29
D. Adjusting the Contrast.....	30
E. Setting the PBX Number.....	30
F. Changing the Language.....	31
G. Changing the User Name.....	31
H. Deleting Message Waiting Indication.....	31
I. Setting the Area Code.....	32
J. Setting the Alarm Clock.....	32
Multi- HANDSET , Multi- BASE UNIT System Operation.....	33
Intercom Call from HANDSET to HANDSET	33
Receiving a Call while in Intercom Call.....	33

Contents

Intercom Call from HANDSET to BASE UNIT	33
Intercom Call from BASE UNIT to HANDSET	34
Transfer Call from HANDSET to HANDSET	34
Transfer Call from HANDSET to BASE UNIT	35
Transfer Call from BASE UNIT to HANDSET	35
Speakerphone Operation.....	38
Security.....	38
Recharging the BATTERY PACK.....	39
Changing the BATTERY PACK.....	40
Problem Solving.....	41
Technical Information.....	43
FCC Requirements.....	44
Warranty Information.....	46
Wall Mount Template.....	50



Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock and/or injury, always follow these basic safety precautions when using your cordless telephone equipment.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the telephone.
3. Do not use this telephone near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, near a swimming pool, or anywhere else where there is water.
4. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
5. Do not use the telephone to report a gas leak in the vicinity of the leak.
6. Use only the power cord and BATTERY PACK indicated in the Owner's Manual. Do not dispose of the BATTERY PACK in a fire. The BATTERY PACK may explode. Check with local codes for possible special disposal instructions.
7. Operate this telephone using the electrical voltage as stated on the **BASE UNIT** or in the Owner's Manual. If you are not sure of the voltage in your home, consult your dealer or local power company.
8. Unplug this telephone from the wall outlet before cleaning or replacing the BATTERY PACK. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.
9. Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.
10. Do not cover the slots and openings on this telephone. This telephone should never be placed near or over a radiator or heat register. This telephone should not be placed in a built-in installation unless proper ventilation is provided.
11. Do not place anything on the power cord. Install the telephone where no one will step or trip on the cord.
12. Do not overload wall outlets or extension cords as this can increase the risk of fire or electric shock.
13. Never push any objects through the slots in the telephone. They could touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the telephone.
14. To reduce the risk of electric shock, do not take this telephone apart. If service or repair work is required on this telephone, take it to a qualified service representative. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
15. Unplug this telephone from the wall outlet and consult a qualified service representative in any of the following situations.
 - A. When the power supply cord is frayed or damaged.
 - B. If liquid has been spilled into the telephone.
 - C. If the telephone has been exposed to rain or water.
 - D. If the telephone does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment may require extensive work by a qualified technician to restore the telephone to normal operation.

Safety Instructions

- E. If the telephone has been dropped or the case has been damaged.
- F. If the telephone exhibits a distinct change in performance.
- 16. Never install telephone wiring during a lightning storm.
- 17. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- 18. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
- 19. Use caution when installing or modifying telephone lines.

Battery Safety

CAUTION:

Danger of explosion if BATTERY PACK is incorrectly replaced. Replace only with the same or equivalent type. To reduce the risk of fire or personal injury, read and follow these instructions:

1. Use only the following type and size of BATTERY PACK:
 - Cordless Telephone BATTERY PACK
 - 3.6V, 800mAh
 - U.S. Electronics Inc.
 - Ni-Cd BATTERY PACK: model B658. (See page 39 for ordering information.)
 - LK Battery Tech. Co. Ltd. 3.6VDC, 800mAh Ni-Cd AA800mAhx3 (Alternative Battery.)
2. Do not dispose of the BATTERY PACK in a fire. It may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the BATTERY PACK. Released electrolyte from a BATTERY PACK is corrosive and may cause damage to the eyes or skin. Electrolyte may be toxic if swallowed.
4. Exercise care in handling the BATTERY PACK to prevent shorting the BATTERY PACK with conductive materials such as rings, bracelets, and keys. The BATTERY PACK or conductor may overheat and cause burns.
5. Charge the BATTERY PACK provided with (or identified for use with) this telephone only in accordance with the instructions and limitations specified in this manual.
6. Observe proper polarity orientation between the BATTERY PACK and BATTERY CHARGER.

SAVE THESE INSTRUCTIONS

ATTENTION:

 
The telephone that you have purchased contains a rechargeable BATTERY PACK. The BATTERY PACK is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this BATTERY PACK into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Getting Started

Connecting Your Phone


This section is a reference guide to the basic functions and operations of your cordless telephone. For more detailed descriptions of the operations and features of this telephone, refer to the Contents on page 1.

1. Carefully remove your cordless telephone from its shipping carton. If there is any visible damage, do not attempt to operate this equipment. Return it to the place of purchase.
2. Check to be sure you have all items that come with this cordless telephone system. You should have a **HANDSET**, **BASE UNIT**, AC ADAPTOR, BATTERY PACK, MOUNTING BRACKET, TELEPHONE LINE CORD, SHORT TELEPHONE LINE CORD, BELT CLIP, and Owner's Manual.


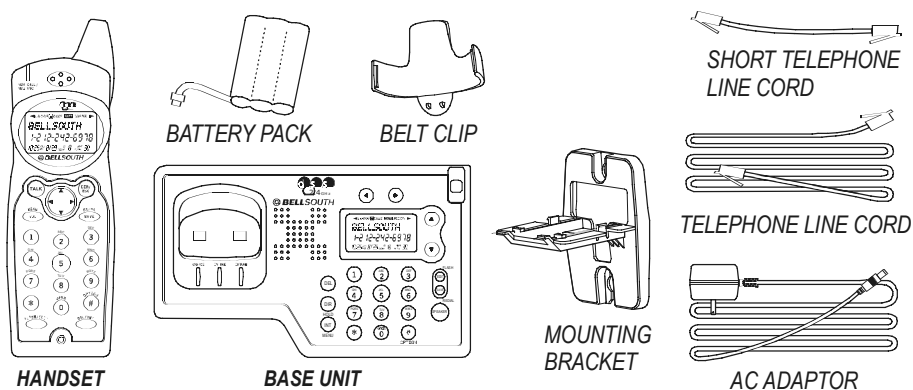


3. Insert the small plug on the end of the AC ADAPTOR into the POWER-IN CONNECTION JACK at the back of the **BASE UNIT**.
4. Plug the AC ADAPTOR into a 120V AC wall outlet.
USE ONLY WITH CLASS 2 POWER SOURCE 9V DC, 500mA for the BASE UNIT.
5. Insert one plug of the TELEPHONE LINE CORD into the house TELEPHONE JACK and the other end into the TELEPHONE LINE CONNECTION JACK at the back of the **BASE UNIT**. (If you have an older 4-prong TELEPHONE JACK, you will need an RJ-11C TELEPHONE JACK ADAPTOR. This adaptor is available at the same place you purchased your telephone.)
6. We recommend not placing this unit next to appliances. Doing so may cause interference.

 
Getting Started

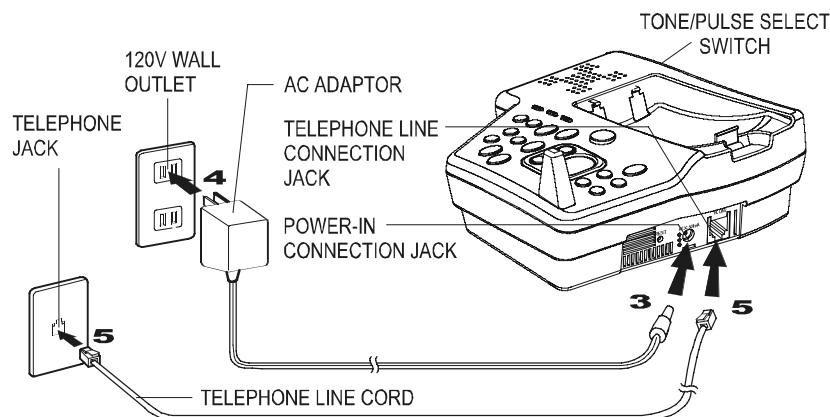


7. Install the **HANDSET BATTERY PACK** by plugging it into the **BATTERY CONNECTOR** inside the **BATTERY COMPARTMENT**.
8. Place the **BATTERY PACK** inside the **BATTERY COMPARTMENT**.
9. Slide the **HANDSET BATTERY COMPARTMENT COVER** firmly into place in its closed position.
10. **IMPORTANT: Before initial use, charge the HANDSET for 12 hours.**
11. **TONE/PULSE Select Switch:**
 - A. If your home is equipped with a tone dialing system, set the **TONE/PULSE Select Switch** to the **TONE** position.
 - B. If you have a rotary dialing system, set the **TONE/PULSE Select Switch** to the **PULSE** position.
 - C. If you are not sure which system you have, set the **TONE/PULSE Select Switch** to the **TONE** position. Press the **TALK** button on the **HANDSET** to get a dial tone, and press any button on the **TELEPHONE KEYPAD** except the zero. If the dial tone continues, it means that you do not have **TONE** dialing service. Press the **TALK** button on the **HANDSET** to hang up. Set the **TONE/PULSE Select Switch** to the **PULSE** mode and then try again.
12. Set the date and time on the **HANDSET**. (See page 23 for details.)
13. Set the date and time on the **BASE UNIT**. (See page 30 for details.)

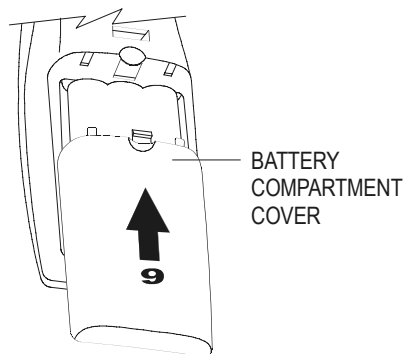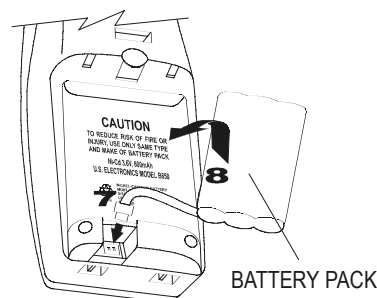  

Getting Started

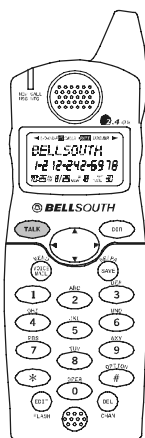 

 Press the **TALK** button to confirm that you have a dial tone. If you do not get a dial tone, review steps 3 through 11. If you still do not have a dial tone, refer to the Problem Solving section on page 41.

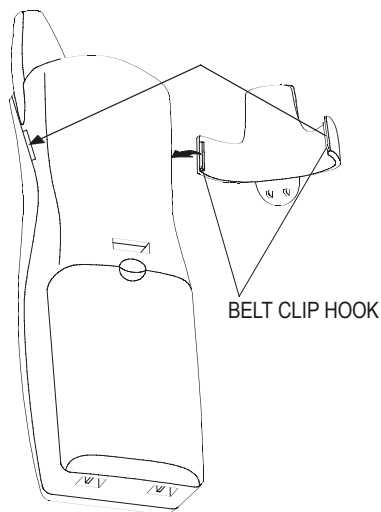

Belt Clip Installation

With the back of the **HANDSET** facing up, insert one side of the **BELT CLIP HOOK** into the matching slot at the top side of the **HANDSET**. Press down on the opposite side of the **BELT CLIP** until the other hook locks into the slot on the side of the **HANDSET**.

***You are now ready to use your new
BellSouth Cordless Telephone.***

IMPORTANT

In order to utilize the Caller ID feature, you must subscribe to Caller ID service from your local telephone company.

Desk Mounting

Desk Mounting

For normal position, as shown in Figure 1, place the **BASE UNIT** on any desired but suitable location.

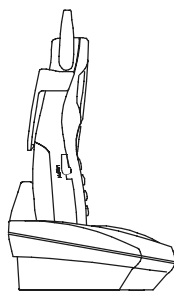 


FIGURE 1

Wall Mounting

You may choose to put the **BASE UNIT** of your cordless telephone on a wall.

1. With the back of the **BASE UNIT** facing up, connect the **SHORT TELEPHONE LINE CORD** to the **TELEPHONE LINE CONNECTION JACK**.
2. Insert the free end of the **SHORT TELEPHONE LINE CORD** through the hole of the **MOUNTING BRACKET**.
3. Insert the **OUTER HOOKS** of the **MOUNTING BRACKET** into the matching slots on the back of the **BASE UNIT** as shown in **FIGURE 2**.
4. Push the **MOUNTING BRACKET** upward until the **LOCKING HOOKS** snaps into the inner slots of the **BASE UNIT**.

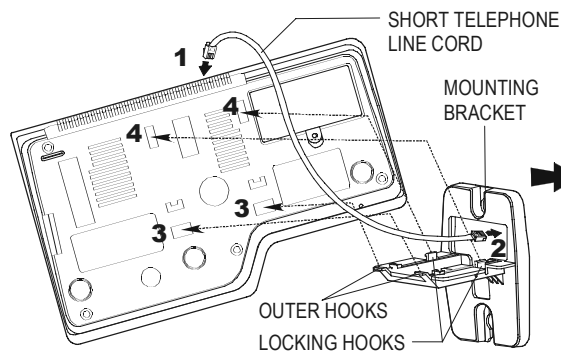 


FIGURE 2

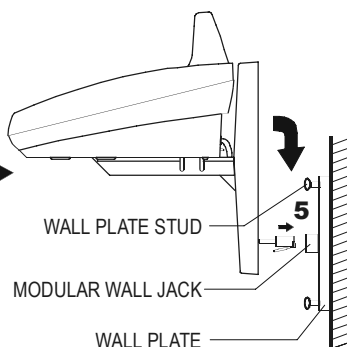 


FIGURE 3

5. Plug the free end of the **SHORT TELEPHONE LINE CORD** into the **MODULAR WALL JACK**.
6. Align the upper keyhole of the **MOUNTING BRACKET** with the upper stud of the wall plate, so that the opening end of the **MOUNTING BRACKET** matches the lower stud, then pull the **BASE UNIT** down until it is securely seated.

Cordless Telephone Operation

Preparing for Use

Before you can use your cordless telephone, you must charge the **HANDSET** for 12 hours. Failure to do so will require recharging of the **BATTERY PACK** more often.

1. Place the **HANDSET** on the **BASE UNIT** for 12 hours.
2. After 12 hours, remove the **HANDSET** from the **BASE UNIT**.



Before you can use your cordless telephone, you must charge the HANDSET for 12 hours. Failure to do so will require more frequent charging of the BATTERY PACK. See page 39 for more information on the BATTERY PACK.

 
 
 
NOTE:

Depending on the frequency of use, once the **HANDSET** is fully charged, it remains functional for approximately 4 hours of continuous use and approximately 5 days when the **HANDSET** is off the **BASE UNIT** in **STANDBY** mode.

Receiving Calls

When a call arrives, all the **HANDSETS** registered to the system will ring with the **RINGER LEVEL** and **MELODY** selected by the user. The first **HANDSET** to open link to the **BASE UNIT** will get the call.

1. When the phone rings, the LCD Screen of all **HANDSETS** registered to the system will display "Ring." If you have Caller ID, the LCD Screen will display the Caller ID information after the first ring.
2. Press  button. "Talk" will display and the Call Timer starts to count. Start your conversation.
3. To end your conversation, either press the  button or place the **HANDSET** on the **BASE UNIT**. The duration of the call will be displayed on the LCD Screen for about 3 seconds and then returns to the **STANDBY** mode.

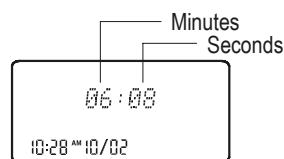

NOTE:

If you are too far away from the **BASE UNIT**, the **HANDSET** emits "beep" sounds to warn you that the background noise level is too high for proper communication between the **HANDSET** and the **BASE UNIT**. When you hear this sound, you should move closer to the **BASE UNIT** to reduce the noise level. Otherwise, the call will automatically cut off.

Cordless Telephone Operation

Placing Calls using the HANDSET

1. Press the **TALK** button. "Talk" will display and the Call Timer starts to count.
2. Wait until you hear a dial tone and then dial the phone number.
3. When you have finished your call, press the **TALK** button again or place the **HANDSET** on the **BASE UNIT**. The duration of the call will be displayed on the LCD Screen for about 3 seconds.

TALK B1
0 01

TALK B1
2426978
0 11

06:08

OR

1. Dial the phone number.
2. Press the **TALK** button. The number displayed will be dialed.
3. When you have finished with your call, press the **TALK** button again or place the **HANDSET** on the **BASE UNIT**. The duration of the call will be displayed on the LCD Screen for about 3 seconds.

Dial? B1
2426978

TALK B1
2426978
0 01

06:08

Placing Calls using the BASE UNIT

1. Press the **SPEAKER** button on the BASE UNIT.
2. Wait until you hear a dial tone and then dial the phone number.
3. When you have finished your call, press the **SPEAKER** button again.

Handset Volume Control

1. During a call conversation, adjust the **HANDSET** receiver volume level by pressing the **VOL /MENU** button. The LCD Screen will display "volume setting."
2. The default setting is "Low." Press the **SCROLL UP** or **DOWN** button, or press the **TELEPHONE KEYPAD** 1 to 4 button to select the desired setting from Low, Medium, High or Maximum.

Volume Setting B1
Low
10:28 AM 10/02

Volume Setting B1
High
10:29 AM 10/02

Redial Feature using the HANDSET

1. If you get a busy tone, press the **TALK** button or place the **HANDSET** on the **BASE UNIT** to hang up.
2. Later, press the **TALK** button again.
3. Listen for a dial tone.

Cordless Telephone Operation

4. Press the **SAVE** /RE/PA button. This will automatically redial the last telephone number you called.
5. When you have finished with your call, either press the **TALK** button again or place the **HANDSET** on the **BASE UNIT**.

 
Redial Feature using the BASE UNIT

1. Press the **SPEAKER** button.
2. Listen for a dial tone.
3. Press the **SAVE** /REDIAL button to automatically dial the last number you called.

NOTE: The **HANDSET** and **BASE UNIT** REDIAL functions are independent from each other.

Extension In Use Indicator

This telephone can detect when a **HANDSET** is already engaged from the **BASE UNIT**. The LCD Screen of all **HANDSETS** currently linked to the same **BASE UNIT** will display "Ext in-use." You will have to wait until the line is free to make a call.

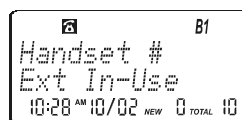


Using the Headset Feature

Your telephone can utilize a headset (not included) to be connected to your **HANDSET** for you to enjoy hands-free communication.

Pull out the **HEADSET JACK COVER** then insert the small plug on the end of the headset into the **HEADSET JACK** at the left side of the **HANDSET**. Follow the procedures discussed in "Receiving Calls" and "Placing Calls" to receive and place a call.

NOTE:

 When you plug the headset plug into the **HEADSET JACK** it automatically mutes the **MICROPHONE** and **SPEAKER** of the **HANDSET**. Unplug the headset to return the **HANDSET** to normal use. Headsets are available at most retail outlets that sell telephone equipment. The **HEADSET JACK** is compatible with 2.5 mm headset plugs only.

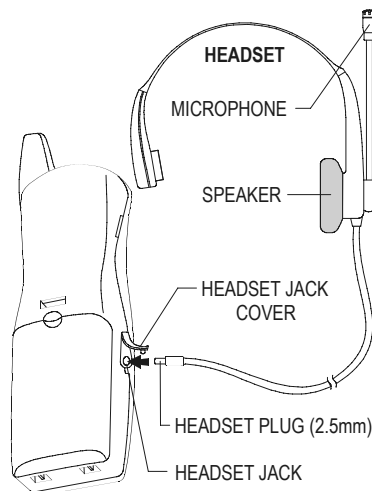

IMPORTANT

In order to utilize the Caller ID feature, you must subscribe to Caller ID service from your local telephone company.