

440Y

MAGICOOK™ KITCHEN

Ages: 2 years and up

Please save sales receipt for proof of purchase.

ADULT ASSEMBLY REQUIRED.

This package contains small parts. Keep away from children until assembled.

BATTERY SAFETY INFORMATION:

- Keep these instructions for future reference.
- Requires 3 “AA” alkaline batteries (not included). (Rechargeable batteries may be substituted.)
- Illus. # Install batteries correctly. If batteries are installed backwards, this product will not work.
- To avoid battery leakage:
 1. Follow the toy and battery manufacturer's installation instructions.
 2. Do not mix old and new batteries. Do not mix standard (carbon-zinc), alkaline or rechargeable (nickel-cadmium or nickel-metalhydride) batteries. Do not mix different brands of batteries. Only batteries of the same or equivalent type as recommended are to be used.
 3. Remove dead or exhausted batteries from product. Dispose of dead batteries properly; do not burn or bury them.
 4. Make sure cover is properly installed on unit at all times.
- Do not attempt to recharge non-rechargeable batteries.
- Charging of rechargeable batteries should be done under adult supervision with batteries removed from product.
- Supply terminals are not to be short circuited.

NOTE: If the unit stops working or doesn't work as it should, remove the batteries for a few minutes and then re-insert them. If there is still a problem, install new batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.

(!) WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Carrier frequency: 13.56 MHz

Field strength and measurement distance: 34 dB μ V/m @ 30 m

(Acceptable level: below 80 dB μ V/m)

CONSUMER SERVICE TOLL-FREE NUMBER:

United States:

1-800-321-0183

Monday - Friday

The Little Tikes Company

PO Box 2277

2180 Barlow Road

Hudson, Ohio 44236-0877

United Kingdom:

0800-521558

Monday - Friday

8 a.m. - 5 p.m.

Little Tikes UK

Crosby House, Meadowbank

Furlong Road, Bourne End

Bucks SL8 5AJ England

Printed in U.S.A.

D.R.©2004 The Little Tikes Company A division of Newell Rubbermaid (logo)

62440Y090