



Logitech® First Mouse

2-Buttons

English

Español

Français

Português

Copyright © 1998. Logitech, 6505 Kaiser Drive, Fremont, CA 94555, USA. All Rights Reserved.

Part Number: **622326-0403 Rev. A**

All trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

Software License Agreement. LOGITECH IS WILLING TO LICENSE THE ENCLOSED SOFTWARE TO YOU ONLY ON THE CONDITION THAT YOU ACCEPT ALL OF THE TERMS CONTAINED IN THIS LICENSE AGREEMENT. **This is a legal agreement between you (either an individual end-user or an entity) and Logitech. By opening the software package, you are agreeing to be bound by the terms and conditions of the Agreement. If you do not agree to the terms of this Agreement, promptly return the software package and other items that are part of this product in their original package with your payment receipt to your point of purchase for a full refund. Grant of License.** Logitech and its suppliers grant you a nonexclusive license to use one copy of the enclosed software program ("Software") on one computer only with the Logitech product you have purchased. No other rights are granted. The Software is in use if it is loaded on the computer's permanent or temporary memory. For backup purposes only, you may make one copy of the Software. You must include on the backup copy all copyright and other notices included on the Software as supplied by Logitech. Installation on a network server for the sole purpose of your internal distribution of the Software is permitted only if you have purchased an individual Software package for each networked computer to which the Software is distributed. **Restrictions.** Logitech and its suppliers retain ownership of the Software. You shall not decompile, disassemble, reverse-engineer, or modify the Software in any way. You may not transmit the Software over a network (except as expressly permitted above), by telephone, or electronically using any means. You may not transfer the Software except upon a permanent transfer of the enclosed Logitech product provided that all Software updates are included in the transfer, you do not retain a copy of the Software, and the transferee agrees to be bound by the terms and conditions in this license. Upon any violation of any of the provisions of this Agreement, rights to use the Software shall automatically terminate and the Software must be returned to Logitech or all copies of the Software destroyed. **Limited Product Warranty.** Logitech warrants that any hardware products accompanying this documentation shall be free from significant defects in material and workmanship for a period of one year from the date of purchase. Logitech also warrants that the software accompanying this documentation will perform substantially in accordance with the documentation for a period of 90 days from the date of purchase. Logitech's hardware and software warranty is nontransferable and is limited to the original purchaser. **Product Remedies.** Logitech's entire liability and the licensee's exclusive remedy for any breach of warranty, shall be, at Logitech's option, either (a) return of the price paid or (b) repair or replacement of the hardware or software, provided that the hardware or software is returned to the point of purchase, with a copy of the sales receipt. Any replacement hardware or software will be warranted for the remainder of the original warranty period or 30 days for the hardware and 30 days for the software, whichever is longer. These remedies are void if failure of the hardware or software has resulted from accident, abuse, or misapplication.

LIMITATION OF LIABILITY. THE WARRANTIES SET FORTH IN THIS AGREEMENT REPLACE ALL OTHER WARRANTIES. LOGITECH EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS WITH RESPECT TO THE DOCUMENTATION, SOFTWARE, AND HARDWARE. NO LOGITECH DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION, OR ADDITION TO THIS WARRANTY. IN NO EVENT WILL LOGITECH OR ITS SUPPLIERS BE LIABLE FOR ANY COSTS OF PROCUREMENT OF SUBSTITUTE PRODUCTS OR SERVICES, LOST PROFITS, LOSS OF INFORMATION OR DATA, OR ANY OTHER SPECIAL, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING IN ANY WAY OUT OF THE SALE OF, USE OF, OR INABILITY TO USE ANY LOGITECH PRODUCT OR SERVICE, EVEN IF LOGITECH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO CASE SHALL LOGITECH'S LIABILITY EXCEED THE ACTUAL MONEY PAID FOR THE PRODUCTS AT ISSUE. Because some jurisdictions do not allow the limitation of implied warranties or liability for incidental, consequential, special, or indirect damages, the above limitation may not always apply. The above limitations will not apply in case of personal injury where and to the extent that applicable law requires such liability.

U.S. Government Restricted Rights. The Software is provided to the U.S. Government only with restricted rights and limited rights. Use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth in 48 C.F.R. 2.101 (October 1995), consisting of "Commercial Computer Software" and "Commercial Computer Software Documentation" as such terms are used in 48 C.F.R. 12.212 (September 1995), and in FAR Sections 52-227-14 and 52-227-19 or DFARS Section 52.227-7013 (C) (1) (ii), or their successors, as applicable. Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7204-4 (June 1995), or any successor regulations, this Software is provided to U.S. Government users pursuant to the terms and conditions herein. Contractor/Manufacturer is Logitech Inc., 6505 Kaiser Drive, Fremont, CA 94555.

FCC Compliance and Advisory Statement. This hardware device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

Canadian DOC Statement. This digital device does not exceed the Class B limits for radio noise emissions from digital apparatus specified in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par le Ministère des Communications.

This device complies with RSS-210 of Industry and Science Canada. Operation is subject to the following two conditions: 1) this device may not cause interference, and 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Logitech® First Mouse



1 Connecting the Mouse

1. **Turn off the computer.**
2. **Your mouse comes in one of two versions: serial or PS/2.** Check the box to see which mouse you have purchased. The serial mouse only connects to the serial port and the PS/2 mouse connects only to the PS/2 port.
3. **Connect the serial mouse to the computer's serial port.** Connect the PS/2 mouse to the PS/2 port.
4. **Turn on the computer.**



PS/2 mouse port



Serial port

2 Using the Mouse in Windows® 95/Windows NT®

By default, both the left and the right mouse buttons are assigned specific functions automatically. The left button is assigned to Normal Select and Normal Drag; the right button is assigned Context Menu and Special Drag. Using the Buttons tab, you can swap these assignments, making it possible to use the mouse in your left hand. Note that the Context menu provides easy-to-use shortcuts to speed up common tasks, such as cut and paste. The Buttons tab also allows you to change the speed at which a double-click occurs. With the Pointers tab, change the shape of the screen cursor. With the Motion tab, change how fast the screen cursor moves or add cursor trails, making the cursor easier to see on notebook screens. To make these changes to your mouse, follow these three easy steps:

1. **Click Start on the Windows® Taskbar, then select Settings, then Control Panel.**
2. **Double-click the mouse icon in the Control Panel to display the Mouse Properties tabs.**
3. **Choose a tab, then make any change described above.** Then click OK to record your changes.

3 Using the Mouse in Windows 3.1

You can change how fast the cursor moves on the screen or the speed at which a double-click occurs. Swap mouse buttons, a handy feature if you want to use the mouse in your left hand. Or add trails to the screen cursor, making it easier to see on notebook screens. To make these changes to your mouse, do the following:

1. **From the Program Manager, double-click the Main Group.**
2. **Double-click the Windows 3.1 Control Panel.**
3. **Double-click the mouse icon in the Control Panel.**
4. **Make any change described above.** Then click OK to record your changes.

4 Mouse Maintenance

If the cursor skips or moves abnormally, clean the ball of your mouse.

1. **Remove the retainer ring to remove the ball.** On the bottom of the mouse, press in the direction of the Open arrow imprinted on the retainer-ring cover.
2. **Wipe the ball with a clean, lint-free cloth, then blow carefully into the ball-cage to dislodge dust and lint.** Look for a build-up of dirt on the rubber roller(s) inside the ball-cage.
3. **If dirty, clean the roller(s) using a cotton swab moistened lightly with isopropyl (rubbing) alcohol.** After cleaning, make sure the roller(s) are still centered in their channels. Make sure that fluff from the swab is not left on the roller(s).
4. **Replace the ball and retainer ring.**

5 Troubleshooting: Mouse Not Detected

- Make sure the mouse cable is plugged into the right port—serial or PS/2 mouse port. A PS/2 mouse only connects to a PS/2 port and a serial mouse connects only to a serial port.
- Make sure your serial (or PS/2) port has the proper configuration. Refer to your computer documentation for the correct port configuration.
- You may have other system devices (e.g., a modem card) that conflict with the mouse. Check the IRQ/address settings of these devices for conflicts, and change the settings as required. Refer to your computer documentation to make these changes.
- To determine whether the problem is mouse or system related, try the mouse on a second system or a different mouse on your current system.

Logitech Addresses and Phone Numbers*

Country	Address	Product Information (Infoline)	Technical Help (Hotline)
Benelux (B, LUX, NL) LOGITECH Northern Europe BV	P.O. Box 1506 NL - 3600 BM <u>Maarsse</u>	☎ +31 (0)10 243 88 97 <i>Nederlands</i> ☎ +32 (0)2 626 89 63 B Français ☎ +32 (0)2 626 89 61 B Vlaams	☎ +31 (0)10 243 88 98 <i>Nederlands</i> ☎ +32 (0)2 626 89 62 B Français ☎ +32 (0)2 626 89 60 B Vlaams
Denmark & Finland LOGITECH Sales Office	Mesterlodden 20 DK - 2820 <u>Gentofte</u>	☎ +45 - 35 44 55 16 <i>Denmark</i> ☎ +358 (0)9 81 71 00 21 <i>Finland</i>	☎ +45 - 35 44 55 17 <i>Denmark</i> ☎ +358 (0)9 81 71 00 21 <i>Finland</i>
Deutschland & Eastern European countries LOGITECH GmbH	Gabriele-Münter-Straße 3 D - 82110 <u>Germering</u>	☎ +49 (0)69 92 032 165	☎ +49 (0)69 92 032 166
España LOGITECH S.A.	Oficina de representación en España Calle Nicaragua, 48 2º 1ª E - 08029 <u>Barcelona</u>	☎ +34 (9)1 375 33 68	☎ +34 (9)1 375 33 69
France LOGITECH France SARL	202, rue de la Croix-Nivert F - 75015 <u>Paris</u>	☎ +33 (0)1 43 62 34 13	☎ +33 (0)1 43 62 34 14
Italia LOGITECH Italia S.r.l	Centro Direzionale Colleoni Palazzo Andromeda 3 I - 20041 <u>Agrate Brianza, MI</u>	☎ +39 (0)2 215 10 62	☎ +39 (0)2 214 08 71
Österreich LOGITECH Repräsentanz	Göra 580, Postfach 77 A - 5580 <u>Tamssweg</u>	☎ +43 (0)1 502 221 349	☎ +43 (0)1 502 221 348
Schweiz / Suisse / Svizzera LOGITECH Switzerland	Täferenstrasse 16 CH - 5405 <u>Baden-Dättwil</u>	☎ D +41 (0)21 863 54 10 ☎ F +41 (0)21 863 54 30 ☎ I +41 (0)21 863 54 60	☎ D +41 (0)21 863 54 11 ☎ F +41 (0)21 863 54 31 ☎ I +41 (0)21 863 54 61
Sweden, Iceland & Norway LOGITECH Sales Office	Hästabäcksvägen 15B S - 141 37 <u>Huddinge</u>	☎ +46 (0)8 519 920 19 <i>Sweden</i> ☎ +47 23 50 00 84 <i>Norway</i>	☎ +46 (0)8 519 920 20 <i>Sweden</i> ☎ +47 23 50 00 83 <i>Norway</i>
UK + Eire LOGI (U.K.) Ltd.	The Old Court House 267-273 High Street GB - <u>Dorking</u> , RH4 1RL, Surrey	☎ +44 (0)181 308 6582	☎ +44 (0)181 308 6581

Logitech Headquarters

European, Middle Eastern & African Headquarters LOGITECH Trading S.A.	Moulin-du-Choc CH - 1122 <u>Romanel-sur-Morges</u>	☎ +41 (0)21 863 54 00 <i>English</i> Fax +41 (0)21 863 54 02	☎ +41 (0)21 863 54 01 <i>English</i> Fax +41 (0)21 863 54 02
Corporate Headquarters LOGITECH Inc.	6505 Kaiser Drive USA - <u>Fremont</u> , CA 94555	☎ (800) 231-7717	☎ +1 702 269 3457
Asian Pacific Headquarters LOGITECH Far East Ltd.	#2 Creation Road IV Science-Based - Industrial Park ROC - <u>Hsinchu</u> , Taiwan		☎ +886 (2)7466601 x2206
Australia Logitech Australia Computer Peripherals Pty Ltd.	Level 2, 633 Pittwater Road AUS - <u>Dee Why</u> NSW 2099, Australia		☎ +61 (0)2)9804 6968 BBS +61 (0)2)9972 3561
Canada Sales & Marketing Office	5025 Orbitor Dr., Bldg. 6, Suite 200 CDN - <u>Mississauga</u> , ON L4W 4Y5	☎ (800) 231-7717	☎ +1 702 269 3457
Japan LOGICOOL Co. Ltd.	No. 45 Mori Bldg. - 5-1-5 Toranomon Minato-ku, <u>Tokyo</u> , Japan 105		☎ +81 (3)3578 8851
In Latin America and the Caribbean :	Contact your local authorized distributor, or call our Customer Support Hotline in the USA, at ☎ +1 702 269 3457.		
World Wide Web: http://www.logitech.com www.logitech.ch www.logitech.de		FTP: ftp://ftp.logitech.com/pub	

* Refer to your Registration Card for the most up-to-date addresses and phone numbers.

Note For USA and Canadian customers only: please read the following prior to exchanging or returning your product. To exchange or return your product within the first 30 days, we recommend returning it to the point of purchase. If you return or exchange your product through Logitech, you must first contact Customer Support to obtain a Return Merchandise Authorization (RMA) number. Customer Support will give you an RMA number and a special address for the exchange.