




Logitech

Logitech® Wheel Mouse Users' Guide

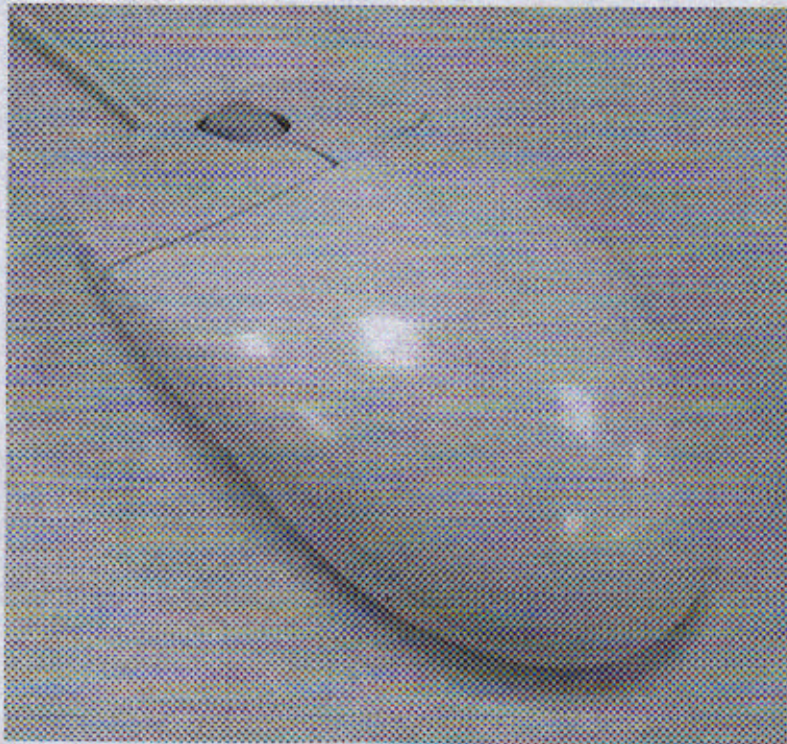

INSTRUCTIONS MANUAL
FEDERAL COMMUNICATIONS COMMISSION
INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

To assure continued FCC compliance:

- (1) Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

FCC Label Compliance Statement:


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Important Safety Information!


Before using your Logitech Wheel Mouse, please read the Comfort Guidelines that comes with your product.

Connecting the Mouse to a PC

1. For a PS/2 mouse port installation, please DO turn off the computer.
2. Connect the mouse cable to the USB port. After connecting the mouse to the USB port, the computer may prompt you to insert the Windows CD. Insert the CD then follow the on-screen instructions.

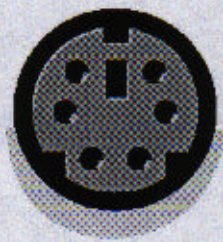

PS/2 mouse port

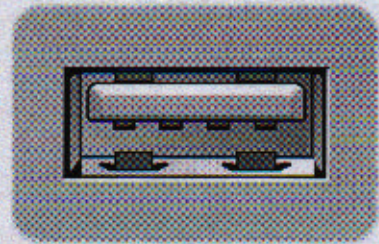

USB port

Using the Mouse

To use the wheel like a standard mouse button, just click (press down) the wheel.

To scroll up, move the wheel forward;

To scroll down, move the wheel back.

Horizontal Scroll: When both vertical and horizontally scroll bars are present in a window, press the Ctrl and Shift keys on the keyboard, then move the wheel forward to scroll left; move the wheel backward to scroll right. If no vertical scroll bars are present, simply move the wheel to scroll horizontally.

Maintaining the Mouse

If the cursor skips or moves abnormally, clean the ball of your mouse.

1. Remove the retainer ring to remove the ball. On the bottom of the mouse, press in the direction of the Open arrow imprinted on the retainer ring cover.
2. Wipe the ball with a clean, lint-free cloth, then blow carefully into the ball-cage to dislodge dust and lint. Look for a build-up of dirt on the rubber roller(s) inside the ball-cage.
3. If dirty, clean the roller(s) using a cotton swab moistened lightly with isopropyl (rubbing) alcohol. After cleaning, make sure the roller(s) are still centered in their channels. Make sure that fluff from the swab is not left on the roller(s).
4. Replace the ball and retainer ring.

Troubleshooting for a PC Connection

If the mouse is not detected by the computer, try the following:

- Make sure the mouse cable is plugged into the right port ?USB or PS/2. When installing the mouse on a PC, install the MouseWare ?software before connecting the mouse cable. Reboot the system.
- Make sure your USB or PS/2 port has the proper configuration. Refer to your computer documentation for the correct port configuration.
- You may have other system devices (e.g., a modem card) that conflict with the mouse. Check the IRQ/address settings of these devices for conflicts, and change the settings as required.
- If the problem persists, please contact technical support.

Troubleshooting

If the cursor does not move smoothly, clean the mouse ball and ball cage. If the mouse is not detected by your system, be sure to install the mouse software first. Reboot the system, then make sure the mouse cable is plugged into a USB port. For more assistance, please refer to our Logitech web site at www.logitech.com.