

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

© 2008 Logitech. All rights reserved. Logitech, the Logitech logo and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

© 2008 Logitech. Tous droits réservés. Logitech, le logo Logitech et les autres marques Logitech sont la propriété exclusive de Logitech et sont susceptibles de être des marques déposées. Toutes les autres marques sont la propriété exclusive de leurs détenteurs respectifs. Logitech décline toute responsabilité en ce qui concerne des erreurs ou omissions. Les informations contenues dans le présent document peuvent faire l'objet de modifications sans avis préalable.

620-801955.002

English

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Deutsch

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Fransés

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Italiano

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Español

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

 
 
Português

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.



Nederlands

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Svenska

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Dansk

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Norsk

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Suomi

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Português

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

EMÉRWA

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

www.logitech.com/support

België / Belgique	Dutch: +32 (0)2 2004 64 40 French: +32 (0)2 200 64 40	Russia	+7 (495) 641 34 00
Česká republika	+420 239 000 315	Slovenia	+386 (0)2 761 80 10 +386 (0)2 761 80 30 +386 (0)2 761 80 20
Danmark	+45 38 32 31 20	South Africa	0800 881 989
Deutschland	+49 (0)89 51 709 427	Spain	+34 (91) 275 45 88
España	+34 (91) 275 45 88	Sweden	+46 (08) 735 791 08
France	+33 (0)1 59 32 31 21	Taiwan	+86 (0)8 261 632 83
India	+91 (0)2 263 8423	Turkey	Check website
Italy	+39 (0)2 91 48 31 21	United Arab Emirates	800 441 4294
Japan	+81 (0)3 573 78 833	United Kingdom	+44 (0)20 3244 336
Netherlands	+31 (0)20 209 94 33	Europe, Middle East, & Africa (EMEA)	English: +41 (0)2 761 80 20 Fac: +41 (0)2 883 54 02
Norge	+47 (0)24 159 979	Poland	+48 (0)22 611 31 31
Denmark	+45 (0)1 200 091 026	Portugal	+351 (21) 415 50 36
Polka	+48 (22) 611 31 31	Eastern Europe	English: +1 (822) 761 40 25
Portugal	+351 (21) 415 50 36	USA	1 (800) 546 6464
United States	+1 (800) 451 5200	Latin America	+52 (3) 3444 6301
Australia	+61 (0)2 951 2314	Mexico	001 800 979 9979
Brazil	+55 (0) 61 473 1	Canada	+1 (844) 644 6441

Region	Local Office Address	Local Office Phone
Logitech For Earth Ltd 羅技無線麥克風有限公司	Unit 4, No. 121, Sec. 4, Taichung Rd., Taichung, Taiwan Tel: +886 (4) 2352 1188 Fax: +886 (4) 2352 1189 E-Mail: service@logitech.com	+886 (4) 2352 1188 +886 (4) 2352 1189 +886 (4) 2352 1189
Logitech Singapore Pte Ltd	1 Malayan Square #09-01/02 Malayan Court (adjacent to Singapore Sports Hub) Singapore 099202 E-Mail: service@logitech.com	+880 (6) 1111 (24 hours English Only) +65 (6) 2254 1384 (by Message, Text, or WhatsApp) +65 (6) 2254 1385
罗技(上海)贸易有限公司 上海分公司	上海市闵行区 中春路689号 901 室 E-Mail: service@logitech.com E-Mail: service@logitech.com E-Mail: service@logitech.com	+86 (0)21 5271 1188 +86 (0)21 5271 1189 +86 (0)21 5271 1189
罗技(北京)贸易有限公司 北京分公司	北京市海淀区中关村大街1号 E-Mail: service@logitech.com E-Mail: service@logitech.com E-Mail: service@logitech.com	+86 (0)10 6021 0328 (普通话/简体中文) +86 (0)10 6021 0329 (普通话/简体中文) +86 (0)10 6021 0330 (普通话/简体中文)
Logitech Australia Computer Peripherals Pty Ltd.	Unit 10/11, Technology Way, Service Unit 2/2B, Australia E-Mail: service@logitech.com E-Mail: service@logitech.com	+61 (0)8 820 1333 (24 hour English) +61 (0)8 820 1334 (by Text, 7pm-6PM) +61 (0)8 820 1335 (by Text, 7pm-6PM) +61 (0)8 820 1336 (by Text, 7pm-6PM)
Logitech Electronic India Pvt Ltd	MCC House, 5th Floor, 6th Row C-2, Kirti Khand Complex, B-10/12, Mayapuri 2nd Stage, India E-Mail: service@logitech.com	+91 (0)2 680 000 111 (24 hour English) +91 (0)2 680 000 112 (9am-5:30pm IST)
World Wide Web: http://www.logitech.com	FTP: ftp://ftp.logitech.com/pub	
Logitech Help: Logitech Co., Ltd. 170700 Support Center, 42300 KIC, Coosau Rd, Nantou, 11645, Suisai Rd, 252504 Hs, Taipei 101-0733, 3apan	Technical Help: Tel: 03 3356 6460 Fax: 03 3375 6460 Monday-Friday 9:00am-12:00pm, 1:00pm-5:00pm	

Quickstart guide
Guide de démarrage rapide

Logitech®
Wireless Microphone