
POP HOME SWITCH

Starter Kit Setup Guide



by Logitech



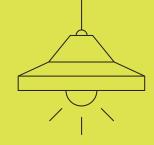

THINGS YOU'LL NEED TO BEGIN

Wi-Fi internet connection

iOS or Android® phone:

- iPhone® 5 or later and iPod 5th Gen or later with iOS 9 or higher
- Android phone with Bluetooth®
 Smart

SETTING UP YOUR POP HOME SWITCH

Download the Logi Pop app from the App Store or Google Play.

Plug in the bridge in the center of your home.

Launch the app for a guided setup.

EASY INSTALL — NO TOOLS OR WIRES

Mount your Pop Home Switch anywhere in your home. Just stick the double-sided mounting tape on a clean, smooth surface and then place your Pop Home Switch on the tape, hold it in place for 20 seconds, and you're done. It's easy to move your Pop Home Switch — just twist to pull the switch off the wall.

To clean your Pop Home Switch, use a damp cloth with soap and water or rubbing alcohol.

CUSTOM RECIPES TO CONTROL YOUR SMART DEVICES

Here are some recipe examples to make your Pop Home Switch easy and useful for the entire family:



THREE GESTURES

Single click

Switch the lights in a room on/off to a preset brightness and color.

Double click

Start a scene with lights dimmed to a warm color, blinds half way down, and Sonos playing your favorite songs.


Long press

Create a recipe for specific areas of your home such as 'back of house.'
Turn on/off outdoor lights, shut the blinds, and activate door locks.

For more information go to logi.com/support/pop. ©2016 Logitech. All rights reserved. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. All other trademarks are the property of their respective owners.

POP HOME SWITCH

Starter Kit Setup Guide

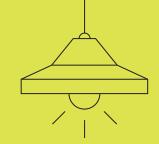







THINGS YOU'LL NEED TO BEGIN

Wi-Fi internet connection

iOS or Android® phone:

- iPhone® 5 or later and iPod 5th Gen or later with iOS 9 or higher
- Android phone with *Bluetooth*® Smart

SETTING UP YOUR POP HOME SWITCH

Download the Logi Pop app from the App Store or Google Play.

Plug in the bridge in the center of your home.

Launch the app for a guided setup.

EASY INSTALL — NO TOOLS OR WIRES

Mount your Pop Home Switch anywhere in your home. Just stick the double-sided mounting tape on a clean, smooth surface and then place your Pop Home Switch on the tape, hold it in place for 20 seconds, and you're done. It's easy to move your Pop Home Switch — just twist to pull the switch off the wall.

To clean your Pop Home Switch, use a damp cloth with soap and water or rubbing alcohol.

CUSTOM RECIPES TO CONTROL YOUR **SMART DEVICES**

Here are some recipe examples to make your Pop Home Switch easy and useful for the entire family:



THREE GESTURES

Single click

Switch the lights in a room on/off to a preset brightness and color.

Double click

Start a scene with lights dimmed to a warm color, blinds half way down, and Sonos playing your favorite songs.

Long press

Create a recipe for specific areas of your home such as 'back of house.' Turn on/off outdoor lights, shut the blinds, and activate door locks.

For more information go to logi.com/support/pop. ©2016 Logitech. All rights reserved. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. All other trademarks are the property of their respective owners.

POP HOME SWITCH

Add-on Switch Setup Guide Add-on Switch Setup Guide



by Logitech



For more information go to logi.com/support/pop. ©2016 Logitech. All rights reserved. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. All other trademarks are the property of their respective owners.

For more information go to logi.com/support/pop. ©2016 Logitech. All rights reserved. Logitech, Logi and other Logitech marks are owned by Logitech and may be registered. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. All other trademarks are the property of their respective owners.



THINGS YOU'LL NEED TO BEGIN

Logi Pop Home Switch Starter Kit (sold separately)

Wi-Fi internet connection

iOS or Android® phone:

- iPhone[®] 5 or later and iPod 5th Gen or later with iOS 9 or higher
- Android phone with Bluetooth®
 Smart

SETTING UP YOUR POP HOME SWITCH

Download the Logi Pop app from the App Store or Google Play.

Launch the app for a guided setup.

EASY INSTALL — NO TOOLS OR WIRES

Mount your Pop Home Switch anywhere in your home. Just stick the double-sided mounting tape on a clean, smooth surface and then place your Pop Home Switch on the tape, hold it in place for 20 seconds, and you're done. It's easy to move your Pop Home Switch — just twist to pull the switch off the wall.

To clean your Pop Home Switch, use a damp cloth with soap and water or rubbing alcohol.

THINGS YOU'LL NEED TO BEGIN

Logi Pop Home Switch Starter Kit (sold separately)

Wi-Fi internet connection

iOS or Android® phone:

- iPhone® 5 or later and iPod 5th Gen or later with iOS 9 or higher
- Android phone with Bluetooth®
 Smart

SETTING UP YOUR POP HOME SWITCH

Download the Logi Pop app from the App Store or Google Play.

Launch the app for a guided setup.

EASY INSTALL — NO TOOLS OR WIRES

Mount your Pop Home Switch anywhere in your home. Just stick the double-sided mounting tape on a clean, smooth surface and then place your Pop Home Switch on the tape, hold it in place for 20 seconds, and you're done. It's easy to move your Pop Home Switch — just twist to pull the switch off the wall.

To clean your Pop Home Switch, use a damp cloth with soap and water or rubbing alcohol.