



Wireless Rechargeable Touchpad T650

Setup Guide
Guide d'installation



English	4
Français	12
Español	20
Português	28
www.logitech.com/support	39


Your Touchpad T650



Set up your Touchpad

1. Plug in the receiver

Plug the Unifying receiver into a USB port.

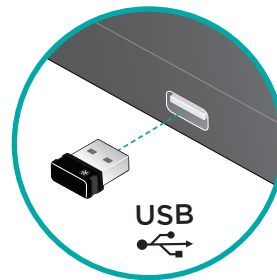

2. Power on the Touchpad

Move the power switch to the On position.

Check the battery status light. Red means it's time to charge the battery.



Power switch in the On position

Set up your Touchpad

3. Software installation

You are prompted to install Logitech software that enhances your Touchpad experience with additional gestures, smoother performance, and personalized settings.



Follow the onscreen instructions to complete installation.

? No prompt?

Download the software from:

www.logitech.com/download/t650

Visit the Product Page

While you're online, check out the Touchpad T650 Product Page, your destination for world-class support.

www.logitech.com/support/t650


In addition to software, you'll find tutorials, troubleshooting tips, and guidelines for using your new Touchpad.

Product Central is also home to live forums that connect you to a global community of knowledgeable users.

Touchpad gestures


Click (left-click)

Press the Touchpad surface.

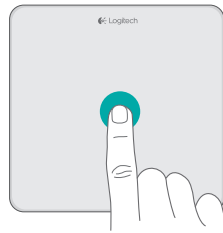


Right-click

Press the lower-right corner of the pad.

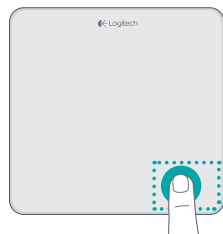

Scroll


Swipe two fingers up, down, or sideways.

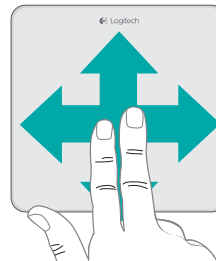

Touchpad gestures


Zoom

Pinch to zoom in or out.

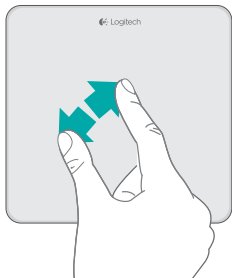

Navigate

Swipe three fingers to navigate within Windows 8.

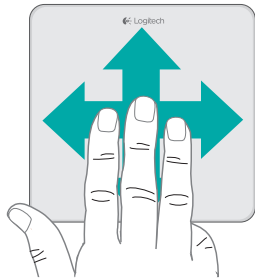

Swipe up to return to Windows 8 Start.


Swipe left or right for back and forward.

Swipe down for the desktop.

Touchpad gestures

Control windows


Swipe four fingers to resize or relocate the active window.

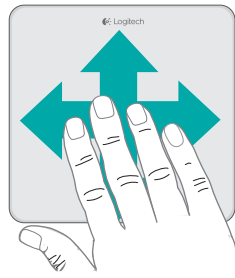

Swipe up or down to maximize or minimize the window. Swipe left or right to snap the window to the corresponding edge of the screen.

Perform Windows 8 shortcuts

Swipe a single finger from one of the Touchpad edges.

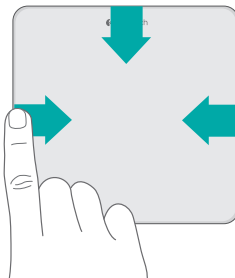


Swipe from the left edge to cycle through open applications. Swipe from the right edge to display the charm bar. Swipe from the top edge to display the application bar.

Charge the battery

Connect the Touchpad to your computer using the supplied charging cable. The status light blinks green while charging.

Charge your Touchpad until the status light stops blinking. A full charge powers your Touchpad for about a month. (A blinking red light means it's time to recharge.)

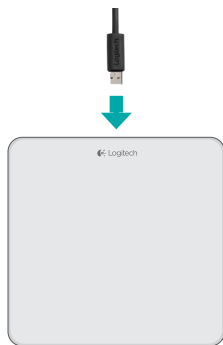

Unifying

Logitech® Unifying technology connects up to six compatible Logitech mice and keyboards to the same receiver, using only one USB port for multiple devices. To learn more, visit:

www.logitech.com/support/unifying



Troubleshooting

Touchpad not working?

- Restart the Touchpad by turning it off and then back on.
- Check the Unifying receiver connection.
- Move the Unifying receiver to another USB port on your computer. (Try connecting directly to your computer instead of using a USB hub.)
- Remove any metallic objects near the Touchpad.
- If the status light blinks red, recharge the battery.

Problem with gestures?


- Avoid resting unused fingers or your palm on the touch surface.

Battery disposal

Remove the plastic label on the Touchpad base. Remove the four screws from the bottom case.

Unplug the battery and take it out of the case.

Dispose of the battery and product according to local laws.

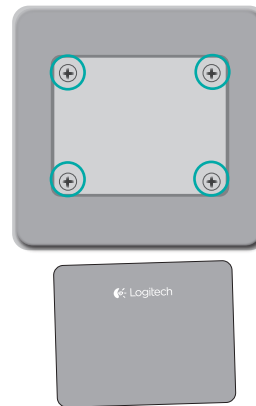

Support

www.logitech.com/support/t650



Argentina	+00800-555-3284
Brasil	+0 800-891-4173
Canada	+1 866-934-5644
Chile	1230 020 5484
Colombia	01-800-913-6668
Latin America	+1 800-578-9619
Mexico	01.800.800.4500
United States	+1 646-454-3200



www.logitech.com



© 2012 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Apple, Mac, and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

© 2012 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Apple, Mac, and the Mac logo are trademarks of Apple Inc., registered in the U.S. and other countries. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-004075.002