



User's guide

**2.4GHz Cordless keyboard
Y-R0005 _Logitech**

Contents

English	Setup, 5	Features and troubleshooting, 8
Français	Installation, 5	Fonctions et dépannage, 14
Nederlands	Set-up, 5	Eigenschappen en Problemen oplossen, 20
Ελληνικά	Εγκατάσταση, 5	Λειτουργίες και αντιμετώπιση προβλημάτων, 26
Türkçe	Kurulum, 5	Özellikler ve sorun giderme, 32
العربية	الإعداد 5	الميزات واستكشاف الأخطاء وإصلاحها 38

Thank you!

Merci!

Dank u wel!

Σας ευχαριστούμε!

Teşekkürler!

شكراً لك!

Logitech® Wireless Keyboard K340



USB Extender Cable







Français	TIRER
Nederlands	TREKKEN
Ελληνικά	ΤΡΑΒΗΞΕΤΕ
Türkçe	ÇEKİN
العربية	جذب



English

Your Keyboard is now ready for use.

Optional: For the option of reprogramming your keyboard's enhanced F-key functions, download the free Logitech® SetPoint™ Software at www.logitech.com/downloads.

Français

Your Keyboard is now ready for use.

Optional: For the option of reprogramming your keyboard's enhanced F-key functions, download the free Logitech® SetPoint™ Software at www.logitech.com/downloads.

Nederlands

Your Keyboard is now ready for use.

Optional: For the option of reprogramming your keyboard's enhanced F-key functions, download the free Logitech® SetPoint™ Software at www.logitech.com/downloads.

Ελληνικά

Your Keyboard is now ready for use.

Optional: For the option of reprogramming your keyboard's enhanced F-key functions, download the free Logitech® SetPoint™ Software at www.logitech.com/downloads.

Türkçe

Your Keyboard is now ready for use.

 
Optional: For the option of reprogramming your keyboard's enhanced F-key functions, download the free Logitech® SetPoint™ Software at www.logitech.com/downloads.

العربية


Your Keyboard is now ready for use.

Optional: For the option of reprogramming your keyboard's enhanced F-key functions, download the free Logitech® SetPoint™ Software at www.logitech.com/downloads.

Keyboard at a glance

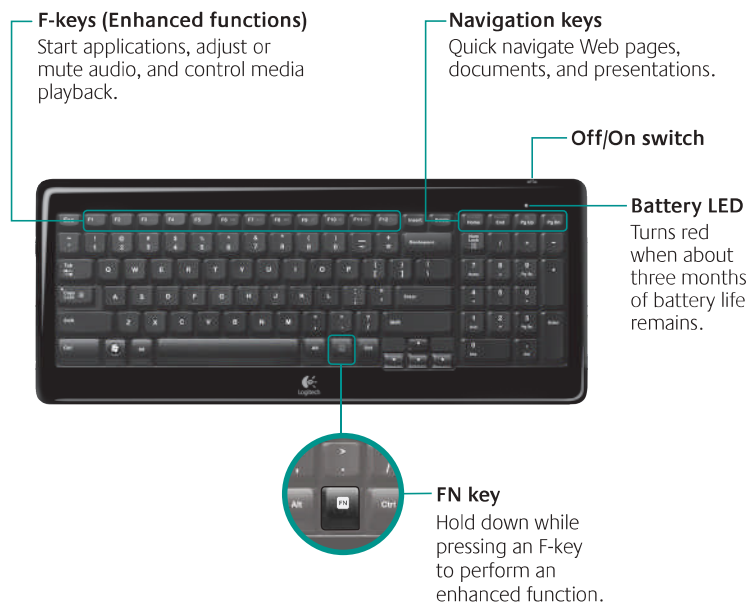

Keyboard at a glance

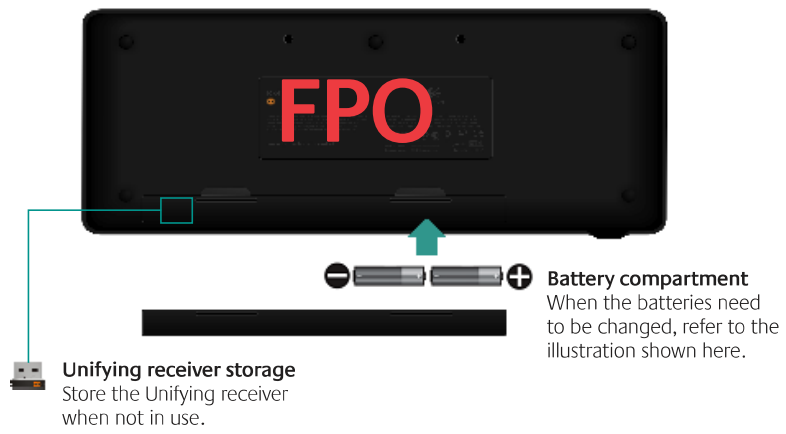 





Keyboard features: Using F-keys

Enhanced F-keys start applications, control volume, and play media. To perform an enhanced function, hold down the **FN** key while pressing an F-key.

Tip In the software settings, you can invert the FN mode if you prefer to access the enhanced functions directly without having to press the **FN** key.*

Quick-start F-keys

Instantly start applications and utilities

- FN** + **F1**  Web browser
- FN** + **F2**  Mail application
- FN** + **F3**  Windows® search
- FN** + **F4**  Windows calculator





Volume control F-keys

Adjust or mute computer audio

- FN** + **F9**  Mute
- FN** + **F10**  Volume down
- FN** + **F11**  Volume up

Media control F-keys

Start media application and control playback

- FN** + **F5**  Media application
- FN** + **F6**  Previous track
- FN** + **F7**  Play/Pause
- FN** + **F8**  Next Track

Sleep mode

Put computer to sleep

- FN** + **F12**  Sleep mode

* Requires SetPoint™ Software (available for download at www.logitech.com/downloads).



Battery management

Your keyboard has up to three years of battery life.*

Battery sleep mode

Did you know that your keyboard goes into sleep mode after you stop using it for a few minutes? This feature helps limit battery usage and eliminates the need to keep switching your devices on and off. Your keyboard is up and running immediately once you begin using it again.

How to check the battery level

Turn the keyboard off, and then on using the On/Off slider switch on the top edge of the keyboard. Look at the battery LED on the top case. If the LED glows green for 10 seconds, the batteries are good. If the LED blinks red, the battery level has dropped to 10%. (You still have a few weeks of battery usage left.)



* Battery life varies with usage and computing conditions. Heavy usage usually results in shorter battery life.



The diagram illustrates the Logitech Unifying ecosystem. On the left, a laptop is shown with a USB Unifying receiver plugged into its port. Below the laptop is a Logitech wireless keyboard. An orange line connects the receiver to a large, light-blue circular graphic on the right. Inside this circle are three icons of different Logitech wireless mouse models, representing compatibility with various mouse types. Above the receiver is the 'unifying™' logo, which consists of an orange square with a white starburst icon and the word 'unifying™' in orange lowercase letters.

 
Plug it. Forget it. Add to it.

You've got a Logitech® Unifying receiver. Now add a compatible wireless mouse that uses the same receiver as your keyboard. It's easy. Just start the Logitech® Unifying software* and follow the onscreen instructions. For more information and to download the software, visit www.logitech.com/unifying.

*Go to Start / All Programs / Logitech / Unifying

Troubleshooting Keyboard is not working

- **Is the Power on?** The power switch for the keyboard must be in the **ON** position. Battery LED should light green.
- **How are the batteries?** Check the keyboard battery installation or replace the batteries. The keyboard uses two AA alkaline batteries.
- **Check the Unifying receiver.** Plug the Unifying receiver into a different USB port. Remove any metal object between the Unifying receiver and the keyboard that may interfere with reception.
- **Re-establish the connection.** Use the Unifying software to reset the connection between the keyboard and Unifying receiver. Refer to the Unifying section in this guide for more information (p. 12).
- **Move closer?** Try moving the keyboard closer to the Unifying receiver, or plug the Unifying receiver into the receiver extender cable to bring it closer to the keyboard.
- **Restart the computer.**

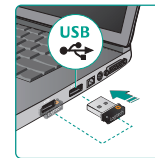

Picture of receiver being installed into receiver extender cable.

Visit www.logitech.com/comfort for more information about using your product, and for ergonomics.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

申請台灣應使用注意事項之資訊:

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。



www.logitech.com/support



België / Belgique	Dutch: +32-(0)2 200 64 44; French: +32-(0)2 200 64 40	Russija	+7(495) 641 34 60
Česká Republika	+420 239 000 335	Schweiz / Suisse Svizzera	D +41-(0)22 761 40 12 F +41-(0)22 761 40 16 I +41-(0)22 761 40 20 E +41 (0)22 761 40 25
Danmark	+45-38 32 31 20	South Africa	0800 981 089
Deutschland	+49-(0)69-51 709 427	Suomi	+358-(0)9 725 191 08
España	+34 -91-275 45 88	Sverige	+46-(0)8-501 632 83
France	+33-(0)1-57 32 32 71	Türkiye	00800 44 882 5862
Ireland	+353-(0)1 524 50 80	United Arab Emirates	8000 441-4294
Italia	+39-02-91 48 30 31	United Kingdom	+44-(0)203-024-81 59
Magyarország	+36-177-74 853	European, Mid. East., & African Hq. Romanel s/Morges, Switzerland	English: +41-(0)22 761 40 25 Fax: +41-(0)21 863 54 02
Nederland	+31-(0)-20-200 84 33	Eastern Europe	English: 41-(0)22 761 40 25
Norge	+47-(0)24 159 579		
Österreich	+43-(0)1 206 091 026		
Polska	00800 441 17 19		
Portugal	+351-21-415 90 16		



www.logitech.com

© 2009 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-001234.002