

Logitech.

User's guide

Logitech®  
**Wireless Desktop**  
MK700



 
Logitech® Wireless Desktop MK700



1



2

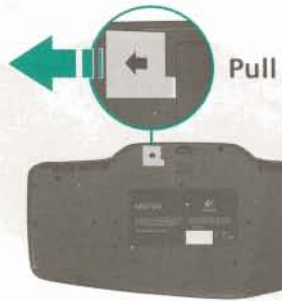

**Español** TIRAR

**Français** TIRER

**Português** PUXAR

3

 


## Keyboard features: F-key usage

 


User-friendly enhanced F-keys let you launch applications easily. To use the enhanced functions (yellow icons), first press and hold the **Fn** key; second, press the F-key you want to use.

**Tip** In the software settings, you can invert the FN mode if you prefer to access directly the enhanced functions without having to press the FN key.

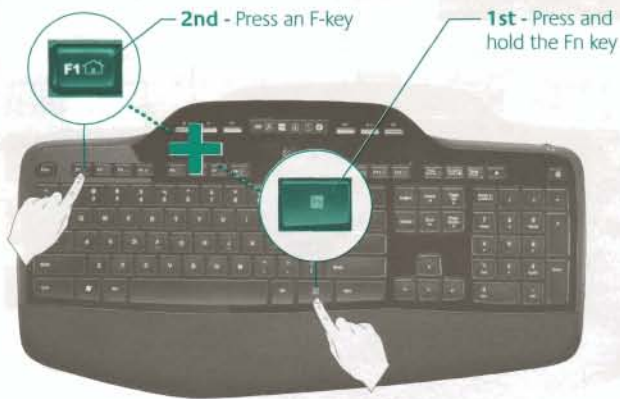

## Keyboard features: F-keys and more

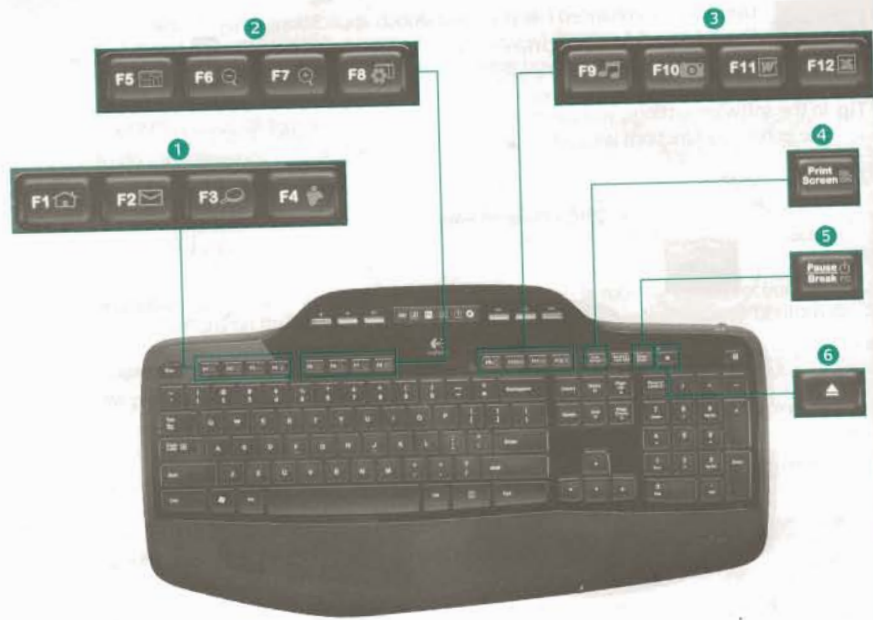

## Keyboard features: Media keys and status icons



**6. Volume control**

 
-  Mute
-  Volume down
-  Volume up

**7. LCD Dashboard icon status**

-  Battery status indicator (see *Battery management* for more information)  

-  Caps lock on
-  FN on
-  Scroll lock on
-  Num lock on
-  Mute on\*

**8. Multimedia navigation**

-  Back/previous track
-  Play/pause
-  Forward/next track

**9. Keyboard off/on switch**



**10. Launches calculator**



\* Logitech® SetPoint™ Software installation is required.



### **Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

### **IC Statement**

**This Class B digital apparatus complies with Canadian ICES-003.**

Cet appareil numérique de la classe B conforme à la norme NMB-003 du Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.