

English 1. Windows Vista™ Flip 3D 2. Zoom in/out documents and images or Scroll windows and Flip 3D 3. Windows Vista™ Gadget 4. Windows Vista™ Photo Gallery 5. Multimedia navigation 6. Media Player 7. Windows Media Center 8. Windows Calculator 9. PC Sleep 10. To activate the secondary function of the F-keys , press FN and the corresponding F-key simultaneously 11. Battery status indicator (keyboard: press Fn+F11) (Mouse : turn on power by holding on/off button 2 sec) 12. Scroll (up/down) and Tilt (left/right) wheel. Click wheel to activate Windows Vista™ Flip 3D 13. Internet and Folder Back 14. Internet and Folder Forward. Open the Logitech® SetPoint™ software to change button assignment. Visit www.logitech.com/comfort for more information about using your product and for ergonomics.

Nederlands 1. Windows Vista™ Flip 3D 2. Zoom in/out documents and images or Scroll windows and Flip 3D 3. Windows Vista™ Gadget 4. Windows Vista™ Photo Gallery 5. Multimedia navigation 6. Media Player 7. Windows Media Center 8. Windows Calculator 9. PC Sleep 10. To activate the secondary function of the F-keys , press FN and the corresponding F-key simultaneously 11. Battery status indicator (keyboard: press Fn+F11) (Mouse : turn on power by holding on/off button 2 sec) 12. Scroll (up/down) and Tilt (left/right) wheel. Click wheel to activate Windows Vista™ Flip 3D 13. Internet and Folder Back 14. Internet and Folder Forward. Open the Logitech® SetPoint™ software to change button assignment. Visit www.logitech.com/comfort for more information about using your product and for ergonomics.

Svenska 1. Windows Vista™ Flip 3D 2. Zoom in/out documents and images or Scroll windows and Flip 3D 3. Windows Vista™ Gadget 4. Windows Vista™ Photo Gallery 5. Multimedia navigation 6. Media Player 7. Windows Media Center 8. Windows Calculator 9. PC Sleep 10. To activate the secondary function of the F-keys , press FN and the corresponding F-key simultaneously 11. Battery status indicator (keyboard: press Fn+F11) (Mouse : turn on power by holding on/off button 2 sec) 12. Scroll (up/down) and Tilt (left/right) wheel. Click wheel to activate Windows Vista™ Flip 3D 13. Internet and Folder Back 14. Internet and Folder Forward. Open the Logitech® SetPoint™ software to change button assignment. Visit www.logitech.com/comfort for more information about using your product and for ergonomics.

Dansk 1. Windows Vista™ Flip 3D 2. Zoom in/out documents and images or Scroll windows and Flip 3D 3. Windows Vista™ Gadget 4. Windows Vista™ Photo Gallery 5. Multimedia navigation 6. Media Player 7. Windows Media Center 8. Windows Calculator 9. PC Sleep 10. To activate the secondary function of the F-keys , press FN and the corresponding F-key simultaneously 11. Battery status indicator (keyboard: press Fn+F11) (Mouse : turn on power by holding on/off button 2 sec) 12. Scroll (up/down) and Tilt (left/right) wheel. Click wheel to activate Windows Vista™ Flip 3D 13. Internet and Folder Back 14. Internet and Folder Forward. Open the Logitech® SetPoint™ software to change button assignment. Visit www.logitech.com/comfort for more information about using your product and for ergonomics.

Norsk 1. Windows Vista™ Flip 3D 2. Zoom in/out documents and images or Scroll windows and Flip 3D 3. Windows Vista™ Gadget 4. Windows Vista™ Photo Gallery 5. Multimedia navigation 6. Media Player 7. Windows Media Center 8. Windows Calculator 9. PC Sleep 10. To activate the secondary function of the F-keys , press FN and the corresponding F-key simultaneously 11. Battery status indicator (keyboard: press Fn+F11) (Mouse : turn on power by holding on/off button 2 sec) 12. Scroll (up/down) and Tilt (left/right) wheel. Click wheel to activate Windows Vista™ Flip 3D 13. Internet and Folder Back 14. Internet and Folder Forward. Open the Logitech® SetPoint™ software to change button assignment. Visit www.logitech.com/comfort for more information about using your product and for ergonomics.

Suomi 1. Windows Vista™ Flip 3D 2. Zoom in/out documents and images or Scroll windows and Flip 3D 3. Windows Vista™ Gadget 4. Windows Vista™ Photo Gallery 5. Multimedia navigation 6. Media Player 7. Windows Media Center 8. Windows Calculator 9. PC Sleep 10. To activate the secondary function of the F-keys , press FN and the corresponding F-key simultaneously 11. Battery status indicator (keyboard: press Fn+F11) (Mouse : turn on power by holding on/off button 2 sec) 12. Scroll (up/down) and Tilt (left/right) wheel. Click wheel to activate Windows Vista™ Flip 3D 13. Internet and Folder Back 14. Internet and Folder Forward. Open the Logitech® SetPoint™ software to change button assignment. Visit www.logitech.com/comfort for more information about using your product and for ergonomics.

www.logitech.com/comfort