



Logitech.



User's guide



Logitech®
Cordless Desktop® Wave Pro™


Contents


Thank you!.....	4
Package contents.....	5
Installation	6
Keyboard features: hot keys	10
Keyboard features: F-keys	12
Mouse features: scrolling.....	14
Mouse features: buttons and applications	16
Customizing the keyboard and mouse.....	18
Recharging the NiMH mouse battery.....	22
Troubleshooting	23
Technical support telephone numbers.....	25


Thank you!


Thank you for purchasing the Logitech® Cordless Desktop® Wave Pro™. Please read this guide to get up and running quickly and to learn about your product. Should you have any questions, refer to the troubleshooting and support sections of this document for assistance.

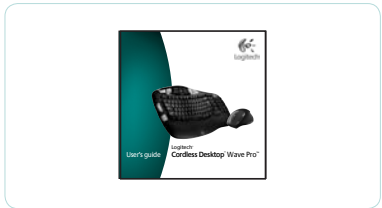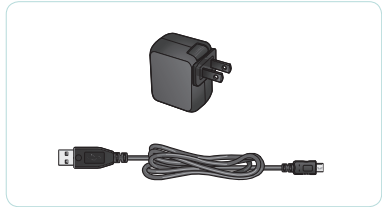


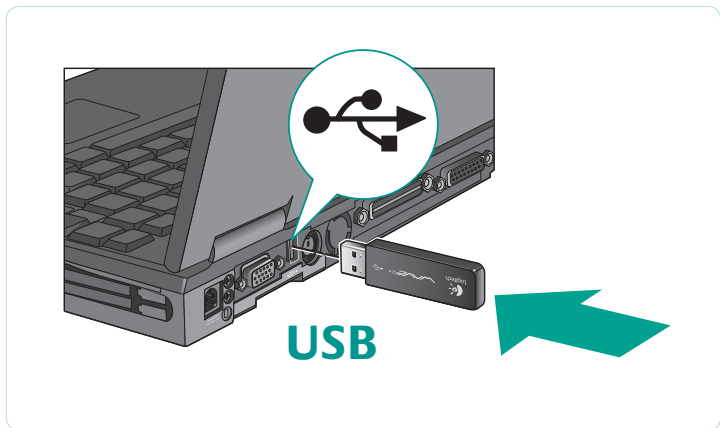

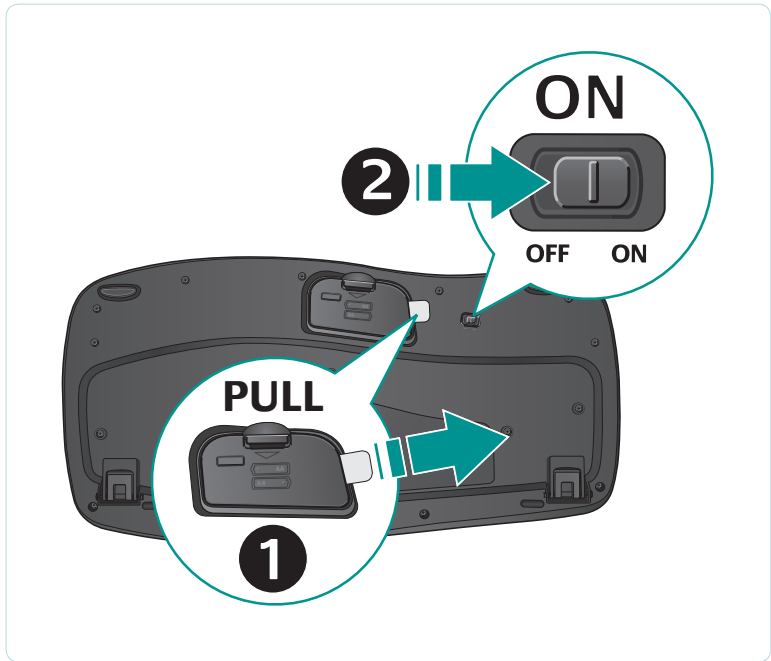

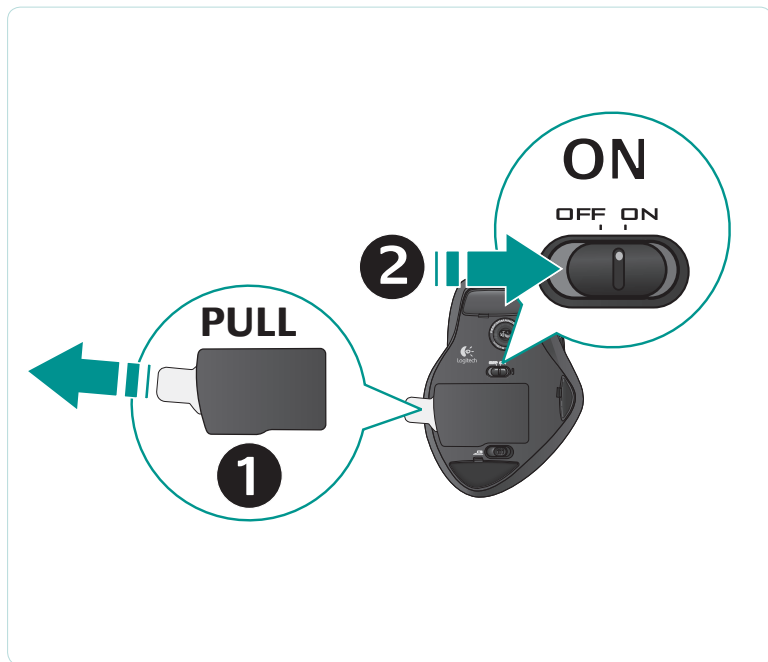

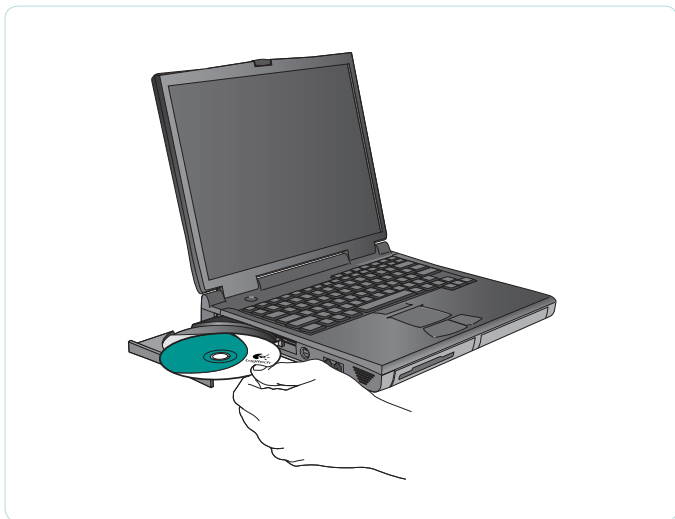

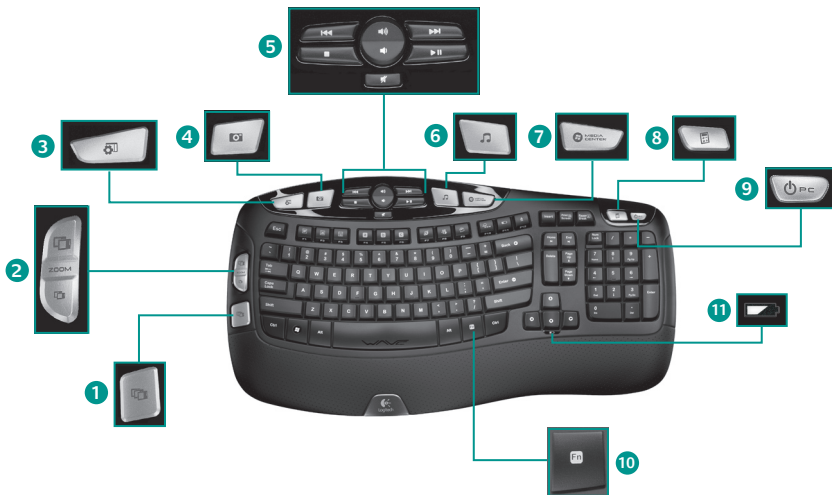


Keyboard features: hot keys

1. Windows Vista® Flip 3D
2. Zoom in/out documents and images or scroll windows and Flip 3D
3. Windows Vista® Gadget
4. Windows Vista® Photo Gallery
5. Multimedia navigation
6. Media player
7. Windows Media Center
8. Windows Calculator
9. PC sleep
10. **Fn** key (for use with F-keys)
11. Battery status indicator (**Fn** + **F11**)



*To enjoy **all** the features of your keyboard or to customize it to suit your needs, please install the Logitech® SetPoint™ Software that comes with your product.*

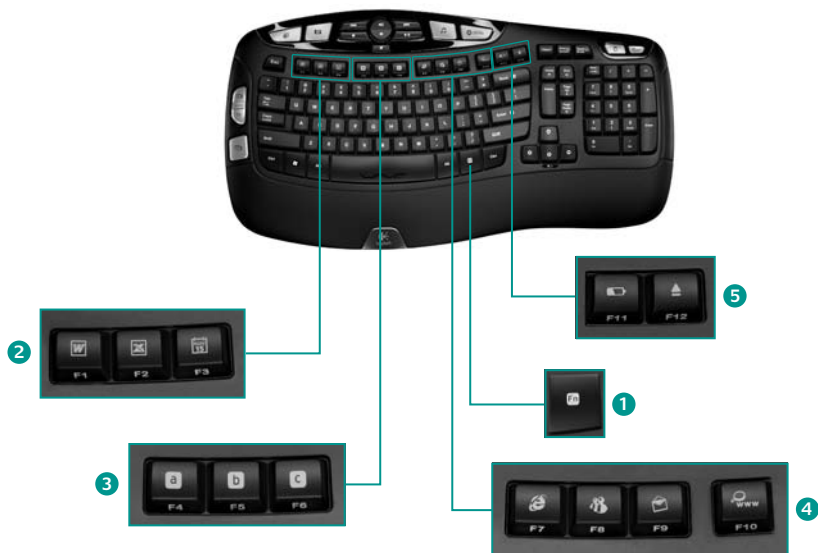

Keyboard features: F-keys

1. **Fn** key (for use with F-keys)

2. Productivity zone

Fn +**F1** Launches document application

Fn +**F2** Launches spreadsheet application

Fn +**F3** Launches calendar

3. Favorites zone

Fn +**F4** to **F6** program your favorite application, folder, or web site with a long, simultaneous press of **Fn** and the corresponding **F4**, **F5**, or **F6** key (just like the presets of a car radio).

4. Internet zone

Fn +**F7** Launches Internet browser

Fn +**F8** Launches instant message application

Fn +**F9** Launches e-mail application

Fn +**F10** Launches Internet search engine

5. Convenience zone

Fn +**F11** Battery status check

Fn +**F12** Opens/closes CD-DVD tray

