


Butler XP

PROGRAMMING GUIDE

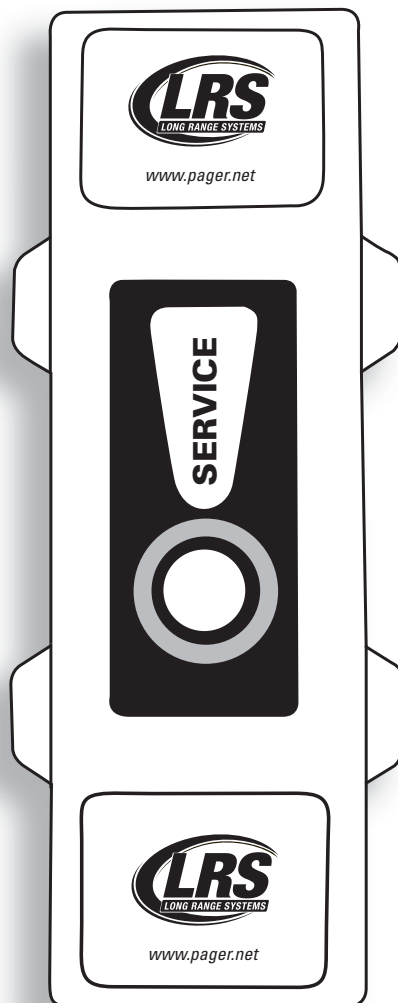

Installation, Warranty and Service Information



Long Range Systems, Inc.

4550 Excel Parkway, Suite 200

Addison, TX 75001

800.437.4996 • www.pager.net

Table Of Contents

Launch Butler XP Application4
Read Butler5
Configuring a Button Butler5
Button Setup5
System ID6
Group Paging Enable6
Beep Enable7
Secondary Paging7
Cancel Message8
Low Battery Page8
Repaging9
Stop Re-Paging9
Save a Configuration10
Load an Existing Configuration10
Programming Pagers11
Group Pagers12
Troubleshooting13
Warranty14


Launch Butler XP Application

Auto Run

1. Insert the CD into the PC drive, program will Auto-run.
2. Follow the Installation Wizard.
3. Once installation is complete, click on the Windows Start menu.
4. Select All Programs.
5. Select Beach Butler.
6. Select Butler Configurations Utility.
7. The Butler XP configurations screen will display.


Manual Install

1. In the event the program does not automatically run on the PC:
2. Insert the CD into the PC drive.
3. Use Windows Explorer to explore the CD drive.
4. Run the Setup program
5. Proceed with the installation wizard
6. Once installation is complete, click on the Windows Start menu.
7. Select All Programs.
8. Select Beach Butler.
9. Select Butler Configurations Utility.
10. The Butler XP configurations screen will display.

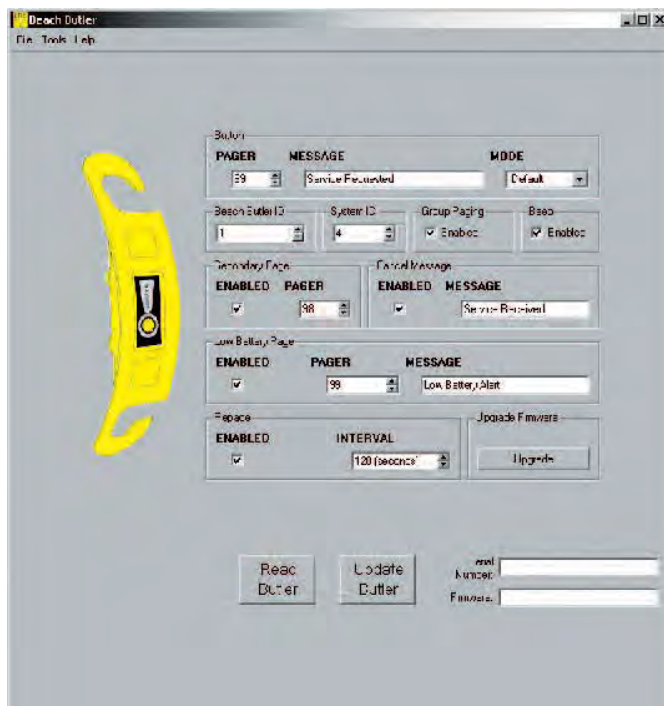


Read Butler

This feature reads the current configuration settings of the Butler. Unit Serial Number and current Firmware Version will display in the bottom right.

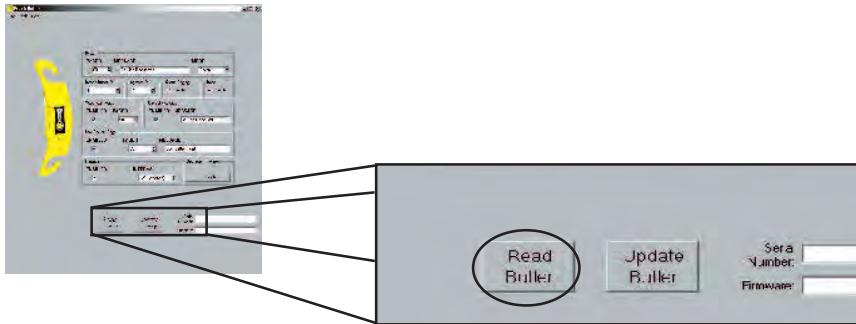

1. Connect one end of the USB cable to the PC.
2. Connect the other end of the USB cable to the Butler XP. The USB connection is located in the Butler XP's battery compartment. (Batteries are not required for programming).
3. Press the Read Butler button.

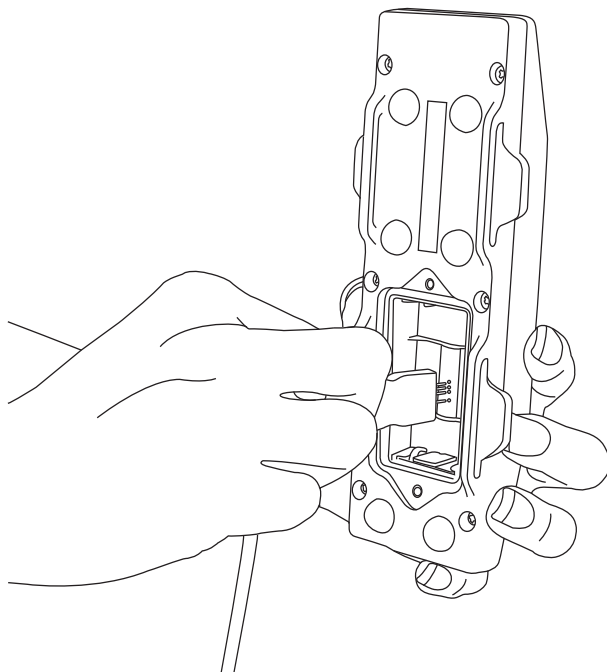

Configuring a Button Butler




Note: The Butler XP must be connected to the PC using the USB cable before configuration. .

- A configuration can be modified from a previously saved file, or manually created on screen.
- For any changes to take affect press the Update
- The Update Butler button must be pressed for changes to be applied.

Button Setup

The Button section is used to set the message sent to the pager when the "Service" button on the Butler XP is pressed.

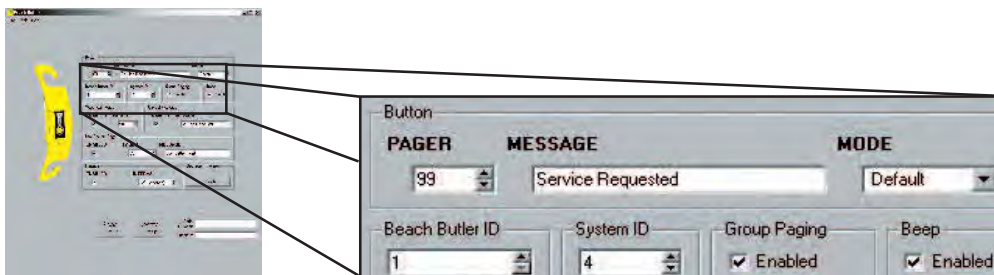

To set a Message:

1. Under PAGER, enter the pager number that the "Service" button will page.
2. Under MESSAGE, enter the message to be sent to the pager.
3. From the MODE drop down box, select an alert mode.



Note: Firmware versions prior to 1.11 will only support "Mode" set to DEFAULT

Butler ID

The Butler ID is used to identify which Butler unit the service request came from.

Example: If the Butler ID is "5", and the message is set to "Service", then the pager message will display "Service 5".

To set the Butler ID:


1. Enter the Butler ID number 1 to 9999.

System ID



Note: The System ID should be changed ONLY when interference occurs because of other LRS systems in nearby areas. Default System ID is 0.

In the event that more than one LRS system is in close geographical proximity, the system ID can be changed to avoid interference. If the System ID is changed, the System IDs of all pagers also need to be changed (updated) to the same System ID. (See Programming Pagers pg. 11)

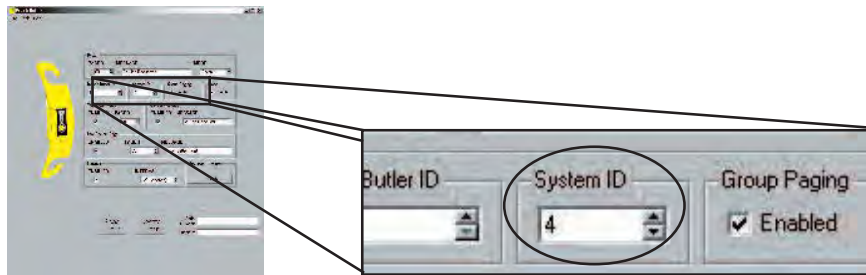


To set System ID:

1. From the **System ID** drop down box, select the ID number to use.
2. Click the **Update Butler** button to save the settings.
3. Reprogram pagers used with the system (refer to Programming Pagers on pg. 10).

Group Paging Enable

Group Paging allows you to page 2 or more pagers at the same time. You must program the pagers in the same group. (See Programming Pagers on pg. 13)

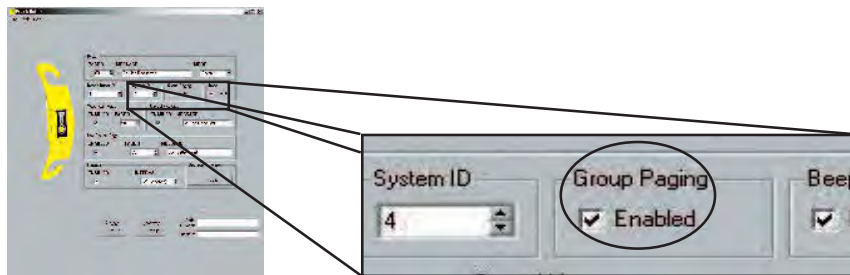

To enable Group Paging:

When group paging is enabled, pager numbers 1-99 will be used to page a "group". (See p. 10 to configure Group Paging settings)

Beep Enable

This feature will enable or disable the Butler from beeping when the "Service" button is pressed, and when the USB connection is made.




To set Beep:

Under **Beep**, click on the **Enabled** check box to enable or disable (a check mark indicates beep is enabled).

Secondary Paging

The Secondary Paging feature, when enabled, will send a message to a second pager after the third repage cycle. This feature is useful if you want a backup person to respond to a customer's request if the first person does not.

Example: Set Message to "Aisle", and Butler ID to "15". During repage, the main pager will display "Aisle 15". After the third repage, the secondary pager will display "Aisle 15".

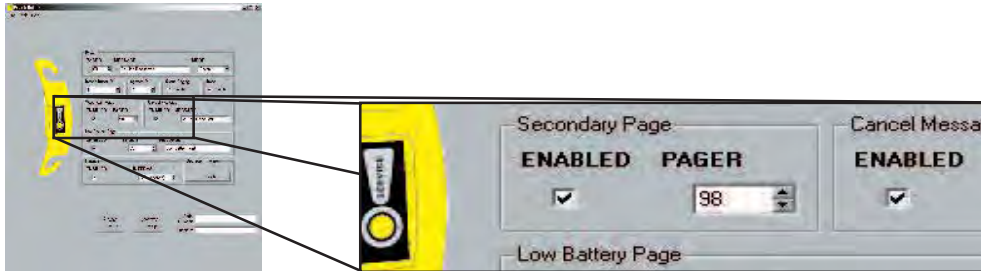

To set Secondary Paging:

1. Enable and set Repaging (see p. 8).
2. Under Secondary Page, click on the Enabled check box to enable or disable (a check mark indicates secondary page is enabled).
3. From the **PAGER** drop down box, select the pager number that will receive the secondary page.



Note: If the Repage (p. 8) feature is enabled, the transmitter will repage the main pager at pre-set intervals until the page is cleared. (See Stop Re-paging, p. 8 for instructions on clearing the page).

Cancel Message



Note: Secondary Paging must be enabled (see p. 7).

This feature will enable or disable sending a preset cancel message to pagers when a magnet resets the Button Butler.

Example:

- IF:**
1. Butler ID is set to "15"
 2. Cancel message is set to "Cancel"
 3. Butler is set to send message "Aisle" to the main pager
 4. "Service" button on Butler is pressed
 5. Pager displays "Aisle 15"
 6. The pager magnet is held over the "Service" button and repaging is stopped (see p. 11)

THEN: The secondary pager will display "Cancel Aisle 15".

If the page is stopped/canceled after the Secondary Pager goes off, the Secondary Pager will receive "Cancel Aisle 15". This is useful if using more than one pager, so the second person is notified.




To set Cancel Message:

1. Click on the **Enabled** check box to enable or disable (a check mark indicates input is enabled.)
2. Enter a message.

Low Battery Page

This sends a message to the pager to add new batteries.

1. Under Low Battery Page, click on the Enabled check box to enable or disable (a check mark indicates low battery page is enabled).
2. Enter the pager number this will alert.
3. Enter a message. Once set, the function automatically alerts the selected pager when the batteries get low.

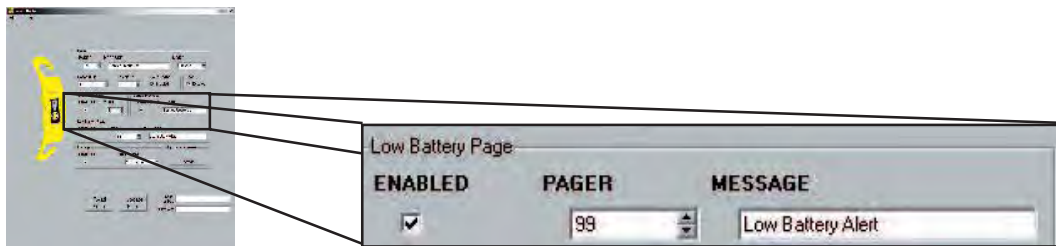

Example:


- IF:** Butler XP with ID of 5 has low batteries
THEN: Pager will display "Low Battery 5"

Repaging

This feature will enable or disable the re-paging feature. When the "Service" button is pressed, the Butler transmitter will resend the message to the pager (at pre-set time intervals) until the page is cleared.


To set Re-paging:

1. Click on **Enabled** box to enable or disable (a check mark indicates input is enabled).
2. Enter a **Repage** time. Must be 10 seconds or more.

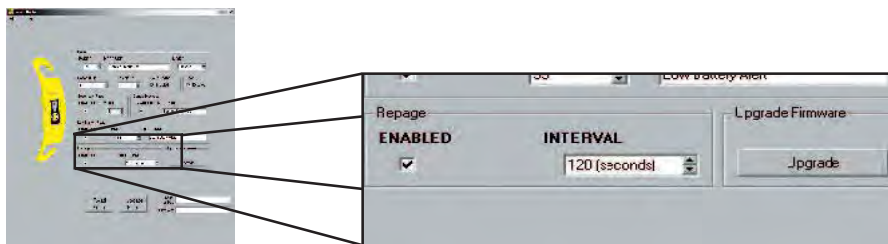

Stop Re-paging


To stop repaging, hold the pager magnet over the Service button for 1 second. User will hear a beep to indicate repaging has ended.

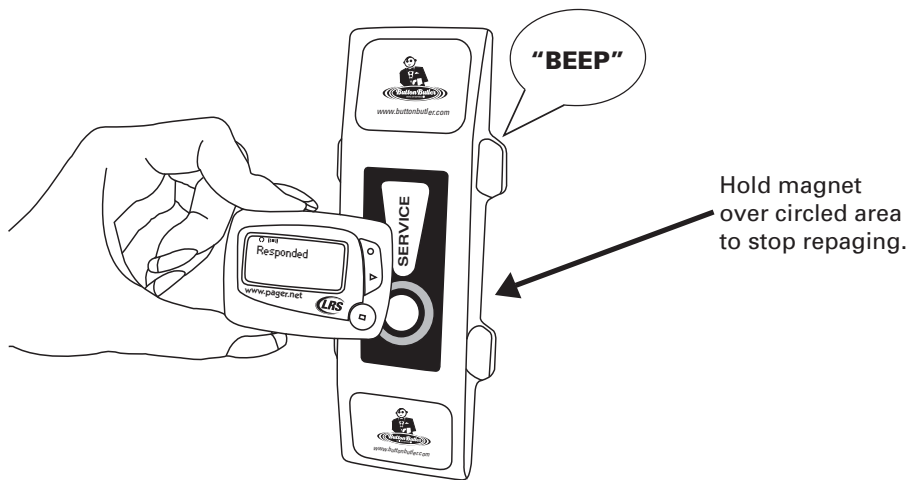

Save a Configuration

This feature allows the user to store a read or modified configuration from Button Butlers. File will save to a .b2c extension. To save a Configuration:


1. Select **File, Save Configuration.**
2. Enter file name, select destination, and **Save.**

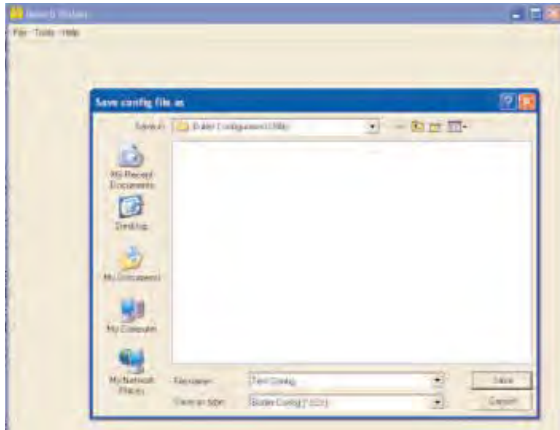

Load an Existing Configuration

This feature allows the user to load a preset configuration to Button Butler. To Load:



1. Select **File, Load Configuration**.
2. Select configuration file and **Open**.
3. Press **Update Unit** (USB cable must be attached to the Button Butler).

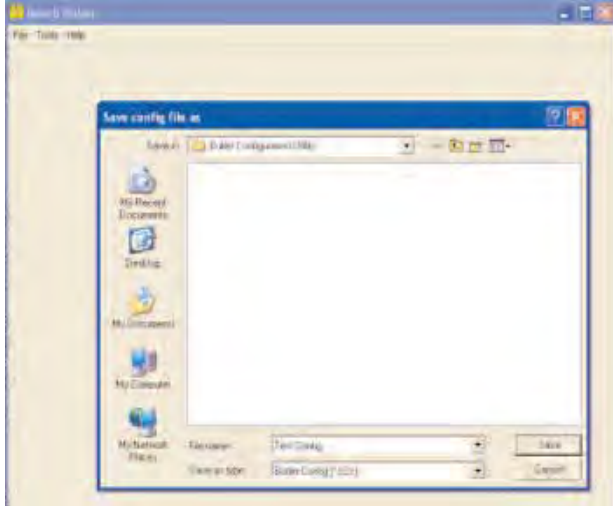


Programming Pagers



Note: Before programming a pager, make sure the pager is turned OFF.
The Button Butler does not operate with Star Pagers.

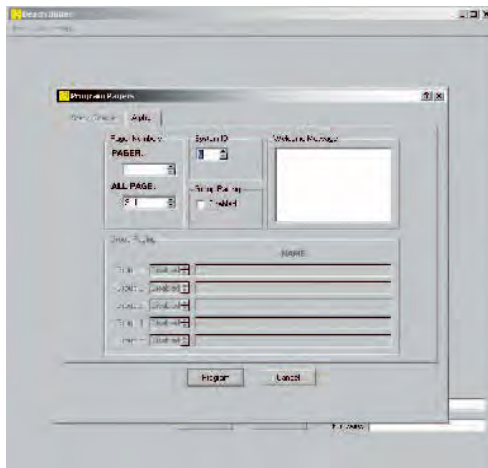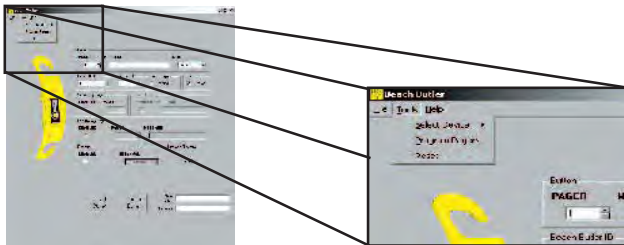

Programming Individual Alpha Pagers

1. Select from the menu **Tools**, then **Program Pagers**.
 2. Select the **Alpha** tab.
 3. Set the **System ID**. Recommended System ID = 0.
-  **Note:** Must match System ID of Button Butler
4. Set the **Pager Number** and the **All Page** number. (All Page is typically 911)
 5. Remove the battery from the pager.
 6. Replace the battery and wait for the screen display to go blank (after about 10 seconds).
 7. Press **Program** to program the pager. A message box will appear to indicate programming.
 8. The pager will beep four times to indicate it is being programmed. Programming is complete when the pager stops beeping.
 9. Repeat steps 3-6 to program any additional pagers.

Group Paging

1. To enable, click "**Enabled**" under Group Paging



Note: *If Group Paging is enabled:*

- 1-99 are reserved for group numbers.
- A pager number can belong to a maximum of 5 groups.
- Assigning **pager numbers** must start at 100 instead of 1.
- User may also enter optional **Group Names**.

Example:

If: Group 1 = 27, and Group Name = Sales

Then: When you select "27" (under **PAGER**) in the **Button** section of the Button Butler configuration screen, then when the "Service" button is pushed, all the pager numbers in the Sales group #27 will be paged at the same time.

To program pagers into groups:

1. Select **Tools** from the menu.
2. Select **Program Pagers**.
3. Select the **Alpha** tab.
4. Check the **Group Paging** enabled check box.
5. Under the **Group Paging** section, enter your group settings.
6. Set the **System ID**. Recommended System ID = 0.



Note: *Must match System ID of Button Butler*

7. Set the **Pager Number**



Note: *Be sure that pager numbering begins at 100*

8. Set the **All Page** number. (All Page is typically 911)
9. Confirm all settings before continuing.
10. Remove the battery from the pager.

11. Replace the battery and wait for the screen display to go blank (wait about 10 seconds).
12. Press **Program** to program the pager. A message box will appear to indicate programming.
13. The pager will beep four times to indicate it is being programmed. Programming is complete when the pager stops beeping.
14. Repeat steps 4-6 to program any additional pagers.

Troubleshooting

In order for your Button Butler to alert a pager, the Button Butler must be programmed on the same System ID as the pager, and the pager number must be programmed into the Button Butler.

To verify the pager's System ID:

1. Remove the battery from the pager
2. Reinsert the battery and read the display.

Example: If Pager Number = 1, Page All = 911, System ID = 0

The display will read:

- C1: [0]1 Pager Number (1)
- C2: [0]911 Page All (911)
- C3: [0]0 System ID (0)

To verify the Button Butler's System ID:

1. Plug one end of the USB to the PC and the other end to the Button Butler.
2. Open the **Butler Configurations Utility**.
3. Click the **Read Butler button**.
4. The current system ID will be displayed under **System ID**

WARRANTY

Long Range Systems Inc warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase. The warranty does not include damage to the product resulting from accident, misuse, improper electrical connection, or failure to charge the product within 30 days of receipt. Rechargeable pagers are required to stay on charge while not in use. Rechargeable pagers that are left off of charge for longer than 30 days will have a negative impact on the life of the batteries requiring them to be replaced thus voiding the warranty. If this product should become defective within the warranty period, we will repair or replace it with an equivalent product, free of charge. LRS will return your product via UPS ground shipping. All warranty claims must be initiated through our customer service department.

No return or replacement can be received without prior authorization and the proper

RMA Number posted to the outside of the shipping container. To receive an RMA# call an LRS office:

Germany: +49 (0) 531 2354725

Brazil: (11) 4152 8416

USA: 214.553.5308

Office Locations:

LRS Germany: Peterskamp 41, 38108 Braunschweig, Germany

LRS Brasil: Av. Dr. Yojiro Takaoka, 4384, 7o andar, Sala 704, Alphaville – CEP 06541-038, Brasil

U.S. Headquarters: Long Range Systems, Inc., 4550 Excel Pkwy, Suite 200, Addison, TX 75001

Copyright © 2008, Long Range Systems, Inc. All Rights Reserved

This document contains proprietary information of Long Range Systems, Inc. (LRS) and is intended for use only by it's employees or customers. None of the material contained herein may be copied, reproduced, republished, downloaded, displayed, posted, or transmitted in any form or by any means, including but not limited to, electronic, mechanical, photocopying, recording, or otherwise without the prior written permission of LRS. Additional copies of this manual may be obtained by contacting LRS.

Screen displays, keyboard layouts, hardware descriptions, or software are proprietary to LRS and are subject to copyright and other intellectual property rights of LRS and shall be treated in accordance with the previous paragraph.

All attempts have been made to make the information in this document complete and accurate. LRS is not responsible for any direct or indirect damages or loss of business resulting from inaccuracies or omissions. Specifications and other information contained within this document are subject to change without notice.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.