

Begin

Thank you for your choice of this version of the phone. Before using or while at use, please read this manual and remain it for future use.

Please use the phone carefully in order to ensure the long-term excellent performance of the phone.

Environment

Please keep the temperature between -10°C and 50°C , which is suitable for the phone.

The phone supports the operating systems: Windows 2000, Windows XP, Windows Vista and MAC OS.

Use

Under some environment, it is strongly recommended for you that the important text information shall be remained because the data in the electronic memories may be changed or lost.

The display window in the instruction of the manual may be inconsistent with the actual situation of the phone.

Some functions defined in the manual may not be supported by the network.

Introduction to Manual

Introduction to Use Method

The user's manual provides the guidance information for you to use the phone. Please read the function schedule if you need to grasp the basic function of the phone fast.

The user's manual uses the following path-displayed method in order to search the functional manual:

Operating path: main menu > information.

The instance indicates: press the OK key at the side under the standby window, switch the main menu to the [Information] with a sliding wheel at the side of the phone when the phone displays the main menu, and press the OK key at the side to open the information functional menu.

Introduction to Symbol

The user's manual uses the following expression method in order to illuminate the phone window.

[] : display main functional menu window.

"" : display the functional submenu window.

<> : window prompt.

The following Info icon is used to illuminate the special information:

Info: prompt information.

Note: a service or a function requires the support of the network or the predetermined service.

Please consult your network service supplier for details.

Contents

Environment	1
Use	1
Introduction to Manual	1
Introduction to Use Method	1
Contents	1
Health&Safety	3
Phone	4
Batteries	4
Adapter	4
USB	4
Please note to tune the volume of the audio device when using the audio accessories. A too high volume will damage your hearing.....	4
Micro SD	4
Attentions for Use	4
General Consideration	4
Phone	4
Battery	5
Adapter	5
USB	5
Earphone	5

Micro SD	5
Display screen	5
Use Consideration at Public Situation	6
About Copyright	6
About Recycling	6
Disclaimer	7
About Trademark	7
Export Management Rules	7
Before Use	7
Support Accessories	7
Understand Your Phone	7
Front View	7
Side View	7
Back View	7
SIM Card	7
Micro SD Card	8
Power Phone on/off	8
Display Screen	9
Keys	9
Menu contents	9
Use Keys	10
Basic Functions	10
Dial	10
Answer	10
Dial with Recent Call Log	10
Useful Function	10
Shortcut Functions	11
With the function, you can view your local phone number	11
Call	11
Dial	11
Answer Incoming Call	12
Call-related Function	12
Text Input	13
Multi-press Input	13
Smart Input	13
Input Symbols	13
Shortcut Switch to Input Modes	13
Input Keys	13
Setting	14
Profile Mode	14
Display Setting	14
Phone Setting	14
Call Setting	14
Network Setting	15
Safety Setting	16
Default Setting	16
Play Music	16
Play List	16
Set up Play Mode	17

Set up Equalizer	17
Set up Volume	17
Play Music	17
Operate Player	17
Message	18
Inbox	18
Outbox	19
Create SMS	19
Icons of SMS for Marking	19
Setting	20
View Memory Capacity	20
Phonebook	20
View Contacts	20
Create Contacts	20
Delete Contacts	20
Send Contacts	20
Send Message to Contact	21
Copy Contact	21
Display Contacts in SIM/USIM Card	21
Create My Business Card	21
Send My Business Card	21
Quick Dial	21
Memory Capacity	21
Phonebook Option	21
Call Log	21
View call log	21
Send SMS to logged Phone Number	22
Save Logged Phone Numbers	22
Set up Logged Phone Number as Quickly Dialed Number	22
Clear Away Call Log	22
Option of Call Log	22
My File	22
Operate Folder	22
Operate File	23
Memory Capacity	23
Connection	23
EMOBILE-An Additional Service	23
About Accessories	23
SAR Data	24
Function Schedule	24
Failure and Solution	24
Guarantee and After Service	26
Gurantee	26
Repair	26
Attention	26
Accessories	26
Reference	26
Health&Safety	

Phone

The subscriber shall use the phone at the right operating locations (at the ear with the antenna toward to the upper side of the arm) in order for you to operate satisfactorily and safely.

Please use the phone carefully because it is designed deliberately and produced with the high technology. You can use the phone happily for long time with the suggestions as follows.

Do not let the kids or pets touch the phone, which is possible to throttle the kids or the pets or kids are possible to damage the phone.

Keep the phone dry and prevent various kinds of liquid from entering in the phone against the damage of the phone.

Please do not operate the phone with wet hands, which are possible to engender the electric shock.

Please do not store the phone under the high temperature environment, which is possible to shorten the service life of the electronic device, to damage the batteries or to melt the accessories.

Please do not store the phone under the low temperature environment because the vapor can enter in the phone and damage the circuit board of the phone when the phone is recovered to the normal operating temperature.

Please do not expose your phone under the strong sunlight to prevent the phone from be heated.

Please do not place your phone at the locations, near which there are flammable liquid, gas and explosive articles.

Batteries

Please do not use the damaged adapter or batteries.

Please use the batteries rightly, do not let the batteries at the short circuit, prevent the batteries from be heated, or otherwise causing the fire disaster possibly.

Prohibit playing the batteries under the high temperature or throwing the batteries into the fire, or otherwise causing the explosion.

Should return the waste batteries to the supplier or place at the designated recycling point and should not place them together with the life waste.

The charging time of the battery is dependent of the remained capacity, type and adapter of the battery. The battery may be charged for thousands of times, but it can be worn out gradually. Please purchase new batteries when the standby time is shorter than the normal standby time of the phone.

Please use the adapter or battery dedicated or authorized for the phone.

Please disconnect the adapter and the power supply when the adapter is not used.

Please do not charge the battery for long time, or otherwise the service life of the battery will be cut off.

The temperature extremes will have influences on the charging capacity. Please pre-cool or pre-heat up to the normal temperature (the lithium ion battery will be affected when the temperature is lower than 0°C)

Adapter

With the adapter, the AC 100V~240V input can be transferred into DC 5V for charging the batteries.

The optimum operating temperature of the adapter is from 0°C to 40°C.

USB

Be sure not to try disassembling or refitting the memory card.

Be sure not to let the dirt, dust or foreign substances from contaminating the USB socket.

Earphone

It is recommended that you should use the authorized original audio accessories. Use the accessories of a third party is possible to lower the product performance or to engender the risk for your health and safety.

Please note to tune the volume of the audio device when using the audio accessories. A too high volume will damage your hearing.

Micro SD

Be sure not to expose the memory card to the damp environment.

Be sure not to touch the connecting terminals of the memory card with hands or any other metal article.

Be sure not to strike, bend or drop the memory card.

Be sure not to try disassembling or refitting the memory card.

Be sure not to use or store the memory card at the location where is damped, eroded or overheated (such as in a summer car). Please avoid the direct sunlight. Be sure not to place the memory card near to a heater).

Be sure not to press or bend the adapter of the memory card forcedly.

Be sure not to let the dirt, dust and foreign substances enter in the socket of the adapter of the memory card.

Attentions for Use

General Consideration

Please use the authorized accessories in order to guarantee using the phone safely and effectively.

Phone

The phone described under the manual is authorized to use the GSM900, GSM1900 and UMTS1700 networks. Please contact with the network service supplier for more information of the network.

Please abide by the laws or regulations, respect the rights and privacies of other persons when using the function of the phone.

Please power the phone on when in need of the function of the phone exclusive of the prompt of the alarm clock.

Please do not power the phone on when the wireless device is possible to engender the interference or risk.

Please do not throw, or beat the phone crudely, or otherwise the internal circuit board is possible to be damaged.

Please use the wetter or static electricity-resistant clothing, do not use the dry clothing prone to produce the static electricity when cleaning the phone. Please do not use such chemicals as the detergent when cleaning the phone surface. Please power the phone off firstly and clean the phone secondly.

Please do not paint your phone because the paintings will hinder the normal use of the phone.

Please let the phone to be not too closed to the eye in preventing the eyes from damage when the phone is equipped with the flash light.

The after service provider will not guarantee the quality of the manufacture even if within the guarantee-to-repair period if your phone or battery is wetted and the internal label of the phone will be damaged.

Please do not shelter the phone during the use because the call quality is affected and the actual power of the phone will be increased, thus shortening the call and standby time of the phone.

Battery

The phone is powered with the chargeable battery. The new battery required a 2-3-hour charging and discharging process. The battery can be charged or discharged for hundreds of times, but it will be worn out gradually. When the call and standby time is less than the typical time, please purchase a new battery. Please use the ##-authorized battery or ##-authorized adapter for charging the battery.

Disassemble the battery when the phone is powered off. The over-charged battery will be shortened in the service time. Please do not let the battery that is finished charging remained at the charging status. The battery of full capacity will be gradually reduced in the capacity along with the time even if is not used.

The phone will display the charging icon after it is charged for a period of time when the battery is overused.

Please do not let the battery at short circuit because the short circuit will damage the battery. Such metal articles as the coins, pins or pen can result in the short circuit if directly connecting the positive and negative poles of the battery.

The call and standby time is depended on the different usage situations of the phone. For instance, the signal strength, the working temperature, the usage mode, the selected function, voice or data transport when the phone is operated. The battery can be up to 110 hours in the standby time optimally.

Adapter

Please confirm the model of the adapter before connecting the phone. The applicable current of the phone is 500mA.

Connect the AC adapter to the power supply of identical specified label of the product. Ensure the right position of the cables, which are not damaged or stressed.

Be sure to disconnect the power supply of all components before cleaning in preventing from electric shock.

Prohibit using the AC adapter outdoors or at the damp environment.

Be sure not to alter the cables or plugs. If the plug is not supported by the power supply socket, should ask the qualified electric technician to install the suitable power supply socket.

Please grasp and pull out the connector when disconnecting the adapter.

USB

Used to connect the USB socket of the PC communicated with the phone.

Earphone

Please be sure that you have inserted the earphone in the right earphone socket, or otherwise the earphone cannot be used normally.

Please do not draw the cables, or otherwise the earphone will be damaged.

Micro SD

Be sure that you have inserted the memory card rightly.

Insert the memory card in the adapter of the memory. The memory card required inserting completely, or otherwise it cannot be used normally.

Please back up your critical information. Our company will be irresponsible for any damaged or lost data on the memory card.

Be sure not to pull out the memory card or the adapter of the memory card or power the phone off when you format, read or write data.

The data is possible to be damaged or lost when the memory card is positioned in the static electricity or strong magnetic field.

Display screen

The display screen of 65K colors is used under suitable environmental temperature from

-40°C to 70°C.

A 160° wide-angle is supported for viewing the display screen.

Be sure not to strike or bend the display screen.

Be sure not to scrape the display screen with the sharp and hard articles.

Use Consideration at Public Situation

Electronic Device

Most electronic device shields the wireless information. Please consult the manufacture for related information.

Pacemaker: keep it 6-inch (15cm)-distance from the phone; should not carry the phone in the chest pocket; please answer the call with the phone at the other side of the pacemaker, lowering the possibly-caused interference. Please power the phone off rightly if you concern that the phone is interfering.

Hearing aid: partial digital wireless phone is possible to interfere the normal operation of the hearing aid. Please contact with the manufacturing of the hearing aid if there is a disturbance.

Other medical apparatus: please consult with the manufacture of the medical apparatus in confirming whether the medical apparatus shield the radio wave if you use the other medical personal apparatus. The doctor can assist you in obtaining the information. Please power the phone off near the healthcare facilities where the phone is prohibited using.

Automobile device: please contact with the manufacture of the device for the pertinent information because the wireless signal is possible to have influences on the electronic device installed in the automobile.

Traffic

The phone has a strong wireless voice communication function and you can make a call anywhere and anytime, thus the subscriber should undertake some significant responsibilities.

The driving is a first responsibility of you when driving. Should be alerted to answer the call and abide by the local regulations when at drive.

Please understand the radio phone and its function, such as quick dial and redial. With these functions, you can dial out conveniently without distraction when driving.

Should use the hand-free device if there is the hand-free device; if possible, using any now-supplied hand-free device may let you use the wireless phone conveniently safely.

Place the wireless phone at the place where the phone is easy to be stretched without distracting to get the phone from the road. You should use the voice mailbox to answer the call as far as possible if receiving a call at an inconvenient time.

Tell the opposite part of the call that you are driving; if necessary, hang up the call at the traffic congestion or bad climate. It will be extremely dangerous when it is rainy, rainy and snowy or frozen, even if at the traffic congestion.

The safety gas sac, brake and speed control system and fuel-jetting system shall be not affected by the wireless transmission. In foregoing cases, please contact with the distributor of the automobile.

Please power your phone when fueling or where the bidirectional wireless devices are prohibited using. Please place the flammable and explosive articles together with the phone because the internal spark of the phone is possible to fire them.

Please power the mobile phone off on board of the plane. The phone is not allowable to use during the flight in order to prevent the communication system of the plane from being disturbed. The phone should be used with the consent of the flight crew member according to the regulation when the plane is not taken off.

Please confirm that the phone will not be powered on when the alarm clock is launched automatically during the flight.

Environments Possibly Resulting in Risks

Please power the phone off at the potentially-explosive locations. Please abide by the safety labels and instruction at these locations the spark produced in these locations is possible to result in the explosion or fire, body injury or death.

It is recommended that the subscriber powers the phone off at the gas station or maintenance station. It is minded that the subscriber abides by the instruction to use the wireless device at the locations, such as oil depots, oil storage and distribution areas, chemical plants or the sites where are exposing.

The safety labels are possible to mark in the locations where there are risks of explosion, however, all the locations will not be marketed always, including the underside of the ship deck, chemical storage or place facilities, vehicle using the liquefied natural gas, locations where there is chemicals or particles in the air and other locations where you are recommended to turn off the engine of the automobile.

About Copyright

Based on the Copyright Law, the materials which is protected by the law for the reproduction, alternation and use (such as music) are limited to use personally. The subscriber will be regarded as violation of the law if the subscriber reproduces, alters or use the materials of the manual without copyright or authorization of the owner of the copyright and the owner of the copyright reserves to prosecute. Please do not use the copy-right-protected material of the manual.

About Recycling

The phone is labeled not to treat as the life waste in the product or package labels. The right method: send the product to the related electronic device recycling point for reusing. The correct treatment of the product can prevent the environment and human health from damage. If the product is treated improperly, the natural environment and human health will be

affected seriously. The recycling and reusing will benefit the conservation of the natural resources. Please contact with the local municipal office of life waste treatment institute for the details of the recyclable products.

The battery can be treated as the common life waste and should better to treat with the waste battery treatment equipment.

Disclaimer

We are exempted from the direct or indirect asset loss or claims of a third party caused in the usage of the phone or related functions, such as stolen information, lost data or changed data.

About Trademark

The names of the products and companies referred in the manual are the trademarks of various owners.

Export Management Rules

The software is supervised by the export control law, and possibly supervised by the export control laws of other countries. The client agrees to conform to the laws and regulations, and promises to obtain the licenses for the export, exported or imported software accountably. The client shall not export the software to any countries or regions or residents or citizens of any countries on which an embargo are laid on by downloading or in any other ways.

Before Use


Support Accessories

You may have the following accessories:


- Battery
- Adapter
- Earphone
- Data cable
- 3-way connector

Understand Your Phone


Front View

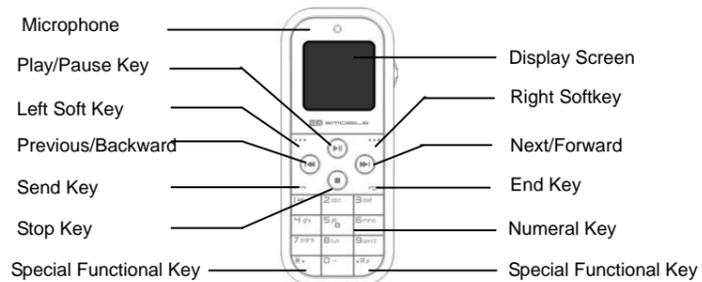

Side View

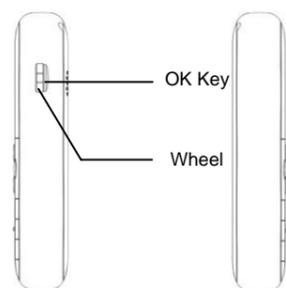

Back View

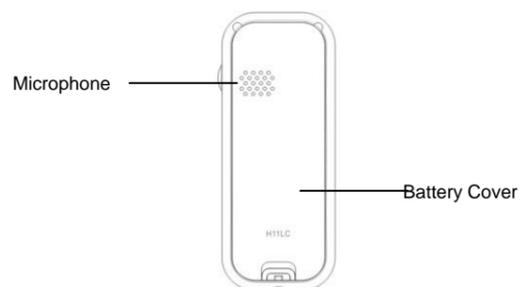

SIM Card

You will receive an SIM card that can be inserted in the phone when you preset to access to the communication network service. The SIM (Subscriber Identity Model) card contains the information of the preset network service, your PIN (Personal Identification Number) and the network service information that you can obtain.

Please consult with the provider of the SIM card, the network service provider or the network operator for the information for obtaining and using.

If you need to obtain the 3G network service, you can purchase the USIM (Universal Subscriber Identity Model) card.

Insert SIM Card

Please power the phone off in ensuring the disconnection of the adapter and the phone before removing the battery.

1. Slightly push the bottom of the phone with the phone back on, push the rear cover of the phone upwards till the cover is removed.
2. Move upwards and remove the battery.
3. Insert the SIM/USIM card in the socket with the gold wafer downwards.
4. Insert the battery with the metal interface aligned with the connecting socket and push the rear cover of the phone back.



Charge Battery

The phone will issue the alarm tone when the battery capacity is lower, displaying the information for the insufficient electric capacity with the flashing empty battery icon. Under the case, you cannot use partial functions of the phone.

The phone will automatically power off when the battery capacity is lower than the critical value. Please charge the battery.

The phone will display the flashing battery icon at the right corner of the screen when the phone is being charged. The screen will display a picture of charging status and hint the finished charging when the phone is charged under the power-off mode. It takes about 2.5 hours to charge.

1. Insert the charging connector in the phone.
2. Lightly pull out the charging connector after finishing charging.



Micro SD Card

The phone supports the Micro SD inserted. Please search the file information saved in the card with the file manager of the phone.

Insert Micro SD Card

Please power the phone off, remove the battery and ensure the disconnection of the adapter and the phone before inserting the Micro SD.

1. Move the SD card socket.
2. Insert the Micro SD card in the socket.
3. Push the socket back.



Power Phone on/off

Please confirm that the phone is charged and the SIM card or USIM card is inserted before the phone is powered on.

The window of the phone will display the information of inserting the USIM card in case that the SIM card is not inserted or the USIM card is launched. In this case, the phone only supports the emergency call. You can input the phone number for emergency calls and click the send key to dial out.

The phone supports to be launched under the charging status. When the phone displays the power-on information, the phone is launched.

When the phone is too lower in the electric capacity and powered off, the power-on information requires to display after a period of charging.

Power Phone on

1. Press and hold the end key for lastingly 2 seconds.
2. Please input the phone lock password/PIN lock password and then click the OK key for confirmation if the password enquiry is displayed on the screen.
3. The screen will display the default standby picture when the phone leaves the factory upon the phone is launched at the first time.
4. Please refer to related information if the phone is required to set up.

Note:


The phone can recognize the provider of the SIM card or USIM card automatically and finish the setup of parameters of the SMS and wireless network after the phone is launched. Please consult with the service provider for the right parameters and finish the setup of the

parameters if the phone does not set the related parameters automatically.

Power Phone off

1. Press and hold the end key for lastingly 4 seconds.
2. Enter in the power-off status after the screen displays the power-off animation.

Display Screen

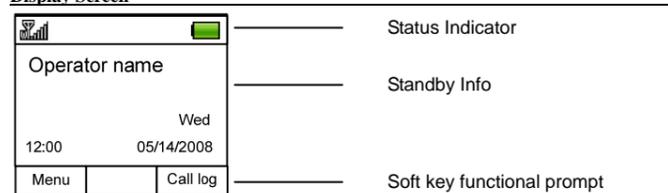

- Status prompt: signal status, battery status, SMS status, profile mode status, function-activated status and inserting status of the external device.
- Standby info: operator name, date, week, morning and afternoon prompts (12 hours system).
- Soft key functional prompt: left soft key -> main functional menu; OK key -> main functional menu; right soft key -> call log in default setting when the phone leaves the factory.

Icons in Status Bar

- Strength of receiving signal
- GPRS network
- EDGE network
- Calling
- Launch the call forwarding function (display only when the SIM/USIM card supports it)
- Missed calls
- Roaming network
- New message
- New voice message
- Send message
- Message is full
- Playing MP3
- Activate mute mode
- Activate conference mode
- Activate in-car mode
- Activate outdoor mode
- Activate new profile mode
- Insert earphone
- Insert USB
- Insert external memory card
- Activate the dialing function
- Activate the phone lock function

Keys

OK key	Enter in the main functional menu or confirm the selected options.
Wheel	Move the selection box between various levels of menu and options and adjust the volume.
Soft key	Execute the function displayed on the top of the key
Send key	Dial or answer a call.
End key	End a call, decline a call, power the phone on/off or return to the standby mode.
Numeral key 1	Press and hold to dial the voice mailbox service out.
Numeral keys 2-9	Press and hold to call the contact of the phone number with the quick dial is set up.
Numeral keys 1-9	Input the letters or numbers
Numeral key0	Input the number 0 or space character.
Special key *	Dial and input *,+/, and p; input the punctuation symbols or lock and unlock the keypad lock.
Special key #	Switch the phone amid the mute and cycle mode.

Menu contents

- Setting
 - Profile mode
 - Display setting
 - Phone setting
 - Call setting
 - Network setting
 - Security setting
 - Default setting
- Music player
- Message
 - Inbox

Outbox
Draft
Create
Setting
Memory status
Phonebook
Call logs
Dialed-in calls
Dialed-out calls
All calls
File manager

Use Keys

Use Soft Keys

The functions of soft keys vary with the current operating. The current function is displayed in the lowest line on the screen.

Press the left soft key to select the option of the highlighting display.

Press the right soft key to return to the previous functional menu.

Select Option

1. Press the pertinent soft key.
2. Press the side sliding wheel to move upon to the previous or next option.
3. Press <Option> to enter in the option of the highlighting display, or press the side OK key to confirm the display function.
4. If you require exiting, you can press <Back> to return to the previous functional menu or press the end key to return to the standby mode.

Use Shortcut Keys

Press the numeral key corresponding to the option required, confirming the pertinent function under the functional list status.

Basic Functions

Dial

1. Input the district number and the phone number, press the dial key or side OK key to launch the call under the standby mode.
2. Press the right soft key to delete the number at the left side of the cursor in sequence or press and hold the right soft key to delete all the numbers if a wrong number is input.
3. Press the end key if you require terminating or cancelling a call.

Answer

The phone will ring or vibrate and the screen will display the incoming call icon when you phone receives an incoming call.

1. Press the left soft key or end key to answer the call.
2. Click the end key to terminate the call or refuse the call if necessary.
3. Use the earphone key to answer if the earphone is inserted or the Bluetooth earphone is used.

Dial with Recent Call Log

1. Press the call key to display the recent call log under the standby mode or via the path: standby > call log > dialed-in calls/dialed-out calls/ all calls.
2. Use the side sliding wheel to select the phone number of the contact.
3. Press the call key or side OK key to originate the call.

Useful Function

Profile Mode

Use the phone, set up the personal ringtones and phone-pertinent prompt tones under the different profiles..

1. Operating path: standby > setting > profile mode.
2. Select the profile mode required to set up with the sliding wheel via the path: option > edit or use the side OK key to open the setting window of the profile mode.
3. Select the setting option with the sliding wheel, and press the side OK key to set up the parameters.
4. Return to the setting window after finishing setup, click the left soft key to save the setting value.
5. Activate the selected profile mode via the path: option > option when the phone displays the profile mode list.

Set up Phone Language

Set the display language for the phone:

1. Operating path: standby > setting > phone setting > language.
2. Select the phone display language with the sliding wheel and press the left soft key or side OK key for confirmation.

Set up Date and Time for Phone

1. Operating path: standby> setting > phone setting > date and time.
2. Select the type to be set up with the sliding wheel and press the side OK key to set up the parameters.
3. Return to the setting window after finishing setup and click the left soft key to save the set value.

Select Music to be played

1. Operating path: standby > music player.
2. Press the left soft key to open the option menu, and select the "play list".

3. Select the play list with the sliding wheel and press the left soft key to select "view".
4. Select the music to be played with the sliding wheel and press the side OK key to begin playing.

View Received SMS

1. Operating path: standby > SMS > inbox.
2. The SMS is arranged by the time sequence and marked with the icons for the read or unread status. Scroll the SMS list and search the SMS to be viewed with the sliding wheel.
3. Press the side OK key to view the SMS content under the SMS list status.

View Contact Data

1. Operating path: standby > phonebook.
2. Press * key or press the left soft key to open the option menu and select "search".
3. Select the sender with the sliding wheel or press the left soft or side OK key for confirmation.
4. The phone will display the contact list of the senders.

Shortcut Functions

Activate Mute Mode in Shortcut Way

1. Press and hold # key under the standby mode.
2. The window displays the prompt after the mute mode is launched and the mute mode icon is displayed in the standby mode bar.

Play Music in Shortcut Way

1. Press and hold the music key under the standby mode.
2. The phone displays the music list. Select the list or music to play.

Search Contact in Shortcut Way

1. Press and hold * key under the standby mode.
2. Select the sender with the sliding wheel and press the left soft key or the side OK key for confirmation.
3. The phone will display the contact list of the senders.

View Local Phone Number

With the function, you can view your local phone number.

1. Under the standby mode, press the left soft key or the side OK key for confirmation, entering in the main menu.
2. Press the numeral key 0 to view the local phone number under the main menu status.

Manually Lock Keypad

1. Press the left soft key and then press the * key under the standby mode.

Manually unlock Keypad

1. Press the left soft key and then press the * key under the standby mode.

Call

The phone will actively access to the main network if it is within the coverage of the main network after the phone is powered on. The phone can use the other network, termed as roaming, if it is not within the coverage of the main network and permitted by the network operator protocol.

You can dial out or in when the network supplier symbol is displayed on the screen.

The signal icon at the left-up corner of the screen indicates the current network signal strength and the call quality will be affected when the signal is weak.

The call quality is subject to the hindrance, therefore a move within a small range can enhance the signal strength and call quality effectively.

Dial

Dial Typically

1. Under the standby mode, input the district number and phone number, press the call key or the side OK key to originate a call.
2. Press the right soft key to delete the numbers at the left of the cursor or press and hold the right soft key to delete all numbers if a number is input wrongly.
3. Press the end key if you want to end or cancel a call.

Dial Telephone Extension

1. Under the standby mode, input the exchanger number and then consecutively input * till the P number appears.
2. Input the extension number, press the call key or side OK key to originate the call.

Dial Emergency Call

1. Use the keypad to input the emergency call whenever the SIM card or USIM card is inserted in the phone or not, such as 999 or 911.
2. Press the call key or side OK key to originate a call.
3. Press the left soft key to directly launch the call of local emergency call under the standby mode when the phone is not inserted with the SIM card or USIM card or the card is invalidated.

Dial Internal Long-distance Call

1. Under the standby mode, continuously press * till the + sign appears.
2. Input the country code, district number and the phone number, press the call key or the side OK key to originate a call.

Dial with Recent Call Log

1. Under the standby mode, press the call key to display the recent call log or via path: standby > call log > dialed-in calls / dialed-out calls / all calls.
2. Select the phone number of a contact with the sliding wheel.
3. Press the call key or the side OK key to originate a call.

Dial with Phonebook

1. Via path: standby > phonebook.

2. Select the phone number of a contact with the sliding wheel.
3. Press the call key or the side OK key to originate a call.

Dial with Shortcut Key

1. First you are required to set up the shortcut key for a contact with reference to related information if you want to dial out with the shortcut key.
2. Under the standby mode, press and hold numeral keys from 2 to 9 or 0, originate a call to the phone number corresponding to the shortcut key.

Info:

The numeral key 1 is set up as a shortcut key of the voice mailbox and cannot be adopted as shortcut key of phone numbers.

Dial Voice Mailbox

1. The default voice mailbox number is preset in the phone. If it is required to reset, please refer to related information.
2. Under the standby mode, press and hold the numeral key 1 to originate the call of the voice mailbox.

Answer Incoming Call

Answer Incoming Call Typically

Your phone will ring or vibrate and the screen will display the incoming call icon when you phone receives an incoming call.

1. Press the left soft key or the call key to answer the call.
2. Click the end key to terminate or refuse the call if necessary.
3. You can use the earphone to answer if the earphone is inserted or a Bluetooth earphone is used.

Info:

You can press any keys other than the right soft key, end key and the side sliding wheel to answer any incoming call if you activate the function of answering by pressing any key.

Press the earphone key to answer an incoming call if the earphone is inserted.

Press the right soft key or the end key to decline a call if necessary.

View Missed Calls

1. The phone will display the missed call information under the standby window when there is a missed call.
2. Press the left soft key to view the call log and press the call key to originate a call to the phone number of the missed call.
3. View the missed call information via the call log via an operating path: standby > call log > dialed-in call.

Call-related Function

Adjust Call Volume

Adjust the microphone volume with the side sliding wheel during the call, increasing the volume with the sliding wheel upwards moved and reducing the volume with the sliding wheel downwards moved.

Call Holding/Resuming

Press the right soft key to hold or resume a call during the call.

Dial another Call during Call

The function requires the supports of the network. Please consult with the network service provider.

1. Press the right soft key to hold the current call and then dial a second call in a normal way.
2. Or directly input the second phone number with the keypad, press the call key or side OK key to originate a call.
3. Switch the modes of holding and activating the call with the right soft key if you require switching to one of two calls.

Answer Second Call

The function requires the support of the network. You can consult with the network service provider for the details of the call waiting.

1. Press the call key to answer the second call and the first call will be held automatically.
2. Switch the modes of holding and activating the call with the right soft key if you require switching to one of two calls.
3. Press the end key to terminate the current call.

Use Speaker Function

With the hand-free function, you can speak to the mobile phone and answer a call within a short distance.

1. During the call, press the side OK key, open the speaker and launch the hand-free call function.
2. Re-press the side OK key, close the speaker and switch to the microphone if you require switching to the normal call.

Write SMS during

1. During a call, press the left soft key to open the open menu and select "send SMS".
2. Input the SMS content and press the side OK key to send the SMS when the phone skids to the SMS-edited window with reference to the related content.

Call Options

During a call, press the left soft key and select one of the following options during the call:

Speaker: open or close the hand-free call function.

Mute: close the phone microphone and the opposite party will hear no voice of yours.

Add: add another call in the current call.

End: end the current call.

Send SMS: enter in the SMS-edited window.

DTMF: send DTMF(dual tone multifrequency) tones in group. The DTMF tone is a

phone-dialing tone that is issued when the numeral keys are pressed. When you use the computerized call system(such as phone banking), it will assist you recording the password or account.

Volume: adjust the call volume.

Contact: enter in the contact list.

Shift to Earphone: shift the call to the Bluetooth earphone or hand-free car-accessories.

Text Input

The phone supports the English and special symbol input.

Change Input Mode

1. Under the text input mode, such as : standby >message> Create.
2. Press the left soft key to open the option menu and select " input mode" .
3. Select the input mode with the sliding wheel and press the left soft key or side OK key for storage.

Multi-press Input

1. Under the text input mode, such as: main menu>message > Create >SMS
2. Please use the path: option > smart mode> close if the current input mode is not the multi-press one.
3. Hold the cursor at a same place for 0.5 seconds, repeatedly press the numeral keys from 2 to 9 till the wanted character appears before moving the cursor.
4. For instance, you want to input the word "Phone", press the numeral key 7 once, numeral key 4 twice, numeral key 6 trice and numeral key 3 twice in sequence.
5. Press the right soft key in turn to delete the character previous to the cursor and press and hold the right soft key to delete all characters if inputting wrongly.
6. Press the numeral key 0 if you want to inut the space sysmbol fast.

Smart Input

With the smart input method, you can use the built-in dictionary to identify the commonly-used characters of each key sequence. Thus you can only click the key of the corresponding letter once whatever the key position of the corresponding letter.

 
1. Under the text input mode, such as: standby >message> Create.
2. Please use the path: option > smart mode> open if the current input method is not a smart one.
3. For instance, you want to input "Phone" word, please press numeral keys 7,4,6,6 and 3 in sequence.
4. Press the side OK key for confirmation if the screen displays your wanted character; view other candidate character with the sliding wheel if the screen does not display your wanted character, press the side OK key for confirmation till you search your wanted character.
5. Press the right soft key in turn to delete the character previous to the cursor and press and hold the right soft key to delete all characters if inputting wrongly.
6. Press the numeral key 0 if you want to inut the space sysmbol fast.

Input Symbols


1. Under the text input mode, such as: standby >message> Create.
2. Repeatedly press numeral key 1 to input your wanted symbols if you want to input the common sysmbols.
3. Press * key, select the suitable symbols with the sliding wheel and confirm the input with the left soft key or side OK key if you want to input with the symbol table.

Shortcut Switch to Input Modes

1. Under the text input mode, such as: standby >message> Create.
2. Repeatedly PRESS # key to switch amid the input modes.
3. When at the multi-press input method, switch to the input modes in sequence with the # key:



 4. When at the smart input method, switch amid the input methods with the 3 key:



Input Keys

Keys	Characters Displayed in Sequence	
	Capital	Lower Case
1	. , ? ! : / @ _ ~ 1	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8

9	W X Y Z 9	w x y z 9
0	Space 0	

Setting

Profile Mode

It is used to set up the personal ringtones or phone-related prompt tones in order to use the phone under the different scene.

1. Operating path:standby > setting> profile mode.
2. Select a profile mode to be set up with the sliding wheel and open the profile mode setting window via the path: option>edit or with the side OK key for confirmation.
3. Select a setting option with the sliding wheel and set up the parameters with side OK key for confirmation.
4. Return to the setting window after finishing setup, and click the left soft key to save the setting value.
5. When the phone displays the profile mode list, activate the selected profile mode via the path: option >select.

Setting Options of Standard/Conference/ In-car/Outdoor/New Profile Mode:

- Voice ringtone for incoming call: set up the voice ringtone for an incoming call.
- Volume: set up the volume of the ringtone.
- Message prompt tone: set up the prompt tone for message.
- Vibrate: set up whether to vibrate.
- Key tone: set up whether to activate the key tone.
- Warning tone: set up whether to activate the warning tone.

Setting Options of Mute mode:

- Voice ringtone for incoming call: set up the voice ringtone for an incoming call.
- Message prompt tone: set up the message prompt one.

Display Setting

Set up StandbyDisplay

Set up the screen display parameter of the standby phone.

1. Operating path: standby >setting> display setting > standby management.
2. Select the type to be set up with the sliding wheel and press the side OK key to set up the parameters.
3. Return to the setting window after finishing setup, and click the left soft key to save the setting value.

Setting Option of StandbyManagement:

- Wallpaper: set up a standby picture for the phone.
- Time display: set up whether to display the time under the standby mode.
- Date display: set up whether to display the date under the standby mode.

Set up Background Light Time

Set up the waiting time of the screen light under the non-working mode.

1. Operating path:standby >setting>display setting> background light waiting time.
2. Select the required waiting time with the sliding wheel and press the left soft key or the side OK key for confirmation.

Set up Display Screen Brightness

Set up display screen brightness.

1. Operating path:standby >setting>display setting> screen brightness.
2. Select the required screen brightness level with the sliding wheel and press the left soft key or the side OK key for confirmation.

Phone Setting

Set up phone language

Set up the display language for the phone.

1. Operating path:standby > setting>phone setting > language.
2. Select the required phone display language with the sliding wheel and press the left soft key or the side OK key for confirmation.

Set up phone date and time

1. Operating path:standby >setting> phone setting>date and time.
2. Select the required type to be set up with the sliding wheel and press the left soft key or the side OK key for confirmation.
3. Return to the setting window after finishing setup, and click the left soft key to save the setting value.

Set up power-on/off tones

1. Operating path:standby > setting >phone setting >power-on/off ringtone.
2. Select the attribute of the power-on/off ringtones with the sliding wheel and press the left soft key or the side OK key for confirmation.

Call Setting

Set up display attribute of local phone number

Set up whether to display the local phone number to be displayed on the phone of the called. It is required the support of the network to send the local phone number.

1. Operating path: standby > setting > call setting >local phone number.
2. Select the display attribute of the local phone number with the sliding wheel and press the left soft key or the side OK key for confirmation.

Set up attribute of call waiting

Set up whether to answer a second call if the phone is under the calling mode. The function requires the support of the network.

1. Operating path:standby > setting > call setting >call waiting.
2. Select the attribute of the call waiting time with the sliding wheel and press the left soft

key or the side OK key for confirmation.

Set up the answering mode

Set up to answer an incoming call by pressing any key or answer key.

1. Operating path: standby > setting > call setting > answer mode.
2. Select an answering mode with the sliding wheel and press the left soft key or the side OK key for confirmation.

Set up attribute of auto redial

Set up whether to continue to dial if the local phone fails in dialing. The function supports redialing for 10 times at maximum.

1. Operating path: standby > setting > call setting > auto redial.
2. Select the attribute of auto redial with the sliding wheel and press the left soft key or the side OK key for confirmation.

Set up attribute of minding at minute

Set up whether to give a prompt 10 seconds before a minute integer if the phone is under a calling mode.

1. Operating path: standby > setting > call setting > mind in minute
2. Select the attribute of minding at minute with the sliding wheel and press the left soft key or the side OK key for confirmation.

Set up attribute of prompt tone of answering a call

Prompt that the call network is accessed

1. Operating path: standby > setting > call setting > prompt tone of answering a call.
2. Select the attribute of the prompt tone of answering a call with the sliding wheel and press the left soft key or the side OK key for confirmation.

Set up Call Forwarding

Forward the incoming a voice call to a designated phone number or the voice mailbox.

1. Operating path: standby > setting > call setting > call forwarding.
2. Select the condition for forwarding with the sliding wheel.
3. Press the left soft key to open the option menu and select "open".
4. Select forwarding mode: voice mailbox or other.
5. Input the phone number with the keypad or select the contact from the phonebook with the side OK key for confirmation and press the left soft key for confirmation if forwarding to other phone number.

Set up call restriction

Set up the right of calling and answering, including: barring of dialing out, barring of dialing an international long-distance call, barring of all incoming calls, barring of an incoming call upon international roaming and cancel all call restrictions. The function requires the supports of the network.

1. Operating path: standby > setting > call setting > call restriction.
2. Select the restriction type with the sliding wheel.
3. Press the left soft key to open the option menu and select "open".

View call time

1. Operating path: standby > setting > call setting > call time.

Reset Call Time

The time displaying on the phone is possible to differ from the actual call time of the call toll of the network service supplier.

1. Operating path: standby > setting > call setting > call time.
2. Press the left soft key to re-calculate the call time.

Info Option of Call Time

Last call time: view the time length of the last call.

All dialed voice calls: view the time length sum of all dialed calls.

All answered voice calls: view the time length sum of all answered calls.

Reset All: reset the last call time, time sum of all dialed voice calls and all answered voice calls as 0.

View Call Toll

The function will display only when it is supported by the SIM/USIM card.

1. Operating path: standby > setting > call setting > call toll.

Reset Call Toll

1. Operating path: standby > setting > call setting > call toll.
2. Press left soft key to re-calculate the call toll.

Set up Call Toll Limitation

1. Operating path: standby > setting > call setting > call toll.
2. Press the left soft key to open the option menu and select "modify limited toll".
3. Input PIN2 and press the left soft key for confirmation.
4. Open the call toll restriction, input the limited toll and press the left soft key to store.

Set up call toll rate

1. Operating path: standby > setting > call setting > call toll.
2. Press the left soft key to open the option menu and select "toll rate setting".
3. Input PIN2 and press the left soft key for confirmation.
4. Input currency and unit price and press the left soft key to store.

Info Option of Call Toll

Last call toll: view the last call toll.

Total toll: view the toll sum of all calls. If the total call toll exceeds the limited call toll, you cannot dial any call out till you reset the toll meter as 0.

Limited Toll: view the maximum toll set in the option menu "modify limited toll".

Network Setting

Set up network mode

1. Operating path: standby > setting > network setting > network mode.
2. Select a network mode with the sliding wheel.

3. Press the left soft key or the side OK key for confirmation.

Set up network-searching mode

1. Operating path:standby > setting >network setting > network-searching mode.
2. Select a network-searching mode with the sliding wheel.
3. Press the left soft key or the side OK key for confirmation.

Set up network channel

1. Operating path:standby > setting >network setting >channel setting.
2. Select the network channel with the sliding wheel.
3. Press the left soft key or the side OK key for confirmation.

Safety Setting

Set up auto keypad lock

Set up to open or close the auto keypad lock function. When the auto keypad lock function is activated, the phone will automatically lock the keypad after there is no key-action for 1 minute in preventing from dialing wrongly.

1. Operating path: standby > setting >safety setting >auto keypad lock.
2. Select the auto keypad lock attribute with the sliding wheel.
3. Press the left soft key or the side OK key for confirmation.

Set up Phone Lock

Set up to open or close the phone lock function. When the phone lock is activated, the phone password is required to input upon each power-on.

1. Operating path: standby > setting >safety setting >phone lock.
2. Select phone lock attribute.
3. Input phone lock password which is preset as 0000 in default.
4. Press the left soft key or the side OK key for confirmation.

Set up PIN Lock

Set up to open or close the PIN lock function. When the PIN lock is activated, the PIN lock password is required to input upon each power-on.

1. Operating path: standby > setting >safety setting > PIN lock.
2. Select PIN lock attribute.
3. Input PIN lock password.
4. Press the left soft key or the side OK key for confirmation.

Note:

You have 3-time chance to input the PIN lock password. If the PIN is wrongly input for continuously 3 times, the PUK is required to input to unlock the PIN lock; and if the PUK is wrongly input for continuously 10 times, the card will be damaged. Please consult with the network service provider for the details.

Change Phone Password

1. Operating path: standby > setting >safety setting >change phone password.
2. Input the original password and new password in sequence and finally confirm the new password.
3. Press the left soft key or the side OK key for confirmation.

Change PIN

1. Operating path:standby > setting >safety setting >change PIN.
2. Input the original PIN and new PIN in sequence and finally confirm the new PIN.
3. Press the left soft key or the side OK key for confirmation.

Change PIN2

1. Operating path:standby > setting > safety setting >change PIN2.
2. Input the original PIN2 and new PIN2 in sequence and finally confirm the new PIN2.
3. Press the left soft key or the side OK key for confirmation.

Default Setting

Recover partial default settings

With this function, only the preset default parameters are recovered. The file information created by the user, such as phonebook, message and play list etc will be remained.

1. Operating path:standby > setting >default setting >recover partial default settings.
2. Input the phone password which is preset as 0000 in default.
3. Press the left soft key for confirmation.
4. After the phone is reset, the phone will return to the standby window.

Recover all default settings

With this function, all the preset default parameters are recovered. The file information created by the user, such as phonebook, message and play list etc will be deleted.

1. Operating path: standby > setting >default setting >recover all default settings.
2. Input the phone password which is preset as 0000 in default.
3. Press the left soft key for confirmation.
4. After the phone is reset, the phone will return to the standby window.

Play Music

Play List

Create play list

1. Operating path: standby >music player.
2. Press the left soft key to open the option menu and select "play list".
3. Press the left soft key to open the option menu and select "Create".
4. Input the play list name and press the side OK key for storage.

View Play List

1. Operating path: standby >music player
2. Press the left soft key to open the option menu and select "play list".
3. Select the play list with the sliding wheel and select "View".
4. Press the left soft key to select "Add", and then select a adding mode: "folder" or "file".

Option Menu of Play List

- Add: add the folder or file in the play list.
- Move: move the current file or a batch of files from the play list.

Edit Play List

1. Operating path:standby >music player,
2. Press the left soft key to open the option menu and select the "play list".
3. Select the play list with the sliding wheel and select "View" with the left soft key.
4. Press the left soft key to select "add" , and then select an adding mode: "folder" or "file".
5. In the file manager, select a folder or file to be added in the play list, press the side OK key for confirmation.
6. If a file in the play list is required to delete, press the left soft key to select "move" , and then select a moving mode. Press the left soft key or the side OK key for confirmation upon enquiry for deletion.

Delete PLay List

1. Operating path:standby >music player.
2. Press the left soft key or open the option menu and select "play list" .
3. Select the play list with the sliding wheel and press the left soft key to select "delete" .
4. Upon enquiry for deletion, press the left soft key or the side OK key for confirmation.

Option of Play List

View: enter in play list

Create: create play list

Rename: rename the play list

Delete: delete the play list

Option for Entering in Play List

Add: add the file in the play list

Move: delete the files from the play list

Set up Play Mode

1. Operating path:standby >music player
2. Press the left soft key to open the option menu and select "play mode".
3. Select a cycled play option, press the side OK key to set up the cycled play attribute.
4. Select random play option, press the side OK key to set up the random play attribute.
5. After finishing setup, press the left soft key to save the setting parameters of a play mode.

Set up Equalizer

1. Operating path:standby >music player.
2. Press the left soft key to open the option menu and select "equalizer".
3. Select the wanted equalizer with the sliding wheel.
4. Press the left soft key or the side OK key for confirmation.

Set up Volume

1. Operating path:standby >music player.
2. Press the left soft key to open the option menu and select "volume adjustment".
3. Adjust the volume with the sliding volume.
4. Press the side OK key for confirmation, or, the phone will return to the original window and save the volume parameter if there is no operating-action for 2 seconds.

Play Music

Play by List

1. Operating path:standby >music player
2. Press the left soft key to open the option menu and select "play list" .
3. Press the side OK key for confirmation and begin to play the music in the play list.

Select Music to Play

1. Operating path:standby >music player.
2. Press the left soft key to open the option menu and select "play list".
3. Select the play list with the sliding wheel and press the left soft key to select "View".
4. Select the music to be played with the sliding wheel and press the side OK key to begin to play.

Adjust Play Volume

When playing the music with the music player, use the side sliding wheel to adjust the volume of the player, increasing the volume with the sliding wheel upwards moved and reducing the volume with the sliding wheel downwards moved.

Backstage Play

1. Operating path: standby >music player.
2. Play a song from the play list or begin to play a song directly under the player mode.
3. Press the right soft key to return to the previous window. The player will play at the backstage.
4. Directly operate the player with the music key when the player is playing at the back stage. Please refer to related content for details.

Operate Player

Operate with player key

1. Operating path: standby >music player.
2. Use the following keys when the player is playing a song.
 - ▶||: pause /play
 - : stop
 - ◀||: return to a previous file.
 - ||▶: skip to a next file.

Option of Player

Play list: open the play list.

Play mode: set up the cycled play mode and random play mode attributes.

Equalizer: select the equalizer setting.

Volume adjustment: adjust player volume.

Message

Send or receive message with the message menu.

Please confirm to operate as following procedures before sending or receiving message:

1. Insert SIM/USIM card.
2. The network supports message function if the phone is located within the wireless network service area.
3. Set up network access points.
4. Set up message parameters.

The phone can recognize the SIM/USIM card provider and can self-configure the related message parameter. If the phone is not provided with the self-configuration of message parameters, you can set them up manually. Please consult with the service provider or the network operator for concerns on the parameter setting.

The different types of folders will be displayed with the message menu. Please refer to the folder as follows:

Inbox: save the received message.

Outbox: save the message, which is trial-sent, succeeds or fails in sending by the phone.

Draft: save the message for future sending.

Create: create the message and edit a new message.

Inbox

View received message

1. Operating path: standby >message >inbox.
2. The message is arranged by time sequence with icons marking the read or unread status. Please scroll the list with the sliding wheel to search the message to be viewed.
3. Press the side OK key to view the message content under the message list status.

Seve Phone Number of Message Sender

1. Operating path: standby >message >inbox.
2. Press the left soft key to select "save phone number".
3. Select a save mode: create contact or update existing contacts. Please refer to the related content for contact edition information.

Reply Received Message

1. Operating path: standby >message > inbox.
2. Press the left soft key to select "reply".
3. The phone will skid to the SMS-editing window, and export the phone number of the SMS sender as the receiver of the SMS. Please refer to the related content for sending SMS.

Forward Received SMS

1. Operating path:standby >message >inbox.
2. Press the left soft key to select "forwarding".
3. The phone will skid to the SMS-editing window, and export the content of the SMS as the content of a new SMS. Please refer to the related content for sending SMS.

Delete Received SMS

1. Operating path:standby >message>inbox.
2. Press the left soft key to select "delete" and deleting mode.
3. Press the left soft key or the side OK key for confirmation upon enquiry for deletion.
4. Please input the phone password,which is preset as 0000 in default, and press the left soft key or the side OK key for confirmation when you delete many contacts and the system enquires the password.

Abstract Phone Number of Received SMS

1. Operating path: standby >message>inbox.
2. Scroll the list with the sliding wheel, press the side OK key to view the SMS till you search the SMS to be viewed.
3. Press the left soft eky to open the option menu and select "abstract".
4. The phone abstracts and displays the phone number that can be called or saved.

Save Received SMS

1. Operating path: standby >message> inbox.
2. Scroll the list with the sliding wheel, search the SMS to be viewed, press the side OK key to view the SMS.
3. Press the left soft key to open the option menu, and select "save in USIM/phone".
4. The phone will save the SMS in the pertinent position.

Option of Inbox

Reply: reply the sender with the SMS.

Forward: forward the SMS.

Delete: delete the SMS.

Delete all: delete all SMS in the inbox.

Call: call the SMS sender in voice.

Save phone number: save the phone number of SMS sender in phonebook.

Option of Viewing Inbox Info

Reply: reply SMS sender with SMS.

Forward: forward the SMS.

Delete: delete the SMS.

Call: call the SMS sender in voice.
Abstract: abstract the phone number in the SMS.
Move to UISM card: move the SMS between the USIM card and phone memory.

Outbox

View SMS in Outbox

1. Operating path:standby >message>outbox.
2. The message is arranged by time sequence with icons marking the modes that the SMS is sending, succeeds or fails in sending. Please scroll the list with the sliding wheel to search the message to be viewed.
3. Press the side OK key to view the message content under the message list status.

Option of Outbox (Failed SMS)

Resend: resend the SMS.
Delete: delete the SMS.
Delete all: delete all SMS in outbox.

Option of Outbox (Succeeded SMS)

Forward: forward the SMS.
Delete: delete the SMS.
Delete all: delete all SMS in the outbox.
Call: call the SMS sender in voice.

Option of Viewing SMS in Outbox (failed)

Resend: resend the SMS.
Delete:delete the SMS.
Call: call the SMS sender in voice.
Abstract: abstract the phone number in the SMS.

Option of Viewing SMS in Outbox (succeeded)

Forward: forward the SMS.
Delete: delete the SMS.
Call: call the SMS sender in voice.
Abstract: abstract the phone number in the SMS. .

Create SMS

Create SMS

1. Operating path:standby >message> Create.
2. Inpt the SMS with the keypad.
3. After finishing edition, press the left soft key to open the option menu and select "Send" or press the side OK key to enter in the SMS-sending window.
4. Press the left soft key to open the option menu and select "save to draft" if the edited SMS is required to saved in the draft.

Note:

The maximum quantity of characters allowable to write in the SMS differs from the network service supplier. The phone will decompose the SMS to send it if the SMS is at excess of the maximum quantity of characters.

Option of Editing SMS

Send: send the SMS.
Save to draft: save the SMS to the draft.
Switch input mode: change the input mode.
Insert symbol: invoke the symbol table and selectively input a symbol.
Smart mode: open or close the preset smart mode.

Send SMS

1. Under the SMS-editing window, such as: standby >message> Create.
2. Press the left soft key to open the option menu, select "send" or press the side OK key to enter in the SMS-sending window.
3. Input the phone number of SMS receiver with the keypad, press the left soft key to open the option menu, select the phone number from the recent contact list or form the phonebook list.
4. Select "add new address" to add the SMS receiver, adding the phone numbers of receivers in sequence if you want to send the SMS to many contacts.
5. After finishing the edition of contact phone number, press the left soft key to open the option menu and select "send" .

Option of Sending SMS

List of recent receiver: enter in the list of recent receivers of SMS.
Phonebook: enter in the phonebook.
Save to draft: save the SMS to the draft.

Draft

View and edit drafts

1. Operating path:standby >message>draft.
2. The drafts are arranged by the time sequence. Scroll the list with the sliding wheel and search the wanted draft SMS.
3. Press the side OK key to open the draft SMS re-editing window. Refer to related content.

Option of Draft

Send: send the SMS.
Delete: delete the SMS.
Delete all: delete all SMS in the draft.

Icons of SMS for Marking

-  : Unread SMS saved in USIM card.
-  : Read SMS saved in the USIM card.
-  : Unread SMS saved in the phone.
-  : Read SMS saved in the phone.
-  : Draft SMS.
-  : SMS failing in sending.
-  : SMS succeeding in sending.
-  : SMS in sending.

Setting

Set up account of SMS

1. Operating path: standby > SMS > setting > SMS setting > setting.
2. The phone will automatically read the account info in the SIM/USIM card and display it on the window.
3. If there is no SMS displayed, please consult with the network service provider and input manually.

Setting Option of SMS Account

SMS center number: save or modify the SMS center number.

Valid date: set up the time length of the SMS saved in the SMS center.

Default type: set up the type of the default SMS. The network can transfer the SMS into a selected format.

Set name: input the set name.

Set up SMS Report

1. Operating path: standby > message > setting > SMS setting > send setting.
2. Select the status report option with the sliding wheel and press the side OK key to open the report status.
3. After finishing setup, press the left soft key to save it.

Setting Option of Sending SMS

Reply path: reply the SMS via SMS center for the SMS receiver.

Send report: the network is set up to notify you upon the arrival of the SMS.

Network selection: select GSM or GPRS priority based on your location in the network.

Set up Store Position of SMS

1. Operating path: standby > message > setting > SMS setting > default setting.
2. Select the store position with the sliding wheel.
3. Press the left soft key or the side OK key for confirmation.

Set up Voice Mailbox Number

1. Operating path: standby > message > setting > voice mailbox.
2. The phone will display the default voice mailbox number, can clear away the default number, input new voice mailbox number with the keypad or press the side OK key to select the number from the phonebook list.
3. After finishing input, press the left soft key or the side OK key for confirmation.

View Memory Capacity

1. Operating path: standby > message > memory status.
2. The phone will display the memory status of the phone and the SIM/USIM card.

Phonebook

You can store the phone number in the SIM/USIM card or phone memory.

View Contacts

1. Operating path: standby > phonebook.
2. Press * key or press the left soft key to open the option menu and select "search".
3. Select a contact with the sliding wheel and press the left soft key or the side OK key for confirmation.
4. The phone will display the contacts list.

Create Contacts

1. Operating path: standby > phonebook.
2. Press * key or press the left soft key to open the option menu and select "Create".
3. Select the edit option with the sliding wheel and input the contact info.
4. After finishing edition, press the left soft key to save the contact.

Delete Contacts

1. Operating path: standby > phonebook.
2. Press * key or press the left soft key to open the option menu, select "Delete" and delete mode.
3. Press the left soft key or the side OK key for confirmation upon enquiry for deletion.
4. Please input the phone password and press the left soft key or the side OK key for confirmation when you want to delete many contacts and the system enquires into the password, which is preset as 0000 in default.

Send Contacts

1. Operating path: standby > phonebook.

2. Press * key or press the left soft key to open the option menu, select "send".
3. The phone will export the contact info. Refer to pertinent information for sending.

Send Message to Contact

1. Operating path:standby >phonebook.
2. Press * key or press the left soft key to open the option menu, select "send".
3. The phone will skid to the SMS window, export the contact phne number as the number of the receiver. Refer to pertinent content for editing and sending.

Copy Contact

1. Operating path:standby > phonebook.
2. Press * key or press the left soft key to open the option menu, select "copy to USIM card/phone" and copy mode.
3. If it is a batch operation, please use the side OK key to select or cancel, and press the left soft key to operate.

Display Contacts in SIM/USIM Card

1. Operating path: standby > phonebook.
2. Press * key or press the left soft key to open the option menu, select "contact in USIM card".
3. The phone will display the list of contacts saved in the SIM/USIM card.
 4. Press the side OK key to view the contact details. .

Create My Business Card

1. Operating path: standby > phonebook.
2. Press the left soft key to open the option menu, select "setting".
3. Select my business card option.
4. Select the edit option with the sliding wheel and input the business card info in sequence.
5. After finishing edition, click the left soft key to save it.

Send My Business Card

1. Operating path:standby > phonebook.
2. Press the left soft key to open the option menu, select "setting". .
3. Select my business card option.
4. When there is a business card, press the left soft key for conformation of sending. The phone will skid to the sending window and export the contact info as the SMS content automatically. Refer to pertinent conent for operation. .

Quick Dial

1. Operating path:standby > phonebook.
2. Press the left soft key to open the option menu, select "setting". .
3. Select quick dial list option.
4. The key 1 is assigned to the voice mailbox. Select the shortcut keys 2-9 with the side sliding wheel and press the OK key to begin to edit the shortcut phone number.
5. Input the pertinent phone number of the shortcut key or press the left soft key to select the contact phone number in the phonebook.
6. After finishing setup of shortcut keys, press the left soft key to save them.

Memory Capacity

1. Operating path:standby >phonebook.
2. Press the left soft key to open the option menu, select "memory status".
3. The phone will dislay the memory status of the phone and the SIM/USIM card.

Phonebook Option

Search: search the contact via the Pinyin table quickly.

Call: call the contact in voice.

Send SMS: send the SMS to the contact.

Create: create the contact info.

Edit: edit the contact info.

Delete: delete the contact info.

Copy to USIM: copy the contact info to the USIM card.

Send: send the contact info via SMS.

USIM contact: dispay the contact data saved in the USIM card.

Setting: set up the quick dial and my business card info.

Memory status: view the quantity of contacts saved in th ephone memory and USIM card.

Contact Info Option

Store position: set up the store position of the contact.

Name: input the name of the contact.

Voice: input the voice of the contact.

Phone number 1: input the phone number of the contact.

Phone number 2: input phone number of the contact.

Call Log

View the dialed, answered and missed calls, call time and call toll.

View call log

1. Operating path: standby > call log> dialed-in calls /dialed-out calls/all calls.
2. Scroll the log list with the sliding wheel and view the call log entries.

Send SMS to logged Phone Number

1. Operating path:standby > call log> dialed-in calls /dialed-out calls/all calls.
2. Press the left soft key to open the option menu, select “create SMS”.
3. The phone will skid to the SMS-editing window and export the logged phone numbers as the phone number of the receiver. Refer to the pertinent content for SMS edition and send.

Save Logged Phone Numbers

1. Operating path:standby > call log> dialed-in calls /dialed-out calls/all calls.
2. Press the left soft key to open the option menu, select “ save phone number”.
3. Select a save mode from: create contact or update existing contact. Refer to pertinent content for editing contact.

Set up Logged Phone Number as Quickly Dialed Number

1. Operating path:standby > call log> dialed-in calls /dialed-out calls/all calls.
2. Press the left soft key to open the option menu, select “set as quickly dialed number” .
3. The phone will skid to the quickly-dialling list window, select a shortcut key with the sliding wheel and press the left soft key or the side OK key for confirmation of the setting.

Clear Away Call Log

1. Operating path:standby > call log> dialed-in calls /dialed-out calls/all calls.
2. Press the left soft key to open the option menu, select “delete all” .
3. Please input the phone password and press the left soft key or the side OK key for confirmation when you want to delete many contacts and the system enquires into the password, which is preset as 0000 in default.

Option of Call Log

Edit before call: the phone exports the phone number to the number-dialing window.
 Create SMS: skid to the SMS-editing window. The phone will export the phone number as the number of the receiver.
 Delete: delete the call log.
 Save phone number: save the phone number in the phonebook.
 Set as quick dial: set the phone number as quickly dialed number.

My File

View the files saved in the Micro SD memory card with this function.
 Frequent deletion or write can shorten the service life of the memory card.
 Do not pull the memory card from the phone or power off the phone when the data is used or transported, or otherwise, possibly resulting in the lost data or damaged memory card or phone.
 Do not impact the memory card strongly.
 Do not touch the ports of the memory card with the hands or metal articles. If polluted, clean it with the soft clothing.
 Place the memory card out stretch of the kids or pets.
 Do not place the memory card in the locations where there are static electricity and electronic disturbance.
 Note:
 The phone may not support some files due the different formats and attributes of the files.

Operate Folder

Create folder

1. Operating path:standby > my file.
2. Press the left soft key to open the option menu, select “Create folder”.
3. The phone will skid to the editing window. Input a name of folder and press the side OK key to save.

Move Folder

1. Operating path:standby > my file.
2. Select a folder .
3. Press the left soft key to open the option menu, select “move”.
4. The phone skids to the first layer of the file and select a position to be pasted.
5. Press the left soft key to open the option menu, select “ paste”.

Copy Folder

1. Operating path:standby > my file.
2. Select a folder .
3. Press the left soft key to open the option menu, select “copy”.
4. The phone skids to the first layer of the file and select a position to be pasted.
5. Press the left soft key to open the option menu, select “copy”.

Delete Folder

1. Operating path:standby > my file.
2. Select a folder.
3. Press the left soft key to open the option menu, select “Delete” .
4. Press the left soft key or the side OK key to delete.

Rename Folder

1. Operating path:standby > my file.
2. Select a folder.

3. Press the left soft key to open the option menu, select "Rename" .
4. The phone skids to the editing window. Input a new folder name and press the side OK key to save.

Folder Option

Create: create a folder.
 Delete: delete a folder.
 Move: move a folder.
 Copy: copy a folder.
 Memory status: view the memory status of Micro SD.

Operate File

MP3 Music File

1. Operating path:standby > my file.
2. Select music file, press the side OK key to invoke the multimedia player to play it.

Vcard file

1. Operating path:standby > my file.
2. Select Vcard file, press the side OK key to viw the calendar file.

Move File

1. Operating path:standby > my file.
2. Select a file.
3. Press the left soft key to open the option menu, select "move".
4. The phone skids to the first layer of the file and select a position to be pasted.
5. Press the left soft key to open the option menu, select "paste".

Copy File

1. Operating path:standby > my file.
2. Select a file.
3. Press the left soft key to open the option menu, select "copy" .
4. The phone skids to the first layer of the file and select a position to be pasted.
5. Press the left soft key to open the option menu, select "paste".

Delete File

1. Operating path:standby > my file.
2. Select a file.
3. Press the left soft key to open the option menu, select "Delete" .
4. Press the left soft key or the side OK key to delete upon the enquiry into deletion or not.

Rename File

1. Operating path:standby >my file.
2. Select a file.
3. Press the left soft key to open the option menu, select "Rename" .
4. The phone skids to the editing window. Rename the file and press the side OK key to save.

View file attribute info

1. Operating path:standby > my file.
2. Press the left soft key to open the option menu, select "detail info".
3. The phone will display the file attributes, including the name, creating time and size.

File Option

Move: move a file.
 Copy: copy a file.
 Delete: delete a file.
 Rename: rename a file.
 Create: create a file.
 Detail : view file attributes.
 Memory status: view the memory status of Micro SD.

Memory Capacity

1. Operating path:standby > my file.
2. Press the left soft key to open the option menu, select "memory status" .
3. The phone will display the memory status.

Connection

1. Connect the phone and the PC with the USB cable.
2. The PC will display the installation prompt if the software is not installed. Please install the software according to the installation prompt.
3. The phone with the Mirco SD card inserted can be used a a mobile memory if the PC is installed with the software. When the software is started, the phone can be used as a Modem of dialing and accessing to the network for the PC.

Note:

When the phone is served as a mobile memory or a Modem, the phone will be not used in the partial functions.

EMOBILE-An Additional Service

####

About Accessories

Pay attention to the maintenance of the products that are placed in the clean dust-free location.
 Be sure not expose the product to the liquid or high humidity
 Be sure not expose the battery to the temperature extremes.
 Be sure not place the products in the lit cigar or fire.
 Be sure not drop, throw or bend the products.

Be sure not paint the products.

SAR Data

Your phone is a low-energy wireless transceiver. Upon power-on, the phone will emit a low-level RF.

Various countries in the world all adopt the national security guidances formulated by the specialized scientific organizations, such as ICNIRP and IEEE. These guidances establish the approved level of the RF exposed to the general population, including the difference in any measurement, such as age and health in the calculation, guaranteeing the safety of the human being.

The specific absorption rate(SAR) refers to a unit measuring the quantity of the RF absorbed by the human body. The SAR value is regulated based on the verified maximum energy level based on the experient status. The true SAR level of the phone will be far lower than the level. Generally, the closer to the base station, the lower the energy emitted by the phone is.

The SAR levels of various models of phones vary. The phone is designed and manufactured based on the radio exposure directive in order to ensure the safety and health of the users.

The SAR of RF applicable for the public is 2.0w/kg /10 g body issue in the average limit. The phone conforms to the restriction after tested.

Function Schedule

Call			Inbox
	Dial		Create SMS
	Answer		SMS icons for marking
	Call-related functions		setting
Test input			View memory capacity
	Multi-press input	phonebook	
	Smart input		Search contact
	Input symbol		Create contact
	Switch input modes in shortcut way		Delete contact
	Input keys		Send contact
setting			Send SMS to contact
	Profile mode		Copy contact
	Display setting		Display SIM/USIM contacts
	Phone setting		Create my business card
	Call setting		Send my business card
	Network setting		Quick dial
	Safety setting		Memory capacity
	Default setting		Phonebook option
Music play		Call log	
	Play list		View call log
	Set play mode		Send SMS to logged phone number
	Set up equalizer		Remain logged phone number
	Equalizer		Set logged number as quick dial
	Set volume		Clear away call log
	Music play		Option of call log
	Player operation		
SMS		My file	
	Inbox		Operate file
	Operate file		
	Memory capacity		

Failure and Solution

Before contacting with the post sales server, you can check the phone simply, or you can avoid the excessive maintenance time and expense waste.

Cannot power the phone on

- Check whether the Powering-on key is pressed and hold for 1 second or above;
- Check whether the battery is contacted badly or not. Please remove the battery firstly and then try to power the phone on;
- Check whether the battery capacity is used up or not; please charge the battery;

When the phone is powered on, there is no information displayed

- Check whether the SIM card is installed rightly;
- The phone is locked with the Auto Lock function activated and the password shall be input;
- Input PIN; select the function of inputting PIN when the phone is powered on. The PIN shall be input (the PIN attached with the SIM card should be input for the first use.);
- Input PUK: after the PIN is input wrongly for successively 3 times, the phone will be locked. The PUK provided by the network operator should be input;

USIM card error

- There is some dirt on the metal surface of the USIM card. Please wipe the metal contacts of the USIM card with a clean cloth ;
- USIM card is not installed ;
- USIM card is damaged. Please contact with your network supplier;

Cannot access to the network

- The signal is weak, please move to the place where the signal is strong and retry;
- Beyond the coverage of the network of the network server;
- USIM card is invalid, please contact with your network supplier;

Can not dial a phone number out

- Please confirm whether the dial key is pressed after the number is dialed;
- Please confirm whether the call is barred due to owned toll;
- Please confirm whether the SIM card is valid or not;
- Please confirm whether the call restriction function is set up;
- Please confirm whether the fixed dial function is set up;

Bad Call Quality

- Check whether the volume is adjusted appropriately;
- Use the phone at the place where the receiving quality is not good, such as near to the building or in the basement where the radio wave cannot reach.
- Use the phone at the peak time, such as at the time of going on/off the duty, the channel is congested;

Contact can not call you

- Please confirm that the phone is powered on and is uplinked with network;
- Please confirm that the call is barred because of owned toll;
- Please confirm whether the USIM card is valid;
- Please confirm the ingoing call is barred due to owned toll;

Contact can not hear you

- Please confirm that the microphone is opened..
- Please maintain the lower end of the microphone aligned to your mouth.

Shortened Standby Time

- The stand-by time is relevant to the system setup. The phone is possibly at the place where the signal state is bad. When the phone cannot receive the signal, the phone will transmit to search the base station continuously; consuming a great deal of battery capacity and shortening the stand-by time of the battery. Please move to the place where the signal is strong to use the phone or temporarily power the phone off.
- The battery requires to be displaced with a new battery ;

Can not Charge

- Bad contact; please check whether the plug is connected well;
- Accumulated dirt, clean the phone and battery sockets with soft dry clothing.
- Charge at the environment below -10℃ or beyond 45℃. Please change the charging environment;
- The battery or adapter is damaged and requires to be replaced;

If the aforementioned instructions cannot facilitate you to conquer these problems, please record: phone model and SN, detailed contents in the guarantee-to-repair sheet and clear statement of the problem, and then contact with the post sales service department or the local distributor.

Other

If the aforementioned instructions cannot facilitate you to conquer these problems, please record:

- Phone model and SN
- Detailed contents in the guarantee-to-repair sheet
- Clear statement of the problem
- The battery or adapter is damaged and required to replace.

Guarantee and After Service

Guarantee

We provide a limited guarantee-to-repair for the phone together with the accessories. If your products need a guarantee service, please be sure to mail to the guarantee sheet to the distributor.

During the guarantee period, under the normal usage and maintainance condition, if the product fails due to defective design, material or process, the distributor or repair partner from the products are purchased by the user will decide to repair or replace the product by themselves base don the regulations.

Repair

If the products delivered to repair do not conform to the gurantee-to-repair conition, the authorized maintenance center reserves to charge the maintenance of such products:

- Only when the repaired and replaced products can be issued with the original purchase invoice with the purchase date and SN issued by the distributor to the purchaser , the guarantee will be valid. After the product is purchased from the distributor, the purchase invoice or three-guarantee certificates are changed, alternated or deleted, the authorized maintenance service center will reserve to refuse to repair.
- If the authorized maintenance service center replaces or repair the products, the repaired or replaced products, the gurantee service will be continued within 30 days from the repairing date or within the remained gurantee period. The equivalent components can be used for the repair or replacement. The replaced or changed components will be processed by the authorized maintenance service center.
- The gurantee-to-repair is not covered the fialed products which is worn out or damaged by the wrong manmade operation. The fialed products due to accident, refitting, debugging, force majeure, improper ventilation, damp or wrong operation will not be covered in the gurantee-to-repair range. The battery is a consumable product with a limited service life. After a period of useage, the capacity of the battery will be reduced gradally. When the call time and the standby time are drastically cut off, a new battery should be purchased. Please use the authorized original battery and adapter.
- The screen brightness and colors of various phones will be different from each other. The smaller light points or dark points on the screen are called as defective pixel. When individual points appear the failure, the failure can not be adjusted. The individual pixel on the screen is regarded as acceptable.
- We understate no any accountability for the system operation, availability, coverage area, service and service range because the cellular system for the product is provided by the telecommunication company.
- Any product failure due to installation, refit, repair or disassembly by not authorized service center personnel will not be covered in the gurantee-to-repair range.
- The fialed products due to usage of the non-authorized accessories or other peripheral devices will not be covered within the gurantee-to-repair range.
- Changing or damaging any orginal labels will result in failure of the gurantee-to-repair.
- Only the limited gurantee-to-repair will be acknowledged in the publication with exception to the oral or written form. All the hinted gurantee-to-repair, including but not limited to the trial-promotion or gurantee-to-repair of hint suiability for a special purpose, are all based on the provision of this gurantee-to-repair article. Any accident or undirect damage in violation of the laws, including but not limited to the gain loss or commercial bankrupt will exempt the law responsibility of our company.

The forgoing limitation or disclaimer may not suit for you because some countries or regions prohibit or limit the accident or accasional or subsequently occurred damage or gurantee-to-repair period in concealing form.

Additional information requires to be provided in some nations or regions, thus, the effectivepurchasing certificates shall be indicated with the information.

Attention

Please note: for some products, the user's personal data, setting or saved information will be lost after the products are maintained or replaced. Currently, based on the related laws, regulations or technical limitation, the authorized service center is not allowed to treat the information. The authorized service center will not undertake any responsibility for or indemnify any lost. Please back up your personal data saved in the products before delivering them for repair or maintenance.

Accessories

Please consult with the related distributor or the maintenance partners of the products for maintenance.

Please replace the accessories with the authorized original ones in order to ensure the safe and effective use.

Reference

###

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

15.101 statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.”