

**Longcheer Technology (Shanghai) Co.,
Ltd.**

**Building 1, No.401,Caobao Rd, Xuhui
District,Shanghai,P.R.China**

Tel: +86-21-51552388

FAX: +86-21-54970876

FCC ID: WH7X591E

**GSM /GPRS Digital Mobile Phone
User Manual**

The content of the manual is correct when it is released, but our company reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone depending on software, or varies by service provider.

Explanation for reading manual

Different styles are used to describe different operation details in this manual. Details are described as follows:

Operation	Content description	Example
Display content	Represent with normal character	0-9
General key	Except for function keys, all keys are represented by normal character with frame	0-9
Function key	Function keys are represented with over striking and frame	OK
Menu item	Represented by italics with black body	keep alive

Note: Pictures used in the manual are only used as the function illustration pictures. Your mobile phone may display differently from them. Please take your mobile phone as the standard.

Contents

I. Important Safety Measures	5
II. Cell Phone Diagram	6
1. Appearance	6
2. Keys Statement and icons Introduction.....	7
3 Icons.....	8
III. Getting Started	9
1. Installing the battery	9
2. Installing of SIM card	9
3. Installing of T-Flash card.....	10
4. Battery charging.....	10
5 Safety Password	11
IV. Functions.....	12
1. Calls.....	12
1.1 Making a call	12
1.2 Answering a call	12
1.3 Options available during a call.....	12
2. Games	13
3. Phone Book.....	13
4. Extra	14
5. Settings	14

5.1 Phone Setup	14
5.2 Call Setup.....	16
5.3 Network Setup.....	17
5.4 Security Setup.....	17
5.5 Restore Factory Settings.....	18
6. Messages	18
6.1 SMS	18
6.2 MMS.....	19
6.3 Voice Mailbox	20
6.4 Broadcast Message.....	20
7. Call Logs	21
8. Profiles	21
9 Multimedia	22
9.1 File Manager	22
9.2 Audio Player.....	23
9.3 FM Radio.....	23
9.4 Recorder	24
9.5 Melody Compose	24
10. Services	25
V. Health & Safety	25
VI. Other important information	28

I. Important Safety Measures

Traffic Safety

Please do not use a cell phone while driving. It is supposed to be used after parking.

Turn off in a gas or petrol station

Please do not use a cell phone in a gas or petrol station or near explosive and chemical factory.

Turn off on a plane

A cell phone will interfere with signals. It is illegal and dangerous to use a cell phone on a plane.

Turn off in a hospital

Obey all instructions and rules of a hospital. Please turn off your cell phone near medical facilities.

Interference

Mobile communication may be interfered by radio, and the interference will influence the performance of a cell phone.

Obey specific regulations

Please obey specific regulations and turn off your cell phone in any place that forbids using cell phones or causes interference or danger (for example, in a hospital.)

Rational Utilization

Use the cell phone in normal positions. Do not touch the antenna for no reason after turning on the cell phone.

Accessories and batteries

Use only the original accessories and batteries for the cell phone

Professional service

The cell phone must be installed or repaired by the professional service staff only.

II. Cell Phone Diagram

1. Appearance











2. Keys Statement and icons Introduction










Key Name		Key Function Introduction (Idle)
Left Soft Key (LSK)		Short Press: Enter function list(Main Menu)
Right Soft Key (RSK)		Short Press: Enter the interface of PH Book List
Dial Key (Send)		Short Press: Enter Mixed Calls
End Key (END)		Short Press: Return to idle interface Long Press: Turn On/Off the phone
Navigation Key	OK	Short Press: Enter Main Menu
	Up	Short Press: Enter Profiles settings
	Down	Short Press: Enter Audio Player
	Left	Short Press: Enter Write Message interface

	Right	Short Press: Enter FM Radio interface
Number Keys	1	Short Press: Enter Dial Interface and input 1 Long Press: Dial Voice Mail number
	0, 2~9	Short Press: Enter Dial interface
	*	Short Press: Enter "*" Long Press: Switch inputting "*" , "+" , "P" , "W" Lock/Unlock: Left Soft Key+* ;
	#	Short Press: Enter "#" Long Press: Activate/Deactivate Silent Mode

3 Icons

Icon	Description
	Network signal level
	Unread Text Messages
	Unread Multimedia Message
	General Mode (default)
	Conference Mode
	Outdoor Mode
	Indoor Mode
	Headset Mode

	Silent Mode
	Indicates battery capacity
	Alarm is activated
	Missed calls
	T-Flash card inserted
	Keypad lock is activated
	Unconditional Call Divert

III. Getting Started

1. Installing the battery

(Make sure your mobile phone is power off)

Install & Remove the battery according to the following steps:

I Push the battery cover downward, and lift the battery at the bottom side to remove.

II While inserting the battery, insert the upper end of battery into the groove & slide the battery cover into back of phone until it is locked.

2. Installing of SIM card

Power off the mobile phone, and then remove the battery. During installation make sure that metallic part of SIM facing downward & you must take care of the SIM card slot direction.

In order to take down SIM card, shut down the mobile phone and remove the battery first, and then take down the SIM card from its socket.

3. Installing of T-Flash card

This mobile phone supports T-Flash card (you might buy it separately), which is a small multimedia memory card used to increase the memory of your mobile phone. Take care when installing to avoid the damage.

Installation methods of T-Flash card:

Shut down the mobile phone & remove battery before inserting memory card. Insert the T-Flash card in the groove with the golden metal contact facing downward, put back the cover of T-Flash socket and pulling forward to lock it. After the battery assembled, The T-Flash Card can be used after normal switch ON.

4. Battery charging

Plug the charger into the data cable port at the bottom of the mobile phone. Then the power indicator at upper right screen will flash. While charging, if the phone is off, the screen will display an icon indicating the battery is being charged. And after charging is done, it would be prompt with "Charging Complete". When the power indicator at upper right screen of the phone displays battery full and stops flashing, it means that the charge is done.

When battery is low, phone will give you warning alert, when it is too low will automatically switch off.

After the charging, disconnect the AC socket and mobile phone from the battery charger. During charge, it is normal if the battery, mobile phone and battery charger become hot.

Note: Initially phone is just charged 50%. It can be used after discharging. Please use it and recharge it fully. This is the case with the second recharge. After three repetitions, the battery can achieve its best performance conditions.

5 Safety Password

■ PIN & PUK number

PIN code (Personal Identification Number) can protect the SIM card from unauthorized use. The PIN code is provided along with the SIM card. If the PIN code is activated, it is necessary to input the PIN code whenever the cell phone power on. If a wrong PIN code has been input for 3 times continuously, it is needed to input the PUK code, for PUK code ask for service provider.

■ Mobile phone password

In order to prevent the use of your mobile phone without authorization, you can set a password to protect your mobile phone. If you select this function, you need to input the password every time when starting up your phone. Otherwise, you cannot unlock your phone, and cannot dial or answer phone calls. The password is set as 1234 by default. In the case you forget your password, you must contact your retailer or local authorized service center to unlock the password of your mobile phone.

■ SIM Lock

Press on to enable PIN lock, which will require you to input a password when the mobile phone is started up. Otherwise, the

SIM card is unavailable. During setup, it is required to input the correct PIN code. If wrong codes are inputted for three times, the PUK (Personal Unlock code) will be required, PUK is used to unlock and change the locked PIN code. PUK code is not provided by your local network service provider.

IV. Functions

1. Calls

1.1 Making a call

In the menu, please input the numbers from the phone book or dial the desired the number by pressing the dial key. Press the end key to end the call.

1.2 Answering a call

To answer the incoming call use same dial key, incoming call shows on the display alerting you with set ring tone or vibration. Press end key to reject.

Note: If the earphone is connected, you may use Earphone key to answer a call. If automatic answer has been set up and the earphone is connected, you can answer automatically.

1.3 Options available during a call

In the calling interface, you can select **Options** via left soft key to go to call options interface.

- **Hold:** To put a call on hold while receiving a new incoming call.
- **End:** End your call.
- **New Call:** Can make a new call during an active call.

- **Phone Book:** Go to the **Phone Book** menu.
- **SMS:** Go to **SMS** menu.
- **Recorder:** Record the call.
- **Mute/Restore:** Switch on/off the mute mode.
- **DTMF:** If it is off, then it will not send the sound of DTMF for the inputted numeric figures.
- **H-Free/H-Held:** Switch call from phone speaker.
- Adjust the volume in call by pressing up key and down key.

2. Games

In the main menu interface, press the **LSK** to enter into the games interface.

- Games include **Riches** and **Sudoku**: Press **LSK** and enter the **Options** to do the following operation:
 - ◇ **Resume:** Resume the games and continue the game.
 - ◇ **Start Game:** Start to play game
 - ◇ **Game Level:** Select the different level of the game.
 - ◇ **Best Grades:** Lists rankings
 - ◇ **Help:** Offers detail instructions on game operation.

■ Game Settings

By using keypad to select the game settings, you can set the **Background Sound** and **Sound Effect, Game Vibration** etc.

3. Phone Book

There are two ways to launch to phonebook, one is pressing **RSK** to enter to phonebook contacts list screen, and the other is selecting Phone Book from main menu. The main optional items include:

- **Quick Search:** input corresponding content at the cursor, it will immediately display all records matching with that letter. Press # key to switch the other input methods.
- **Add:** Create new contacts and save it to phone or SIM card.
- **Copy/Copy All:** Copy records from one storage location to another.
- **Delete/Delete All:** Delete records from SIM card or phone, and also can select to delete record one by one.
- **Caller Group:** set **Group Name, Incoming Tones, Default Picture** and **Members List** for the five groups.
- **Extra Number:** set the **Owner Number, Service Number** and **Emergency Number**.
- **Settings:** check **Memory Status, Preferred Storage, Fields** and **My vCard**.

You can also select **Search For Name** in the **Phone Book** interface. By inputting the name of contact, you will directly arrive at the corresponding record.

4. Extra

In the idle, go to the main menu by pressing the left soft key, and then select **Extra** Following items: **Calendar, To-do-list, Alarm, Calculator, Stopwatch** and **World Clock**.

5. Settings

5.1 Phone Setup

In Phone Setup, you may set functions, such as the **Language, Time and Date**, according to your preferences and operation mode. You can see the following setting options in the phone

setting interface:

- **Time and Date:** you can set **Home City, Time and Date** , **Format** and **Auto update of date and time**.
- **Schedule Power ON/Off:** You can set 4 auto power on/off times. In default settings, the function is off.
- **Language:** set the language displayed in the screen of your mobile phone. Default is **English**.
- **Preferred Input Methods:** set up default input method for your phone.
- **Display Setup:**
 - **Wallpaper:** You can select other wallpapers.
 - **Screen Saver:** You can select screensaver, change waiting time and picture of the screensaver.
 - **Power On Display:** select animation for power on.
 - **Power Off Display:** select animation for power off.
 - **LCD Backlight:** set the **Brightness** and **Time** of LCD backlight.
 - **Show Date and Time:** set the time and date on display. Set **On** or **Off**.
 - **Show Owner Number:** set the telephone number on display number. Set **On** or **Off**.
- **Greetings Text:** Set the display of greetings. You can also edit the greetings for powering on. Default is **Off**.
- **Speed Dial:** Set whether to activate the speed dial function, and edit speed dial list.
- **Flight Mode:** You can set **Normal Mode, Flight Mode** or **Query When Power On** to ensure the safety on plane.

- **Shortcut:** you can set some functions as shortcuts, and press the left soft key to go to the **Options**, carrying out the operations of **Add, Edit, Delete, Delete all, Disable,** and **Change Order.**

5.2 Call Setup

- **Call ID:** Enable/disable my phone number to be displayed on the phone you are calling by selecting system presetting, hiding number or sending number.
- **Call Waiting:** You can set this function on or off, and can also view the current settings via query.
- **Call Divert:** You can set to forward the incoming calls in different cases.
- **Call Barring:** In order to activate this service, it requires the services provided by the network service provider.
- **Line Switching:** Switch between line 1 and line 2.
- **Minute Minder:** After setting this function on, it will offer warning tone towards the end of every minute sharp during the call process, so you will be reminded of the call time at any time when calling.
- **Call Time Display:** After setting this function on, you can view the call time displayed on the screen.
- **Auto Redial:** Turn on/off auto redial function, if activated number would dial automatically.
- **Closed User Group:** This feature enables to set up group list. This function requires network support.
- **Black List:** Set whether to activate the incoming call filter, and edit the blacklist.

Note: Some settings require network support. For example, in order to activate the call barring, it will require the support from local network and SIM card.

5.3 Network Setup

- **Network Selection:** It searches for the network and select a network where your SIM is registered.
- **Preferred Networks:** You can select or modify your preferred network manually.
- **GPRS Connection:** You can switch GPRS connection mode, always connect or connect when need.

5.4 Security Setup

You can set up the safety options for your mobile phone via this menu to prevent your mobile phone or SIM card from unauthorized use.

- **SIM Lock:** press **LSK** to enable PIN lock, which will require you to input a password when the mobile phone switched on.
 - During setup, it is required to input the correct PIN code. If wrong codes are inputted for three times, the PUK (Personal Unlock code) will be required, PUK is used to unlock and change the locked PIN code. If PUK code is not provided or missed, please contact your local network service provider.
- **Phone Lock:** after the phone lock is activated, the correct password is required to start up the phone. The factory setting is 1234 by default.

- **Auto Keypad Lock:** press **[LSK]** to deactivate the keypad lock, or set **Automatic Lock** after **5sec, 30sec, 1 min, and 5 min** or **Off**.
- **Fixed Dial:** set the **Mode** on/off, and set up numbers in Fixed Dial List.

5.5 Restore Factory Settings

Some function settings can be reset to factory settings by this option.

- This function requires the correct password to be executed. The factory password is preset as 1234.

6. Messages

6.1 SMS

- **Write Message:** This mobile phone supports English and Spanish inputs, providing you with multiple input methods. In the text interface, you can select different input methods by pressing the key “#”. Whatever the input method is, press “*” key to enter the symbol input screen. Then use the navigation keys to select your required symbols. In some input interfaces, press “0” key to input a blank.

- Multitap input method: input alphabets via numeric keys. Choose the key where the input letters locate, then press the key for n times (the nth place) in accordance with the position order of the letter. Take the uppercase Z for example; press on the 9 key for 4 times.
- Smart input method, make intelligent words input by numeric keys. Directly press all keys with the selected letters

of the word, and search the word via navigation up/down key of direction.

- Numeric input, press numeric keys to make inputs.
- Whatever the input method is, press "*" key to enter the symbol input screen. Then use the navigation keys to select your required symbols. In some input interfaces, press "0" key to input a blank.

- **Inbox:** In the inbox, you can store all the received text messages, and it will display the names of the senders. In case if that the sender is not included in the phonebook, it will display the telephone number of the sender.
- **Outbox:** the sent messages will be saved in the **Outbox**.
- **Template:** There are 10 text messages preset in this mobile phone, and they can be edited or deleted, with not more than 40 characters apiece.
- **Settings:** Text message settings include **Profile Setting**, **Common Settings**, **Memory Status**, **Preferred Storage**, and **Info Send Settings**.

6.2 MMS

- **Write Message:** With this option, you can edit new multimedia message. However, you need to input the **To, Cc, Bcc, Subject** and **Edit Content**;
 - **To, Cc, Bcc:** you can input the telephone number or email address via numeric keys;
 - **Subject:** edit the subject for the multimedia message;
 - **Edit Content:** Edit the contents of the multimedia message. Media file like image can be insert to content.,

- After editing the multimedia message, with the screen prompts, you can select **Done** to send the multimedia message. The operations include **Send Only, Save and Send, Save to Drafts, Send Options, Exit**.
- **Inbox/Outbox/Draft/Message Settings:** Please accord to SMS.
- **Template:** View the 5 multimedia messages preset in the mobile phone, or edit new multimedia message with other templates.

6.3 Voice Mailbox

Your phone allows to access voice mailbox, if your network operator support this function. You have to set the mailbox number and then listen to the voice message. With the voice mailbox menu, you can carry out the following operations:

- **Call Voice Mail:** view the voice mailbox and listen in the message.
- **Voice Mail Number:** input the number of the desired voice mailbox.

6.4 Broadcast Message

Please contact your network service provide for this function, you need to on the cell broadcast, you can carry out the following operations:

- **Receive Mode:** set whether to receive cell broadcast short messages.
- **Read Message:** After receiving CB short messages, you can read them one by one.
- **Languages:** Press LSK to select whether to select all

languages. You can choose Spanish.

- **Channel Setting:** Set CB channels and you can select, add, edit and delete CB channels.

7. Call Logs

Call logs list include the following sub-menus: **Mixed Calls, Missed Calls, Dialed Calls, Received Calls, Delete Call Log, Call Time, Call Cost, SMS Counter** and **GPRS Counter**.

- **Call Time:** You can view the time of the **Last Call Time, Total Sent, Total Received,** or **Reset All Time.**
- **Call Cost:** You can view **Last Call Cost, Total Cost, Reset Counter, Max Cost** and **Price and Unit.**
- **SMS Counter:** You can view the numbers of the sent messages and received messages, and also you can reset the counter.
- **GPRS Counter:** it will record GPRS data.

Note: if you change your SIM card, all phone numbers in the call record will be deleted automatically.

8. Profiles

You can select different modes on different occasions to carry out the personal settings in the **Profiles**, such as ring tone, vibration, volume, etc. This function makes it possible to get adjusted to different situations without changing the ring tone settings at multiple places, and you just need to switch to the preset environment mode.

Instructions:

- Under the idle state, long press # key to switch into **Silent**

- mode; long press the key to resume the previous mode.
- After the earphone is inserted, the mobile phone will automatically switch into the **Headset** mode.
 - It is suggested that you set your mobile phones' profile mode as **Conference** or **Indoor** on quiet public occasions.

9 Multimedia

9.1 File Manager

This function can manage the files and folders in phone and T-Flash card, functional options of the management include:

- **Open:** Open a folder or a file.
- **Create Folder:** create new folders.
- **Format:** Format phone or the Memory Card.
 - This operation will delete all the saved materials in the memory.
- **Total:** Increase memory size according to T-Flash card.
- Default File storage path.
 - **Received:** Default folder for received files from MMS.
 - **My Music:** Default folder for Music player.
 - **Audio:** Default folder for sound recorder.
 - **Images:** default folder for pictures.
- Formats of the ring tone files include: MP3/MIDI/AMR/WAV
- The ringing tone files can be sent to the general modes, set into incoming call tones, message tones, alarm tones, and also can be sent as multimedia messages or email;
- Picture files formats include: BMP/GIF/JPG/WBMP

- The Picture Files may be forward to the Wallpaper, Screensaver, power on/off displays, phonebook, etc. and also can be sent as multimedia messages or email.

9.2 Audio Player

In idle, press **Down** to select the audio player to enter the audio Player interface, and play the saved audio Files.

- Press keys in the musical player interface to do the following operations:
 - **Play/Pause:** by pressing **OK**.
 - **Change Music:** by pressing **Left** and **Right**
 - **Sound Volume Adjustment:** by pressing **Up** and **Down**
- Press the **LSK** to select “**Option**” in the playing list and you can see such options as: **Play, Detail, Add To Rings, Refresh List, and Settings**. If the automatically generated list is off, then there will be **Play, Detail, Add to Rings, Add, Remove, Remove all and Settings**.
 - **Settings:** Set details for **Play List, Auto Generate List, Skin, Repeat, Shuffle, and Background Play**.
- Press **Left/Right** to select different function effects.

9.3 FM Radio

This model of mobile phone supports FM radio. Please insert the earphone before turn on the FM. Press **Left** or **Right** to search channel, and **Up** and **Down** to adjust volume.

After you enter the radio interface, it is suggested that you press **LSK** to select “**Option**” to go to the option menu:

- **Channel List:** Choose/edit a channel in the list.

- **Manual Input:** input a channel and play.
- **Auto Search:** Search channels and refresh the channel list.
- **Settings:** Make some settings about the FM.
- **Record:** Record when listening FM.
- **Append:** Continue record append the file.
- **File List:** Manage the recorded files.

9.4 Recorder

In multimedia select **Recorder** to enter into the sound recording interface:

- Select a sound recording file, and press **LSK** to select **Option**, and carry out the operations, including **Record**, **Play**, **Append**, **Rename**, **Delete**, **Delete All**, **Settings** and **Forward**.
 - **Record:** start new sound recording.
 - **Play:** Play the selected sound.
 - **Append:** Continue sound recorder after the recording file. You can only append an “*.amr” file.
 - **Rename:** rename the sound recorder file.
 - **Delete:** Delete the selected sound recorder file.
 - **Delete All:** Delete all sound recorder files.
 - **Settings:** set the format of the sound recorder files.
 - **Forward:** You can select to send to the profiles or MMS.

If a recorded file doesn't exist in the mobile phone, only two options are available: **Record** and **Settings**.

9.5 Melody Compose

With this menu, the user can compose favorite ring tones and

music.

- Methods to compose music: Stave
- Play Speed: Fast, Normal, Slow.
- Selection of musical instruments includes: **Piano, Guitar, Violin, Saxophone, Steel Drums, Flute, Harmonica, Trumpet, Music Box, Xylophone**, etc.

10. Services

This feature is provided by your network service provider. Depending on the SIM card services, new menus or options may appear.

- **SIM Tool Kit:** Your SIM card provides additional services. You can access this menu only if it is supported by your SIM card. The name and contents of the menu depend on the available services.
- **WAP:** According to the screen prompts, you can access Internet via WAP browser. You can access Internet depends on whether your network service provider has such service, want to activate this function. Please contact your network service provider for the WAP settings.
- **Data Account:** You can edit relevant information about GSM data or GPRS.

V. Health & Safety

Please carefully read the following brief instructions, and well abide by these regulations, so as not to cause dangers or break the law.

- ◆ Shut down your mobile phone around chemical factories, petroleum stations, other flammables and explosives places.

- ◆ Keep your mobile phone out of the reach of children.
- ◆ Use the hand-free device while driving otherwise in an emergency, please park your vehicles and make a call by the roadside
- ◆ Absolutely do not use your mobile phone during flights, please shut down your mobile phone or set into Flight Mode before the plane takes off.
- ◆ Switch off your mobile phone in hospitals or the places where the use of mobile phone is forbidden. The mobile phone may interfere with/affect some electronic devices and medical instruments like heart pacemakers, hearing aids and other electronic medical devices.
- ◆ The unauthorized/non-original accessories and fittings have no warranty qualification.
- ◆ The user cannot disassemble the mobile phone without authorization. Please contact the supplier for the mobile phone failures.
- ◆ Do not connect the charger without the battery in the mobile phone.
- ◆ The charging should be carried out under the environment with good ventilation and good heat dissipation and far from the flammables and explosives.
- ◆ In order to avoid demagnetization, do not place your mobile phone around magnetic substances like magnetic disk cards, credit cards, etc.
- ◆ Ensure your mobile phone does not contact any liquid. In case of this situation, please remove your battery and contact your

supplier.

◆Do not use your mobile phone under extremely high or low temperatures, and do not expose it under direct /strong sunshine or higher moisture content environment.

◆Do not use liquid or wet cloth with strong detergent to clean your mobile phone.

◆The mobile phone is equipped with the built-in antenna, when the mobile phone is powered on please do not contact the antenna (on the top of the mobile phone) so as not to affect the telecommunication.

◆This mobile phone is equipped with sound recording function. Please use this function in compliance with related laws and regulations. Sound recording will risk you to violate laws and regulation.

◆The Company shall bear any responsibilities for the application of sound recording, or any loss occurred due to the no recording, deletion, damage of sound recordings due to the accessories and software.

◆At the time of applying network functions, in case the user downloads some files with viruses and affect the mobile phone, the Company will not be responsible.

◆It is strictly forbidden to load damaged photo, ring tone and files with. In case if the mobile phone fails, the Company shall not assume any liabilities of phone.

◆Use original battery & charger if use any other company's it invalidate warranty. The Company shall be not liable to cover such losses.

VI. Other important information

◆ Please use the original accessory or approved by manufacturer. Any unapproved accessory may affect the performance of your mobile phone, damage your mobile phone, even cause danger or violate relevant national regulations on communication terminal production. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

◆ Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20cm or as far as you can from TV set, radio and other automated office equipment so as to avoid interference.

◆ This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

◆ Use wet or antistatic rag to clean mobile phone; don't use dry rag or the rag that easily cause static. Don't use chemistry product such as detergent to clean the surface of mobile phone. Close it when cleaning.

◆ For body-worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the handset.

◆ This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

◆Your mobile phone will cause electricity magnetic field, don't put it near magnetic storage Medias such as computer disk etc. It will have interference when using mobile phone near TV, phone, radio or PC, thus affect the performance of mobile phone.

◆Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on

standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health. The exposure standard for wireless fixed phoned employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limits set by the FCC are 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting as its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the output power.

The Highest SAR Values for this model phone when tested for use on the Right cheek were 1.26mW/g.

- ◆ Don't put your mobile phone under the strong sunshine to avoid heat.
- ◆ Avoid all kinds of liquids from entering the internal of mobile phone, which will damage your mobile phone.
- ◆ Don't throw it, strike it, treat your mobile phone rudely, which will damage its inner circuit.
- ◆ Don't connect with other incompatible devices.

Warning: Company will not be responsible for, if any consequence caused by misuse and not following any above written suggestions and instructions.

Note: Please send the rejected lithium battery to the appointed place or to our Company and please do not throw in the garbage can.

