Quick Install Guide 1.0.0

Step2

Step1 Normal Power 100mW Compact Wi-Fi Range Extender

Loopcomm

Find an optimal setup location between your wireless router and your wireless dead zone

Side and Bottom Panel Description



2dBi fix external Antenna, Hold down for 3 seconds to enable tton configuration. WPS 5 seconds later to reset back to factory settings.





a power outlet.

Connect your PC or Tablet to the Smart Repeater

PLACE THE SMART REPEATER IN A LOCATION WHERE IT CAN RECEIVE A STRONG SIGNAL FROM YOUR WIRELESS ROUTER

Plug the Smart Repeater into



Enter the setup web address into your browser:

Connect network cable to an available network port on your computer

http://setup.loopcomm.com If the URL fails to open, then try: http://192.168.1.250

Recommended browsers: Google Chrome, Safari or Internet Explorer (8.0 and up). Do not use Firefox.

IF YOU HAVE PROBLEMS ACCESSING THE WEB MENU...

Disconnect your PC from wireless networks, open your browser and try again.

Windows 7 & Vista (example)

Click on the Wireless icon to see available wireless networks (For Vista, click Start > Connect To).

- 2) Select your current wireless network and click Disconnect. 3) Power the Smart Repeater off and back on and try http://setup.loopcomm.com
- again.



Step4 Welcome to the Dashboard



Click Scan to find available networks to extend.

The Dashboard will provide you with the current

status of the Smart Repeater

ork and click **Next** bel orks: RESCAN



Recommended Signal Select the wireless network with 70% a signal strength greater than 70% for the most reliable connection.

Highlight and select the wireless network(s)

that you wish to repeat.


Click Scan to begin scanning for nearby wireless

connecting to a weak signal may result in lower speeds or intermittent connectivity.



Enter your password and then click Next. If your wireless home network(s) does not have


security enabled, leave the security field blank. Click Next to continue.

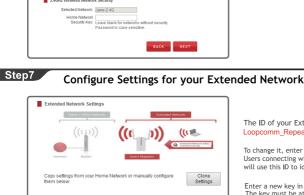

The ID of your Extended Network is: Loopcomm_Repeater

To change it, enter a new name in the SSID field. Users connecting wireless to the Range Extender will use this ID to identify your Extended Network.

Enter a new key in the Security Key field. The key must be at least 8 characters long. Extended Network Names This is the name that wireless users will use to co

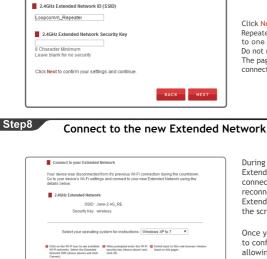

Click Next to apply your settings. The Smart Repeater will reboot. This process may take up to one and a half minutes. Do not refresh the web page.
The page will automatically reload with the connection status.

connection. At this point, you will need to reconnect your PC or tablet to the new Extended Network. Follow the instructions on the screen to connect to the Extended Network. Once you have connected, click the check box to confirm. The Next button will appear allowing you to complete the setup process.


During the countdown process, the Range Extender will reboot and disconnect the

Wi-Fi

If there are problems with your configuration, the setup wizard will inform you to rescan for a network to extend. If there are no problems, you will see the Setup Summary page below. $\,$

Congratulations, the Smart Repeater is now

Step9

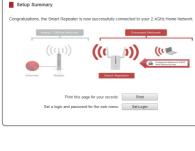

m that you are now connected to your Extended Network:
you have confirmed, the NEXT button will appear below for you to

Setup Summary

successfully configured. Your settings are now saved. You may now detach the Ethernet cable from your computer and connect wireless to the Smart Repeater.

If you haven't already positioned your Smart Repeater in an optimal location, you may do so no All Smart Repeater settings are saved and can be safely powered off for relocation. You may also attach any wired network devices to the wired ports on the back of the Smart Repeater.

If there was a problem with your configuration, the Smart Setup Wizard will inform you to restart the Wizard and select another network to repeat.