



**ROCK
HARD
ERECTIONS**
AT THE
TOUCH
OF A
BUTTON!

UPRIZE®
Vibrating Dildo
USER GUIDE

Before you get started

Your vibrating dildo needs charging before first use. Charge by inserting the USB connector into a USB charging point and the electrical connector into the base of the toy.

Both buttons on the toy will flash during charging. When the flashing stops and the lights are solid, the toy will be fully charged and ready to use.

The toy will take approximately 150 minutes to fully charge, and gives you up to 60 minutes of use between charges. When the battery is running low the light will flash quickly to indicate charging is required.

To deactivate the travel lock, press and hold both buttons on the toy for 5 seconds. Both buttons will flash twice to indicate that the travel lock has been deactivated. *(See page 10 for more on using the travel lock feature.)*

Before use, coat the full shaft of your vibrating dildo with water-based lubricant. Do not use silicone-based lubricant with the vibrating dildo.

To use with a harness, position the 'o' ring to the suction cup base and not the base of the shaft.


Warning: do not use the erection function of the toy once the toy is inserted. Doing so may result in your toy becoming irreparably damaged.

For use with harness
position 'o' ring here

USB charging
connector



USB charging point

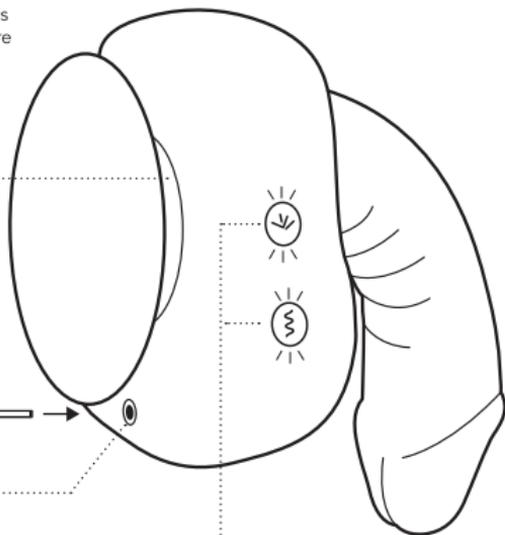

Press together for 5 seconds,
both buttons flash twice to
signify travel lock activation
or deactivation
Both buttons also flash
during charging

Enjoying your UPRIZE® Vibrating Dildo

Using the toy with the remote control

Place pressure on the back of the remote in a downward motion to reveal the battery compartment. Remove the protective strip. The battery side with the + symbol should be facing you. Slide the battery cover back into place using a slight upward pressure.

To pair the vibrating dildo with the remote, press the vibration button on the toy once. Both the vibration button and the up/down button will flash to indicate that the remote has been paired with the vibrator.

To operate the erection, press the up/down button on the remote once. A light will flash across all three buttons. To return to its unerect state, simply press the up/down button again. The light will flash during operation.

To start the vibrations, press the + button on the remote. A light will flash across all three buttons. To vary the intensity, press the + or - buttons.

To cycle through the different vibration modes, press the + and - buttons simultaneously. Repeat to cycle through the 3 speeds and 7 patterns.

To turn off the vibration, press the minus button repeatedly. You will need to press the button; do not try to hold it down.

Vibration plus button (+)


Starts vibration
Changes function
Increases intensity

Up/down button

Press to raise or lower shaft

Vibration minus button (-)

Changes function
Decreases intensity
Switches off vibration

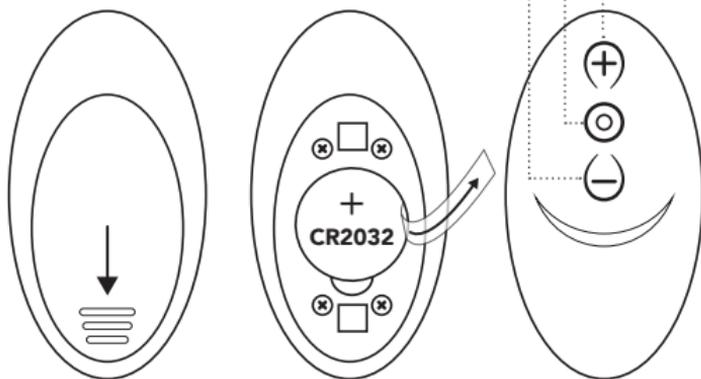

Using the toy without the remote control

To operate the erection, press the up/down button on the toy once.
To return to its unerect state, simply press the up/down button again.
The light will flash during operation.


To start the vibrations, press the vibration button on the toy. Continue pressing the vibration button to cycle through the 3 speeds and 7 patterns.

Each press will give you a different pattern.

Press and hold the vibration button for 2 seconds to stop the vibrations.
The light will stop flashing.

Vibration button
Starts vibration
Changes vibration function
Hold down to switch
off vibration

Up/down button
Press to raise or
lower shaft

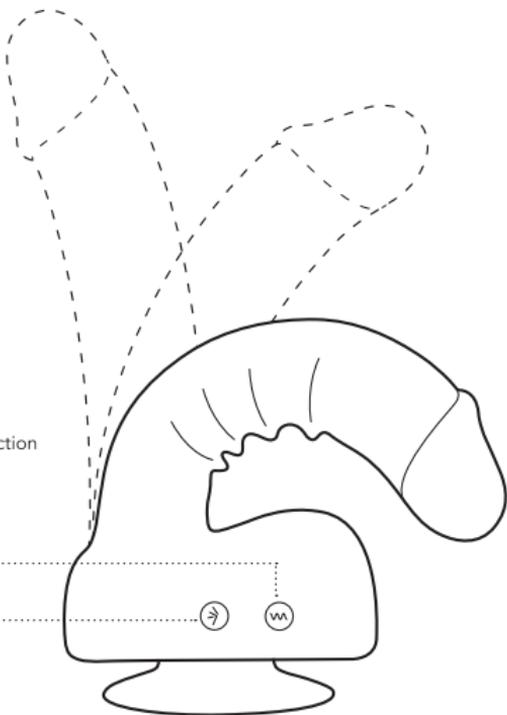

Looking after your UPRIZE® Vibrating Dildo

Your vibrator should be cleaned before and after use with specialist sex toy cleaner, and left to air dry before storing away from dust, heat and direct sunlight.

Using the travel lock

The travel lock prevents the vibrating dildo from accidentally switching on when not in use.

To activate, press the up/down and vibration mode buttons together when the toy is switched off, and hold for 5 seconds. The light will flash twice when the lock is activated.

To deactivate the travel lock, press and hold down the the up/down and vibration mode buttons for 5 seconds once more.

Alternatively, plugging the toy into a USB charging point will also deactivate the travel lock.

The small print

To avoid injury or aggravation of pre-existing conditions, do not use on swollen or inflamed areas or skin lacerations. No medical claims are warranted or implied by use of this product.

The shape and appearance of the product inside this package are a trademark and trade dress of Lovehoney Group Ltd. Copyright © 2018.

Electronic equipment in the EU

The crossed out wheelee bin symbol indicates that this toy should not be treated as household waste. Instead, take the toy to a recycling centre that deals with electrical and electronic equipment.



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Key details

Materials: Silicone and ABS plastic

Charging time: 150 minutes

Usage time: Up to 60 minutes

Standby time: 90 days (vibrating dildo) / 1 year (remote)

Vibration functionality: 3 speeds, 7 patterns

Waterproof: Yes (vibrating dildo) / No (remote)

Battery: 1 x CR2032 (remote)

Warranty

Lovehoney Group Ltd offers no-quibble 365-day returns on all products bought through our websites. Should you discover a defect or change your mind about your product, please contact customer care to be offered a replacement or a refund.

Customer care contact details:

0333 103 6969

help@lovehoney.co.uk

www.lovehoney.co.uk/returns

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.