User Manual

Wireless Keyboard

Shenzhen Loyal Electronics Co., Ltd

Model: KG7597

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not caus e harmful interference, and
- (2) This device must accept any interference ereceived, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the F CC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radi ate radio frequency energy and, if not installed and used in accordance with the inst ructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving an tenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experi enced radio/TV technician for help.

RF warning statement:


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

System Requirements

- Hardware: Notebook or Desktop computer system with 1 available USB port
- Operating System: Windows XP, Vista or Windows 7 & 8 and Macintosh OS X[®]

User Manual

- Remove the battery cover located at the bottom of the keyboard and insert the 2 supplied AAA batteries into the battery compartment.
- Make sure the positive (+) and negative (-) ends of the batteries match the polarity markings inside the battery compartment (as shown below).
- 3. Snap the battery cover back into position.
- Turn on the power switch which is located at the bottom of the keyboard, next to the battery cover.

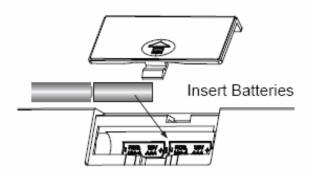

This keyboard comes with the standard 104-key QWERTY layout in US English. It also features 4 media hot keys to enhance productivity.



- To use the 4 media hot keys:
 - * Mute: Toggle key to mute and un-mute audio
 - Volume Up: Press to increase audio volume
 - Volume Down: Press to decrease audio volume
 - * "My Computer" hot key will bring up the My Computer window (PC only).