



# M3 ORANGE

## User Manual

[www.m3mobile.net](http://www.m3mobile.net)

It is available to download contents of this user manual and programs provided by software CD from M3 Mobile homepage.



Please be sure to read the "Warnings and Safety Precautions" in order to use the product safely and correctly.



## Notice

---

- All contents of this user manual are protected by the copyright laws, and M3 Mobile owns all rights related to them.
- Any part of this document cannot be copied, reproduced, modified, or translated to other languages without the prior written consent of M3 Mobile.
- The contents of this user manual were written based on the "current state" of the product, and the details of this manual are subject to change without the prior notice.
- M3 Mobile does not provide any guarantee including the implied guarantee on the product's characteristics in this user manual and suitability for special purposes, and any other guarantees not limited to them.
- Microsoft, Windows, MS Office, Outlook, ActiveSync, Internet Explorer, Windows Logo, and Windows CE 5.0 Logo are registered trade marks or trademarks of Microsoft in the USA or other countries. The license for OEM of Microsoft products was provided by Microsoft Licensing Inc., subsidiary company of Microsoft.
- All product names and services used in the manual and product are company names, service marks, trademarks, or registered trademarks of the corresponding right owners.

## Copyright and Agreement on Usage

---

- The contents of this user manual were made based on the "current state" of the product, and this manual may contain technical and editing errors or omissions.
- When separate application programs are developed and provided by the product providers using the product, refer to the program users manual provided by the product providers.
- The companies that produce separate application programs besides the basic installation programs must include the contact telephone number for inquiring about these programs on the product, program, or product box separately when distributing the equipment.
- M3 Mobile does not guarantee the quality of the programs produced by third party software companies installed after the release from the factory of M3 mobile.
- M3 Mobile may request programs from the program manufacturers in order to guarantee the quality of the product to meet the requests of mobile network service providers.
- All contents of this user manual are protected by the copyright laws, and unauthorized copying, modification, or distribution of the software is considered as criminal action according to the Software Copyright Law.
- Windows, MS Office, Outlook, ActiveSync, Internet Explorer are registered trademarks of Microsoft.
- M3 Orange is a trademark of M3 Mobile.
- Other product or service used in this manual is registered trademarks of the corresponding right owners.



## Warnings and Cautions for Safety

---



### Customer Cautions

- If the device is lost or stolen, then immediately report the incident to the service provider.
- Do not lend the device to other people.
- Refrain from using the device while driving.
- When you need service for the product, request service from the designated place such as the service center of our company.
- For inquiries about the application programs and other work programs besides the hardware and the basic installation, directly contact the corresponding program manufacturers.
- Do not use any battery adapter or accessories other than the designated ones provided with the product.
- Free warranty service may not be allowed if failures occur due to unauthorized use or misuse of the product.



### Cautions in Carrying and Storing

- Do not use the product in high temperature or high humidity environments as this may quickly cause damage to the product.
- The product was designed to be suitable for work environments, but avoid impacts or dropping the product. This may cause fatal damage to the product.
- Fully charge the battery before using the product for the first time.

---

### Do not modify the product

- Do not try to modify the product by any means.
- Modifications may cause fire, injury, electric shock, or serious damage to the equipment and users.
- The warranty service is not provided for troubles due to unauthorized modification.

### Prohibition against illegal copy of mobile

- There is 'ESN(Electronic Serial Number)' recognizing its product on mobile phone. Copying ESN is illegal and illegally copied mobile is limited to conduct business such as becoming new member, changing the mobile, checking call history, inspecting the pirate cell-phone.
- A phone-cloner or copied phone's user will be sentenced to 3 years' imprisonment or imposed a fine of 20 million won by Radio regulation law.
- Anyone who provides or is provided ESN of mobile phone will be sentenced to 3 years' imprisonment or imposed a fine of 20 million won by the privacy protection law.
- Anyone who holds or uses program for cloning ESN of mobile will be sentenced to 3 years' imprisonment or imposed a fine of 50 million won by the Protection Act of Computer Program.
- Using the lost or stolen mobile phone is the act of receiving stolen goods.
- Holding a found mobile phone as turning off the power is a larcenous act or embezzlement of deserted articles.



## Table of Contents

---

Notice .....	2	Transcriber / Keyboard .....	22
Copyright and Agreement on Usage.....	3	ActiveSync .....	24
Warnings and Cautions for Safety.....	4	Inserting and Removing Micro SD Card .....	28
Table of Contents .....	6		
<b>M3 Orange Introduction .....</b>	<b>7</b>	<b>Usage for various functions.....</b>	<b>29</b>
Specification and Characteristics.....	8	Using Mobile phone.....	30
Product Configuration.....	10	Using Internet.....	34
Name and Function of Each Part.....	11	Using Camera .....	36
Inserting and Removing the Battery.....	13	Using Scanner.....	38
Charging .....	14	Bluetooth communication.....	40
LED Information.....	15		
Inserting and Removing USIM CARD.....	16	<b>Breakdown Diagnosis .....</b>	<b>41</b>
		Breakdown Diagnosis.....	42
<b>Basic Instructions .....</b>	<b>17</b>	<b>Customer Support &amp; A/S .....</b>	<b>43</b>
Button Information.....	18	Customer Support & A/S .....	44
Soft Reset .....	19	Product Warranty .....	45
Main Window .....	20		
Using the Stylus .....	21		



## 1 M3 Orange Introduction

- Specification and Characteristics
- Product Configuration
- Name and Function of Each Part
- Inserting and Removing the Battery
- Charging
- LED Information
- Inserting and Removing USIM CARD



## Specification and Characteristics

Classification	Information	
Product Name	M3 Orange	
System	CPU	MARVELL PXA-320 806Mhz
	OS	Windows Mobile 6.5
	ROM	NAND 128 / 256MB / 1G
	RAM	256MB
	Display	240 x 320, 3.5", Color TFT LCD(260,000Color) Backlight LED Type
Communication Function	WWAN	The Americas - EGSM-850 / GSM-1900 Europe - EGSM-900 / GSM-1800 / WCDMA2100
	Bluetooth	Bluetooth BDR Only
	Wi-Fi	802.11 a / b / g
General Function	Barcode Scanner	1D Laser or 2D Imager
	GPS	Integrated GPS



## Specification and Characteristics

Classification	Information	
Etc.	Expansion Slot	Micro SD Card
	Keypad	Numeric 3 x 4 Dial, Direction, Function (front, 4side), 1 Power
	Input Method	Touch Screen
	PEN	Stylus Pen
	I / O	USB Host, USB Client, External Serial Port, Micro- phone, Speaker, Receiver, Stereo Ear-mic jack
	Operating Temperature (Main Unit / Adapter)	-10 °C ~ + 50 C
	Adapter Power	Input : AC 220V Output : DC 5.2V / 5A
	Battery	Lithium Ion 3,300mAh
	IP	IP54(DUST & WATER PROOF)
	Impact	1.5m drop



## Product Configuration

- Check if all following items are included when you open the box for the first time.



 
M3-Orange Main Unit




Cradle




Two Standard Batteries

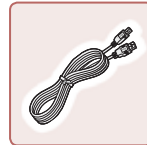

USB Cable

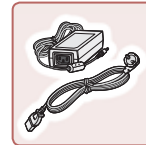 


Portable Adapter

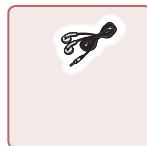 

Earphone



 
Stylus Pens

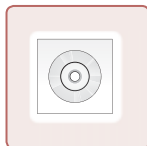

Manual CD



 Manual




*Keep this in mind*

- Not all items above may be included according to the shipment option.


## Name and Function of Each Part
 
### M3-Orange Main Unit

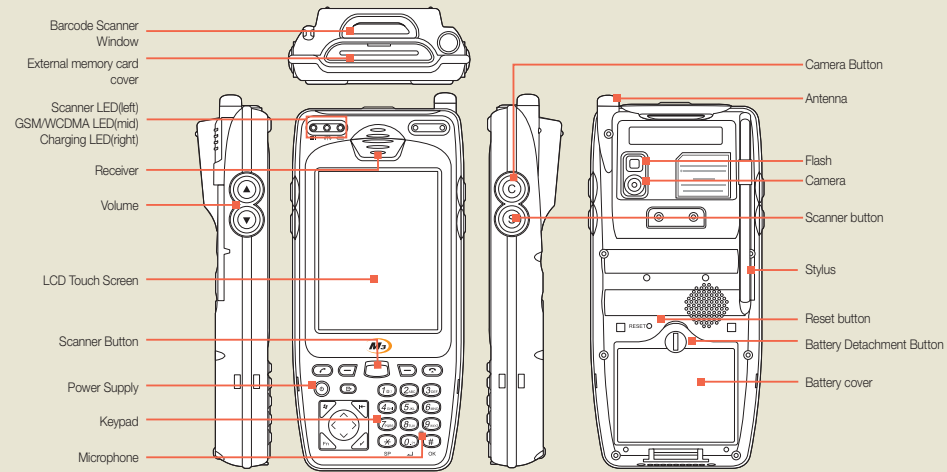

## Name and Function of Each Part
 
### Cradle

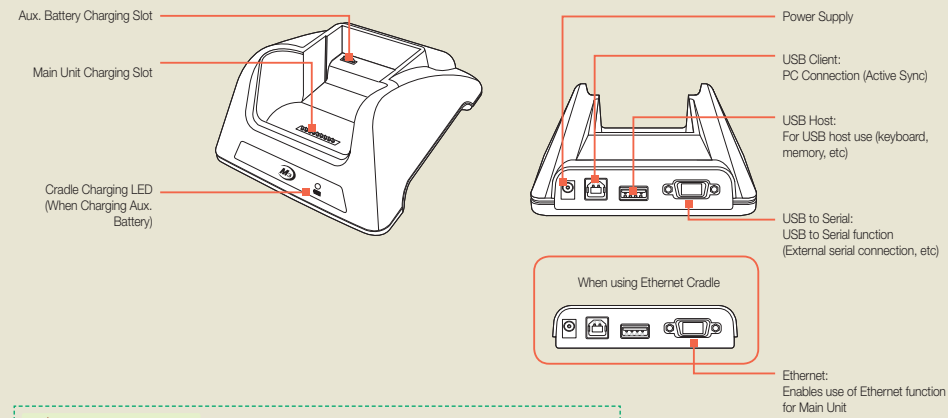


#### Keep this in mind

- USB Host and USB Ethernet are optional functions.
- Optional functions or items that were not purchased cannot be used.

## Inserting and Removing the Battery


### Inserting Battery

 
- Insert the battery to the battery pack position, and then cover the ribbon. After putting the battery cover, tighten a screw in a counterclockwise direction.

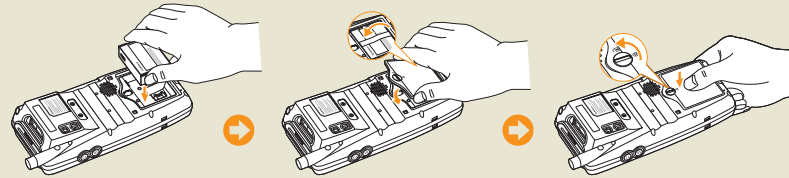

### Removing Battery

  - Loosen a screw in a clockwise direction, and remove the battery cover. After removing the battery cover, pull out the battery by drawing the ribbon.

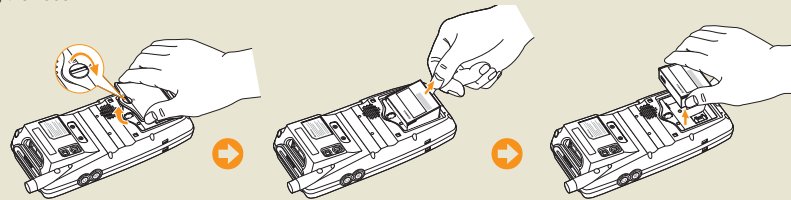

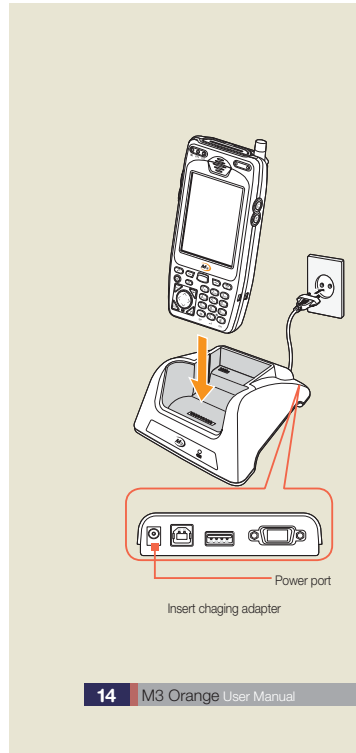

## Charging

### Charging the battery

- Connect the provided adapter plug to the charging jack of the cradle, and place the Main Unit or battery to be charged on the cradle.
- Attach the battery to the Main Unit.
- Start charging when charging LED turns on Red light.
- Charge the battery until charging LED turns on Green light.

#### Warning!

- Do not use any other adapters except for the power supply device (5.2V/5A) that comes with the product.
- Do not use excessive force to plug in the Main Unit or battery. Otherwise, this may cause problems and you may not receive free warranty service since the problem is due to the fault of the user.
- Improper battery replacement may cause an explosion.
- When the battery is completely discharged, connect the adapter and reset the device to check whether the LCD turns on, and then use the device after charging for at least 10 minutes.

## LED Information

### Main Unit : LED notice

 
- It shows the status of charging or scanner.

Classification	LED status	Description
Charging LED	● Red	Charging
	● Green	Charging completed
GSM / WCDMA LED	● Red	GSM / WCDMA Weak Signal (Communicatio problem)
	● Blue	GSM / WCDMA Noraml Signal
Scanner LED	● Green	When the Scanner succeed in reading the Bar code.

- The charging status of the battery attached to the M3 Orange can be checked through LED on the upper left side of the M3 Orange. The charging status of the aux. battery can be checked through the LED on the lower right corner of the cradle.
- Charging is conducted in order of 'the battery attached the Main Unit' > 'Cradle battery'.

#### Warning!


- When you insert or remove the battery during operating the program, errors can be occurred.

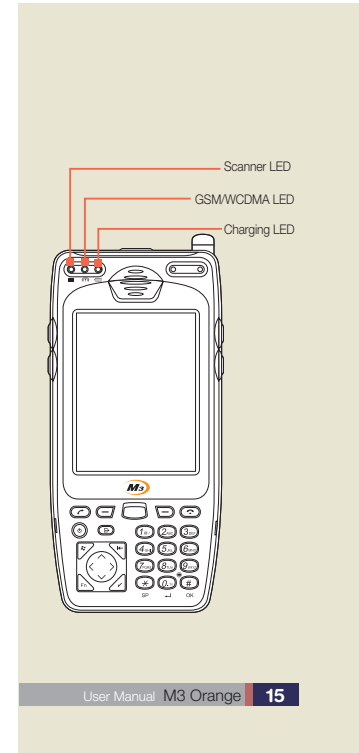

## Inserting and Removing USIM CARD

### Inserting USIM CARD

 - Check USIM CARD provided by the membership mobile center.
- Remove the battery on the back of the lower part of the Main Unit.
- Insert USIM CARD with the terminals facing downward.
- Insert the battery and cover the Ribbon, tighten up the battery cover.
- Turn on the power of terminals and check if it is installed correctly.

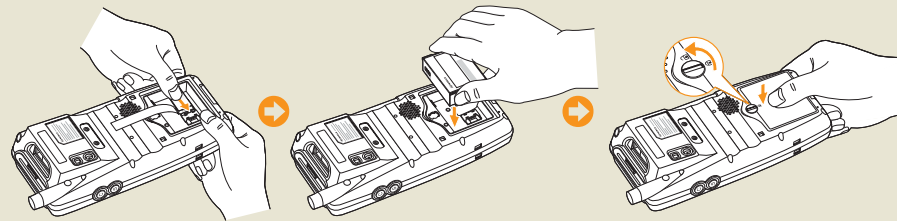






















## 2 Basic Instructions

- Button Information
- Soft Reset
- Main Window
- Using the Stylus
- Transcriber / Keyboard
- ActiveSync
- Inserting and Removing Micro SD Card

## Button Information

Button	Name	Function
	Power button	Short Press: Back light ON/OFF Long Press: Power ON/OFF
	Number Button	Number input
	Star(*) Button	Short Press: * input Long Press: Vibration mode On/Off
	Sharp(#) Button	# input
	Alphanumeric	press to switch between alphabet and number input
	Call Button	Connet the phone call
	End Button	Short Press: End the call Long Press: Phone On/Off
	-	Function mode
	Enter Button	Operation Button
	BackSpace	Delete the letter

 
Button	Name	Function
	Start Button	Open the main menu
	Function	-
	Reset Button	Soft Reset
	Scan Button	Barcode scan function
	One-Click	Same function as One-click function of computer
LCD Click	Tab & Hold Long press	Long press the stylus pen Select the option (Copy, Delete, Paste)
Side Button	Name	Function
	Up / Down Button	Volume up and down
	Camera Button	Execute camera / Take picture
	Scanner Button	Scanner beam operation

## Soft Reset

---

### Soft Reset


- Press the reset groove in one second as shown in the picture.
  - Click the Reset Button when one of installed software programs causes unexpected problems while you use the device.
  - All currently running software will be terminated upon software reset and working files or data might be lost, but the existing stored data of files are not affected.

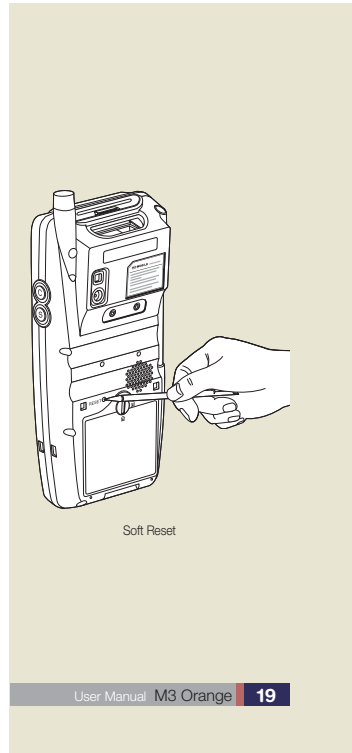

## Main Window

  

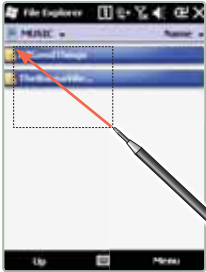 
### Main Window (Today)


- The most basic screen of the mobile that helps users' convenience, and it contains basic functions.

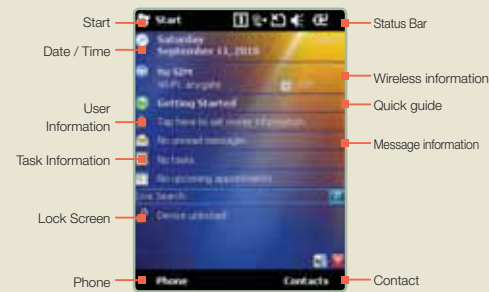

Button	Function
Start menu	Select the program you want to use
Status bar	Show the Power, Modem, Sound, Input mode, connection information
Date / Time	Show the current date and time
Wireless information	Show the wireless power and its status
User information	Show the personal information
Message information	Show the received message
Task information	Show the task information
Quick guide	Show the simplified user manual
Lock screen	Show the screen or lock the information
Phone / Contact	Operate the phone program

## Using the Stylus

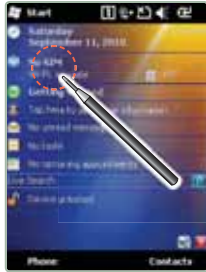 
Click	Long Press	Drag
Item selection / Click	Press the stylus pen without releasing, and select the menu. (Copy, Cut, Paste)	Select a group or move icons like dragging a mouse in PC
Click the item once to select or execute	Press and hold the stylus on the touch screen. This function is frequently used for file copy, cut, and paste functions, or to use the keyboard.	Drag the cursor to the desired position while pressing the touch screen. (In case of excuting the scroll bar, drag function will not be excuted.)
		

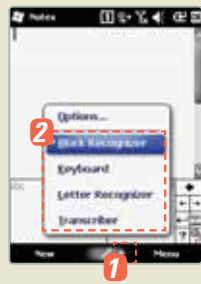


Screen for selecting Transcriber

## Transcriber / Keyboard
 
### Transcriber (Block Recognizer, Transcriber, Letter Recognizer)

- This program recognizes handwriting and automatically converts it into computer text when you write text using the stylus pen when entering text for documents or settings.
- Select the input method by clicking  icon at the bottom of screen.
  - Block/Letter Recognizer : In the input mode screen, you can enter the text in 'abc' section, and enter the number in '123' section on the screen.
  - Transcriber : When you enter the letter, number, symbol with stylus, this program automatically writes where the cursor is positioned. You don't have to care about the input section.

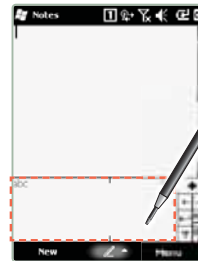

Block Recognizer




Transcriber



Letter Recognizer

## Transcriber / Keyboard

### Keyboard

- The keyboard input is the way of entering the text using the stylus pen by touching the virtual keyboard which is the same shape as the actual keyboard on the screen.
- You choose the input method by clicking  icon at the bottom of screen.
- You can enter the text by touching the keyboard directly.



 
Small Keyboard



Big Keyboard



Options

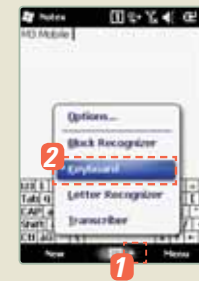

Screen for selecting Keyboard



## ActiveSync

---

### ActiveSync Introduction

- Sync is an abbreviation of Synchronization. In our case, it means to sync data between the PDA and PC by connecting them so that the data on both devices is the same.
  - When the data is modified in either the PDA or PC, the Sync function conveniently updates the data on the other device with the latest data between two of them.
  - Not all data is synchronized, and it depends on the option setting for Microsoft's ActiveSync.
- You can connect the PDA and computer to synchronize the data between them, or install work programs, copy, move, or delete the files.
- The ActiveSync program must be installed for work program installation, data synchronization, and backup and synchronization of contacts such as your phonebook.

 **Warning!**

- Never connect the USB of the cradle to the USB port of the PC before installing the ActiveSync program. As Microsoft's PDA device driver software is included in the ActiveSync, connecting before installing may cause problems since the PDA device may not be recognized by your PC.



## ActiveSync

---

### To install ActiveSync

- Insert the CD included with this product, and select ActiveSync from the Auto-run screen to install the program.
- Select the Next button, and select the Cancel button when you see the [Your device was not detected] screen.
- Connect the USB cable between the cradle and USB port of your PC, and place the PDA on the cradle while the LCD power is on.
- When you see the [New hardware detection wizard] screen, double click the Next button to automatically install the driver, and then select the Finish button.
- When you see the [Set Up a Partnership] screen, make the Partnership, and then continue by selecting the [Next] button.
- Select the Finish button from the [Setup Complete] screen to complete the installation.
- The [Microsoft ActiveSync] window will pop up, and the programs selected while setting up the partnership will begin synchronization.

### About Partnership

- Partnership is a procedure for mutual certification so that PC and PDA can exchange the data.
- ※ The device cannot be synchronized with Outlook Express that comes with Windows, and Microsoft Outlook or later versions of the program must be installed on the PC.

#### **Warning!**

- Strong external noise from static electricity around the system may disturb the connection. In this case, retry the synchronization.



## ActiveSync

---

### Synchronizing Data

- There is an Option icon if you see the Microsoft ActiveSync window option, "Sync mode," "Sync mode" and "Rules" tabs will appear.
- "Sync option" is the menu for selecting the items to synchronize.
  - Contact, schedule, work, files, and channel can be selected.
- "Sync mode" is for selecting the method of synchronization, and you can use one of the three following methods depending on the selected Sync mode.
  - Continue while the device is connected: ActiveSync starts the synchronization, and whenever modified items will be synchronized when are entered in the PC or PDA.
  - Only when connected: After the first synchronization is completed, click the Sync button in order to manually execute the synchronization.
  - Manually: ActiveSync does not work automatically. Click the Sync button to synchronize the data in this mode.
- The synchronization process compares the data on the PC and PDA, and updates the data on both sides with the latest data. Personal schedule manager data or files can also be synchronized with the corresponding files on the PC.

## ActiveSync

---

### When ActiveSync does not work

- Check whether the USB cable is properly connected to the cradle and the PC's USB port.
- Check whether the power of the M3 and LCD is on.
- Select File > Connection Setting from the ActiveSync program, and then open the window.
  - Check whether the [\[Allow USB connection with this desktop computer\]](#) item is checked.
  - If not checked, then check the option and try Sync again.
- Conduct a soft or hard reset, and then try Sync again. The currently running software must be terminated and data must be saved before the reset.
  - Double click the Device Manger button in the [\[Hardware\]](#) tab from Start > Setting > Control Panel > System menu of PC.
  - Check whether there is a yellow exclamation mark on any of the items below [\[General Purpose Serial Bus Controller\]](#) in the [\[Windows CE USB Device\]](#) folder.

### If there are any yellow exclamation marks shown on the icons.

1. Select Microsoft USB Sync in Windows CE USB Devices folder.
2. Select the Driver Update button in [\[Driver\]](#) tab.
3. When the [\[Device driver update wizard\]](#) window appears, press the Next button, select 'Search Appropriate Driver', and then click the [\[Next\]](#) button.
4. Check the Microsoft Windows Update and click the Next button.
5. The latest USB driver will be automatically downloaded from MS over the internet.
6. Reboot the PC and run ActiveSync again.



Inserting the Memory card

## Inserting and Removing Micro SD Card

### Inserting Micro SD Card

- Open the memory card cover on the top of the main unit.
- After inserting Micro SD Card as shown in the picture, cover it.

### Micro SD Card Usage

- Once inserting Micro SD Card, [Storage Card] icon appears in [Start] ► [File Explorer] ► [Show] as below.
- Click [Storage Card] icon and check the contents in Micro SD Card.  
(Refer to the progress below.)





### 3 Usage for various functions

- Using Mobile phone
- Using Internet
- Using Scanner
- Using Camera
- Bluetooth communication

 
## Using Mobile phone

### On / Off

- Turning on
  - Press the end button for 5 sec. when the phone is off.
  - The phone turns on with the initialization sound.
- Turning off
  - Press the end button for 5 sec. when the phone is on.

### Answering the phone

- Select 'Answering phone' in the screen of incoming calls and make calls.
- Select ear-microphone button in the screen of incoming calls and make calls.
- When choosing the mute mode in the screen of incoming calls, the screen keeps appearing but there is no sound.

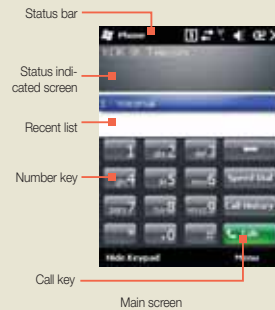

Screen for incoming calls

## Using Mobile phone

### Making a call

 
- Enter the phone number with keypad in the main screen and press the 'Call' button.
- Make a call by choosing the phone number in the Contact list, receiver / caller list, SMS list.
- When the phone number is registered as the shortcut key, you can make a call with the shortcut key by pressing long the corresponding number.
- Make a call with the recent list by pressing long the button of ear-microphone.



Make a call by dialing



Make a call by searching the contact list

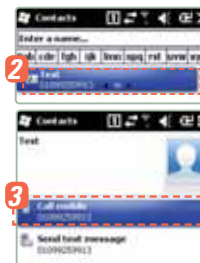

Screen of dialing

## Using Mobile phone

---

### Receiving SMS

- It shows the contents received in the screen of receiving SMS.
- To check SMS, tap into the receiving / sending list in SMS message menu and select what you want to check.
- Unchecked message will be displayed on the left-top side of status bar as a Message icon. (When you choose the icon, it moves to 'Message' section.)

### Sending SMS

- When you send SMS, tap into 'Message' and enter the text, and then enter or search the phone number and press Send button.
- When the content of message exceeds over 80 bite, separate the page.
- After entering the phone number you will send to, select the 'Call' button, and you can send 'Call message'
- You can send the message according to the priority. (Normal / Express / Urgent)
- Message that you often use can be put in the input box as using the saved message.
- Sent message will be saved automatically in the SMS sent list.



 
Screen of sending SMS



## Using Mobile phone

### Setting up the phone

- Execute [Menu] ► [Options] at the bottom of phone.
  - Phone : You can change the setting of ring tone or keypad.
  - Security : You can set up security service.
  - Services : You can change the setting of mobile service.
  - Network : You can change the setting of mobile center.

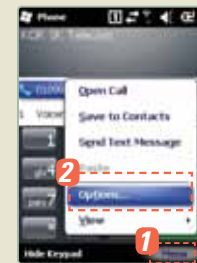

Phone setting




Wi-Fi setting

## Using Internet

 - You can use Internet with Wireless LAN. Wireless LAN supports IEEE 802.11 a, b, g.

### Connecting Wireless LAN

- Turn on AP device that supports IEEE 802.11 a, b, g.
- Select [Wireless Manager] in Today screen.
- After choosing AP device that you want to connect in the Wireless connection program, and connect.
- If you get correct IP after connecting Wireless LAN, you can use the Internet service.


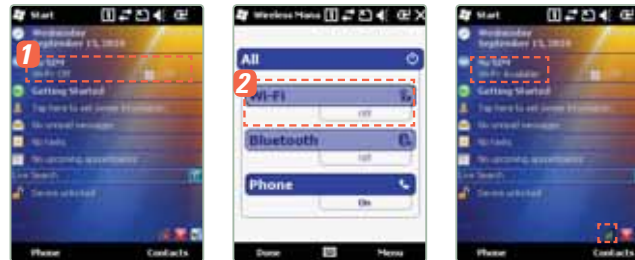



## Using Internet

- If the internet is connected through Wireless LAN connection, you can use the Internet via Web Browser.

### Web Site Browsing

   - Execute [Start] ► [Internet Explorer]
- You can search the Internet on the main site or move to the other site by entering the web address in the address bar.

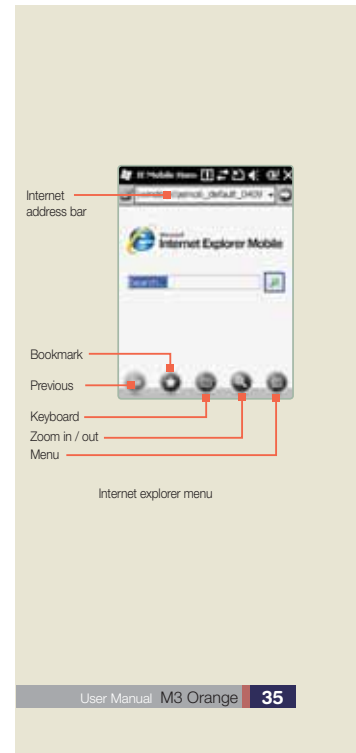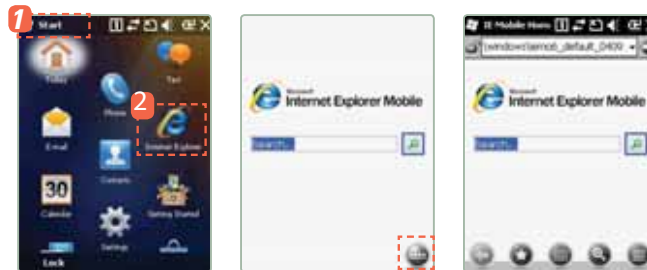

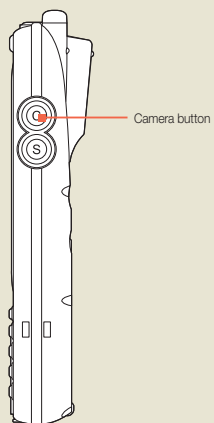

## Using Camera

### Running Camera program

- The camera mode will be executed by pressing Camera button on the right side of mobile.
- Still : Camera mode
- Video : Video mode
  - Select [Menu] ► [Video]/[Still], and it converts video / camera mode mutually.
- My Pictures : Check the photograph/ video taken.
  - Select [Thumbnails] in the shooting mode.



STILL MODE



VIDEO MODE



My Pictures

## Using Camera

### Camera setting menu

- Convert mode: You can select among 'General', 'Continuous', 'Timer' for taking a photo by choosing the mode.
- Brightness : You can take a picture brighter or darker by choosing Brightness. (Adjust the left / right direction key)
- Resolution : You can select image size by selecting Resolution.
- Zoom-in /Zoom-out : Press Zoom-in or Zoom-out to adjust the size of the image. (Adjust the up / down direction key)
- White Balance : You can adjust White Balance by selecting Auto / Bright / Cloudy / fluorescent / incandescent.
- Flash On /Off : You can turn the flash on or off by pressing the Flash button.

### Taking a photograph

 
 
- Auto-focus : Adjust the focus automatically by selecting Trigger AF in menu before shooting.
- Shooting : In Camera-on mode, take a picture, record or end a video by pressing Camera or Enter key.



Camera menu

## Using Scanner

### Usage for laser scanner

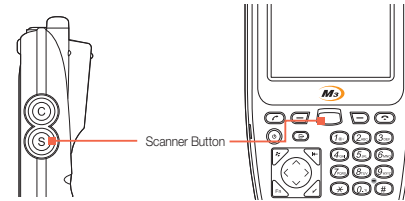

Correct method for scanning



Incorrect method for scanning

#### **Warning!**

- Scanner is Option item. When Scanner is not set up in your product, you cannot use Scanner function.

## Using Scanner

### Usage for image scanner



Correct method for scanning



Correct method for scanning



Incorrect method for scanning



Incorrect method for scanning

 
#### **Warning!**

- Mid-guideline of scanning turns 'Green'.
- If you put Mid-guideline too closely to Barcode or it is dislocated, it cannot be read.

## Bluetooth communication

### Turning Bluetooth On/Off

- Turn on the mobile and BT device that will be connected.
- Select [Wireless Manager] in Today screen.
- Connect it after choosing the BT device in the BT connection program.
- Enter Passcode, and use the BT device.

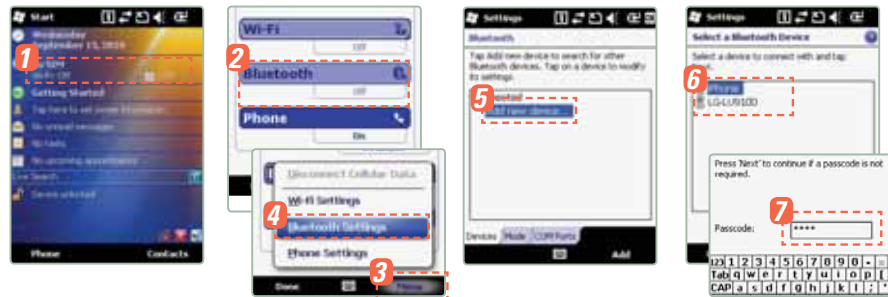





## 4 Breakdown Diagnosis

Breakdown Diagnosis

## Breakdown Diagnosis

---

### Cannot turn on the power

- Remove the battery or adapter to check its connection status, and insert it again.  
(If the charging LED lights on when you connect the adapter, the connection status is ok.)

### Cannot operate some functions (Phone)

- Try again after fully charging the battery or authorizing adapter power. When the rest amount of battery is low, it is limited to operate some functions to protect system.

### Cannot boot up

- Long press the power button. (Short-press: Sleep/Wake up, Long-press: Power on/off)
- Try Soft reset.
- Reset button can be malfunctioned. If there's no sound of clicking or no response from PDA, contact with the service center.

### Cannot charge the mobile

- Check whether the mobile is installed to Cradle correctly.
- Check whether the adapter jack is inserted well.
- Check whether LED that displays the charging status lights on.

### Keep touching the LCD screen in the unintentional spot.

- Try to adjust the monitor.

## 5 Customer Support & A/S

Customer Support & A/S  
Product Warranty



## Customer Support & A/S

---

- When you have a problem with the product or feel uncomfortable while you're using it, contact the service center (refer to the number below) before you visit there for A/S.
- In case of the program for tasks, contact the suppliers written in the product box or program and you will get quick service.
  - Customer center: Representative 02)574-0037 / FAX :02)574-0292
  - Head office: (135-080) 725-30 Dong-Won B/D 1st. floor Yoek-Sam dong, Gang-Nam gu, Seoul.
  - Product line : 202 Chun-ui Techno park 2, 201-610, Chun-ui dong, Won-Mi gu, Bucheon
  - Service hours: 9am~6pm, weekdays.
  - No service on holidays.

### Inquiries about the program / Requisition A/S via Web-site

- You can access Korean internet domain M3 Mobile.
- Korean domain: Website: <http://www.m3mobile.co.kr>

**Part 15.21 statement**

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

**Part 15.105 statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Part 15 Class B Compliance**

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

## Product Warranty

### About the service

- M3 Mobile conducts the warranty for this product according to the itemized compensation regulation for avoiding customer's damage.
- Contact the place you purchased when the breakdown occurs. (If you can't visit the place, contact the customer service center.)
- Warranty period without charging starts from your purchase date, so register the purchase date. (If you don't make sure about the purchase date, it will be calculated after 6 months from the manufacture date.)

### No charging service

- You can get the free charge of service when the problem occurs. This is only when you use the product correctly within 1 year of purchase.

Type of harming customers		Contents for warranty	
		Within the warranty period	After the warranty period
Quality issues occur within 10 days from your purchase date.		Exchange	
Can repair	The same problems occur over 4 times.	Free charging service	Charging service
	The same problems occur over 5 times.	Exchange	Charging service
Can't repair	Equipped with components for repairs (within the warranty period)	Exchange	Exchange after reducing a price
	Not equipped with components for repairs (within the warranty period)	Exchange	Exchange after adding 10% of a reduction price

Model name	
Purchase date	year month date
Purchase place	
Serial No	

### Charging service

- If it has no problem..
    - If you ask for the service when there's no problem, you will be charged. So, read the instruction carefully. (In case that it can't be repaired, it will applied extra standards.
  - When the problem occurs by a customer's fault..
    - The problem occurs by a careless treat or fix, convert at customer's own judgement.
    - The problem occurs when the product is repaired by the other person, not a regular salesman or service man.
    - The problem occurs by using extra accessories, not provided by the purchasing department.
    - The problem occurs when you fall it down as moving after the installation.
    - The problem occurs by using accessories or options unauthorized by M3 Mobile.
  - etc.
    - The problem occurs by natural disaster(confagration, damage from sea wind, flood)
    - The problem occurs when consumable supplies' life ends up.(battery)
- This warranty card can be used only in Korea and will not be printed again.  
Please keep it well.

